
Timberland 🍣

VX9N INSTRUCTION MANUAL

 
Features

- · Hour, minute and second hands
- Tion, minute and second name

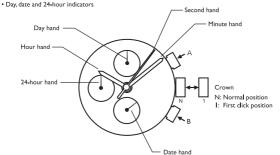


How to set time


ı.



 · Pull the crown out to the 1st click position when the seconds hand is at the 12 o'clock position.




 • Turn to set the time taking AM/PM into consideration.



- · Push the crown back to the normal position.
- · Advance Setting Technique.
- The 24-hour hand moves correspondingly with the hour hand.
- · When setting the hour hand, check that the 24-hour hand is correctly set.
- When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

 How to set date and day of the week



- Note
- Do not set the date and the day hands between 9:00 p.m. and 4:00 a.m. Otherwise, they may not move properly.
- . While setting the date and the day hands, check that they move properly in one-day increments.
- · It is necessary to adjust the date on the first day after a 30-day month and February.