 


D Montageanleitung	GB Assembly Instructions	NL Handleiding voor de montage	PL Instrukcja montażu	HU Szerelés útmutató	RO Instrucțiuni de montaj
FR Notice de montage	IT Istruzioni di montaggio	CZ Montážní návod	SK Návod na montáž	TR Montaj talimatı	RU Инструкция по монтажу


Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба

Roma • Wien • Zürich • Madrid
 Moskva • Ankar • İstanbul • Minsk • Kiev
 Sankt-Peterburg • Belgrad • Warszawa
 Ar. • No. • № • Hossz • É • Sz
 Typ • Type • Típus • Típus • Típus
 Frek.



Aosta 7.0364









1. ASL 833x330x15mm	1	10. SZL 282x97x12mm	1
2. ASR 833x330x15mm	1	11. BLD 1199x61x15mm	1
31. MSL 833x315x15mm	1	12. BLE 772x61x15mm	2
41. MSR 833x315x15mm	1	13. TR 336x766x15mm	2
5. BL 1200x350x15mm	1	14. RW 845x389x3mm	2
6. ZB 377x313x15mm	2	15. RWM 845x398x3mm	1
7. BD 1200x350x15mm	1	16. SZH 350x97x12mm	1
8. SKV 396x189x15mm	4	17. SZR 282x97x12mm	1
9. SKB 361x278x3mm	4		

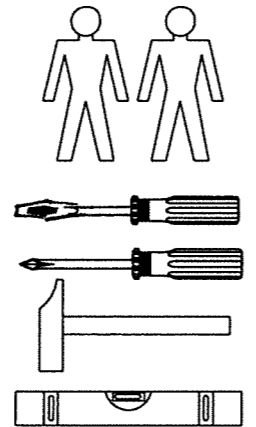

a18	4x	q2	3x16	16x
b7	4x	q10	M4x9	8x
c	16x	s6	4x27	12x
e11	22x	t1	3,5x15	16x
f1	22x	t6	3,5x30	12x
f8	8x	v	Fuß 58x40	6x
r9	4x	x8		6x
l	8x	y4	Leim	2x
n	40x	z		20x

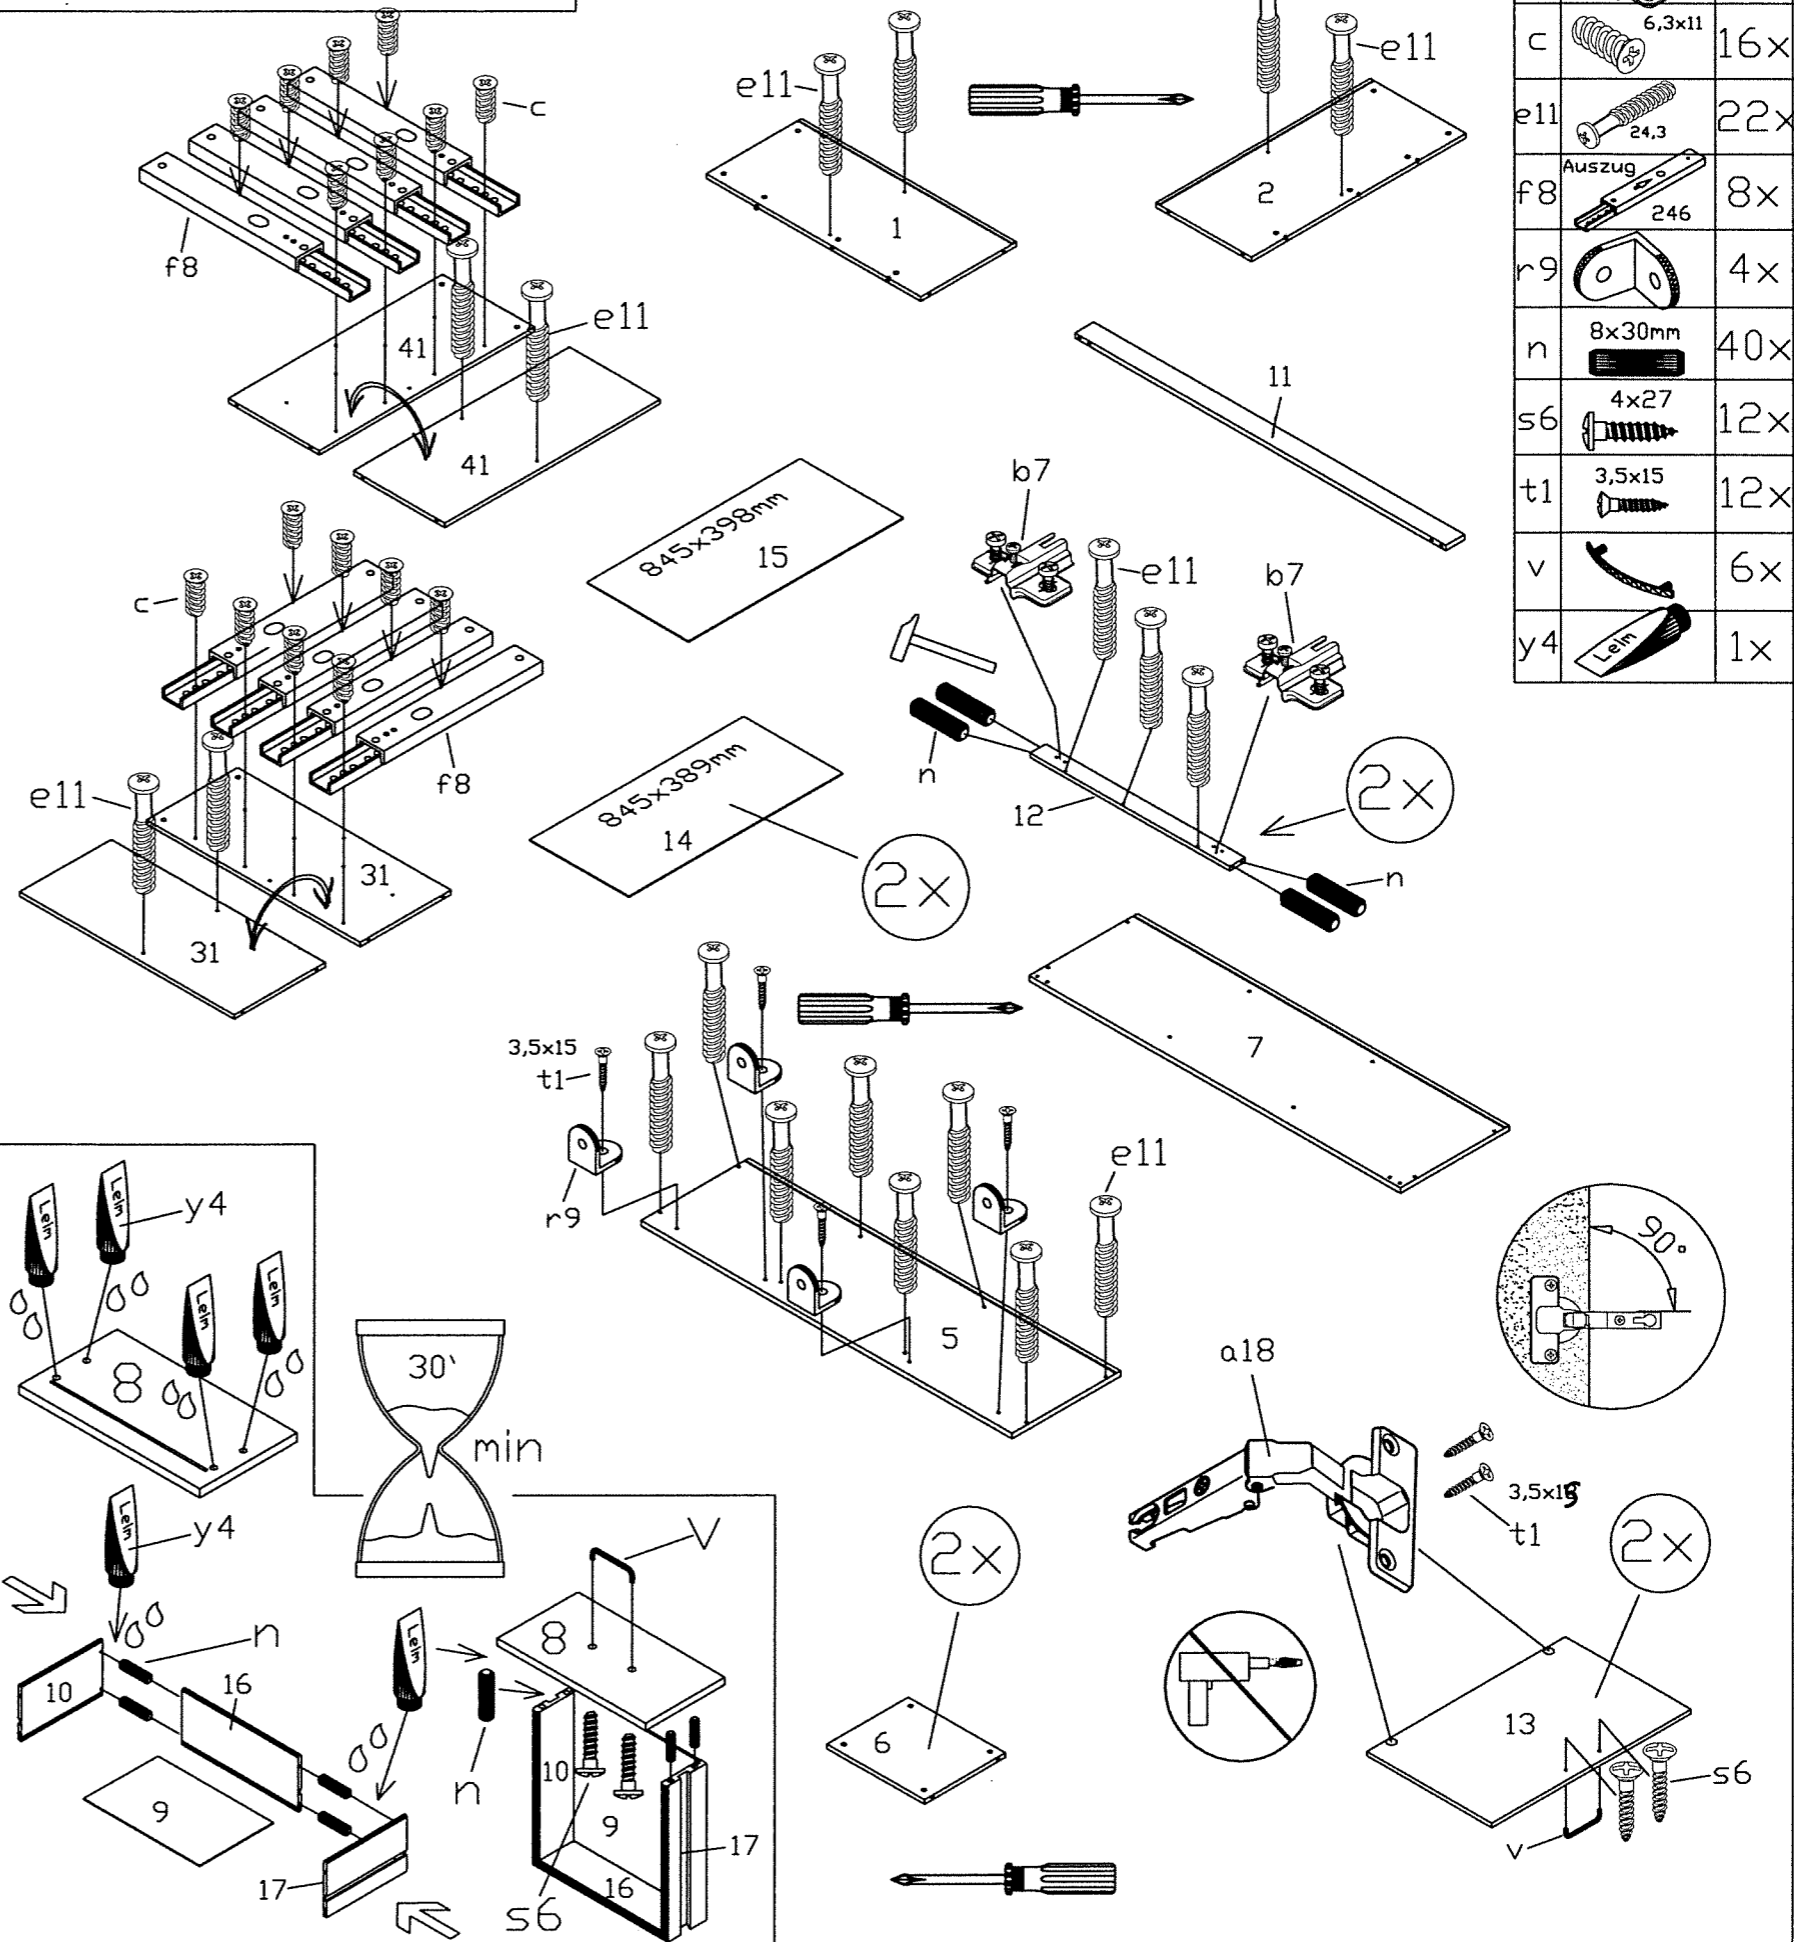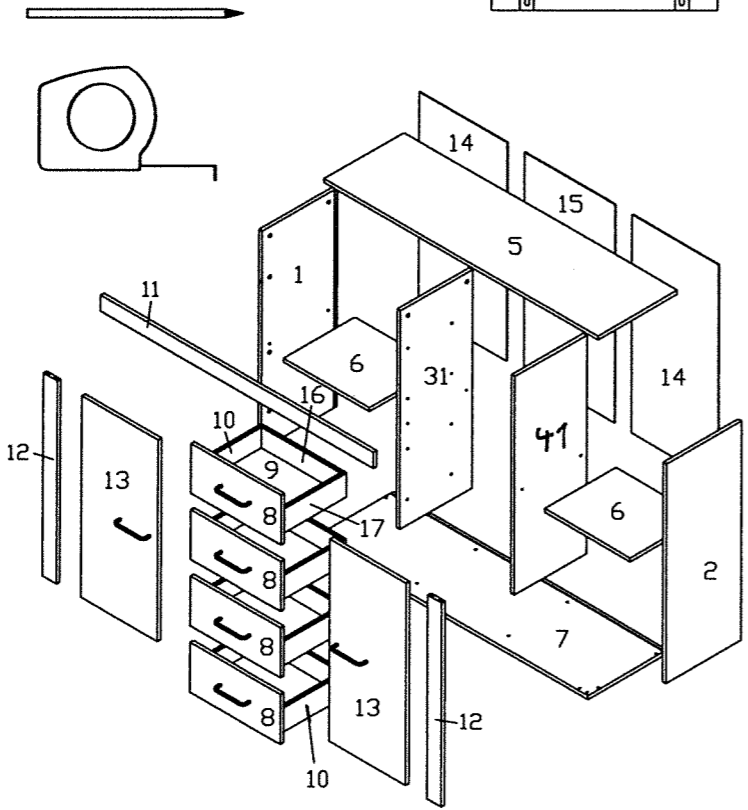

a18		4x
b7		4x
c		16x
e11		22x
f8		8x
r9		4x
n		40x
s6		12x
t1		12x
v		6x
y4		1x

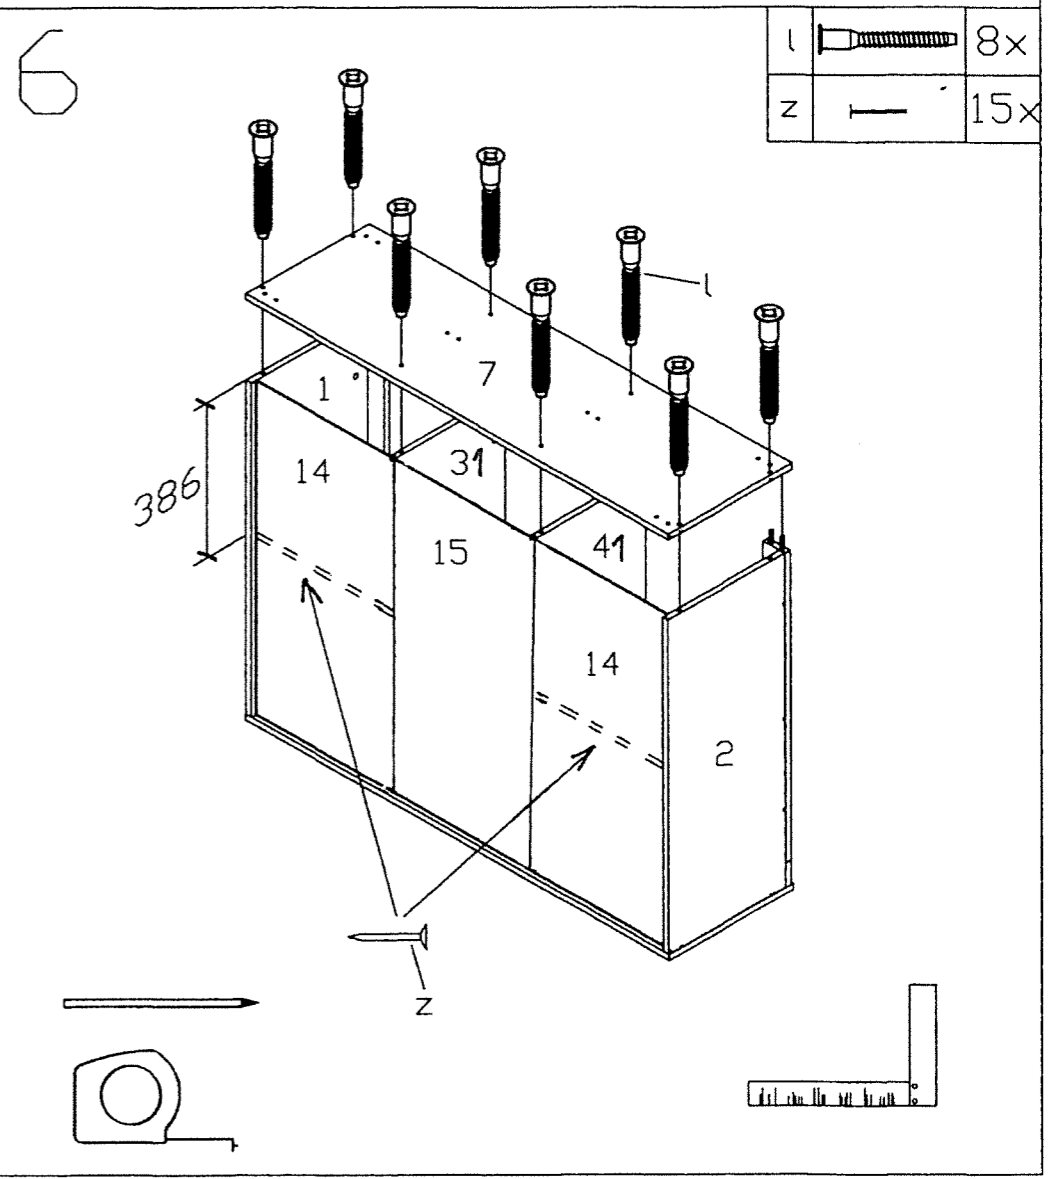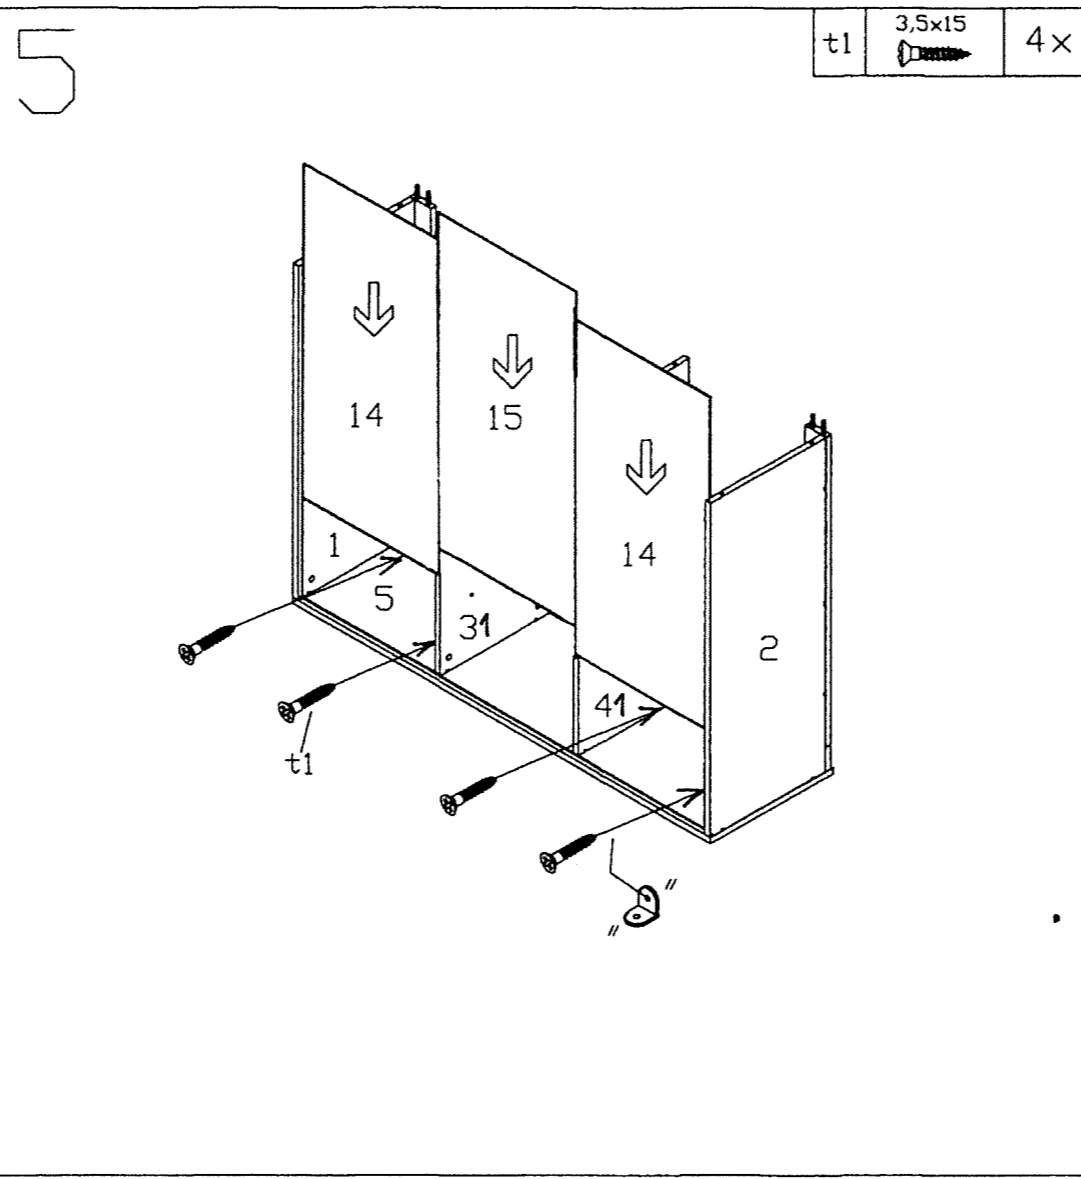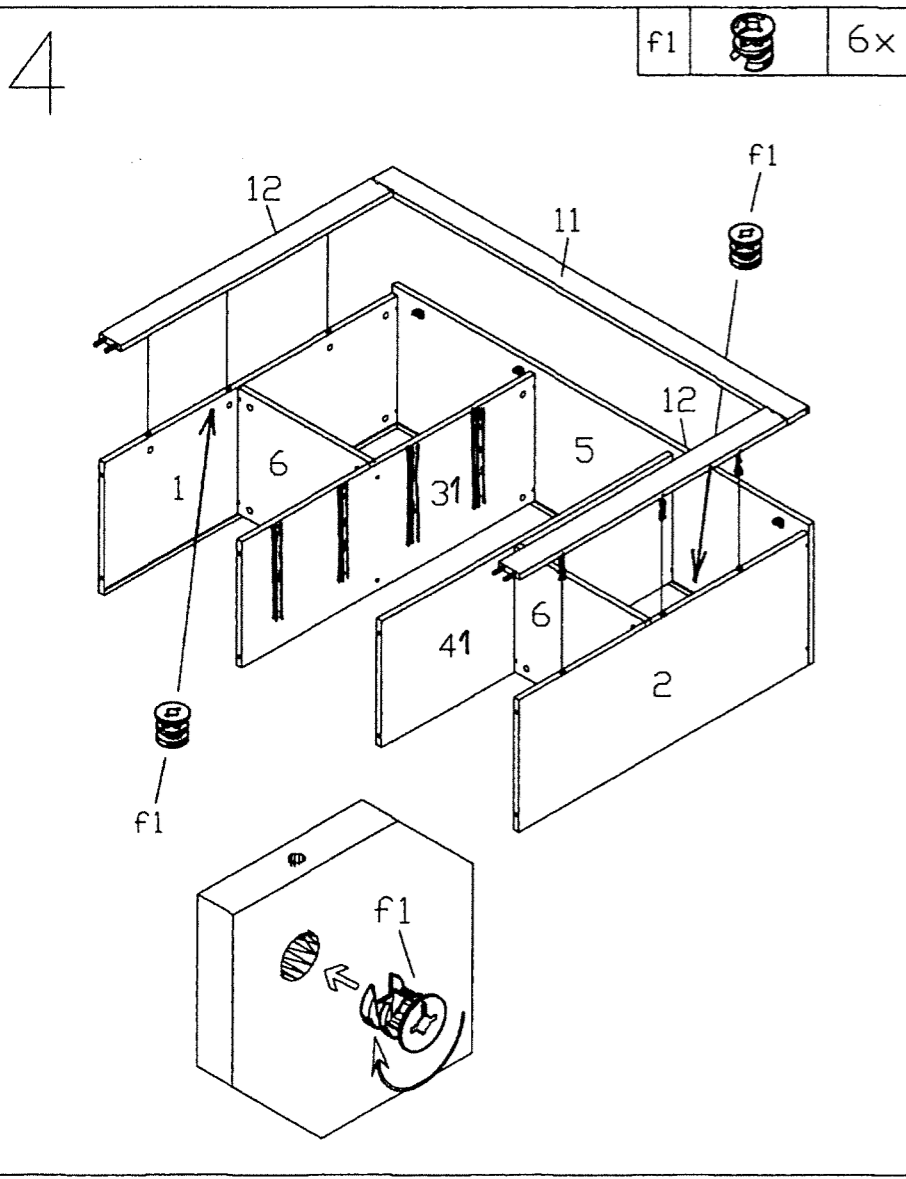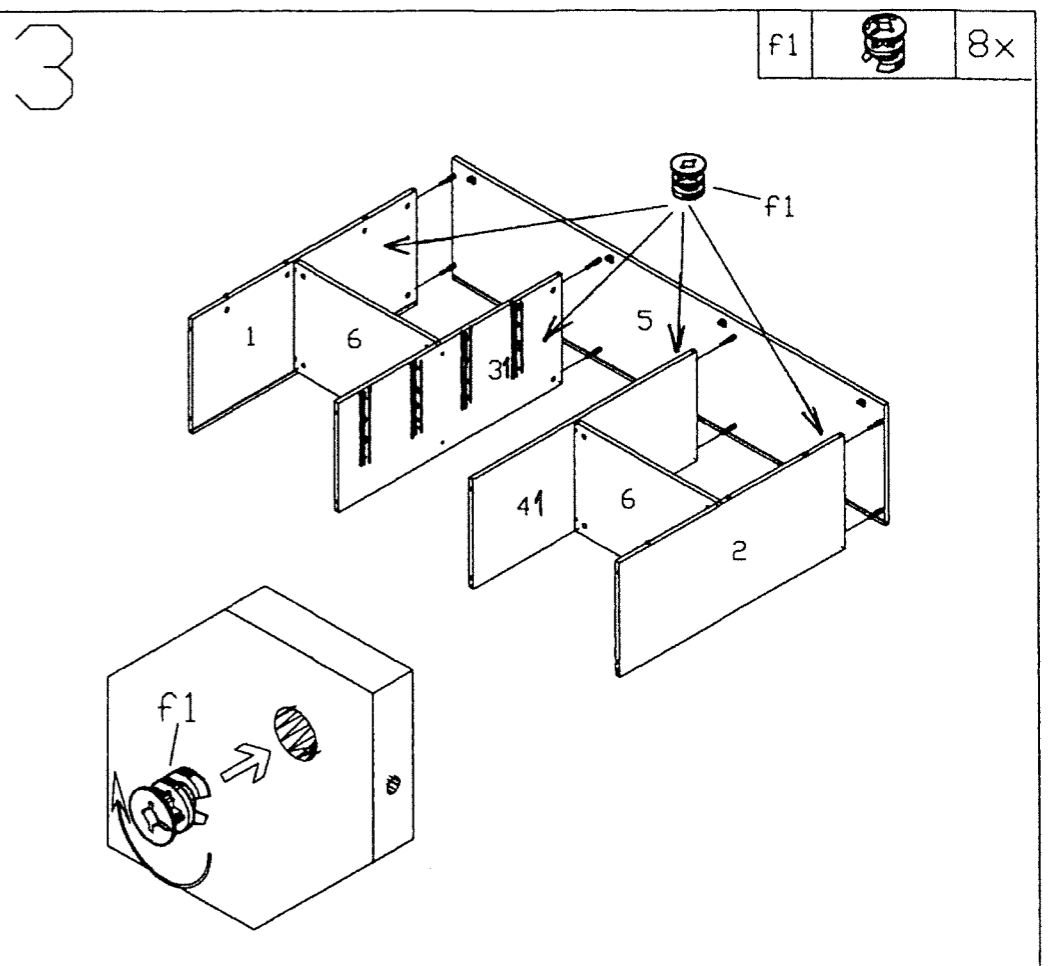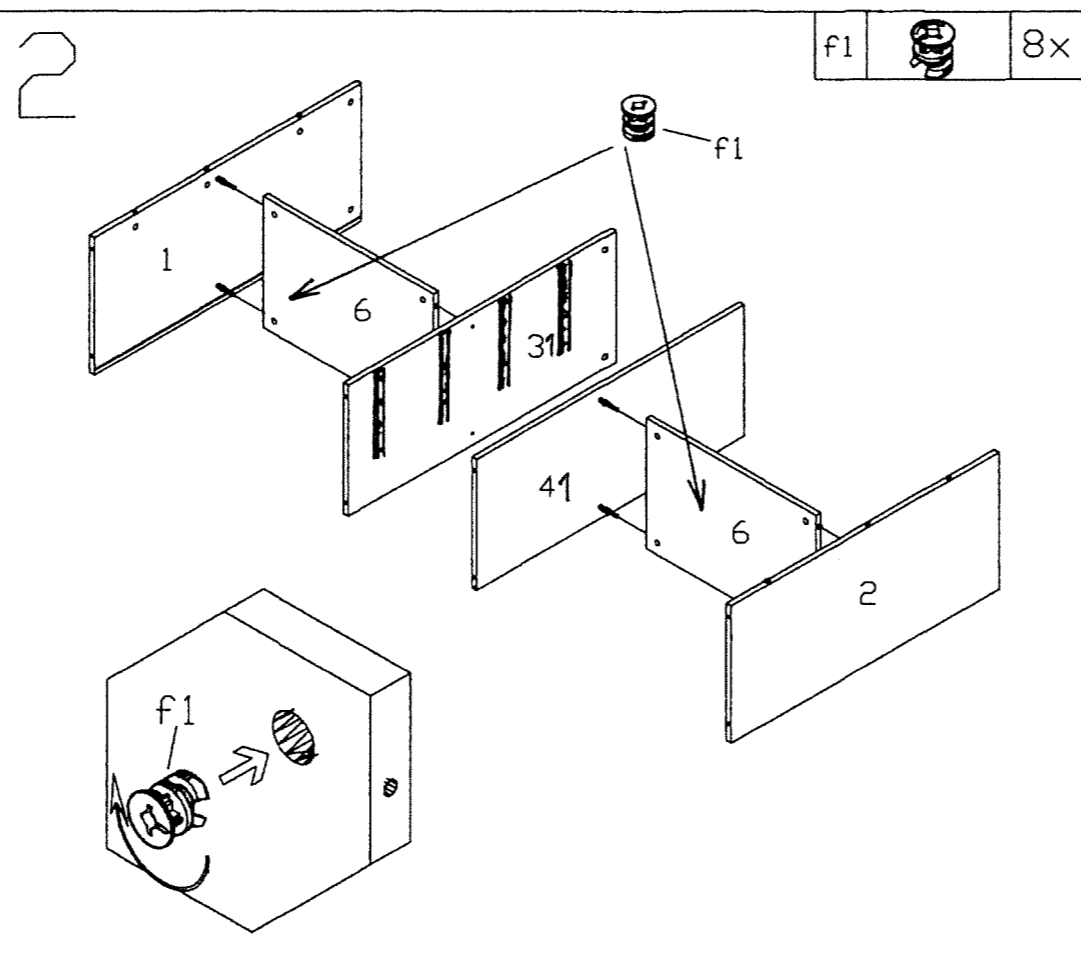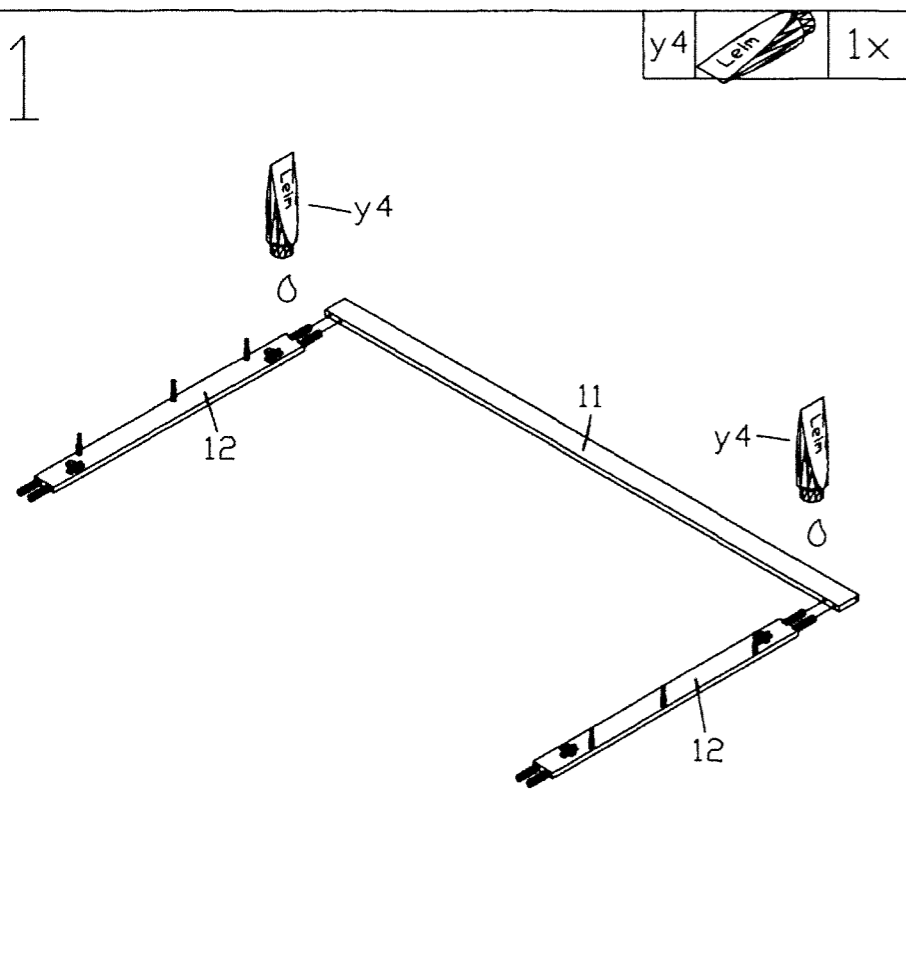

7

q2		16x
t6		12x
x8		6x

8

q10		8x
-----	--	----

9

