 
 
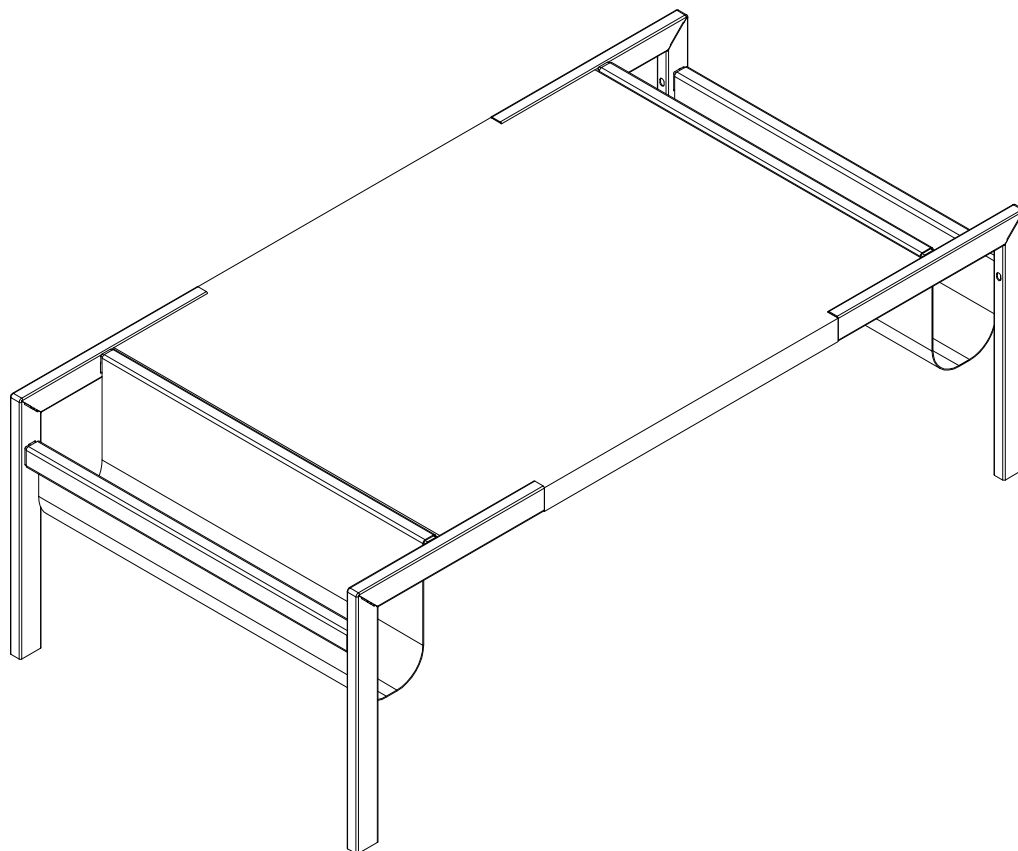 
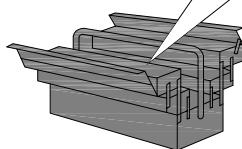 


Art. Nr. 6381 5356/2355 0110


LKZ 41164

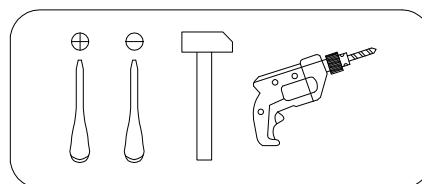

- | | |
|---------------------------------------|-----------------------------------|
| D Montageanleitung | GB Assembly instructions |
| FR Notice de montage | IT Istruzioni di montaggio |
| NL Handleiding voor de montage | PL Instrukcja montazu |
| CZ Montážní návod | SK Návod na montáž |
| HU Szerelési útmutató | RO Instrukțiuni de montaj |
| TR Montaj talimati | RU Инструкция по монтажу |

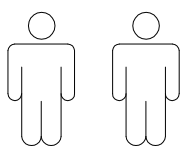

 0
10
20
30
40
50
60
70
80
90
100






N	LxBxH (mm)	Qty	✓	N	LxBxH (mm)	Qty	✓
1	645x30x20	2		4	420x350x20	2	
2	645x30x20	2		5	900x650x38	1	
3	420x350x20	2		6	600x582x31	2	

Service - Dienstverlening - Serwis - Servis - Сервисная служба


Name - Naam - Nazwa - Isim - Название

Nr. - No. - Номер

   Typ - Type - Тип - Тип

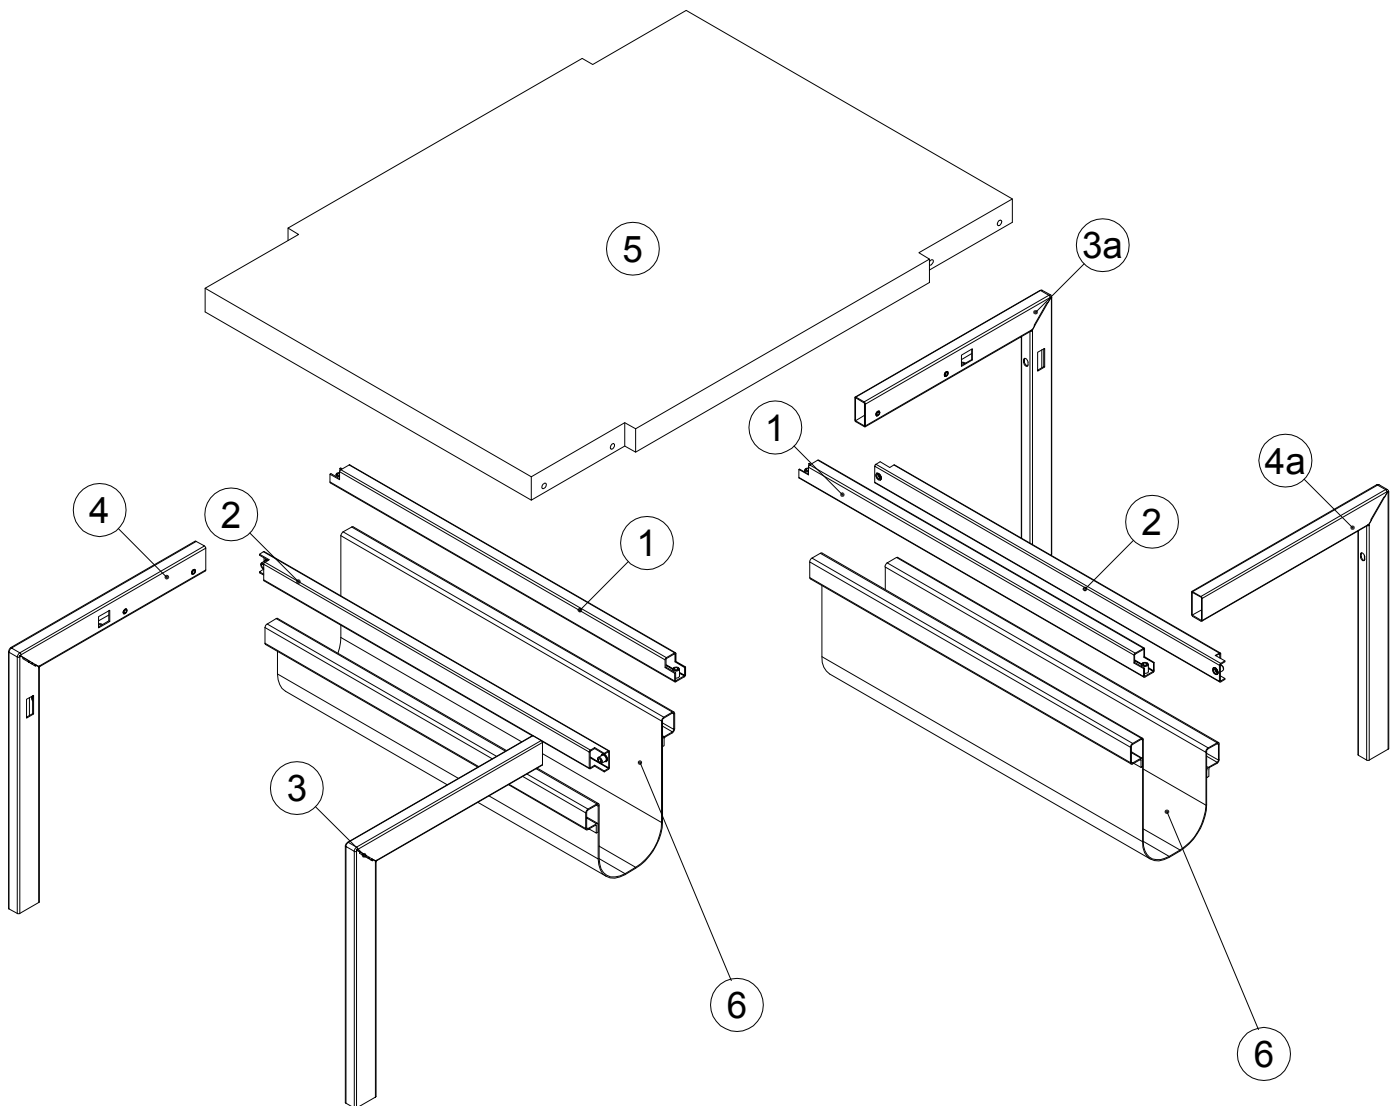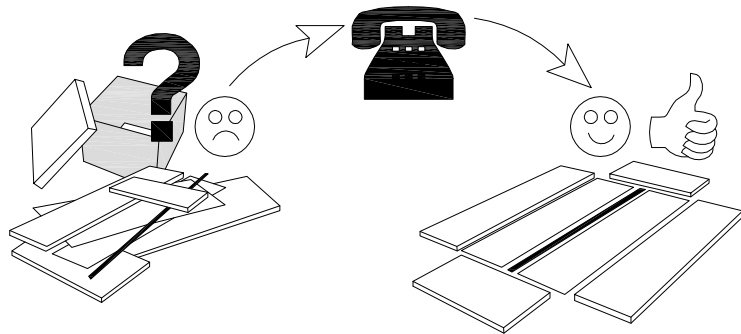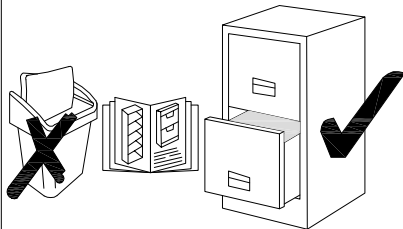


1

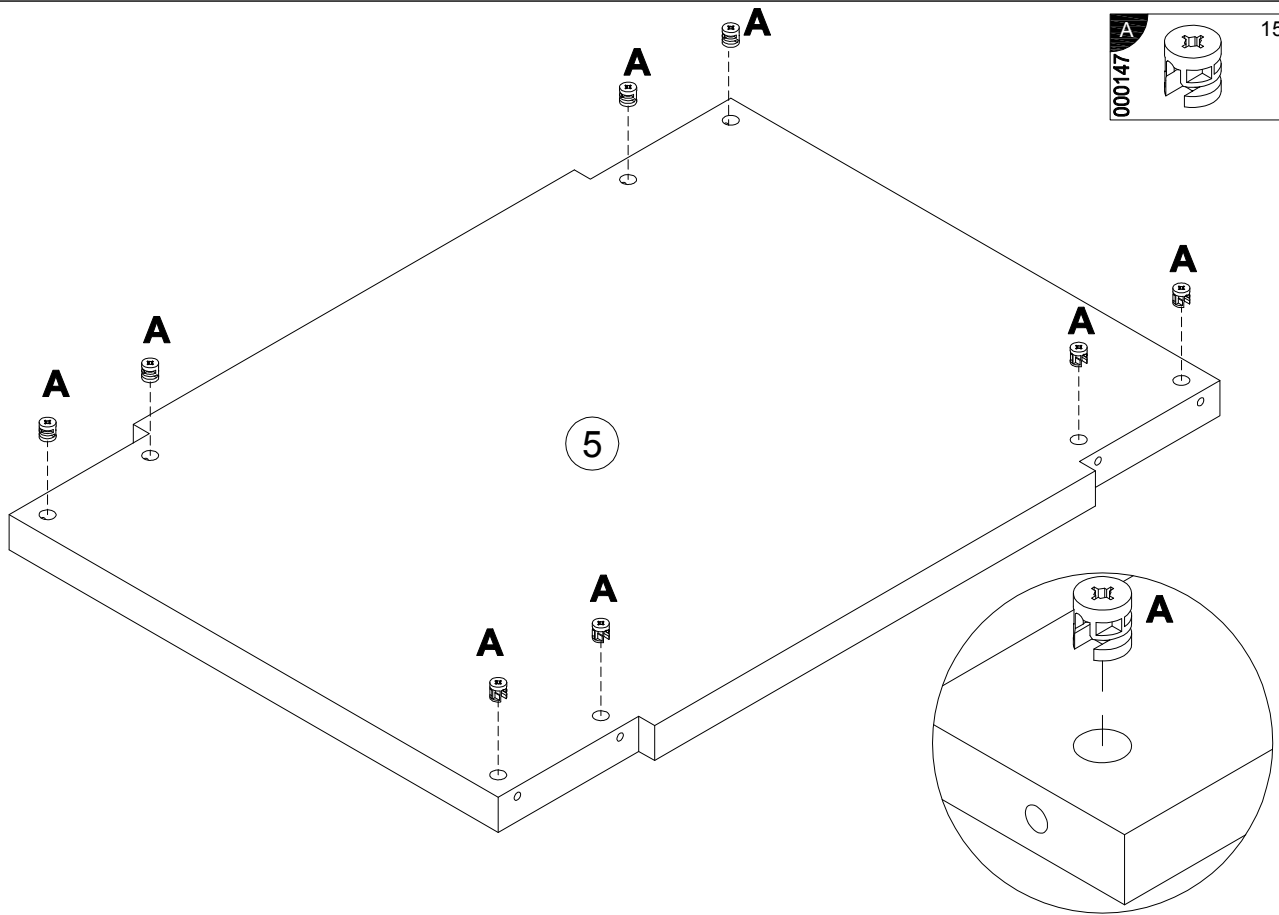 

000147 **A** 15x16 **x8**

2

 
x2

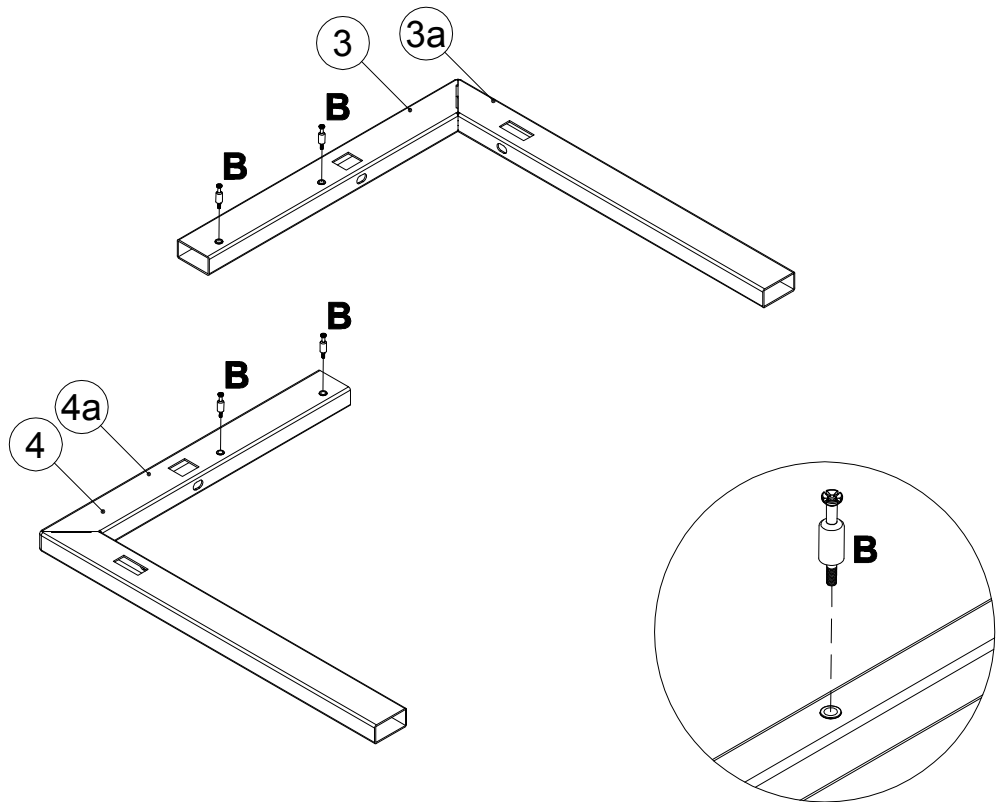

081320 **B** **x8**



3

 x2

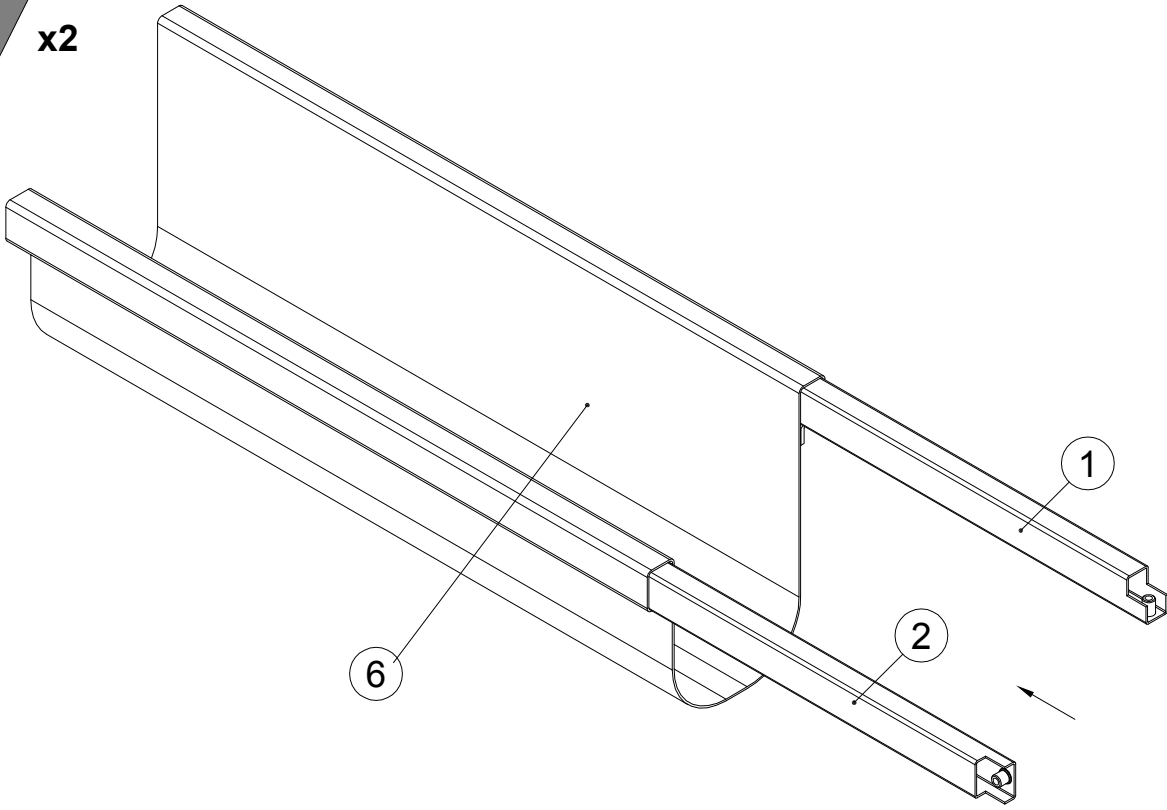


4

  x2

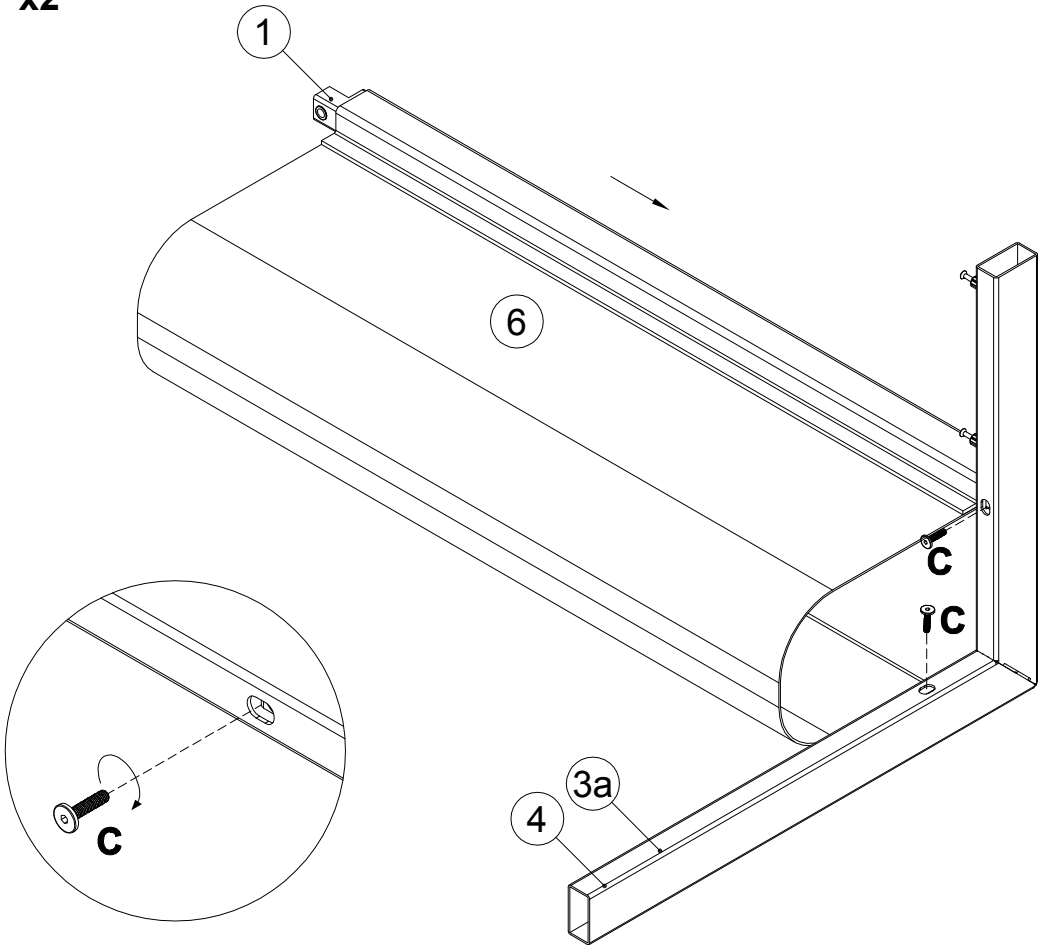


5

 5

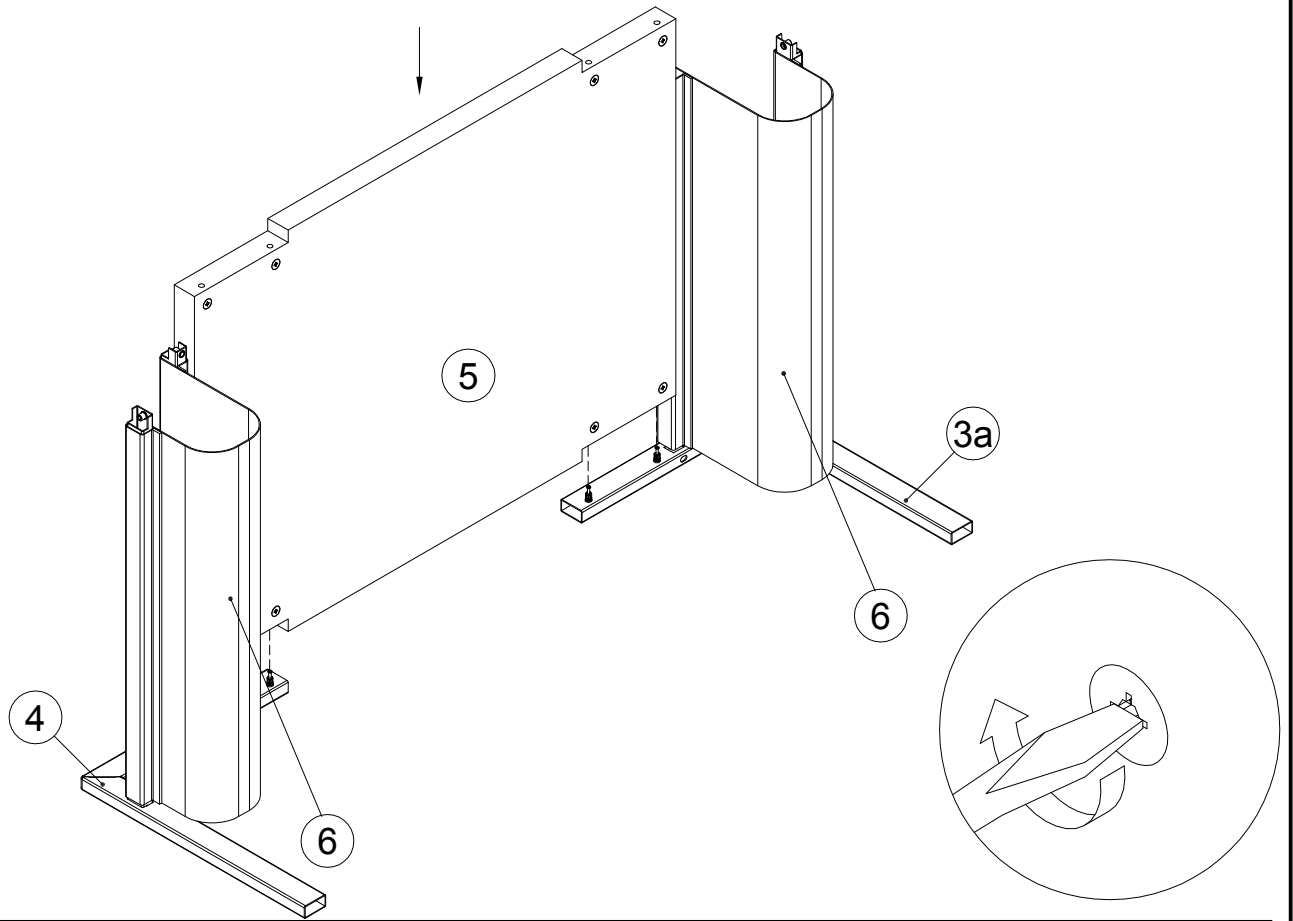


6

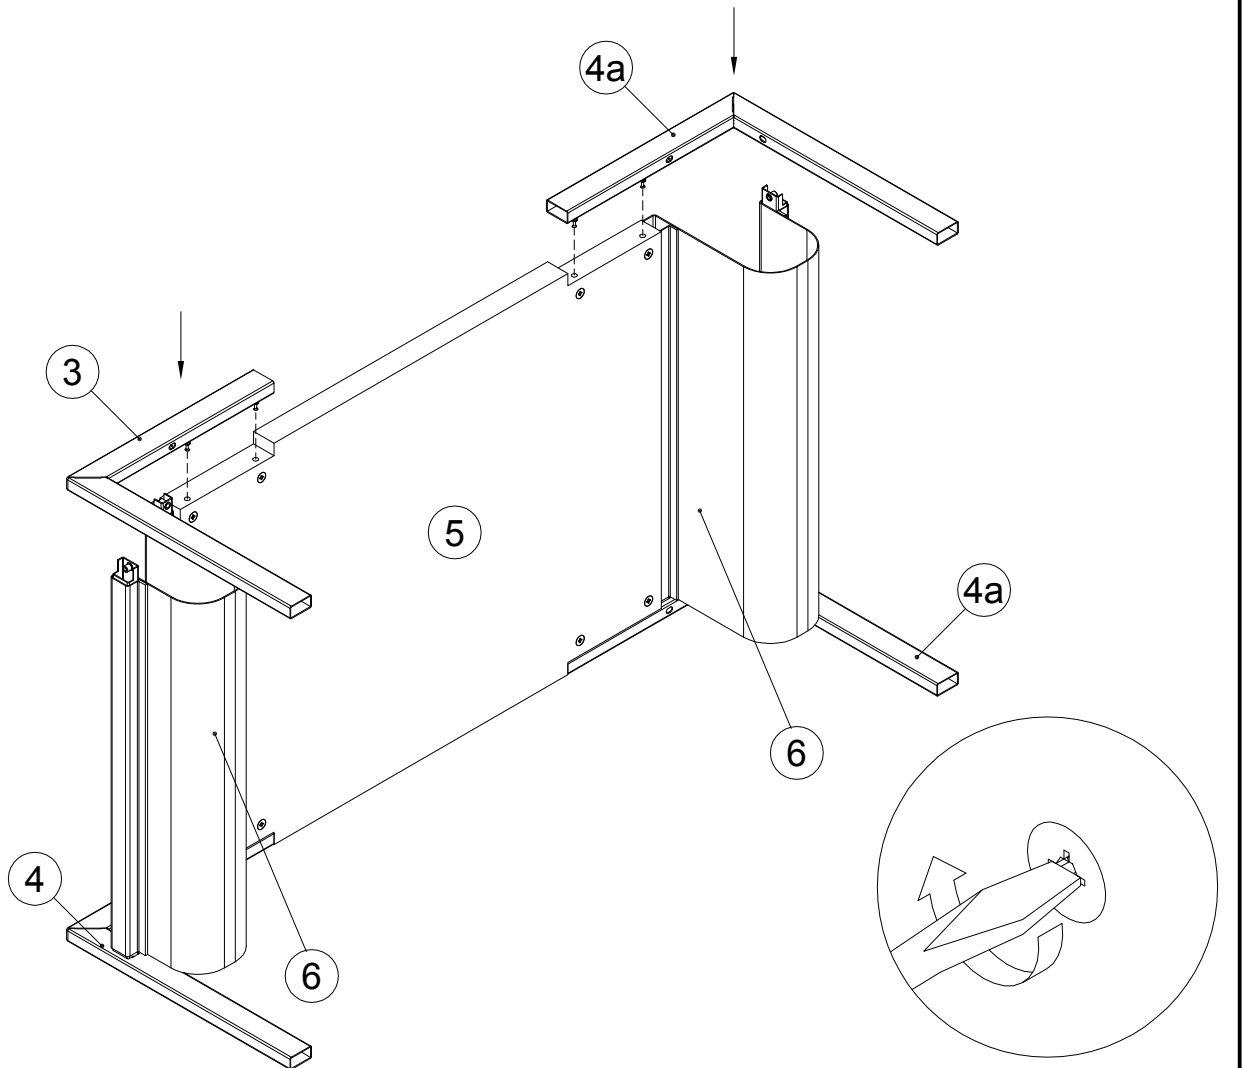 


6

 7

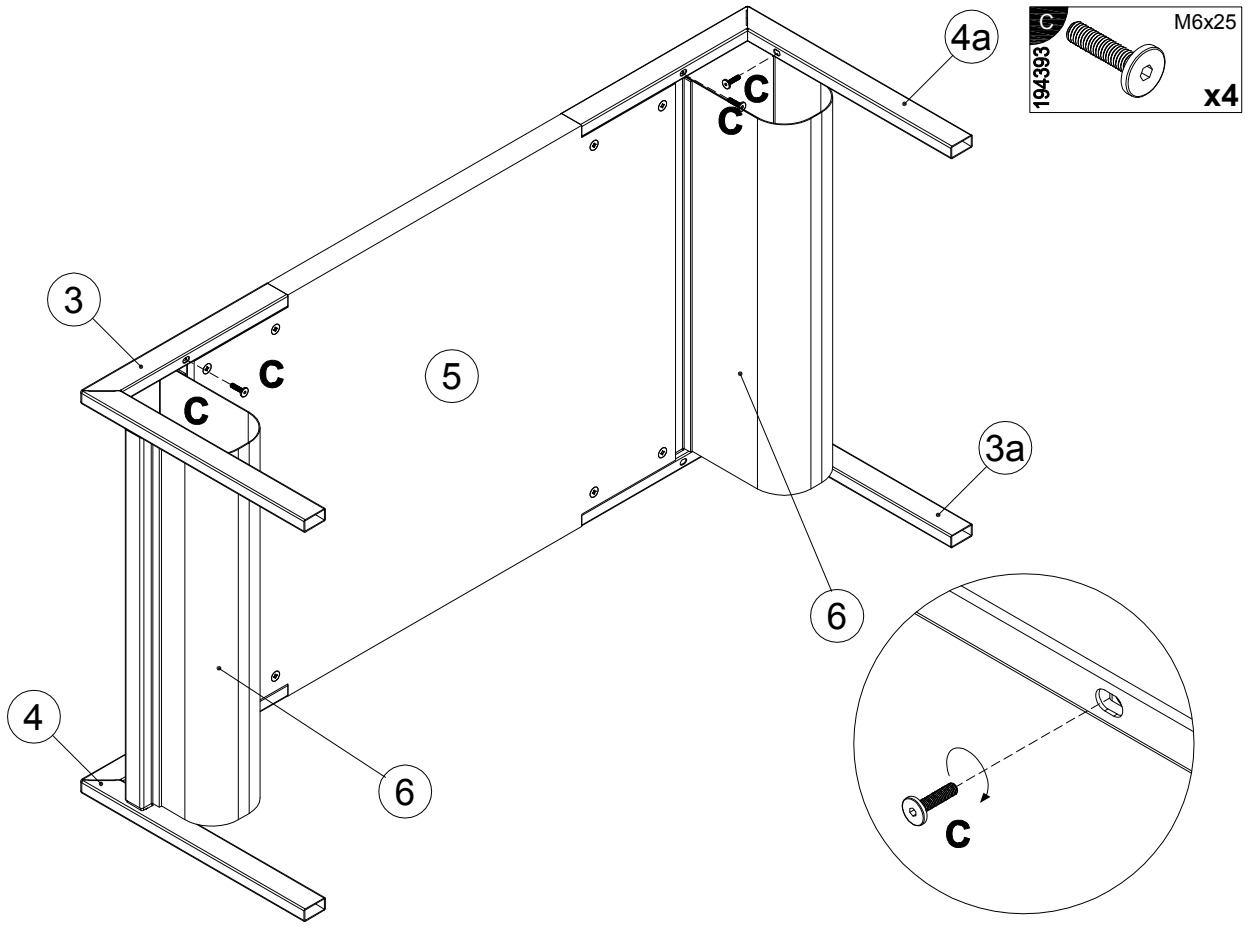

8

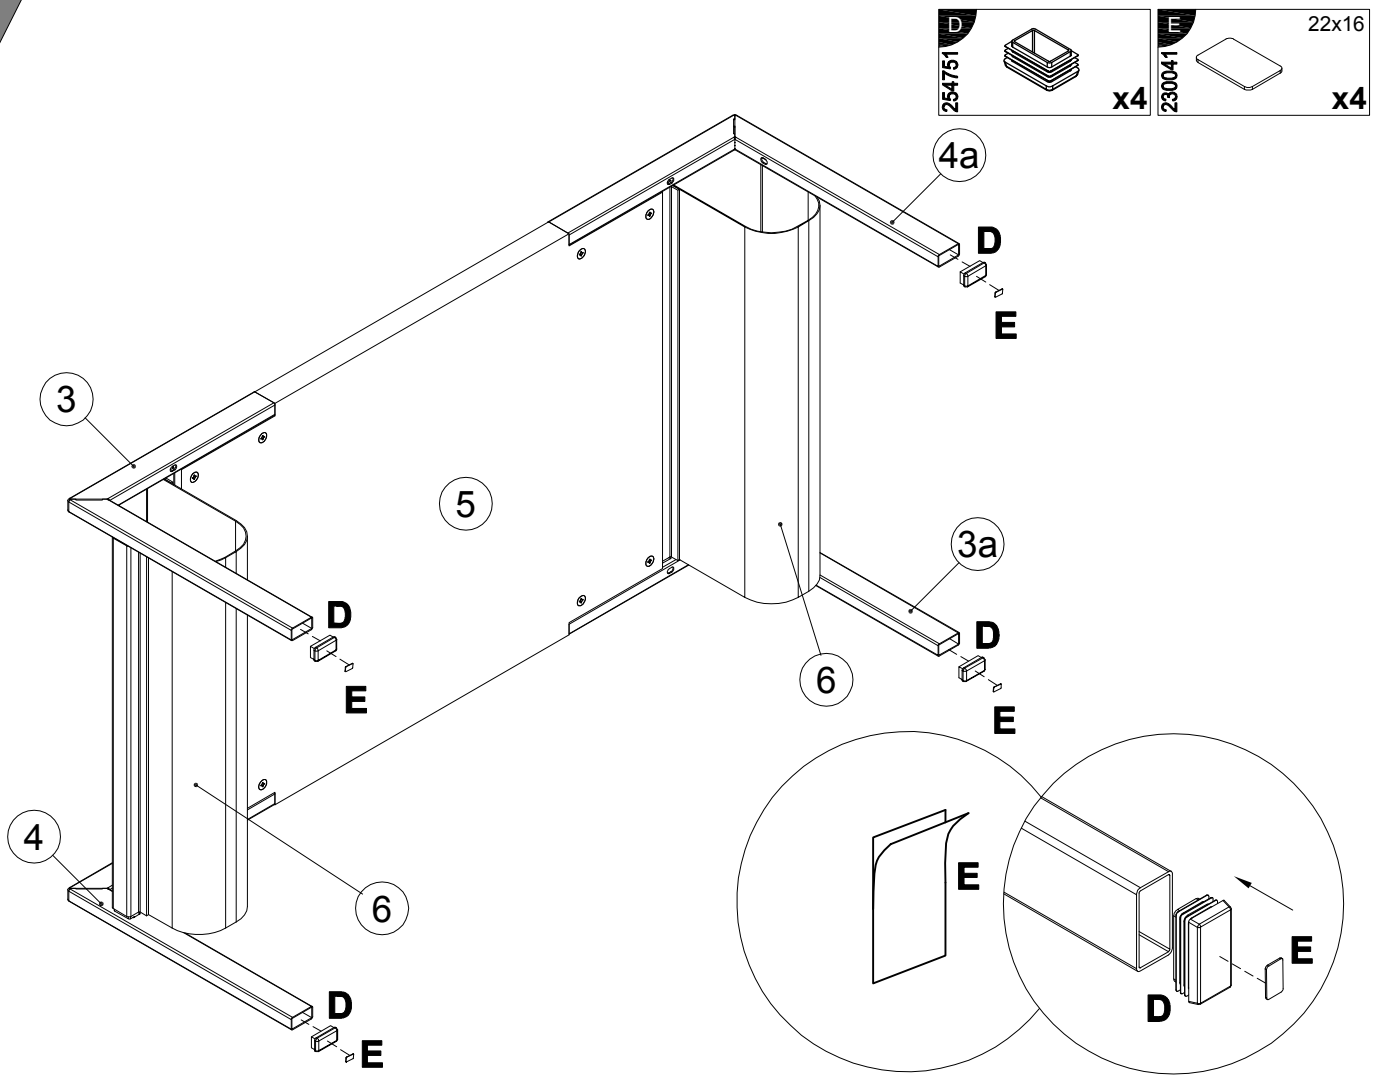 

7

