

Montageanleitung

Assembly instructions

NI Handleiding voor de montage

PI Instrukcja montażu

 Szerelési útmutató

RO Instrucțiuni de montaj

FR Notice de montage

IT Istruzioni di montaggio

C7 Montážní návod

SK Návod na montáž

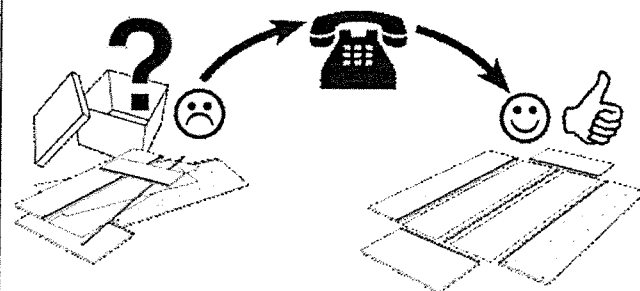 
Montaj talimatı

RII Инструкция по монтажу




Service • Assistenza • Dienstverlening • Serwis

Servis • Szerviz • Сервисная служба











Name • Nom • Nome • Naam Назва • Иméно • Назову • Név Делуимке • Isim • Название	Imola
Nr. • No. • N° • Номер • Č • Sz	
Typ • Type • Tip • Tipus • Tipo Тип	7.5474
	



1.	ASL	704x330x15mm	1
2.	ASR	704x330x15mm	1
3.	MSL	704x315x15mm	1
4.	MSR	704x315x15mm	1
5.	BL	1498x330x15mm	1
6.	BD	1498x330x15mm	1
7.	SKV	496x157x15/16mm	2
8.	SKB	445x278x3mm	2
9.	SZL	282x97x12mm	2
10.	SZH	434x97x12mm	2
11.	SZR	282x97x12mm	2
12.	BLE	496x55x15/16mm	1
13.	TR	496x574x15/16mm	2
13a.	TRM	496x574x15/16mm	1
14.	ZBM	484x315x15mm	1
15.	EB	476x315x15mm	2
16.	EBM	484x315x15mm	1
17.	RW	1478x716x3mm	1

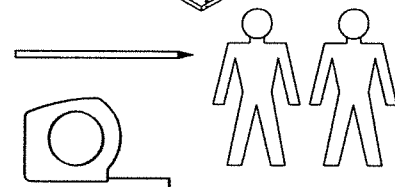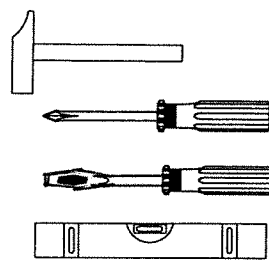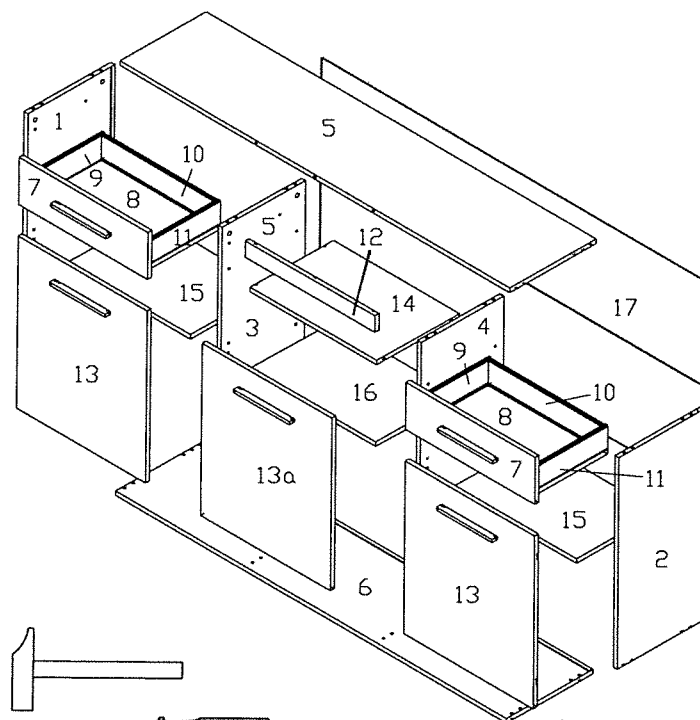   

00

          A5		4x	f1		8x									
A6		2x	f8		4x	r		12x	v		5x			
B1		6x	h4		6x	r9		2x	x8		6x			
C		4x	l		12x	s6		10x	y4		2x			
C1		4x	n		35x	t1		4x	z		15x			
e11		8x	q10		4x	t6		12x	z81		4x			

