

Lotus (2AL/2xSTV-SE-1OT/STV)(1OT/STV-SE-2AL/2xSTV)




- | | | | |
|------|-----------------------------|------|---------------------------|
| (DE) | Montageanleitung | (IT) | Istruzioni di montaggio |
| (PL) | Instrukcja montażu | (FR) | Notice de montage |
| (NL) | Handleiding voor de montage | (RO) | Instructiuni de asamblare |
| (GB) | Assembly instructions | (SK) | Montážny návod |
| (TR) | Montaj talimatı | (CZ) | Montážní návod |
| (RU) | Инструкция по монтажу | (HU) | Szerelési útmutató |

Service - Servis - Dienstverlening - Servis - Serwis - Сервисная служба - Servizio - Service
Serviciu - Služby - Szolgáltatás

Name - Nazwa - Naam - Name - Isim - название
Nome - Nom - Numele - Meno - Jméno - Neve

Lotus (2AL/2xSTV-SE-1OT/STV)(1OT/STV-SE-2AL/2xSTV)



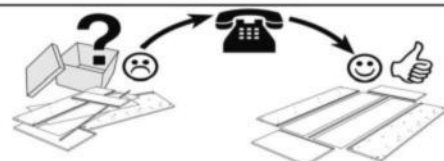




(2AL/2xSTV-SE-1OT/STV)



(1OT/STV-SE-2AL/2xSTV)

23-01-2021

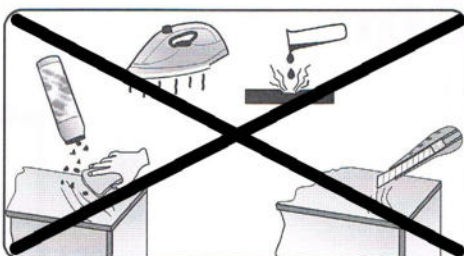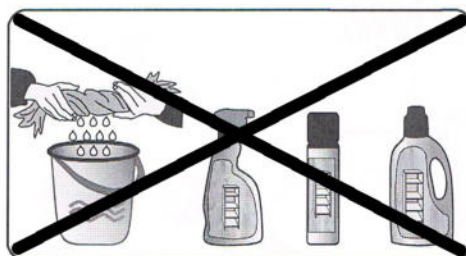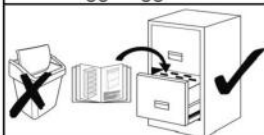

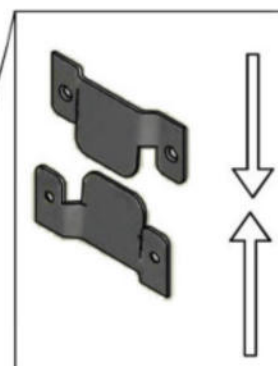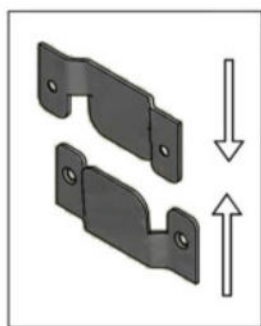

23-01-2021

