 
 


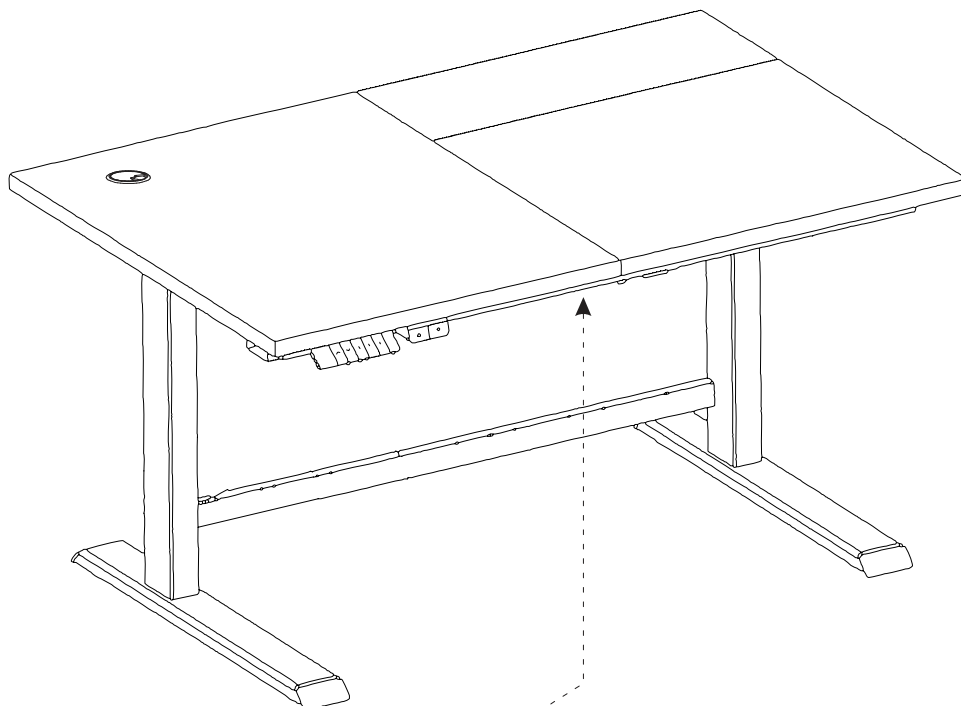

„MEBLE-OKMED” DEMKO - SPÓŁKA JAWNA
ul. Kolejowa 13, 14-500 Braniewo, POLSKA
www.mebleokmed.pl (+48) 55 243 27 26
firma@mebleokmed.pl

SERIA: .../...

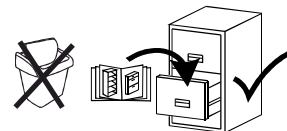

BEN 20

SERIA: _/_



LE TRI
+ FACILE



FR
Donnez ou recyclez
vos meubles.



Association

 
 
 
 
 
 
 
 


Magasin







Déchèterie


<https://quefairedemesdechets.fr>

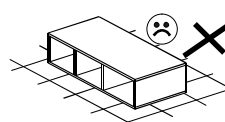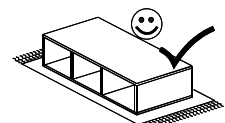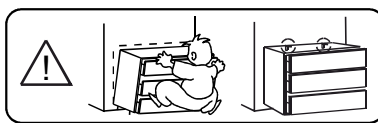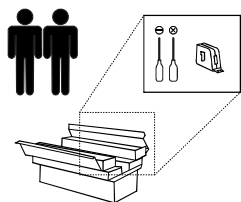
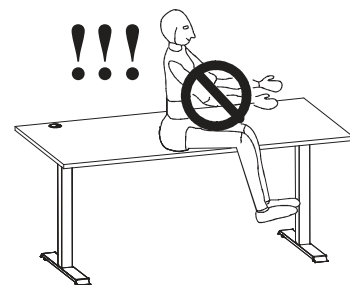
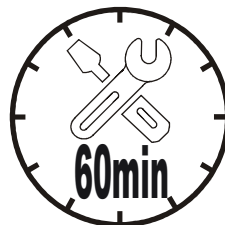


<div> 1/1 </div>				
11-570-17-3				
	B [mm]	H [mm]	T [mm]	
1	770	600	22	x1
2	598	558	22	x1
3	210	600	22	x1

A	8	M5	1
6,3x13		4x16	
ME3	4	W	10

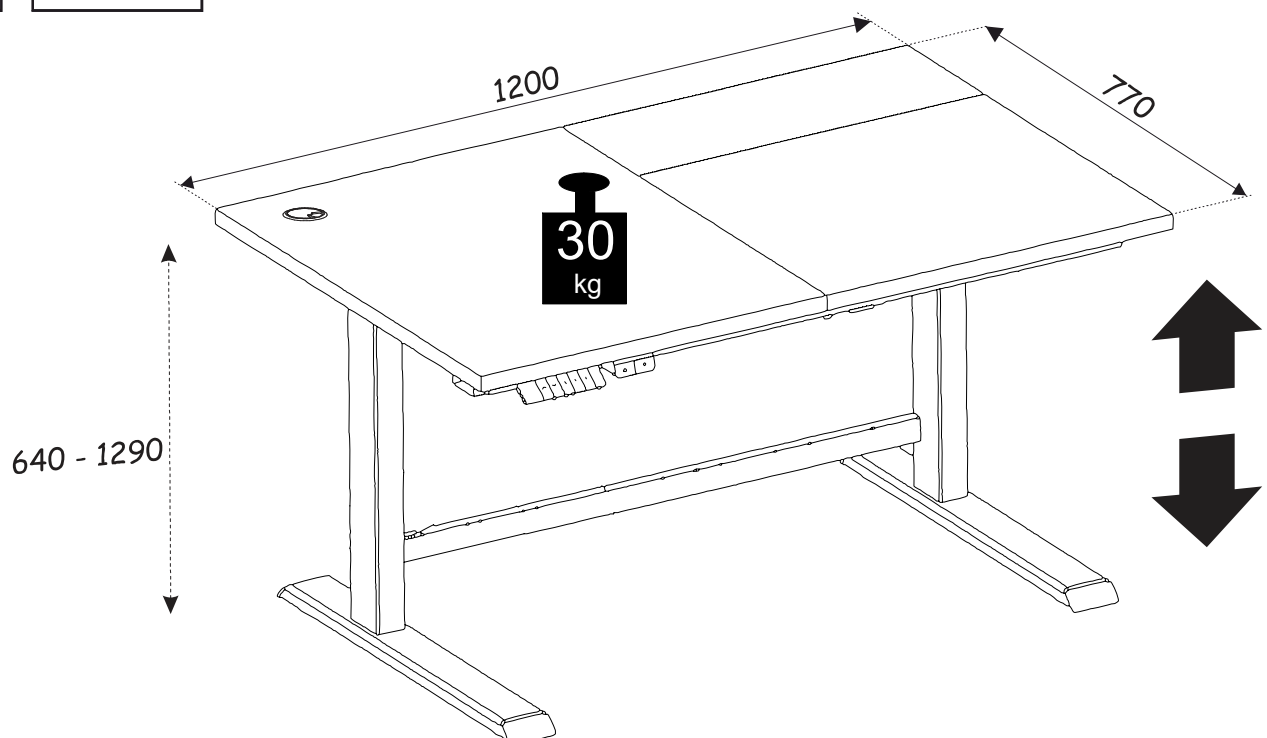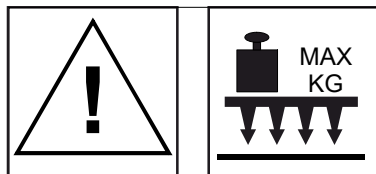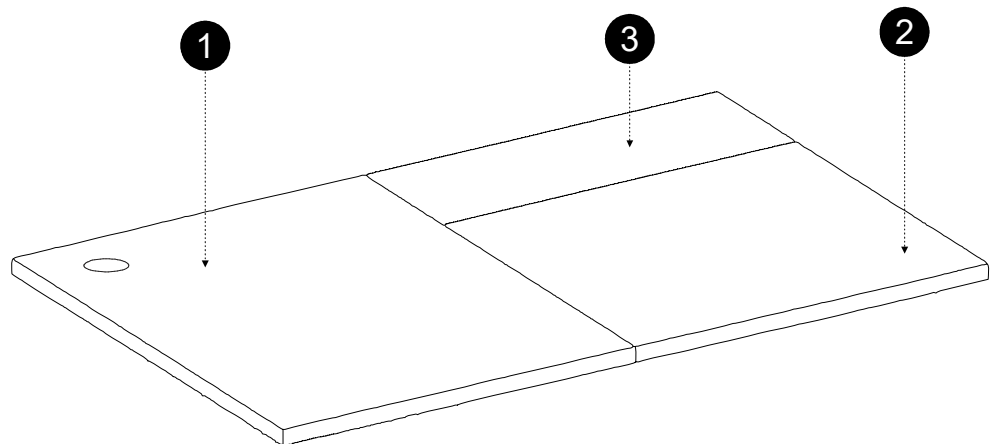    

 1/2	11-525-18-N	
2/2	11-525-18-N	

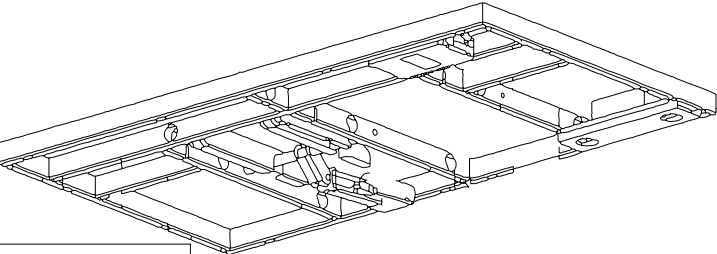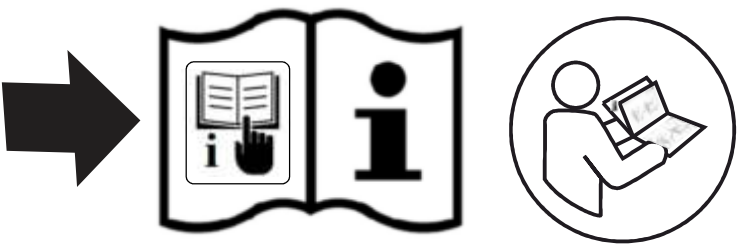   


M5	1
----	---










M6x12	8
-------	---




minieuro 6,3x13	4
-----------------	---

 

4x16	10
------	----

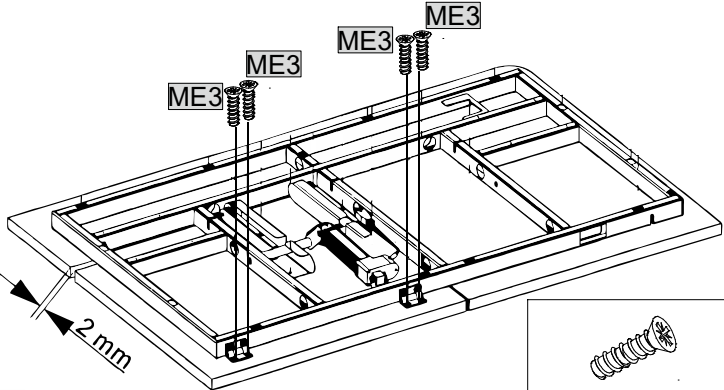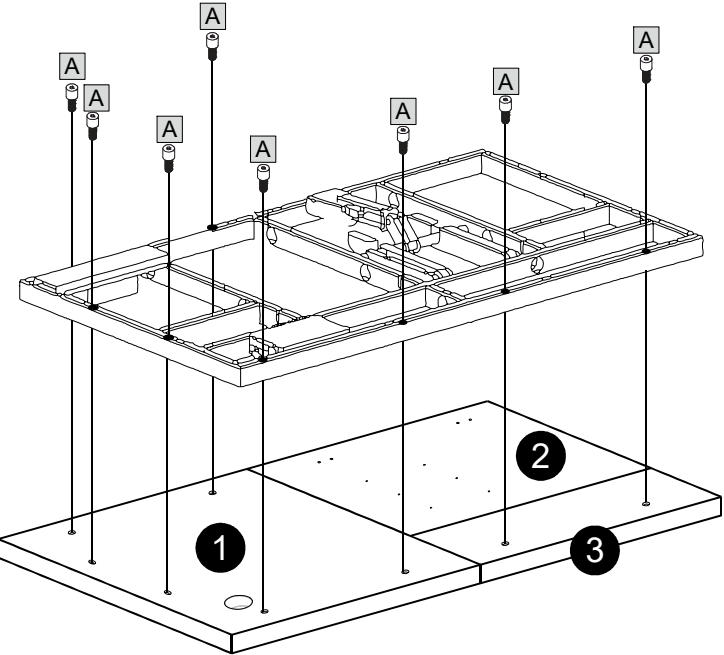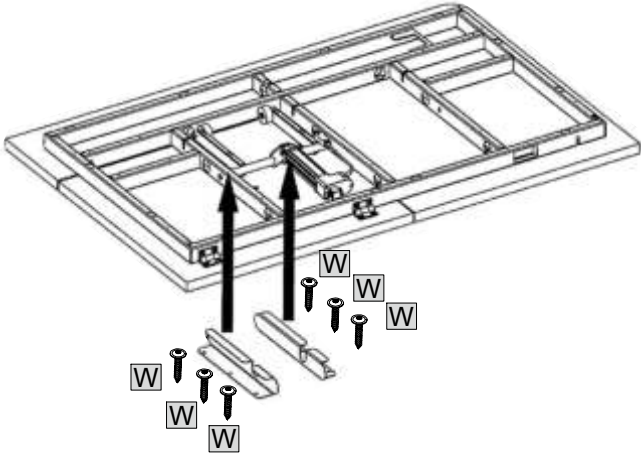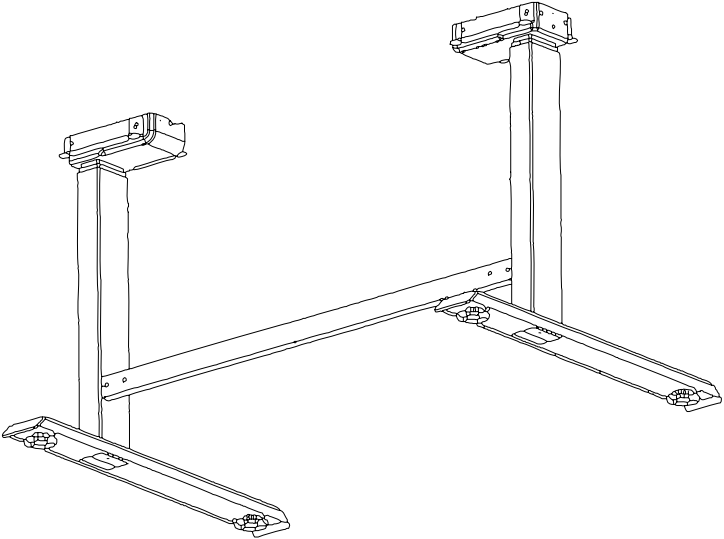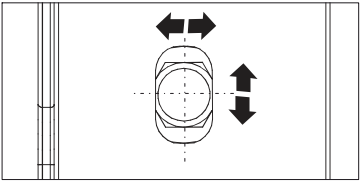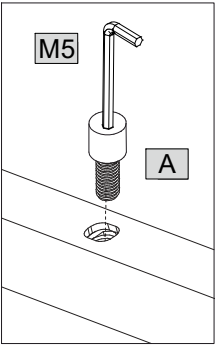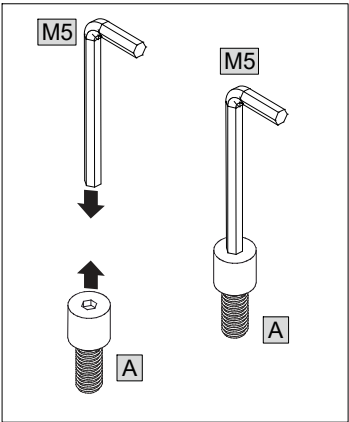       


minieuro 6,3x13	4
-----------------	---

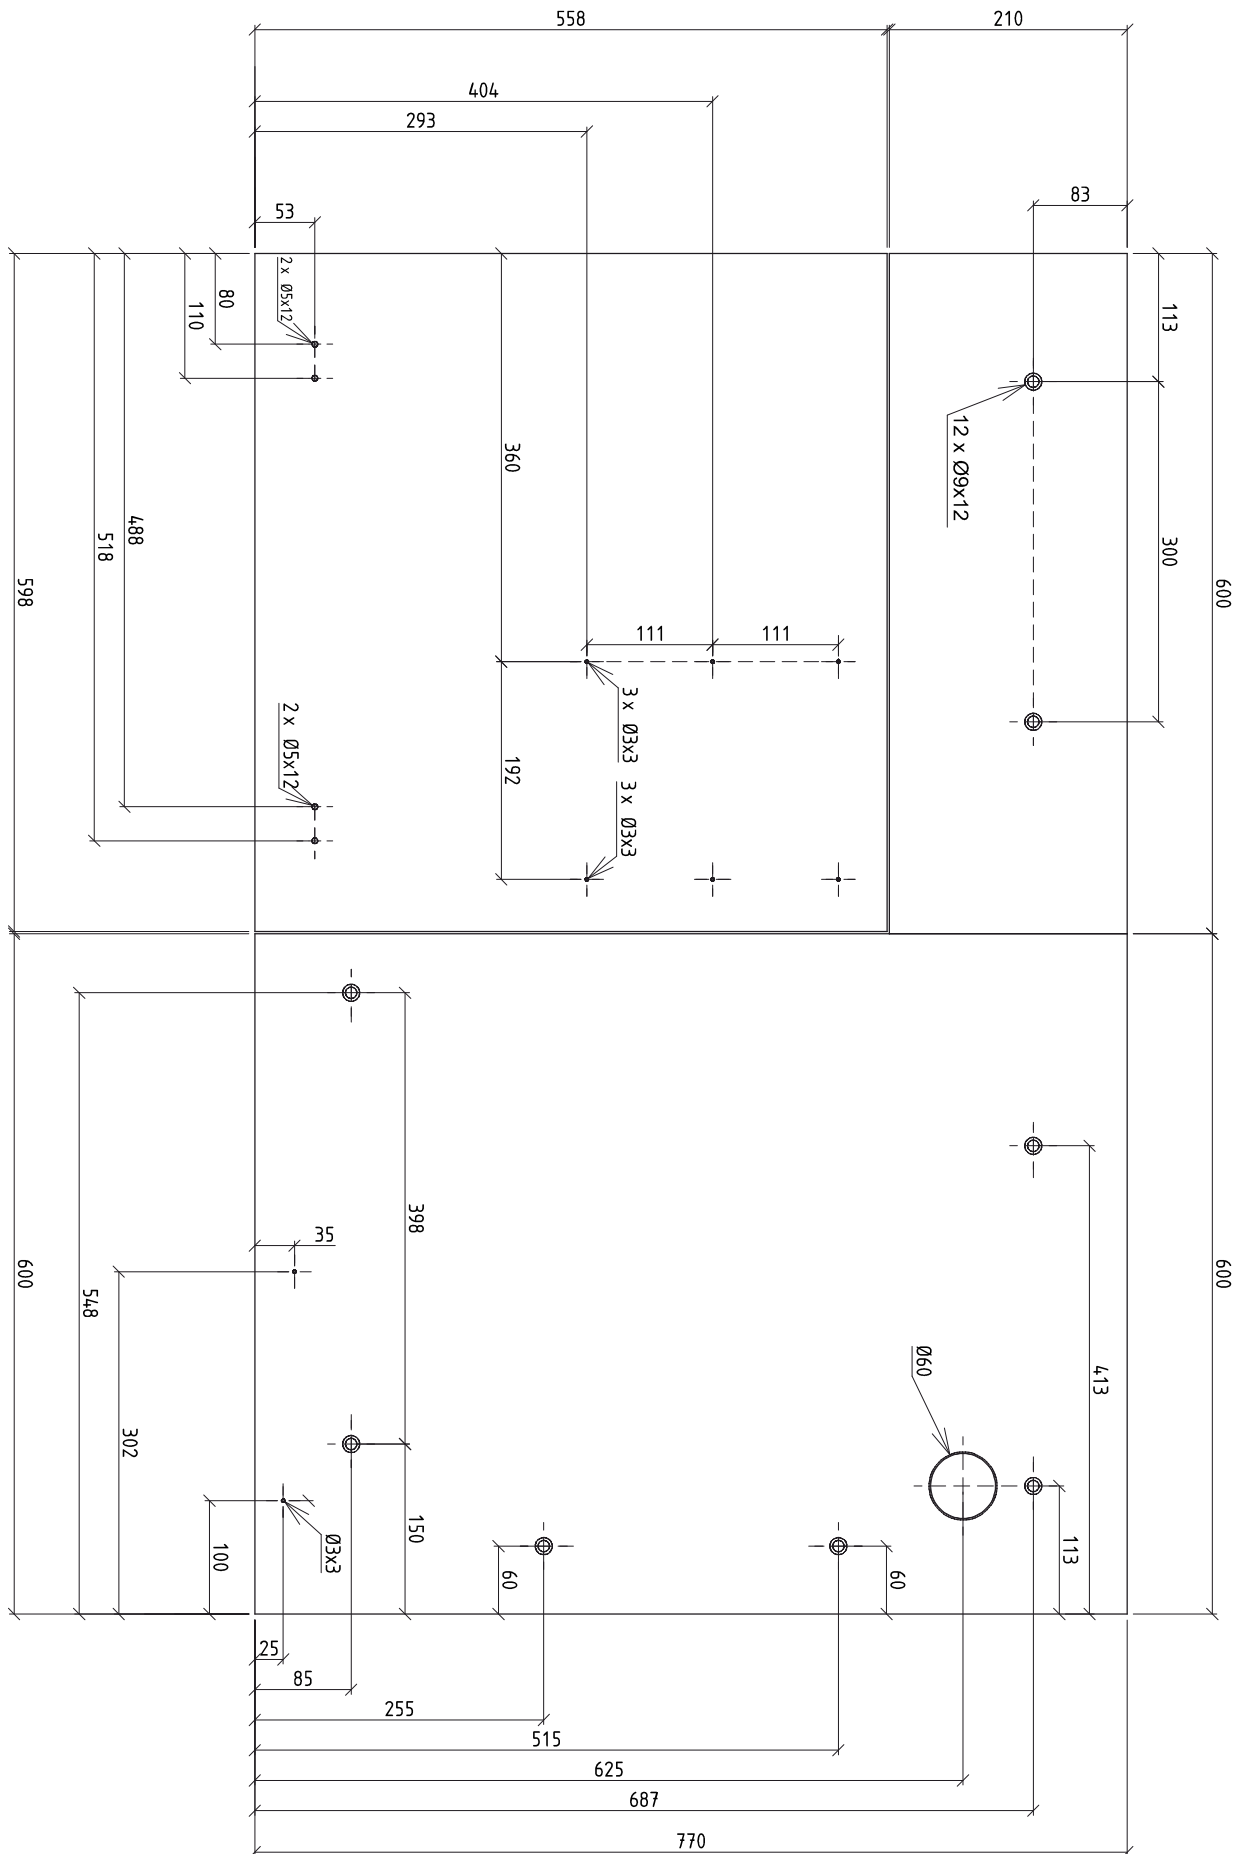 

Electric Height Adjustable Desk 3-Leg

 User Guide

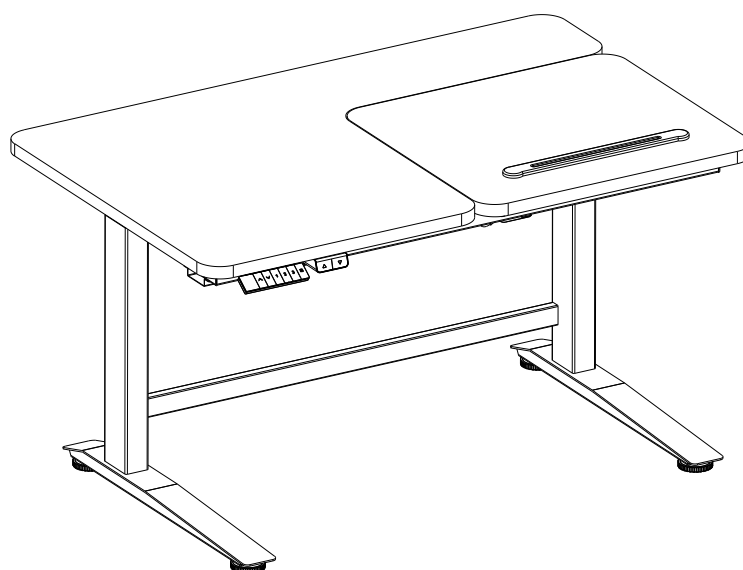

CAUTION

MAKE SURE NO OBSTACLES ARE IN THE DESK'S PATH AND ALL CORDS ARE OF APPROPRIATE LENGTH FOR DESK TRAVEL. FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY, AND OPERATION INSTRUCTIONS AND WARNINGS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS PROPERTY DAMAGE OR BODILY INJURY.

IMPORTANT

Any user or installer of desk base must study this manual carefully.

If this desk is sold, please provide the manual to the buyer.

⚠ CAUTION:

SAFETY AND WARNINGS

- Inappropriate use of this product may cause property or bodily injury. Make sure that children, pets, etc. stay away from the product when the desk is in operation.
- Check the surroundings on all sides before using the desk. Make sure the desk does not touch the wall.
- Please unplug the power supply during lightning and when the product is not in use for a long time.
- Make sure NO obstacles are in the desk's path and no obstacles higher than 500 mm under the table. Body parts and property can be crushed if trapped between an immobile obstacle and the desk's range of motion.
- Keep the work environment temperature at 0-40 °C. And keep goods away from corrosive gases, liquids, and dusty objects.
- Ensure the length of power cords is accounted for when operating the desk. Monitors, computers, speakers, and anything with a cord that is not long enough for the desk's range of motion could be pulled down or have its wires broken. Items pulled off the desk may cause other items to fall.
- It is strictly forbidden to disassemble the product without permission, in order to prevent the product from malfunctioning and electronic products from causing harm to the human body.
- Please provide this operation to any users, installers, or support personnel operating the product. Read relevant operating instructions before using. The company does not take any responsibility for product damage and human body injury caused by the abnormal operations.

USAGE

This desk height is adjustable so that it can be positioned at the most ergonomically suitable height. These desks are designed only for the purposes included in this manual. They should not be used in environments with high humidity or dampness. Any other use is at the user's risk.

Do not move around, crawl or lie under the desk frame. Do not sit or stand on the desk frame.

Children should never use the desk unless they are supervised by adults.

Liability: Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused by improper use handling of the desk frame other than that which is described in this operation manual.

SETUP AND INSTALLATION

Once the desk has been assembled, adjust the feet so that the desk is level and does not shift its position. After this, connect the desk to the 110v or 240v outlet and the desk is ready for use.

Check that no cables can get jammed.

Choose a placement for the desk that's a safe distance from window frames, radiators, furniture, etc. So that people do not get stuck or trapped by the desk.

Do not place any objects that are taller than 50cm(20'') underneath the desk. After it has been assembled, when moving the desk, DO NOT lift the desk by the desktop. Lifting this way can stress the fasteners connecting the desk base to the desktop. Lower the desk completely and lift the desk by grabbing the top of the desk base or by removing the desktop first.

SAFETY AND WARNINGS

This desk height is adjustable so that it can be positioned at the most ergonomically suitable height. These desks are designed only for the purposes included in this manual. They should not be used in environments with high humidity or dampness. Any other use is at the user's risk.

 
Do not move around, crawl or lie under the desk frame. Do not sit or stand on the desk frame.

Children should never use the desk unless they are supervised by adults.


Liability: Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused by improper use handling of the desk frame other than that which is described in this operation manual.

Main Components


Please check you have all the parts listed below

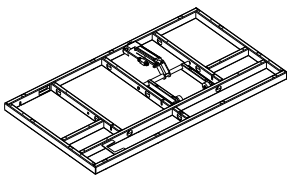


1 Frame Qty 1

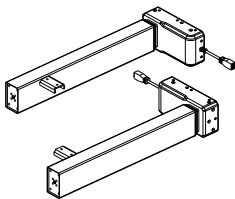 


2 Leg Qty 2

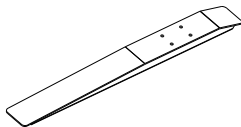 


3 Foot Qty 2

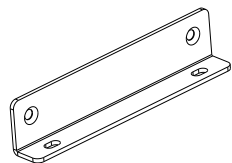 


4 Connection Strap Qty 4

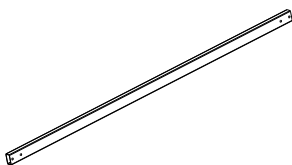 


5 Cross Bar Qty 1

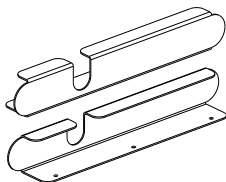 

6 Steel Plate Cover Qty 2

 


7 Cable Tray Qty 1

 


8 Leveling Studs Qty 4



 
9 Control Box Qty 1



10 Adapter Qty 1

 

11 Handset 1 Qty 1

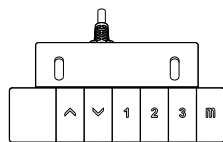  


 
 

 
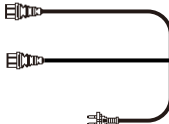 



12 Handset 2 Qty 1

Fixings, Fittings And Tools

Please check all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly . In some case more fittings may be supplied than be required.


A  Qty 8 M6*16mm Screw	B  Qty 16 M6*8mm Screw	C  Qty 12 M6*8mm Screw	D  Qty 9 M5*18mm Screw	E  Qty 10 M4*16mm Screw
F  Qty 1 M4 Allen Key	G  Qty 1 M4 Allen Key	H  Qty 1 Power Cord	I  Qty 1 Connecting Cables	

Assembly Steps

Step 1

Attach each foot with
qty 8 Screws(Part#A)

 A







M6*16mm Screw Qty 8

G



    M4 Allen key Qty 1

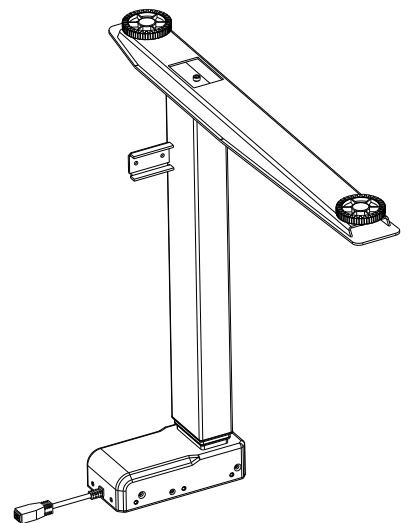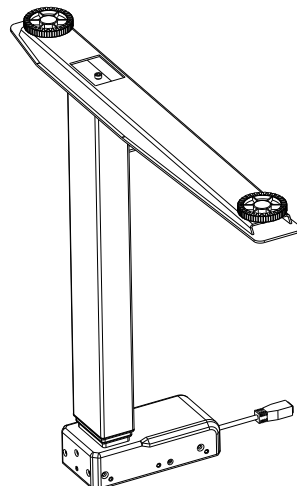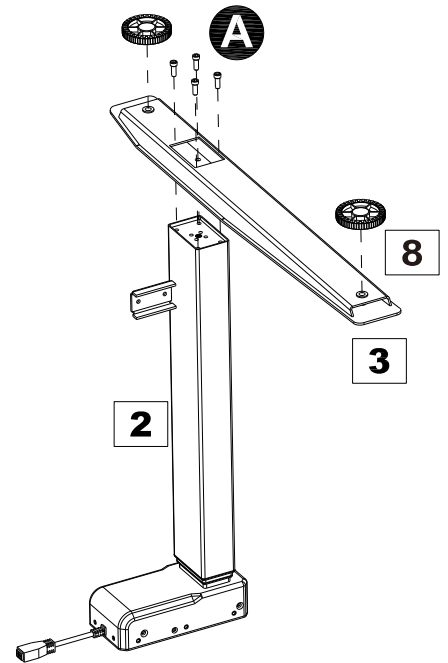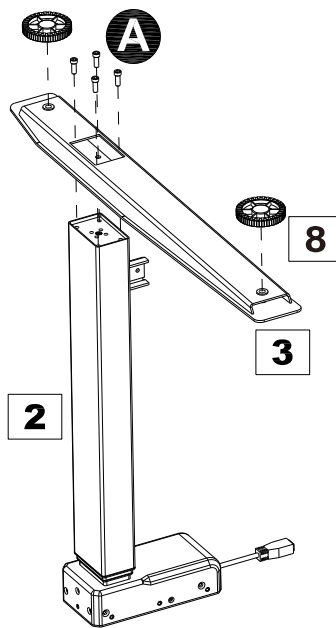

Step 2

Attach Connection Strap
with qty 8 Screws(Part#C)

C

 
 
 
 


M6*8 mm Screw Qty 8

G




M4 Allen key Qty 1

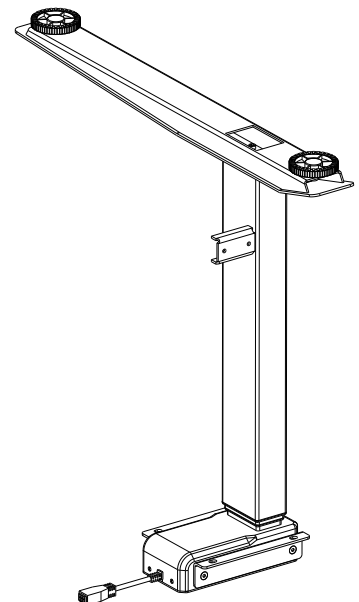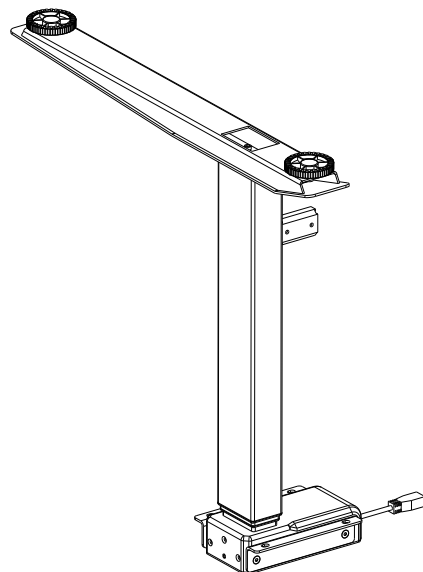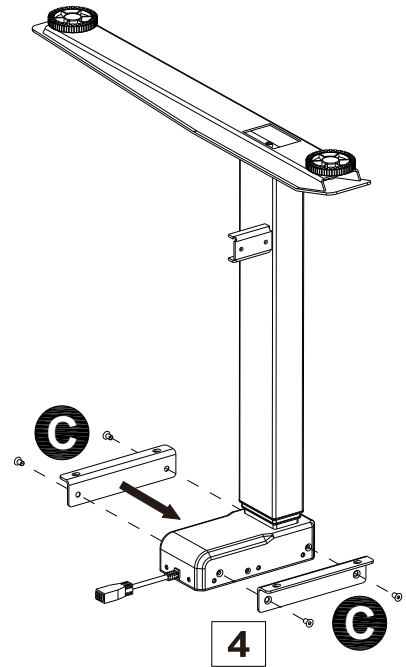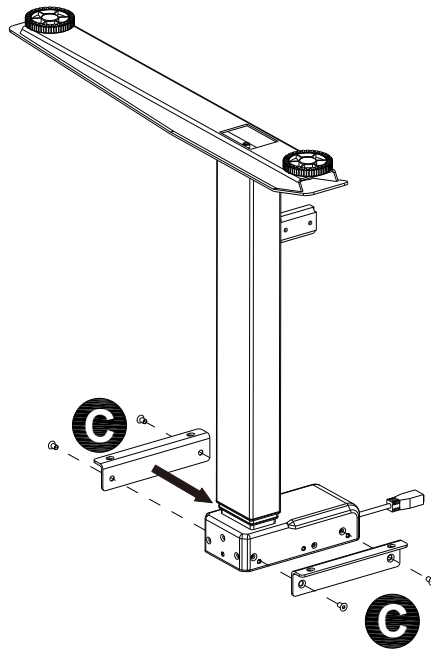

Step 3

Attach the steel plate cover onto the Frame. the screw E should go trough the holes on the frame into the table top.

 D





M5*18mm Screw Qty 9

E



  M4*16mm Screw Qty 6

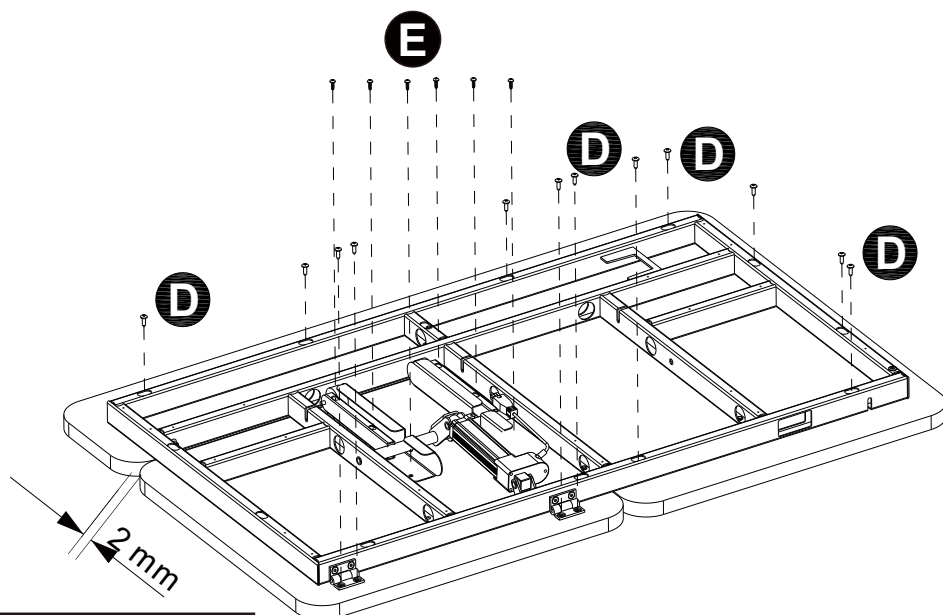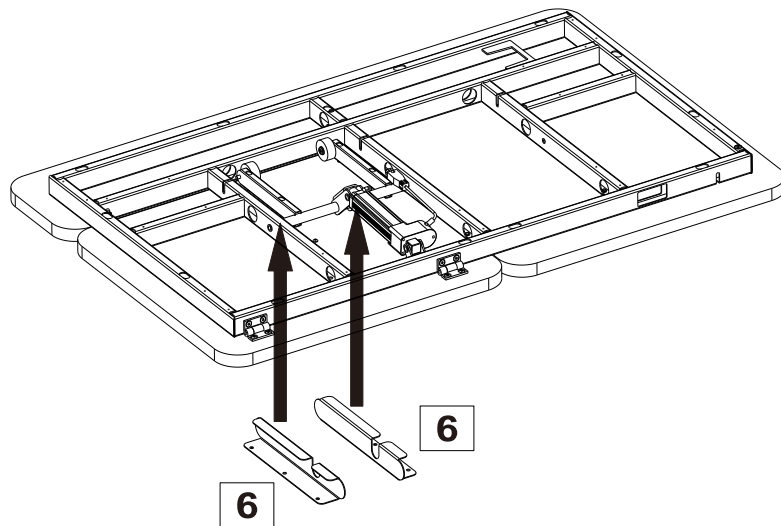

Notice:
Please leave 2mm at this place.

Step 4

 
Attach Leg with qty 8
Screws(Part#B) onto
the frame.

B




M6*8 mm Screw Qty 8

F

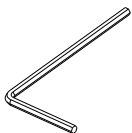

M4 Allen key Qty 1

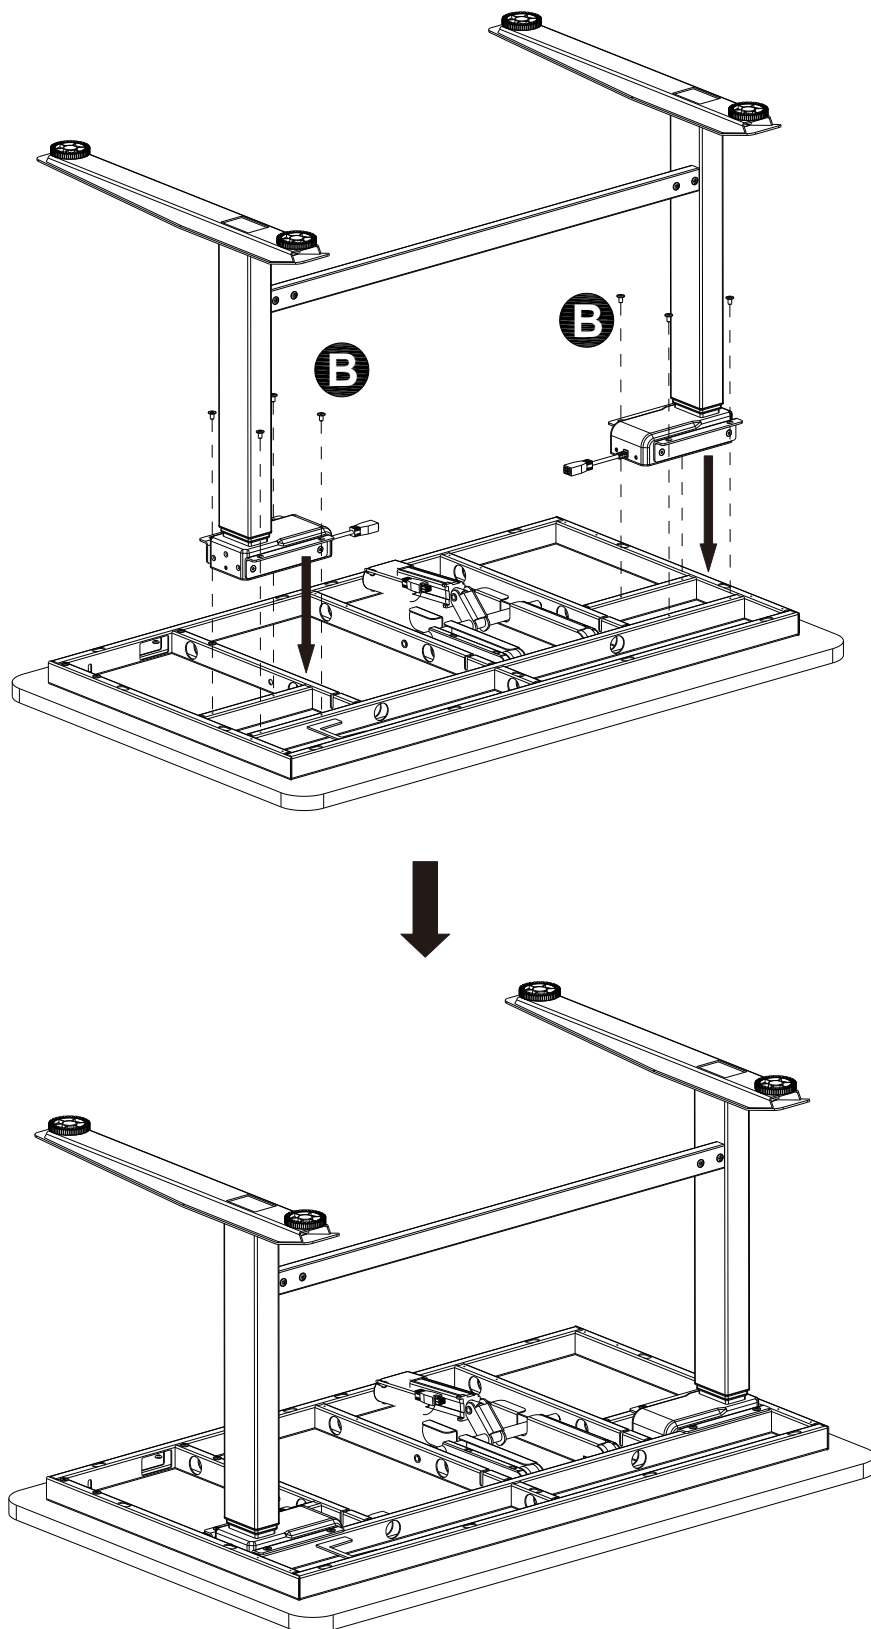 

Step 5

Attach control box
& connect cables

B



M6*8 mm Screw Qty 4

E



 
M4*16mm Screw Qty 4

F



Qty 5 Cable Clips

H









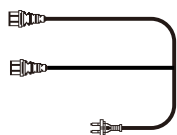


Qty 1 Power Cord

I




         Qty 1 Connecting Cables

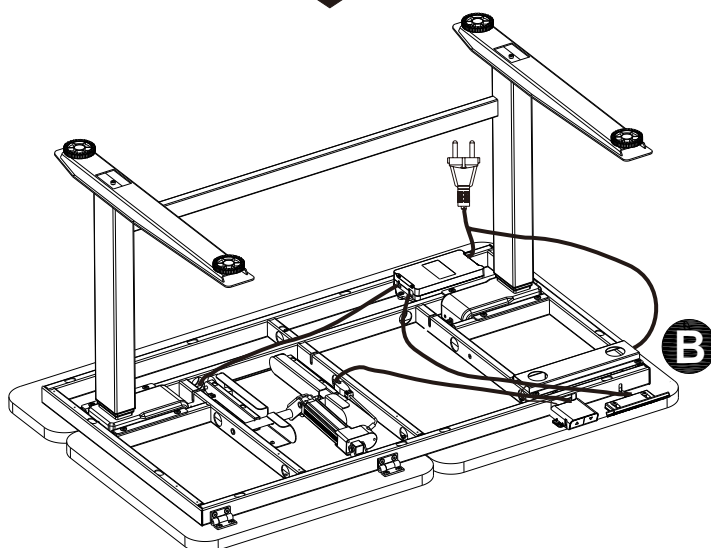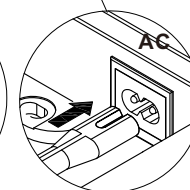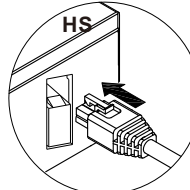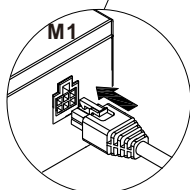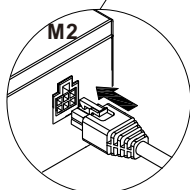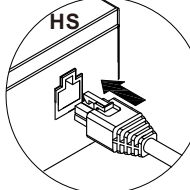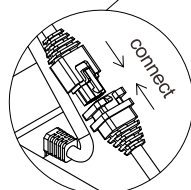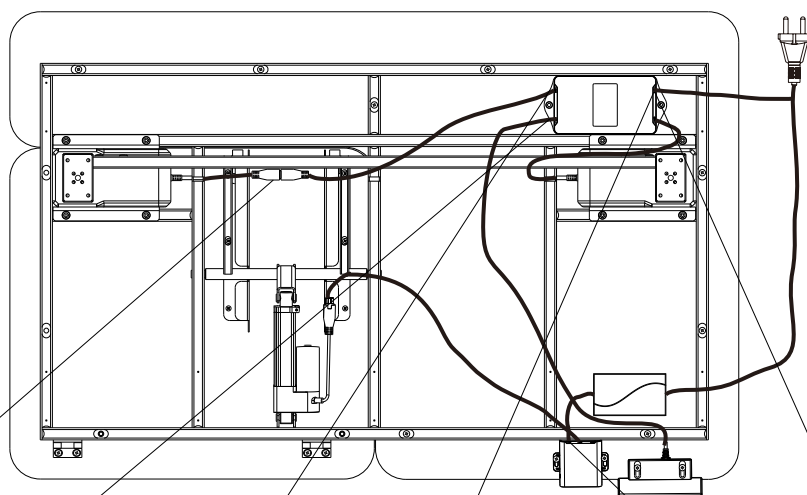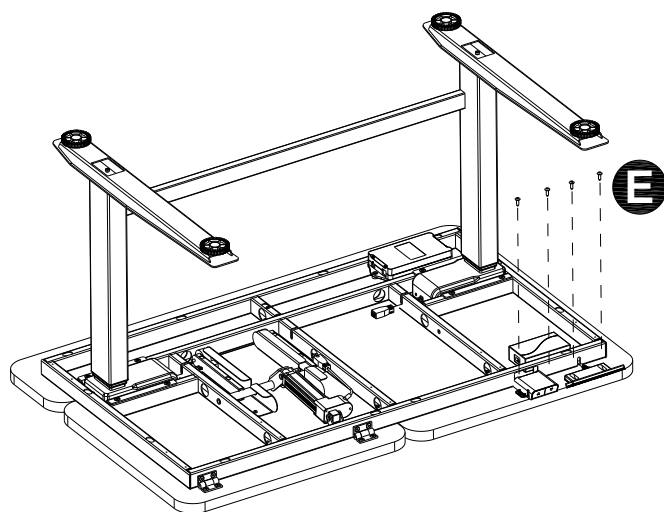


Step 6

 Carefully turn the desk over into it's final location and connect to a power source.

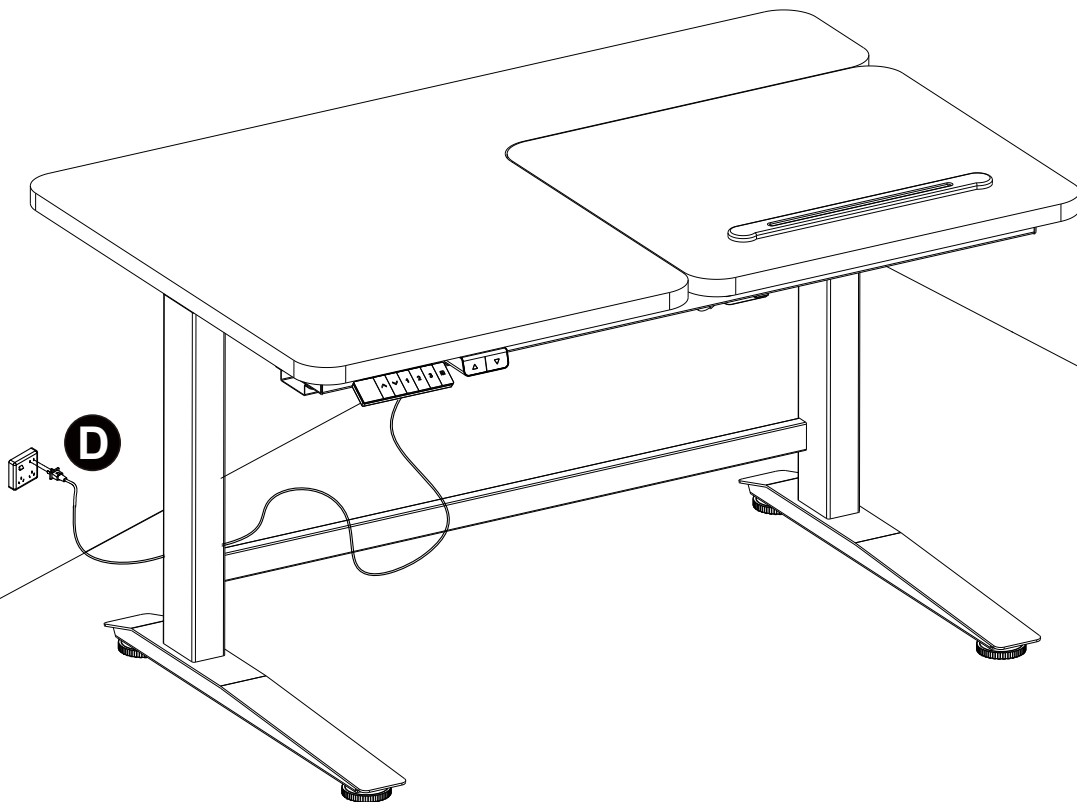

For Up and down function

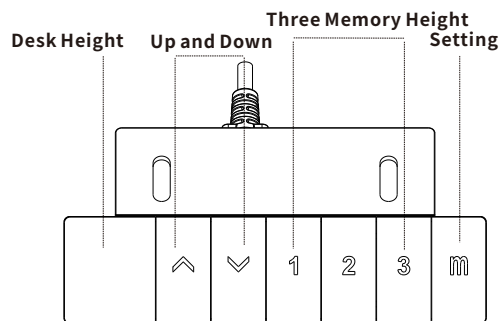 

Before Plugging the table into the outlet, make sure that

- The lift columns are level and set at the lowest position.
- All the screws are tightened, to avoid the desk making noise and wobbling.

 
Activate the desk by following the next steps.

- Please press button down and hold for 10-15 seconds until it stutters and beeps.
- Release the button, then your desk is ready to use.

Operation Guide


1. Memory desired height

- Press button “M”,display show “S-” with flash.
- Press number and set desired position.

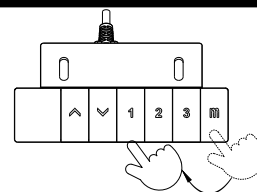

2. Advanced Safety feature- lock and unlock the table.

 
- Press button up and down at same time for 5 seconds, display “LOC”
- All single button will be inactive and table will be unable to move.
- Pressing button up and down together will unlock the keypad and release the LOC

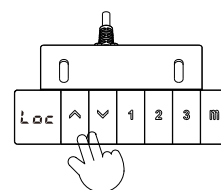

3. Reset the table

When display show Error code or RST, Please reset the table.

 - Unplug the power cord from the control box.
- Unplug the cable that links the keypad to the control box.
- Wait 30 minutes and plug all the cables in again.
- Do the reset: please press button down and hold for 10-15 seconds until it stutters and beeps.

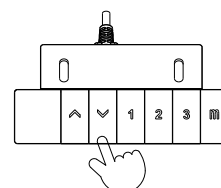

Press by holding
10-15 seconds

If the keypad displays HOT, please unplug and replug and let it cool off for a couple of minutes before proceeding again.

For tilting function

- The up and down handset is for plate tilting.
- Please press up or down to tilt the table top.

