




D Montageanleitung	GB Assembly Instructions	NL Handleiding voor de montage	PL Instrukcja montażu	HU Szerelés útmutató	RO Instrucțiuni de montaj
FR Notice de montage	IT Istruzioni di montaggio	CZ Montážní návod	SK Návod na montáž	TR Montaj talimatı	RU Инструкция по монтажу



101.	ASL 794x370x15mm	1
21..	ASR 794x370x15mm	1
31.	BL 1049x370x15mm	1
41.	BD 1049x370x15mm	1
51.	MS 794x355x15mm	1
61.	ZB 676x354x15mm	1
7.	EB 327x354x15mm	1
8.	TRL 766x346x15/16mm	2
9.	TRR 574x346x15/16mm	1
10.	BLE 1047x55x15/16mm	1
11.	SKV 346x189x15/16mm	1
12.	SKB 294x318x3mm	1
13.	SZL 322x128x12mm	1
14.	SZH 285x128x12mm	1
15.	SZR 322x128x12mm	1
16.	RWL 806x688x3mm	1
17.	RWR 806x339x3mm	1

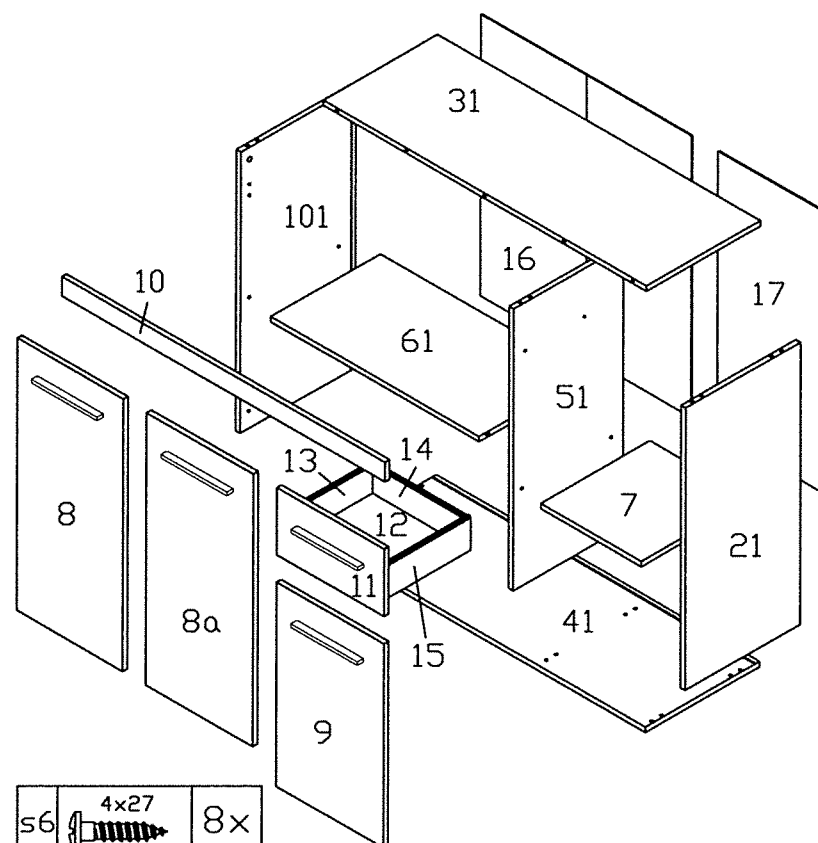

s6	4x27	8x
A5	0mm	4x
A6	8mm	2x
b3	KA37	6x
c	6,3x11	2x
c1	6,3x19	2x
e11	24,3	10x
f1		10x

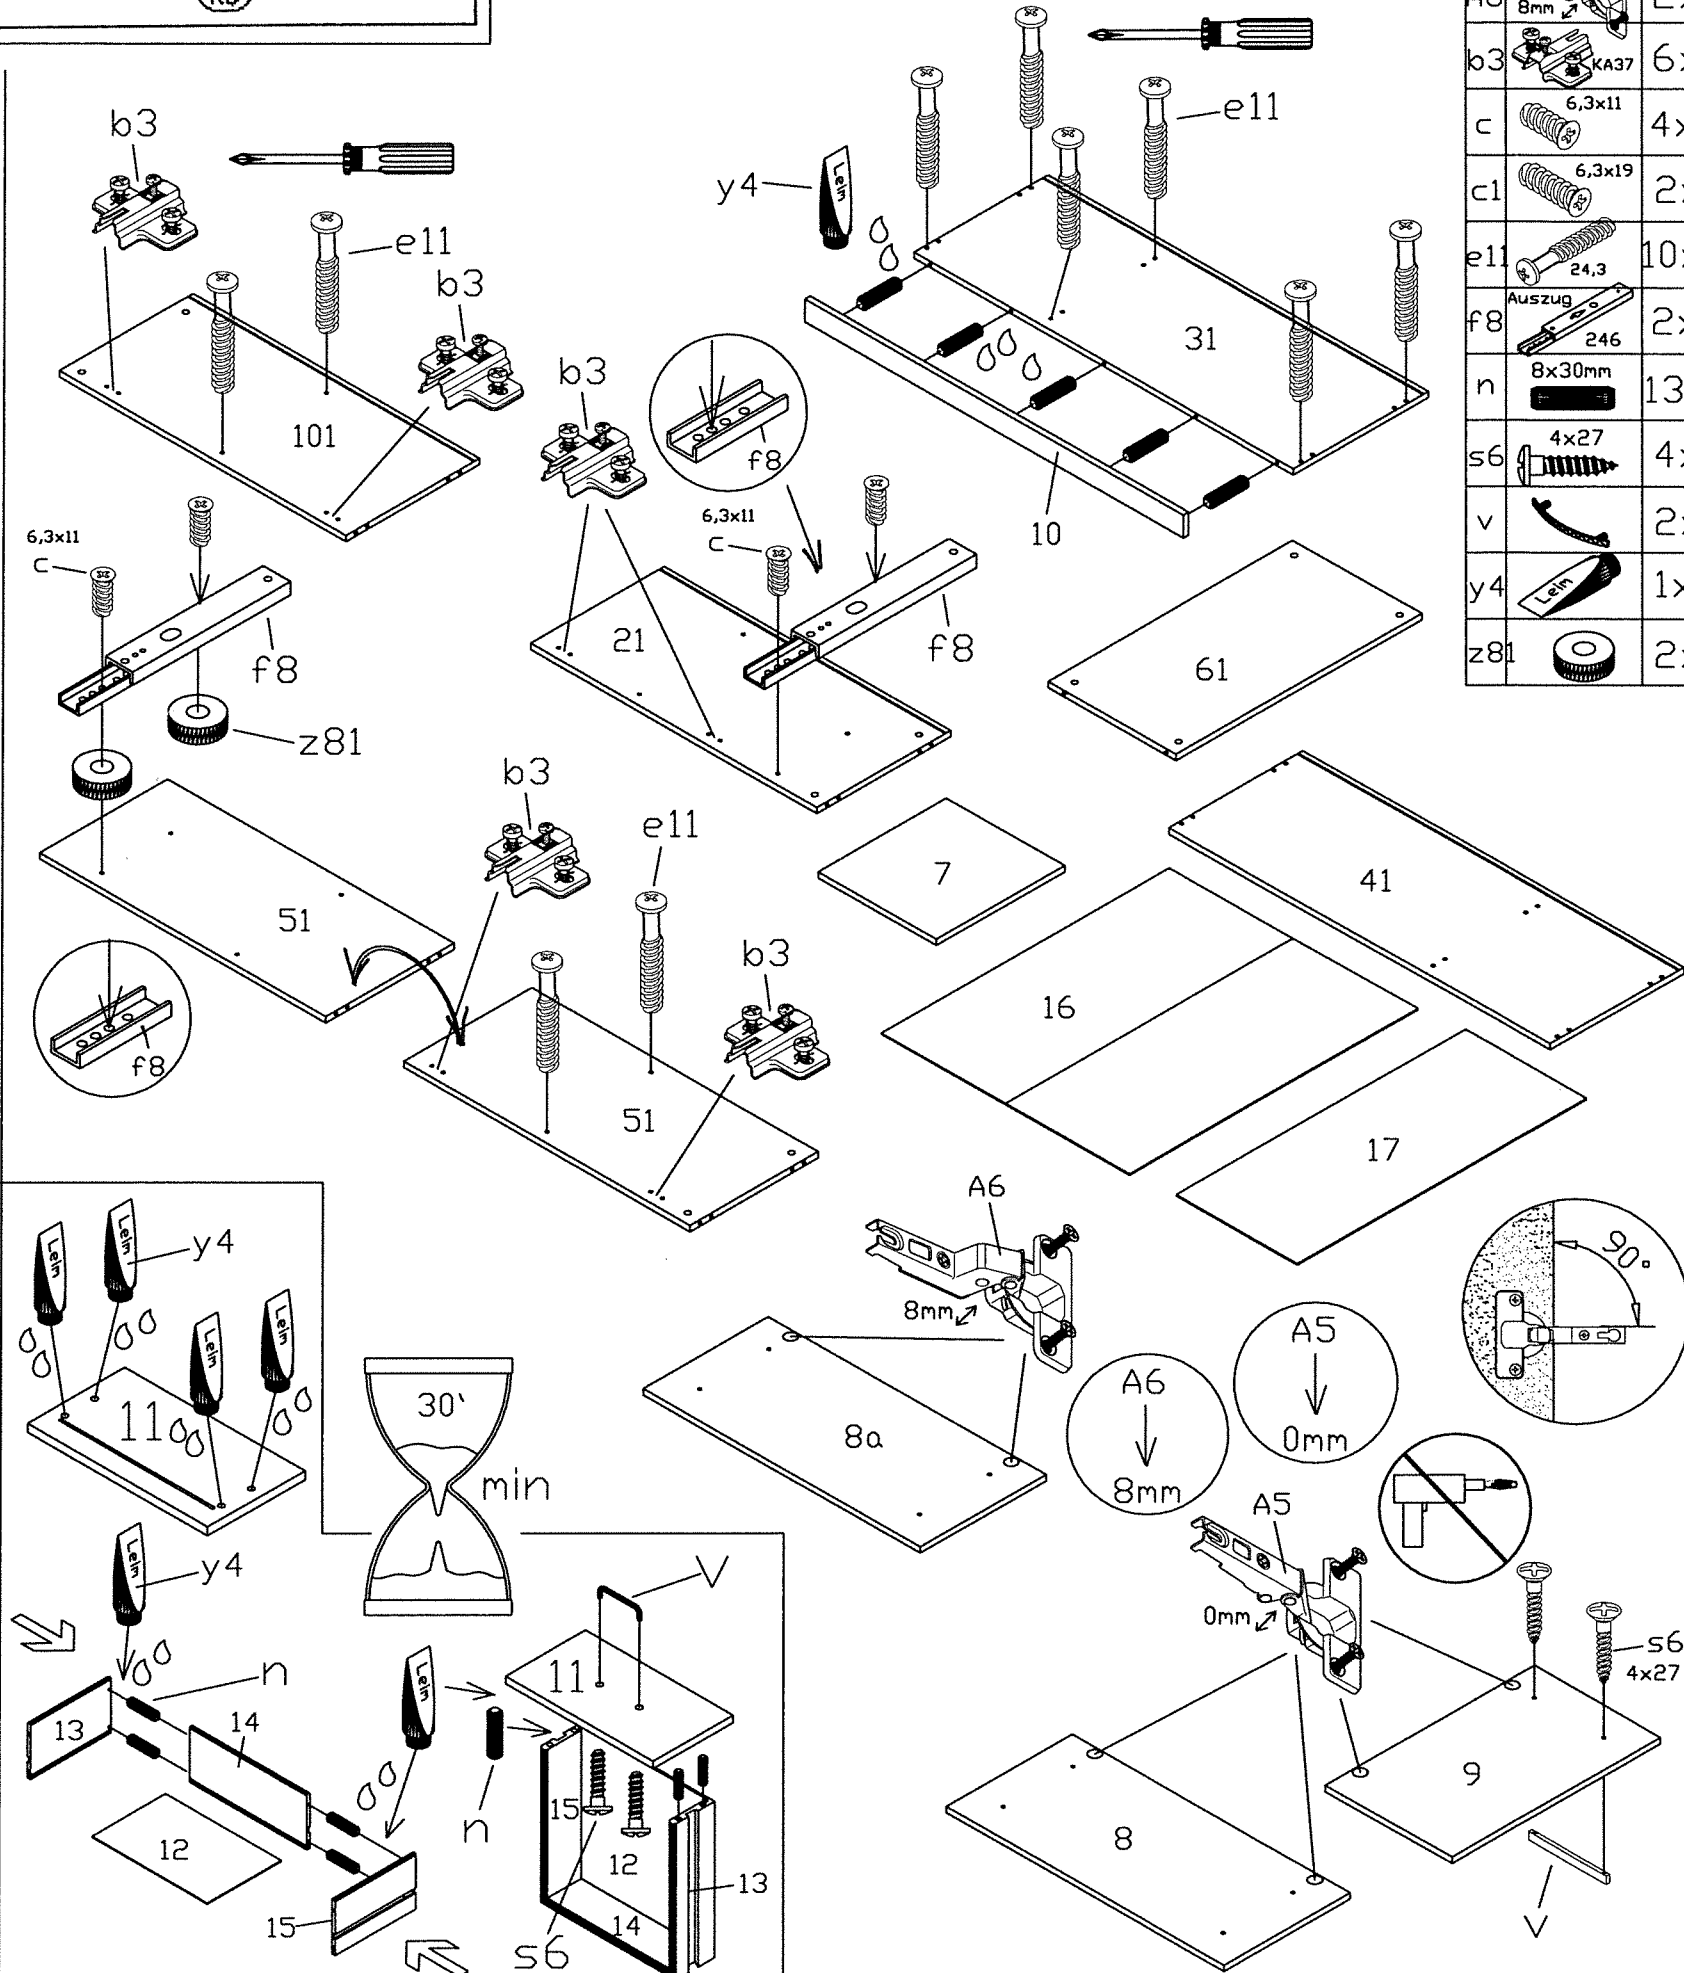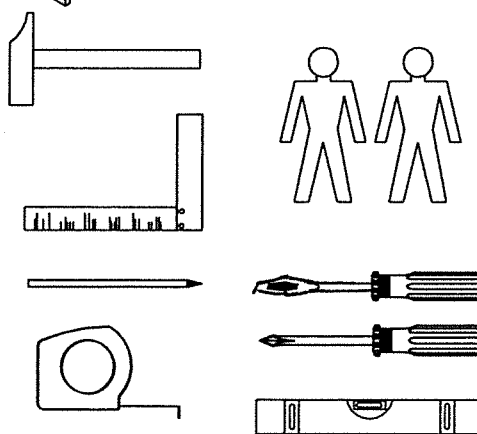

A5	0mm	4x
A6	8mm	2x
b3	KA37	6x
c	6,3x11	4x
c1	6,3x19	2x
e11	24,3	10x
f8	Auszug 246	2x
n	8x30mm	13x
s6	4x27	4x
v		2x
y4	Leim	1x
z81		2x

1

f1		4x
----	--	----

2

f1		6x
n		12x

3

4

l		6x
z		10x
q2		5x

5

t6		12x
x8		6x
y14		8x

6

q10		2x
r		4x

7

h4		4x
s6		4x
v		2x