 





- | | | | |
|----|-----------------------------|----|-------------------------|
| Ⓓ | Montageanleitung | ⒼⒷ | Assembly instructions |
| ⒻⓇ | Notice de montage | ⒾⓉ | Istruzioni di montaggio |
| ⓃⓁ | Handleiding voor de montage | ⓅⓁ | Instrukcja montażu |
| ⒸⓏ | Montážní návod | ⓈⓀ | Návod na montáž |
| ⒽⓊ | Szerelési utmutató | Ⓡⓞ | Instrucțiuni de montaj |
| ⓉⓇ | Montaj talimatı | ⓇⓊ | Инструкция по монтажу |



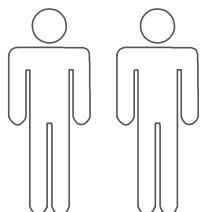

   
Ausgabe:20210719




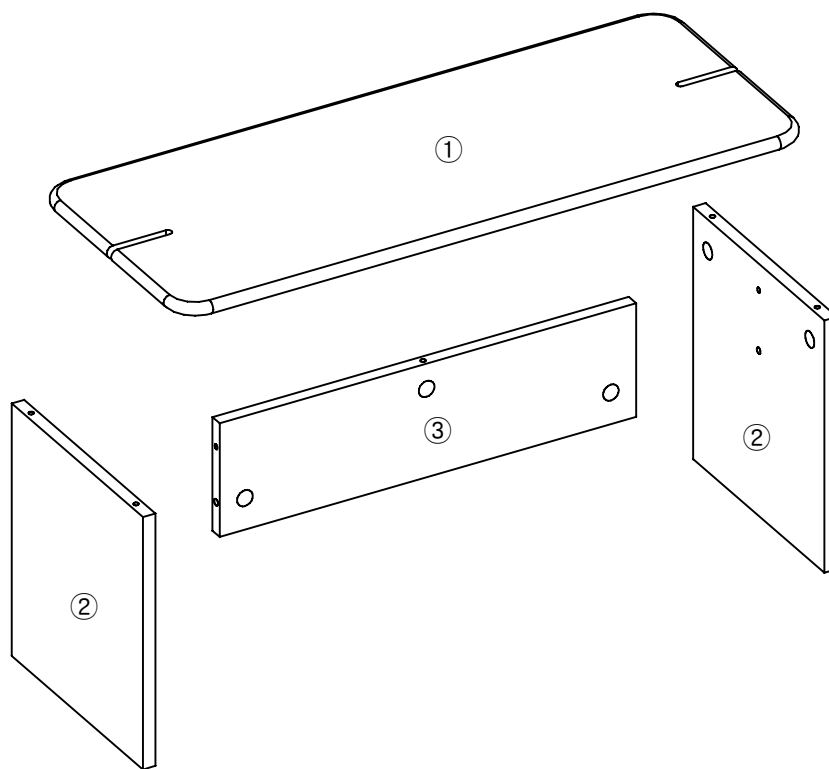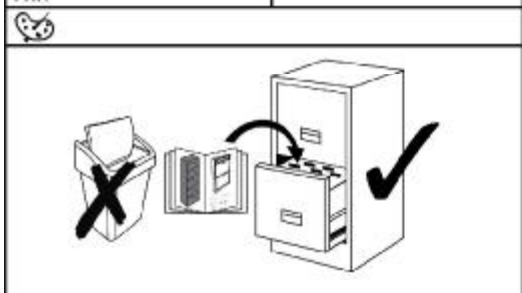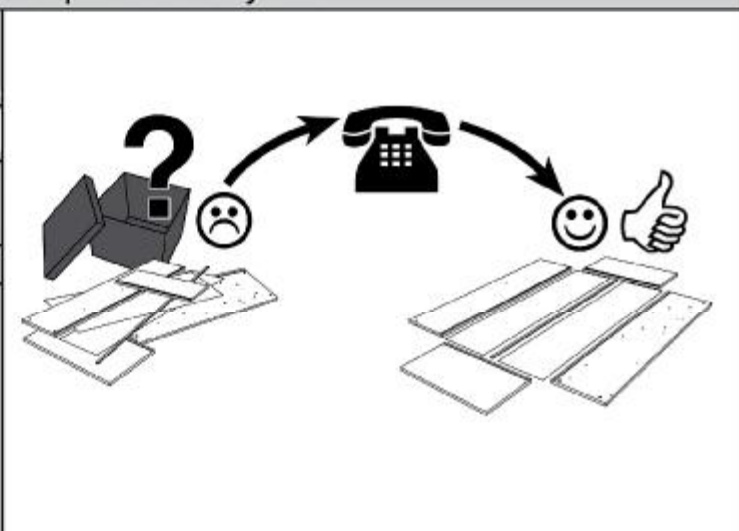Service • Assistenza • Dienstverlening • Serwis
 Servis • Szerviz • Сервисная служба






Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • Isim • Название	RIANABA
Nr. • No. • N° • Номер • Č. Sz	8518 6344 / 3615 9603 2474 6568 / 6738 1359
Typ • Type • Tip • Típus Тип Тип	9189 8418 YS-BE6643A





- | | | | | | | | | | |
|----------|--|----------|--|----------|--|----------|--|----------|--|
| A |  X7 | B |  X7 | C |  X1 | D |  X2 | E |  X4 |
|----------|--|----------|--|----------|--|----------|--|----------|--|

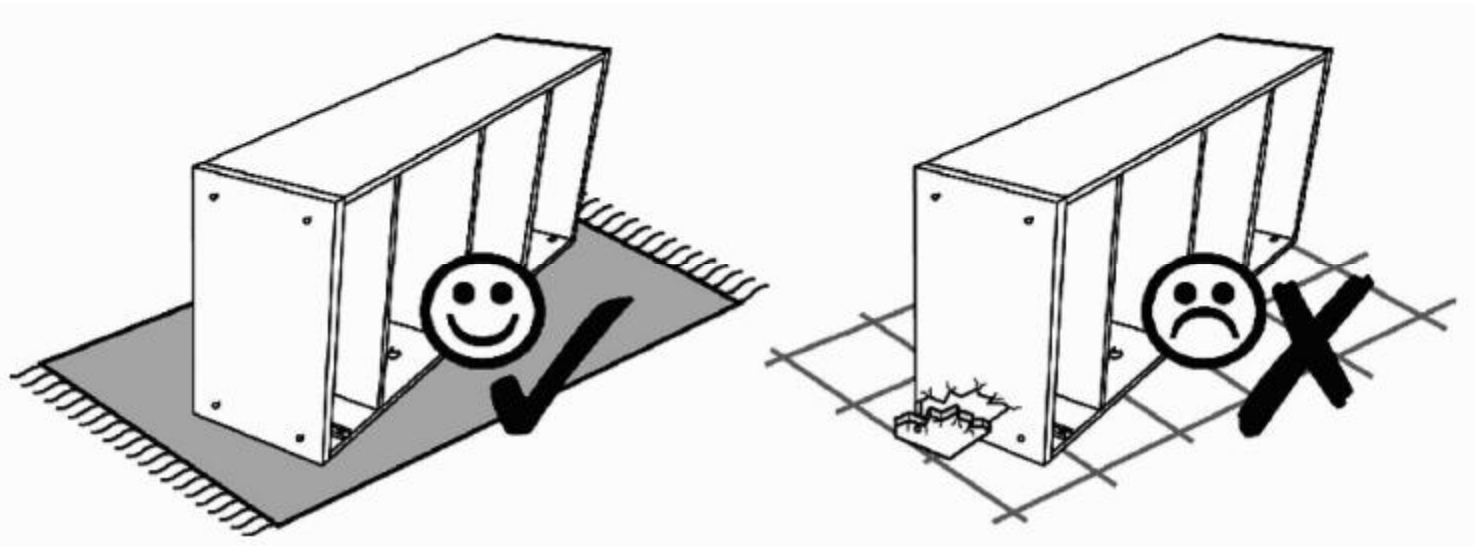 

1

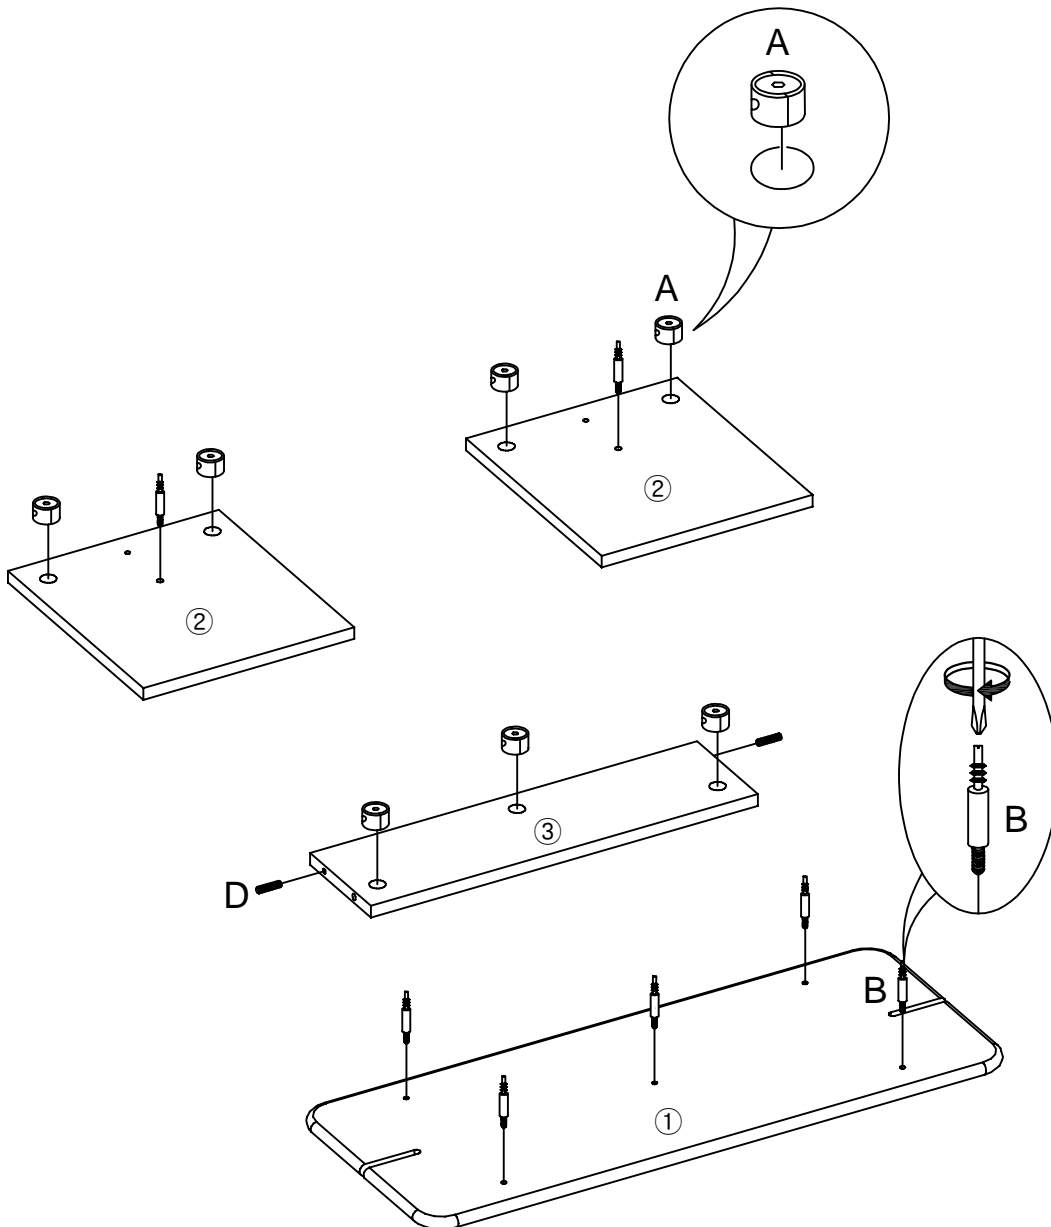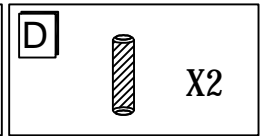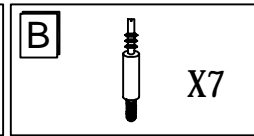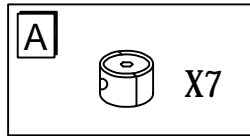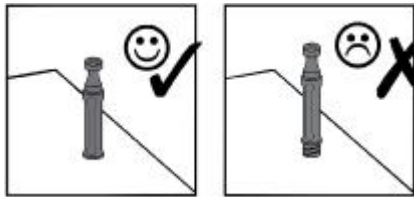     

2

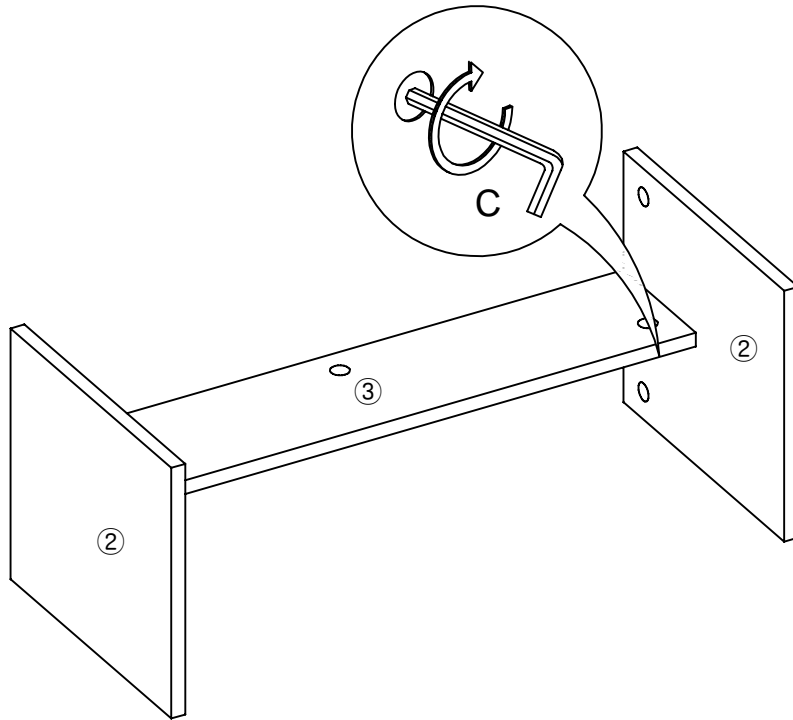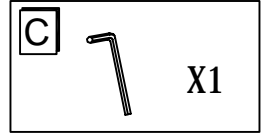  

3

