 
 


**ART.NR. - 398702, 750182, 501200, 615649
LKZ 40827**

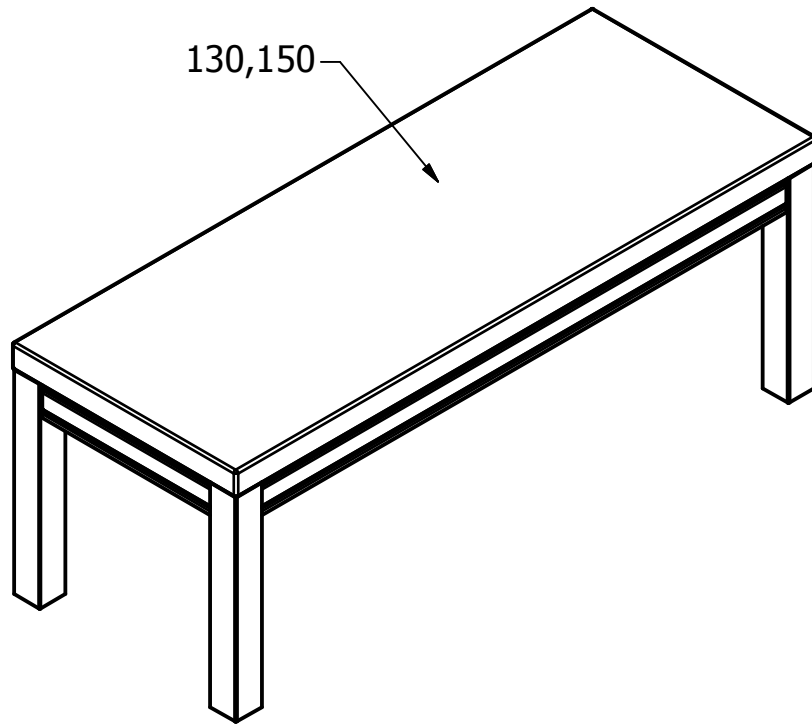

- | | |
|---------------------------------------|-----------------------------------|
| D Montageanleitung | GB Assembly instructions |
| FR Notice de montage | IT Istruzioni di montaggio |
| NL Handleiding voor de montage | PL Instrukcja montażu |
| CZ Montážní návod | SK Návod na montáž |
| HU Szerelési útmutató | RO Instrucțiuni de montaj |
| TR Montaj talimatı | RU Инструкция по монтажу |
| | HR Shema montaže |

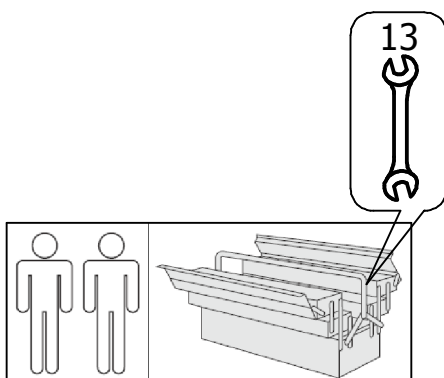

30 min

 
 
 
 
 
 
 
 
 
 
 
Service • Assistenza • Dienstverlening • Serwis
 Servis • Szerviz • Сервисная служба

Имя • Nom • Noms • Naam •
 Nazwa • Jméno • Názov • Név •
 Denumire • Isim • Название




Ис. • No. • N° • Номер • Č • Sz

398702, 750182, 501200, 615649

Тип • Tupo • Tír •
 Típus • Típo • Típl

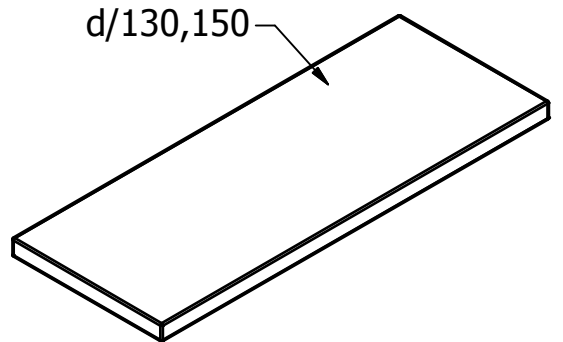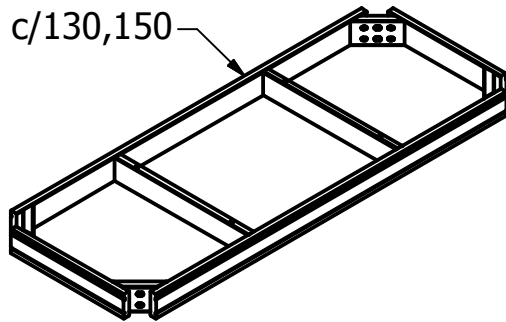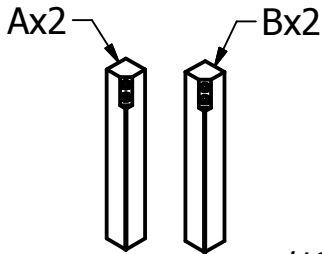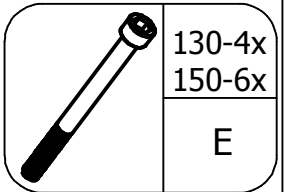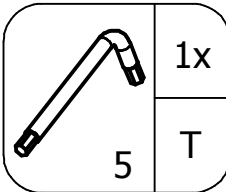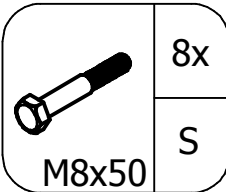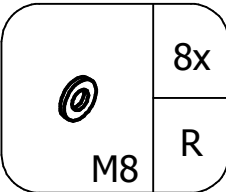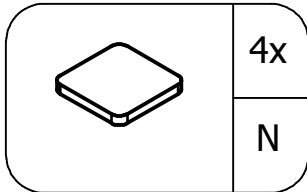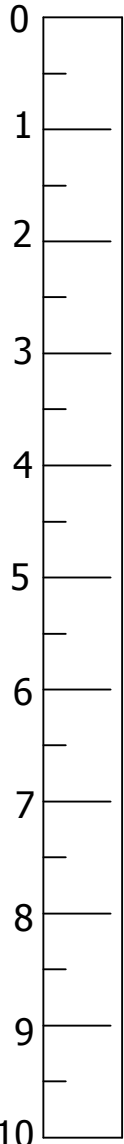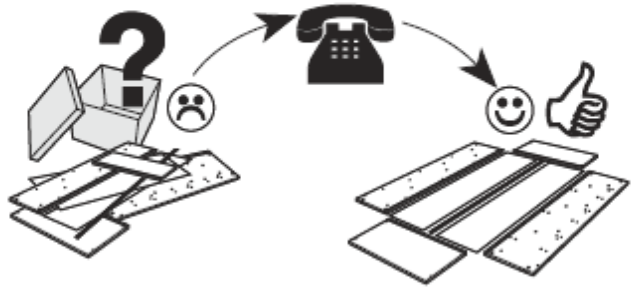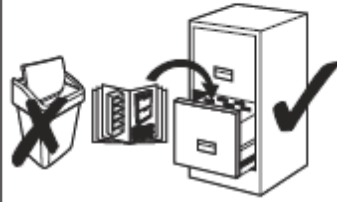

   1)

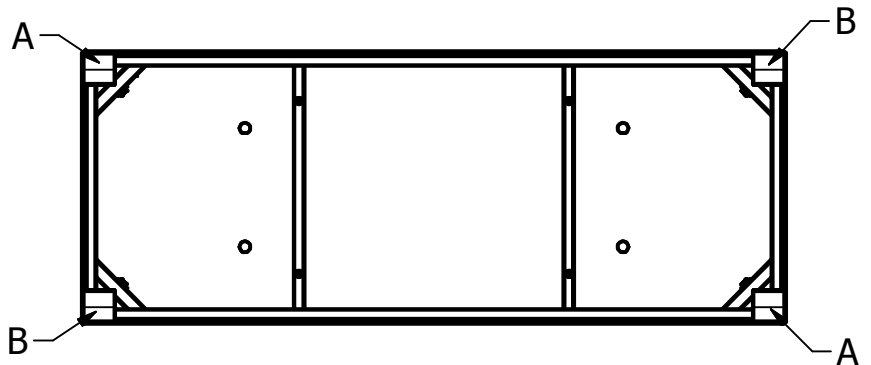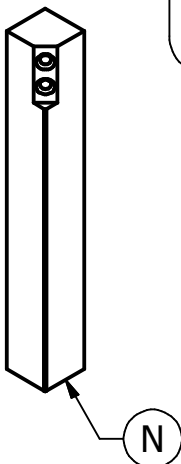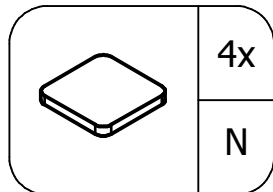

2)

