

<b>Xiaomi</b> Dust Mite Vacuum Cleaner Pro <b>User Manual</b>	• 1
Xiaomi Staubmilben-Staubsauger Pro Bedienungsanleitung	• 18
Manuale utente Xiaomi Dust Mite Vacuum Cleaner Pro	• 35
Manuel d'utilisation de Xiaomi Dust Mite Vacuum Cleaner Pro	• 52
Manual de usuario del Xiaomi Dust Mite Vacuum Cleaner Pro	• 69
Руководство пользователя ручного пылесоса Xiaomi Dust Mite Vacuum Cleaner Pro	• 86
Instrukcja obsługi Odkurzacza Xiaomi do roztoczy kurzu Pro	• 105
Xiaomi دليل مستخدم المكنسة الكهربائية لعث الغبار Pro	• 122
Xiaomi Toz Akarı Süpürgesi Pro Kullanım Kılavuzu	• 139
Panduan Pengguna Xiaomi Dust Mite Vacuum Cleaner Pro	• 156
Xiaomi Шаң кенелерін кетіруге арналған шаңсорғыш Pro Пайдаланушы нұсқаулығы	• 173
Máy hút bụi chân đệm Xiaomi Pro Hướng dẫn sử dụng	• 190
Посібник користувача ручного пилососа Xiaomi Dust Mite Vacuum Cleaner Pro	• 207
小米除螨機Pro使用說明書	• 224
Xiaomi 먼지 진드기 진공 청소기 Pro 사용 설명서	• 238
小米除螨機Pro使用說明書	• 255



# Safety Instructions

---

Read this manual carefully before use, and retain it for future reference.

## WARNINGS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- The dust mite vacuum cleaner comes with a UV light. Do not expose the eyes or skin of humans or animals to UV radiation; otherwise, it may cause damage.
- To prevent burns, do not touch the UV light with your hands during use or immediately after it is turned off.
- Before cleaning the UV light, make sure the dust mite vacuum cleaner is powered off and avoid pressing the power button during cleaning. Otherwise, the dust mite vacuum cleaner may suddenly start and cause damage.
- Do not use the dust mite vacuum cleaner outdoors or on any wet surface. Only use the vacuum cleaner on dry indoor surfaces.

- Do not touch the plug or any part of the dust mite vacuum cleaner with wet hands.
- Do not use the dust mite vacuum cleaner to vacuum water, any flammable or explosive liquids like gasoline, or any solutions containing toxic and harmful ingredients such as chlorine bleach, ammonia, and drain cleaner.
- Do not use the dust mite vacuum cleaner to vacuum drywall particles, ashes like fireplace ash, or smoking or burning materials such as coal, cigarette butts or matches.
- Do not use the dust mite vacuum cleaner to vacuum hard or sharp objects, such as glass, nails, screws, or coins, which may damage the product.
- Keep the dust mite vacuum cleaner away from heating appliances and direct sunlight to prevent fires.
- Avoid using the dust mite vacuum cleaner for a long time if the suction inlets, heat dissipation vent, or hot air outlet is blocked. Otherwise, the cleaner may be damaged.
- Make sure the dust mite vacuum cleaner is unplugged when not used for extended periods or before performing any maintenance or repairs.
- Please install the roller brush and dust compartment as instructed in this user manual before using the dust mite vacuum cleaner. To prevent any mechanical injury, do not touch the roller brush with your hands during use.
- Only use accessories and replacement parts that are approved by Xiaomi.
- The dust mite vacuum cleaner is solely intended for cleaning and removing dust mites from home textiles like mattresses, blankets, pillows, and sofas. Do not use it for other purposes.
- Do not leave the dust mite vacuum cleaner running in the same position for a long time. Otherwise, the surface of items, such as the mattress or sheet, may be damaged by ultraviolet rays, hot air, or the roller brush.

 
- Keep the power cord away from sharp objects that may damage it.
- Do not place the dust mite vacuum cleaner on unstable surfaces of objects, such as chairs or tables, to prevent damage or personal injury caused by its falling off.
- If the dust mite vacuum cleaner gives off smoke or odors, or produces powders from the heat dissipation vent during use, stop using and unplug it immediately, and contact the after-sales service team.
- Never attempt to disassemble the dust mite vacuum cleaner by yourself. Contact an authorized service center if it needs repairs.
- WARNING - This appliance contains a UV emitter. Do not stare at the light source.

## Package Contents

---



Dust Mite  
Vacuum Cleaner



Dust Compartment  
Assembly



User Manual




Warranty  
Notice


### Note:

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.
 
# Product Overview

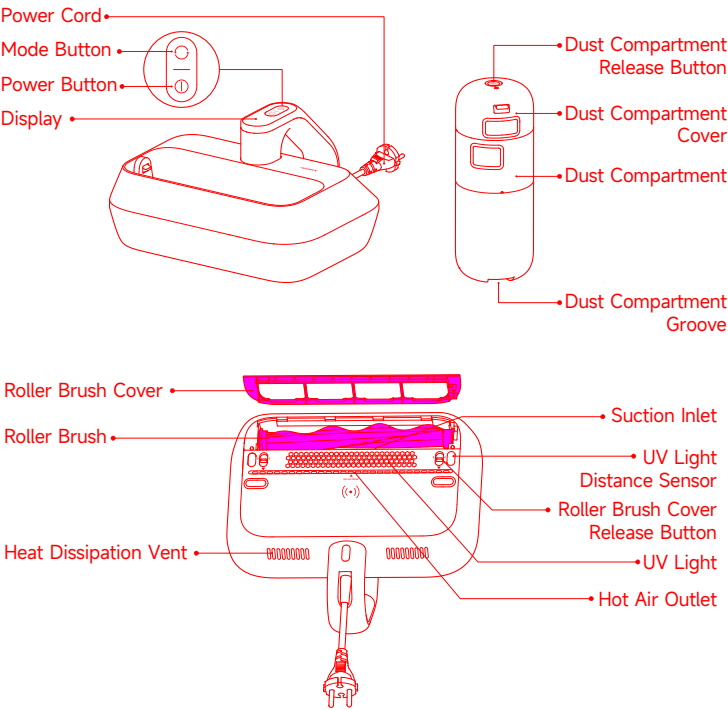

## Display

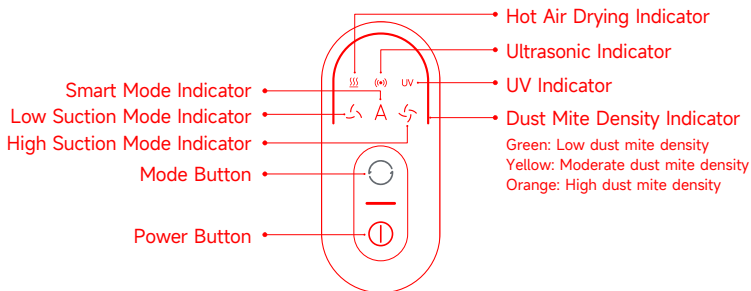

### Notes:


- The Hot Air Drying, Ultrasonic, and UV functions are enabled by default.
- When the UV function is enabled, the UV indicator is on. When the UV function is disabled, the UV indicator is off.
- It is normal for the UV indicator to go out when you lift (more than 5 cm from the textile surface) or tilt the dust mite vacuum cleaner during operation, or clean dark-colored textiles.
- During cleaning, a steady yellow or orange dust mite density indicator indicates a high dust mite density in the current area. It is recommended to clean this area multiple times.

# How to Use

---

## Installing the dust compartment assembly


Align the dust compartment groove with the protruding part. Press down on the dust compartment until you hear a "click", indicating it is installed in place.

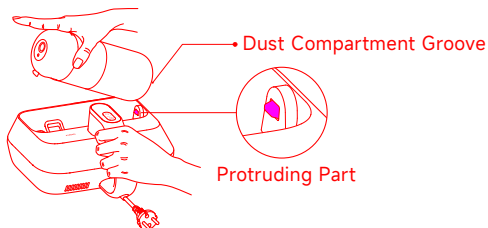

## Turning on/off

- Connect the dust mite vacuum cleaner to power, and press its power button to turn it on.
- The dust mite vacuum cleaner defaults to the low suction mode the first time it is turned on.

**Note:** During use, hot air will come out from the heat dissipation vent. For first-time use, it is normal for a slight odor to come from the cooling vent, and the odor will naturally dissipate after a period of use.

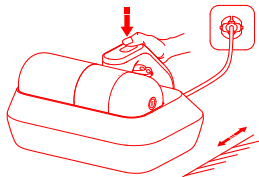

## Switching modes

Turn on the dust mite vacuum cleaner, and press the mode button to switch from low suction, smart, to high suction modes.

- Low suction mode: Suitable for daily cleaning of soft textiles such as dolls and quilts.
- Smart mode: Suitable for various cleaning scenarios. The dust mite vacuum cleaner will automatically adjust its suction to the density of dust mites; the higher the density of the dust mite is, the more powerful the suction is.
- High suction mode: Suitable for deeply cleaning hard textiles such as mattresses and sofas.