 


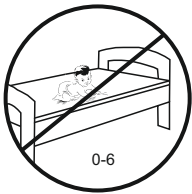


- | | | | |
|---|-------------------------------------|--------------------------------|------------------------------------|
| (D) Montagenieitung | (GB) Assembly instructions | (CZ) Montážní návod | (SK) Návod na montáž |
| (FR) Notice de montage | (IT) Istruzioni di montaggio | (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu | (TR) Montaj tellmatı | (RU) Инструкция по монтажу |


PEPPER

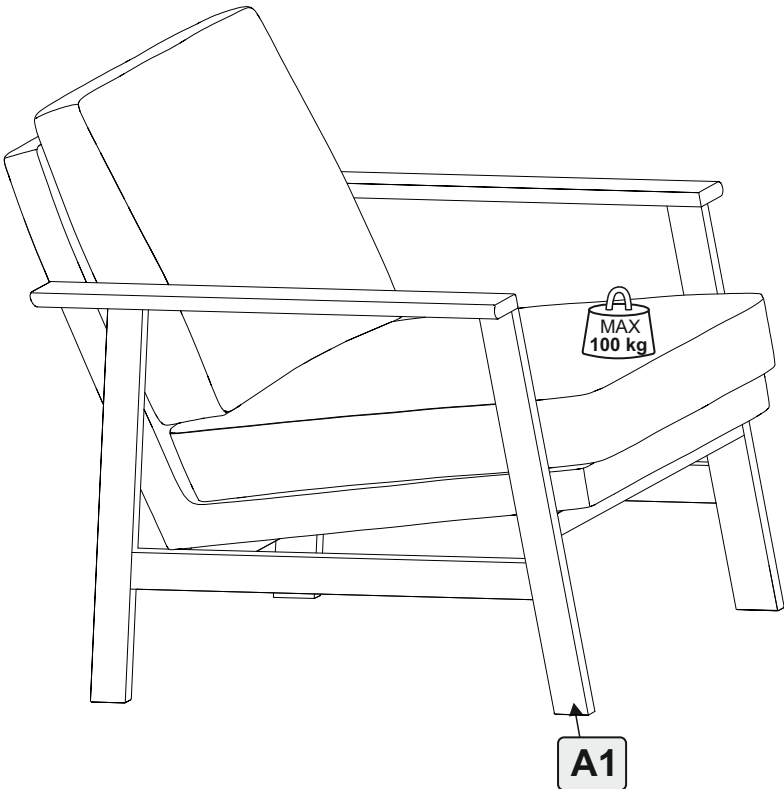

L-5

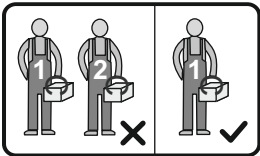

0-6

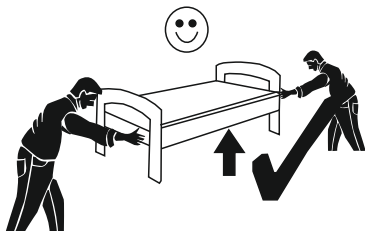





Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Naam • Nazwa • Isim • Название

Pepper

Nr • No • Номер

Typ • Type • Tip • Тип

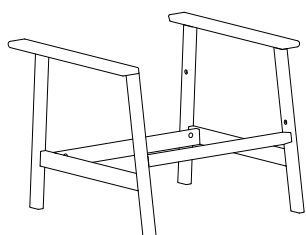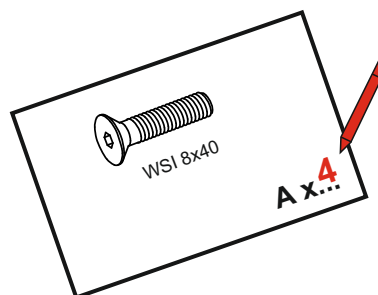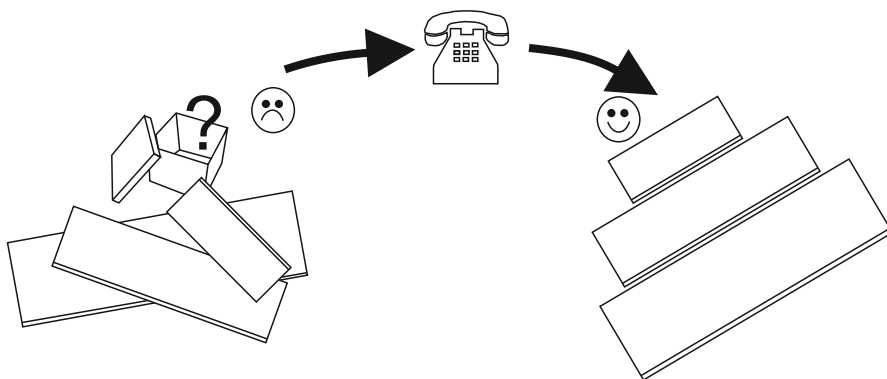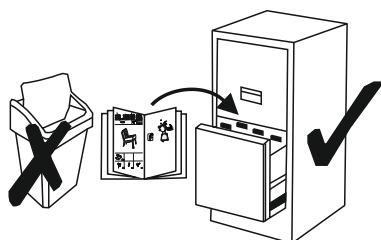

A1 x...



Ø 22

G x...



M8B ZN

H x...



SD 8x60

I x...



6x12x34

D x...



 
Ø 15x16

E x...




Ø 8x30

F x...



WSI 8x40

A x...

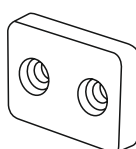

B x...



US 4x20

C x...