 
 
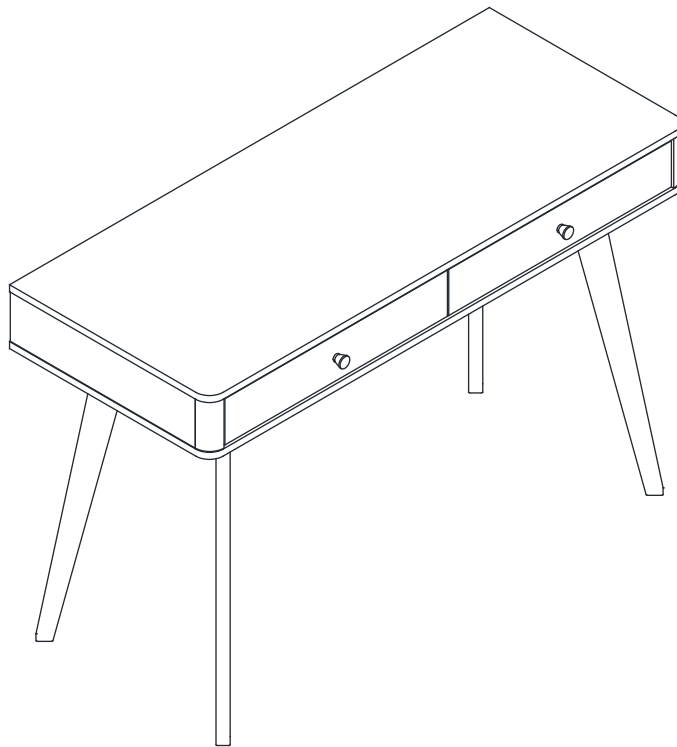 


5660

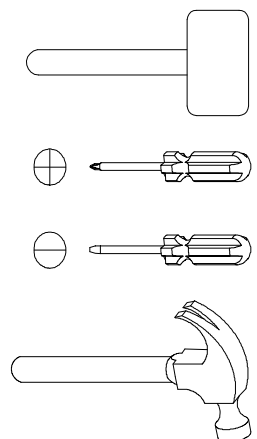

- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcję montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) инструкция по монтажу |

 
 
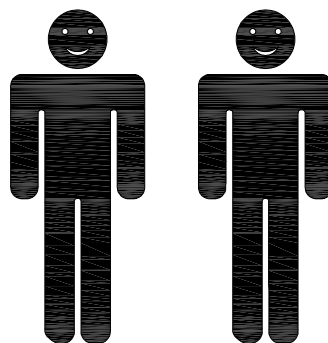 


 
 
 
 
 
 
Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба



Name • Nom • Nome • Naam •
Nazwa • Jméno • Názov • Név •
Denúire • Isim • Название

Nr. • No. • N° • Номер • Č • Sz


Typ • Type • Tip • Típus • Tipo •
Тип

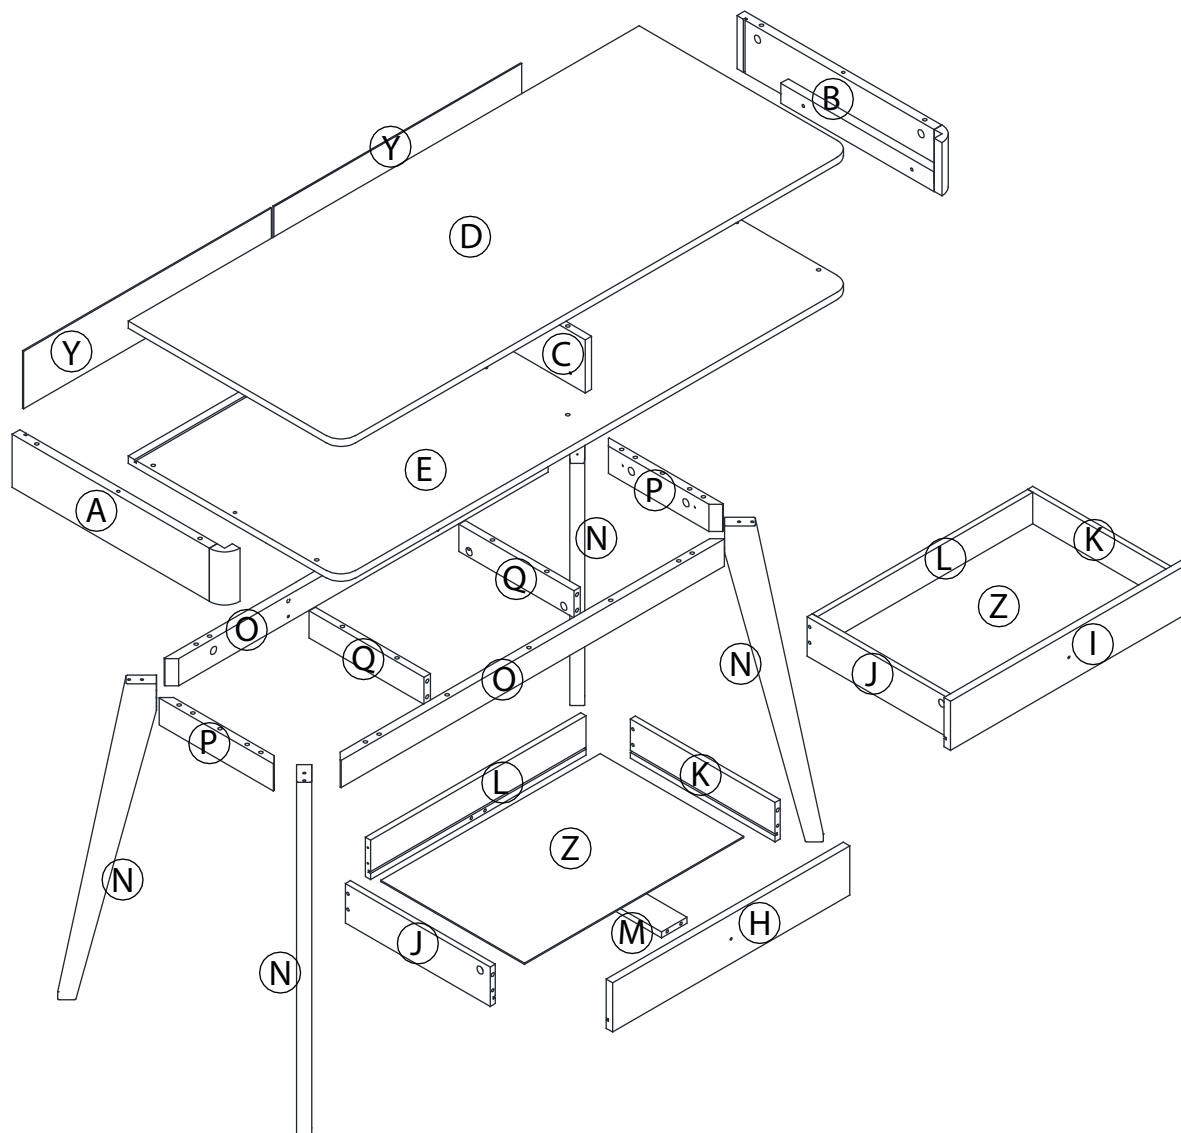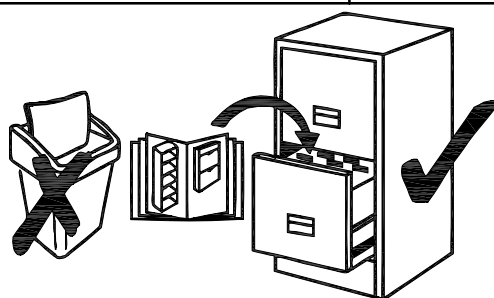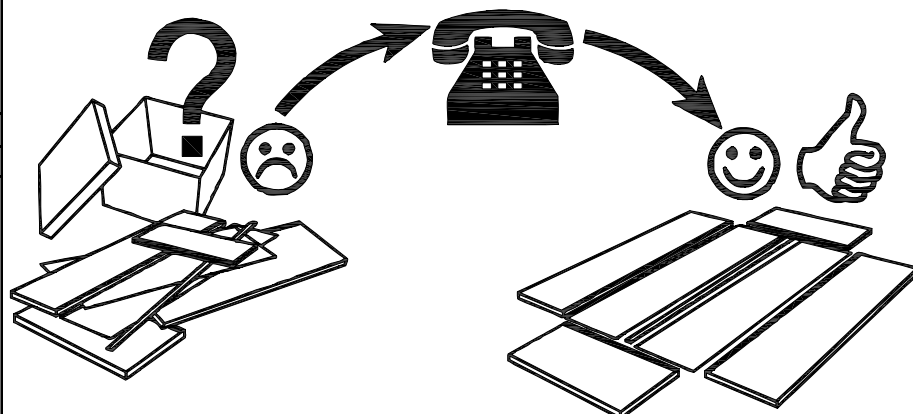


1		CSK SCREW M3.5 X 15MM	16	12		WOODEN KNOB HANDLE HANDLE SCREW M4 X 25MM	2 SETS
2		CSK SCREW M4 X 25MM	4	13		DRAWER SLIDE CR 350MM	2
3		EURO SCREW M6 X 9MM	8			DRAWER SLIDE CL 350MM	2
4		CSK SCREW M4.7 X 38MM	8	14		DRAWER SLIDE CR 350MM	2
5		UNITAR SCREW M6.3 X 40MM	6			DRAWER SLIDE CL 350MM	2
6		CSK SCREW WOOD (HEX) M6 X 40MM (ZB)	8	15		TABLE CORNER BRACKET (5 HOLES)	4
7		WOOD DOWEL Ø6 X 30MM	18	16		ALLEN KEY M4	1
8		WOOD DOWEL Ø8 X 30 MM	22	17		BACKPLY STOPPER	8
9		MINIFIX M5 x 29MM	24	18		CSK SCREW M3.1 X 20	8
10		CAM 12/15	20	19		FELT PAD	4
11		CAM 9/15	4				

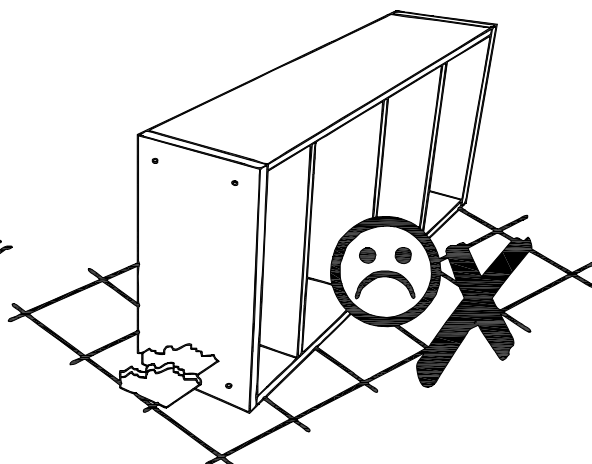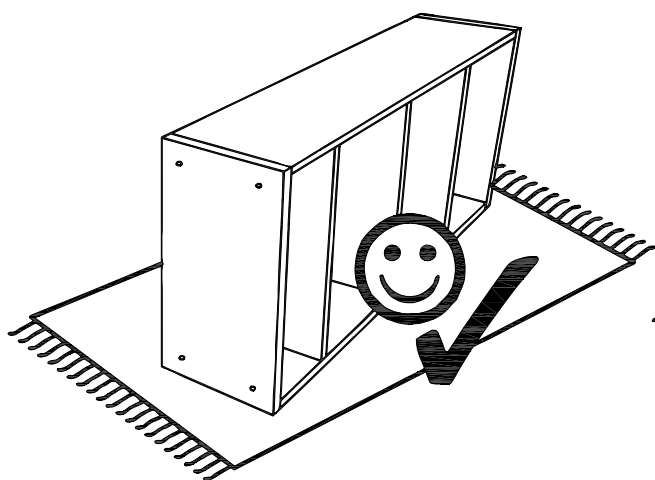  


1

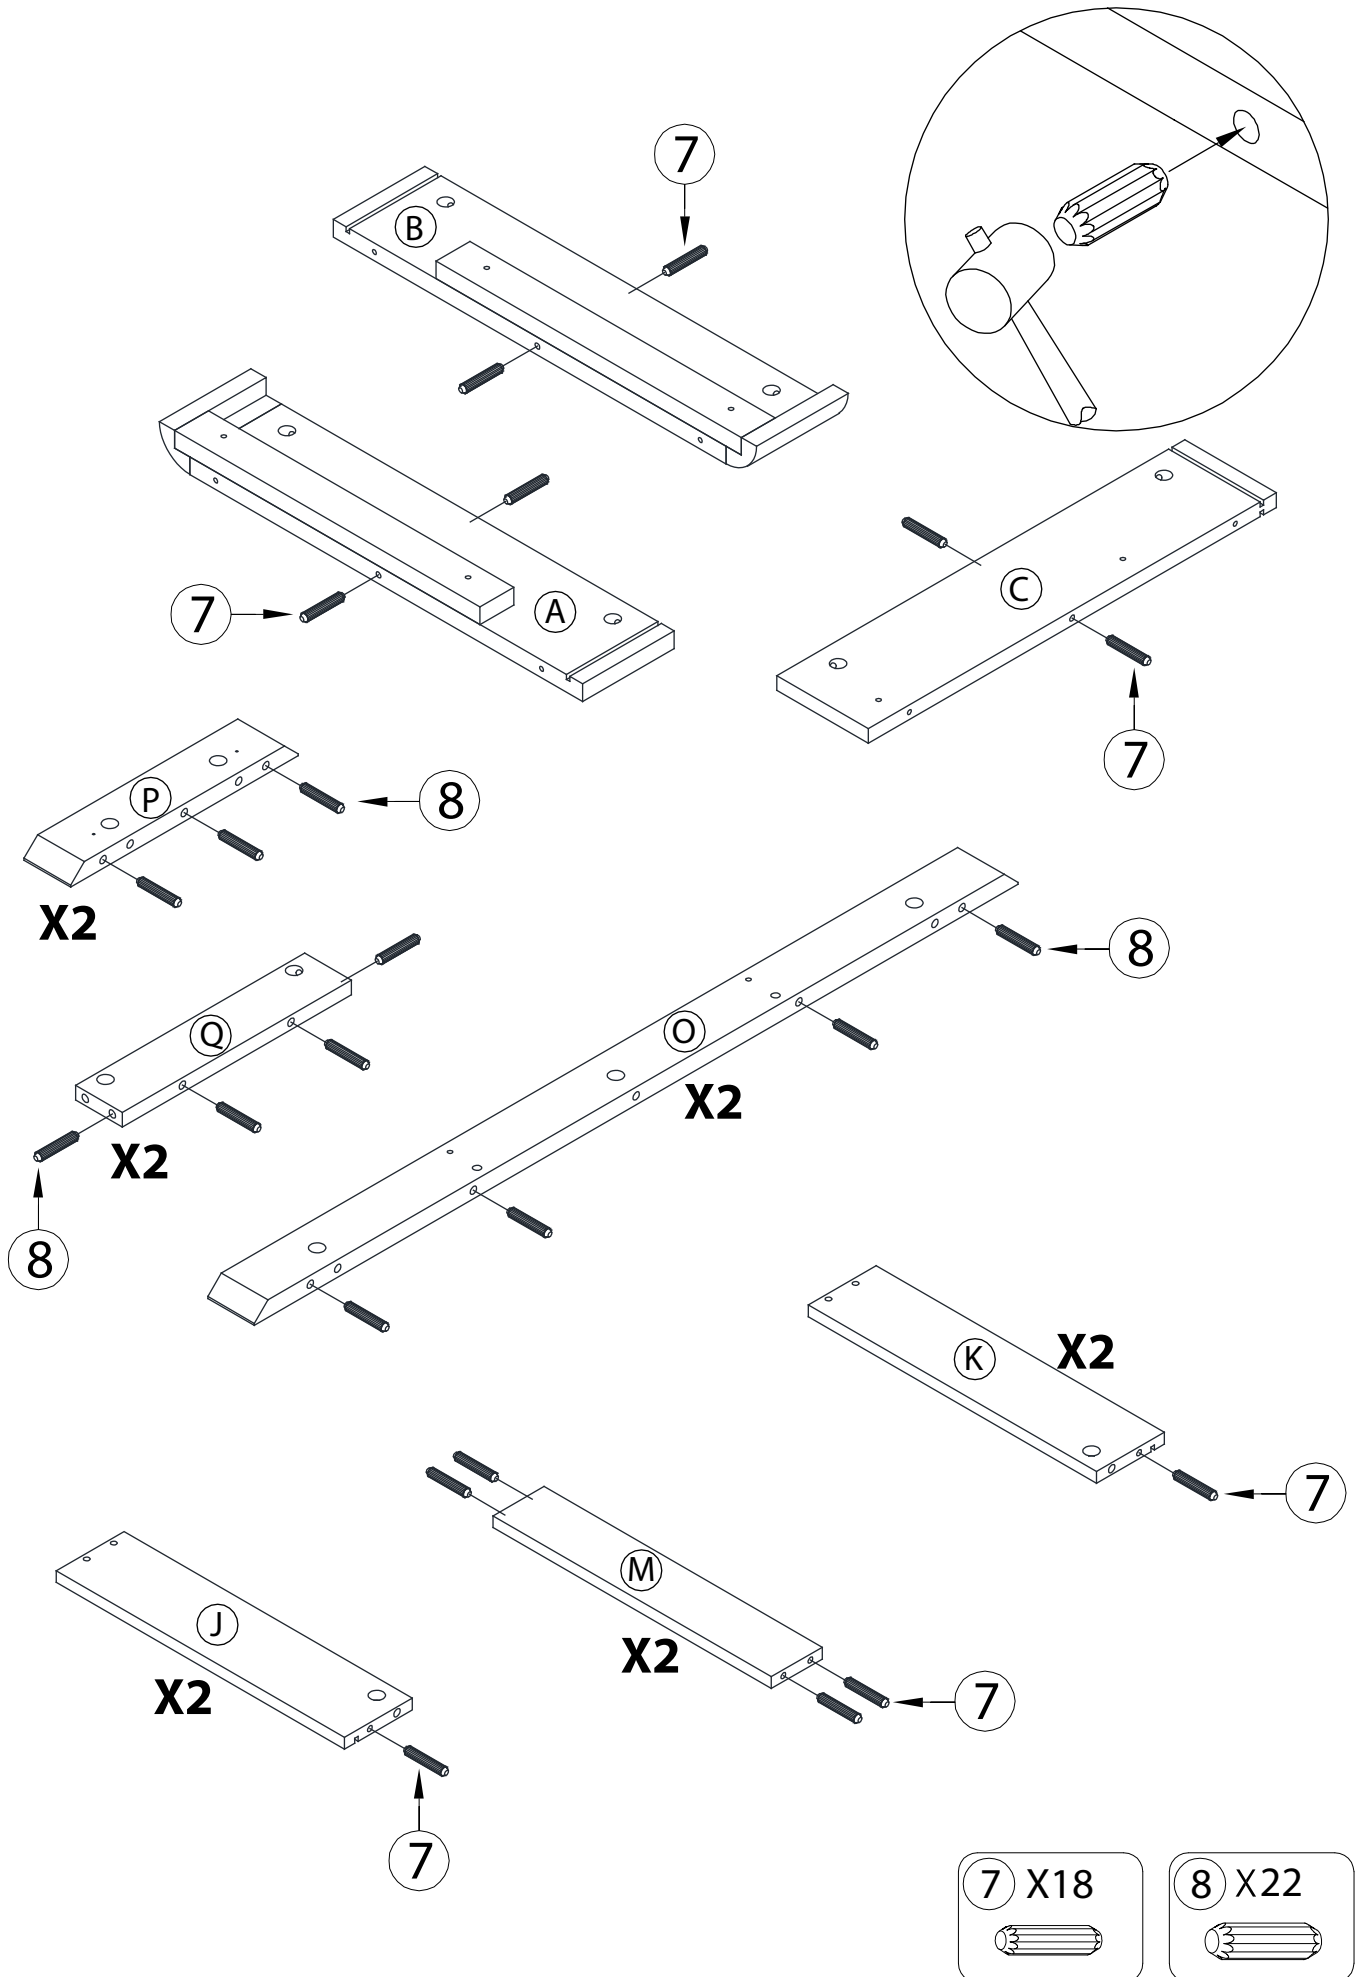 


2

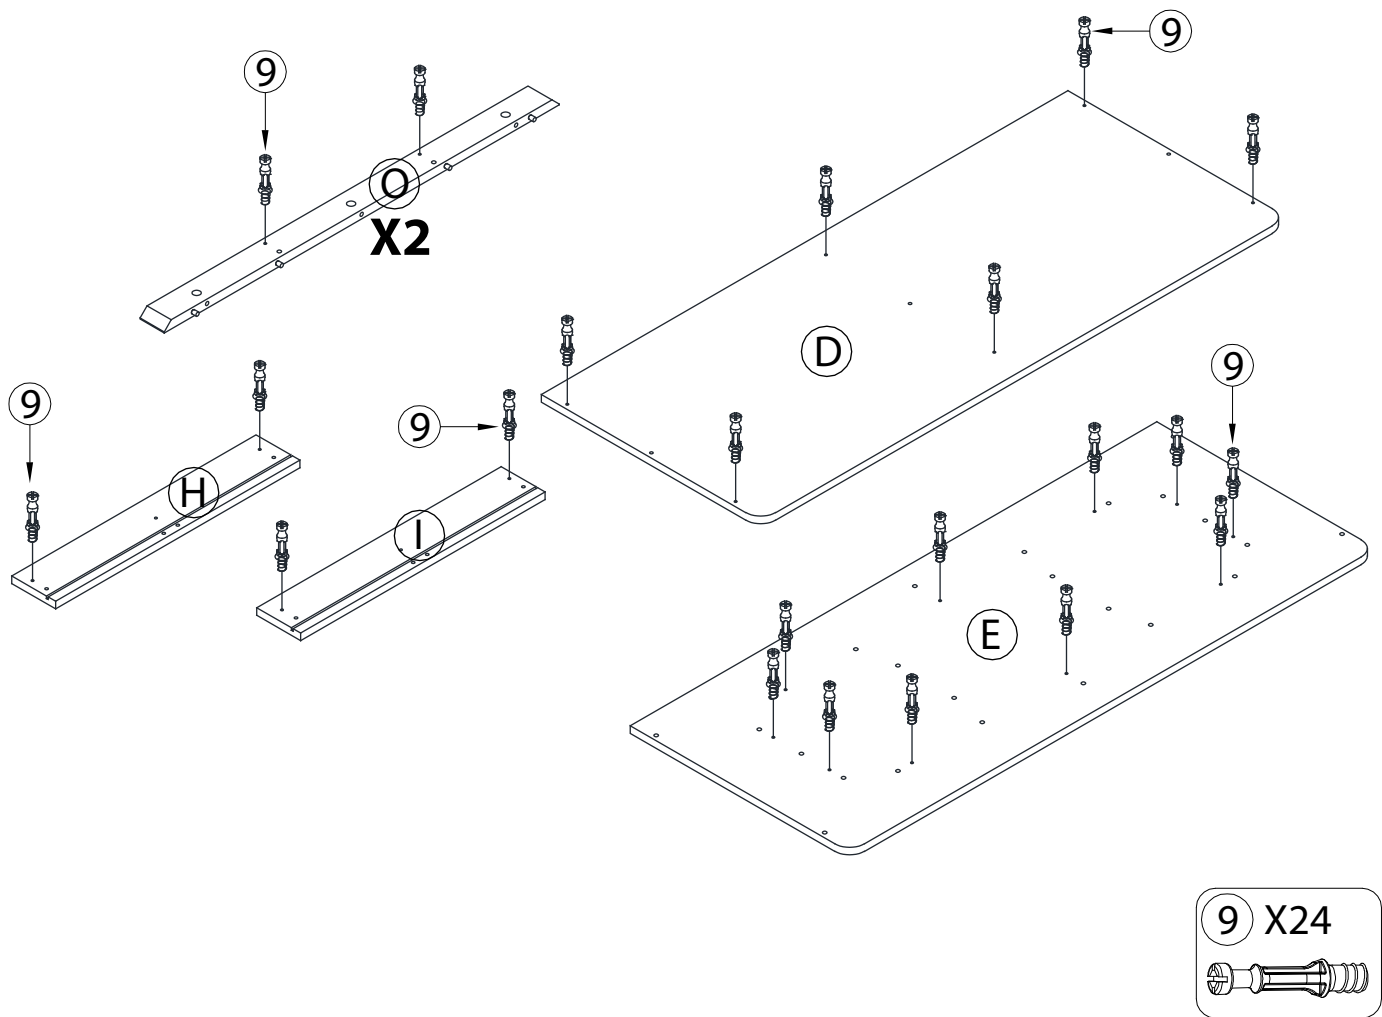 

3

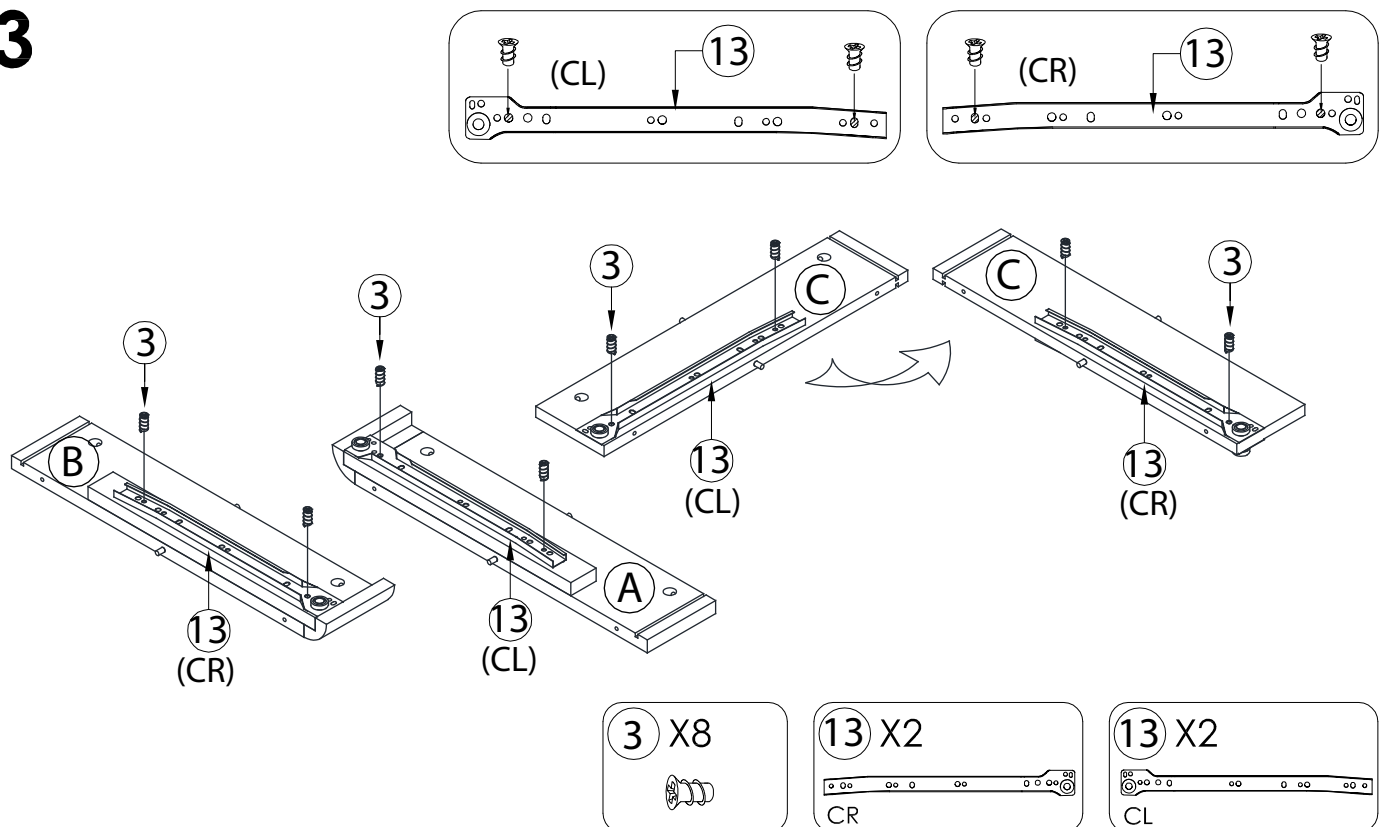 


4

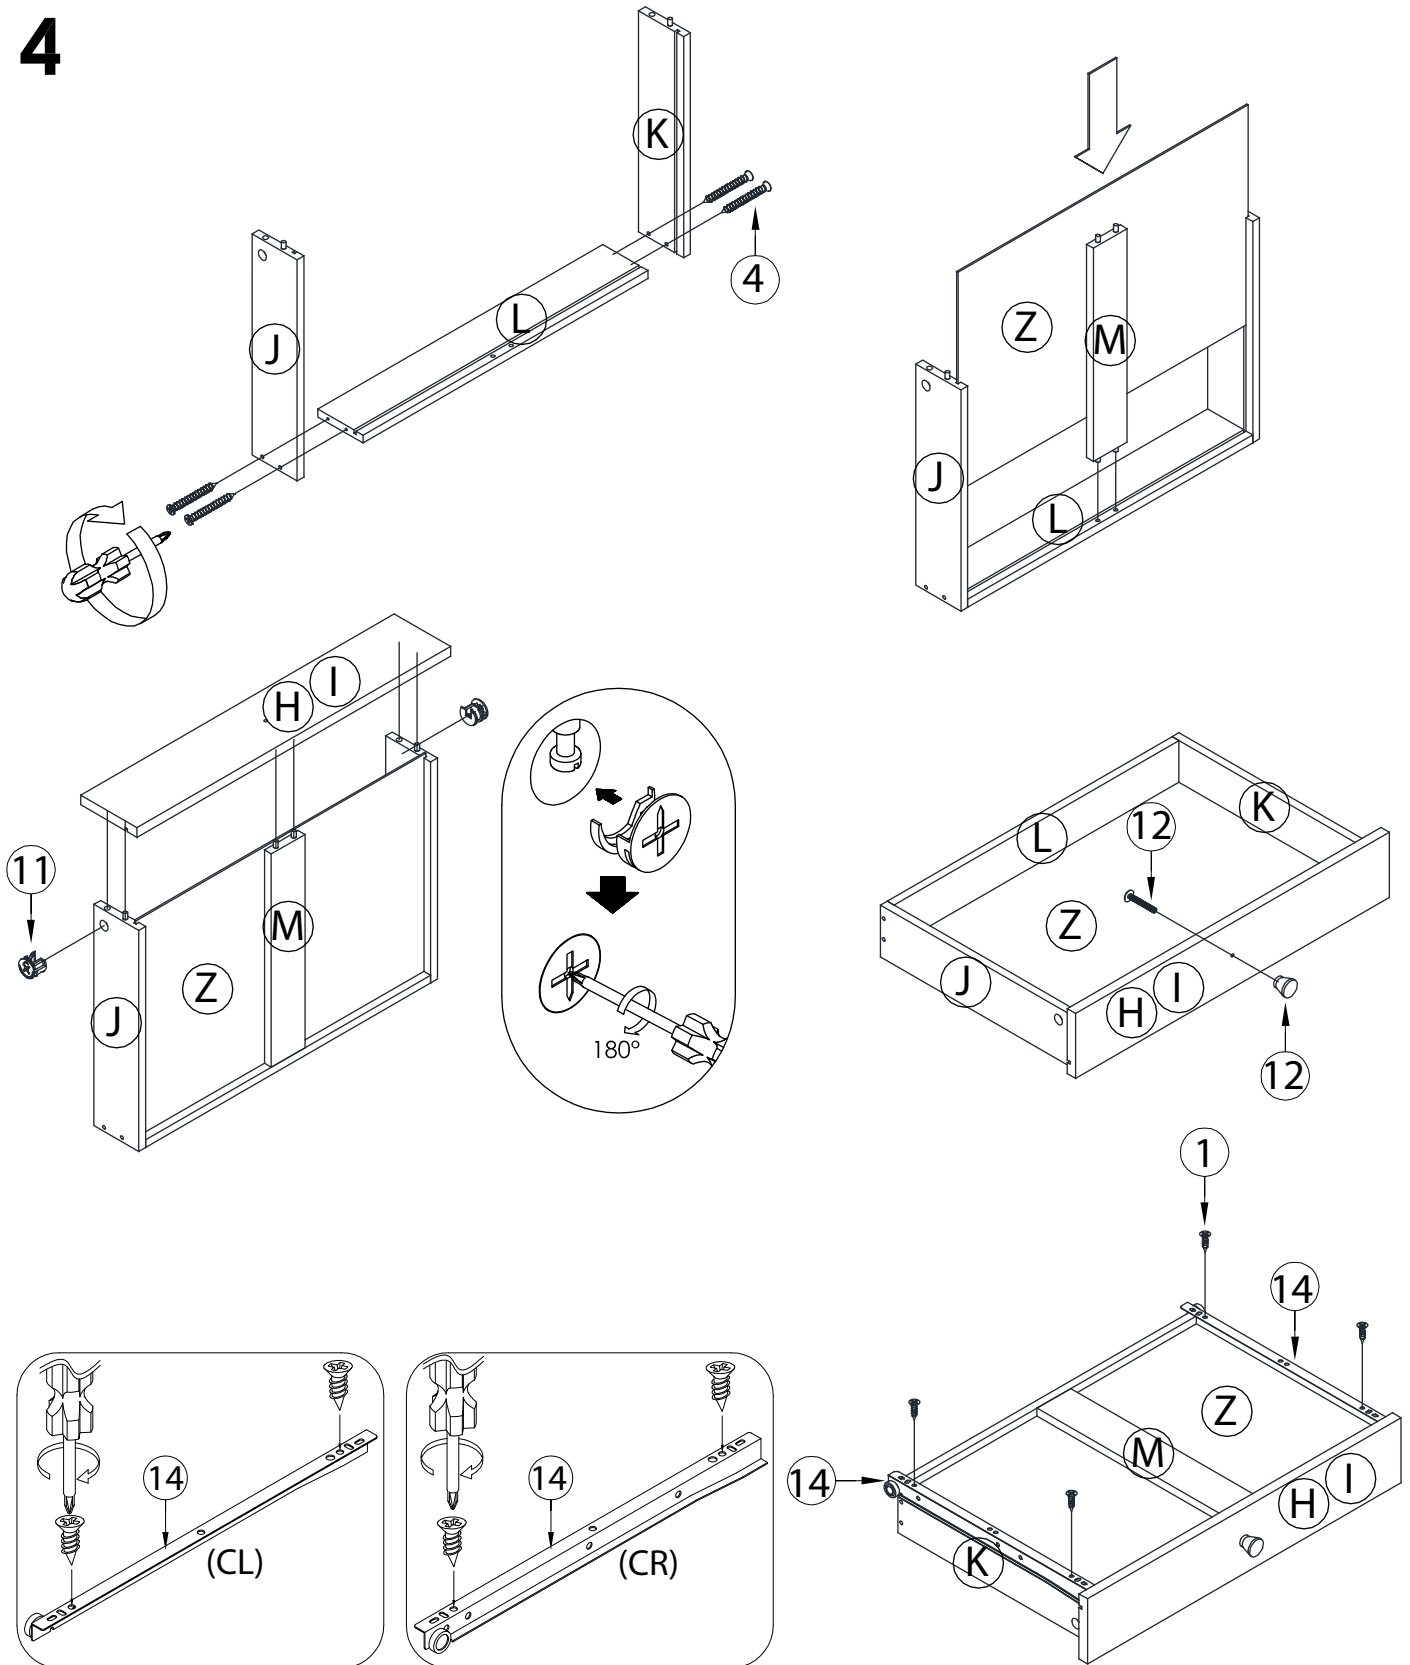 


1 X8 	4 X8 	11 X4 	12 X2
14 X2 CR 	14 X2 CL 	16 	

X2

 
5

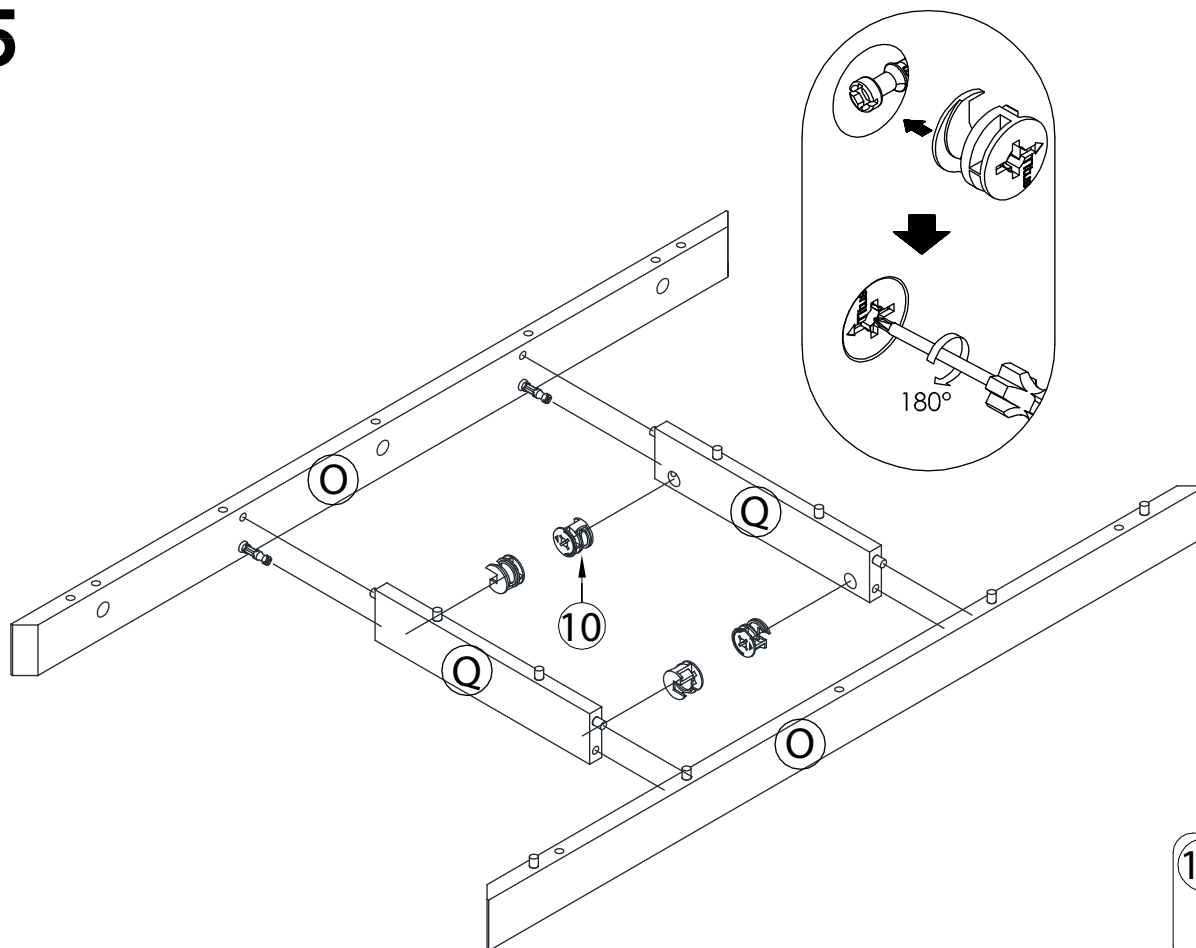


6

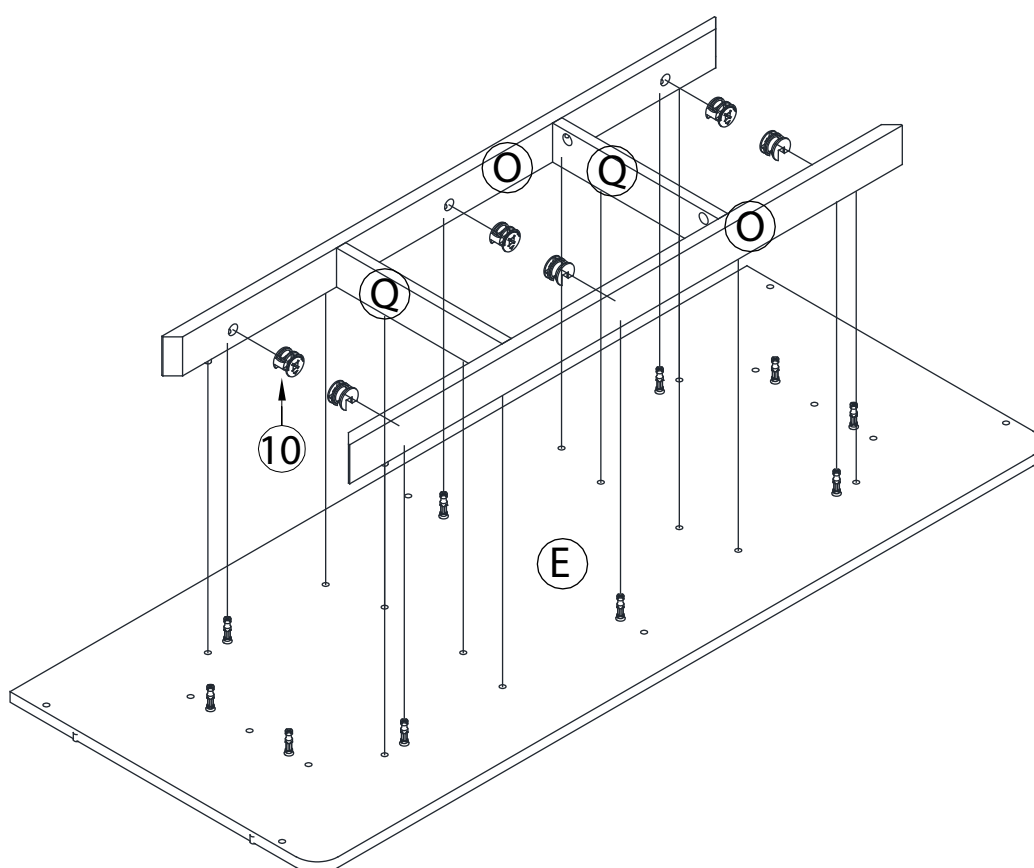 


7

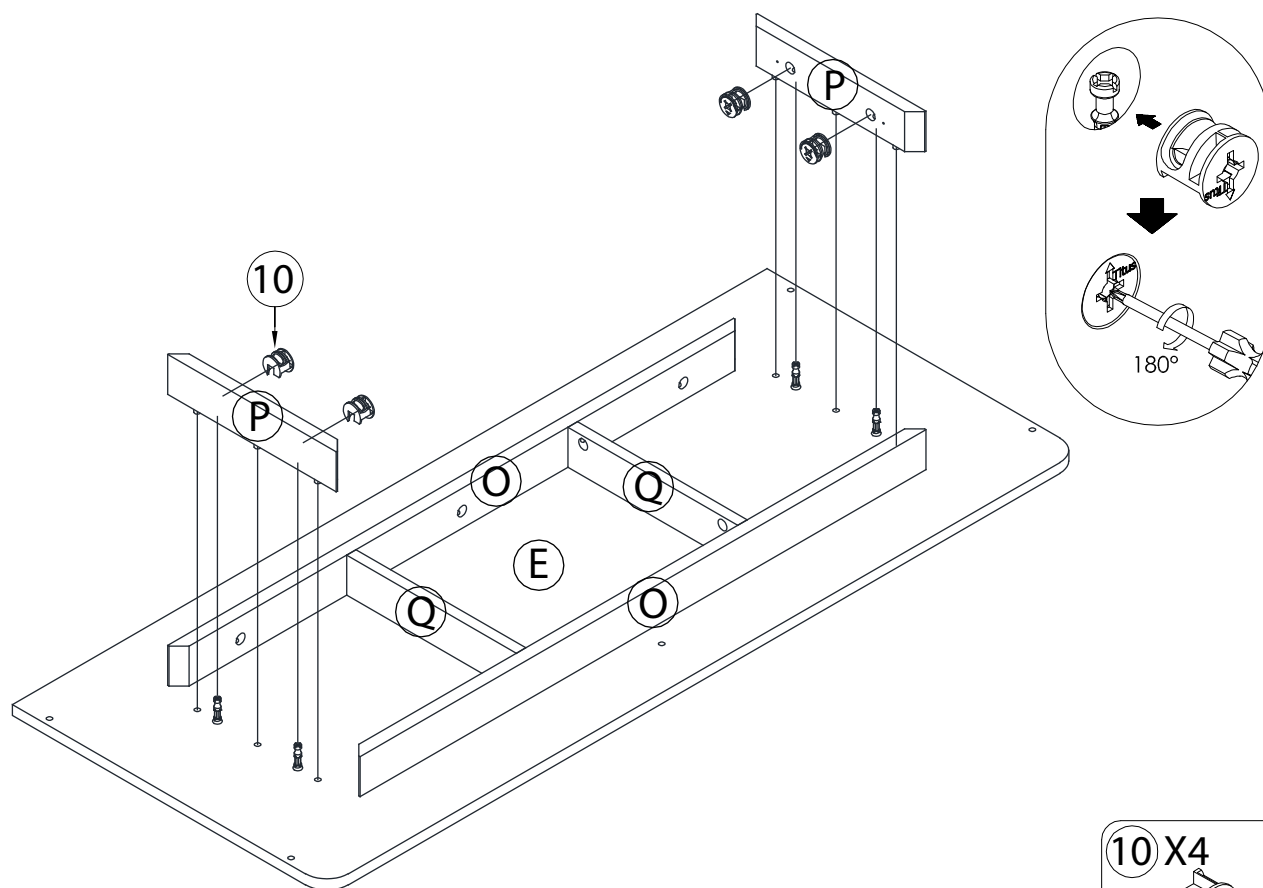 

8

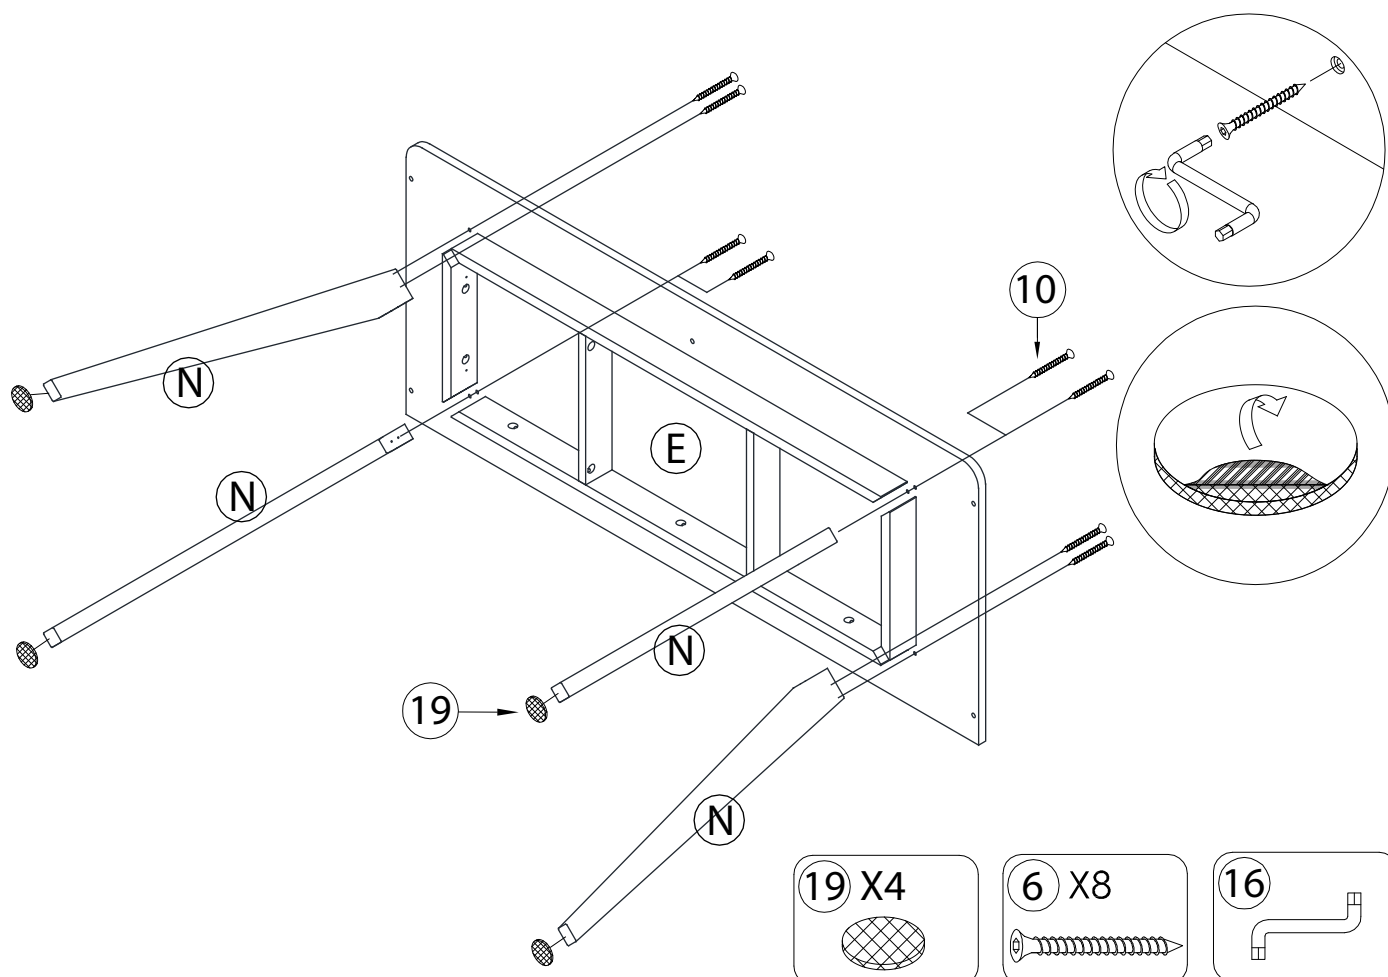 


9

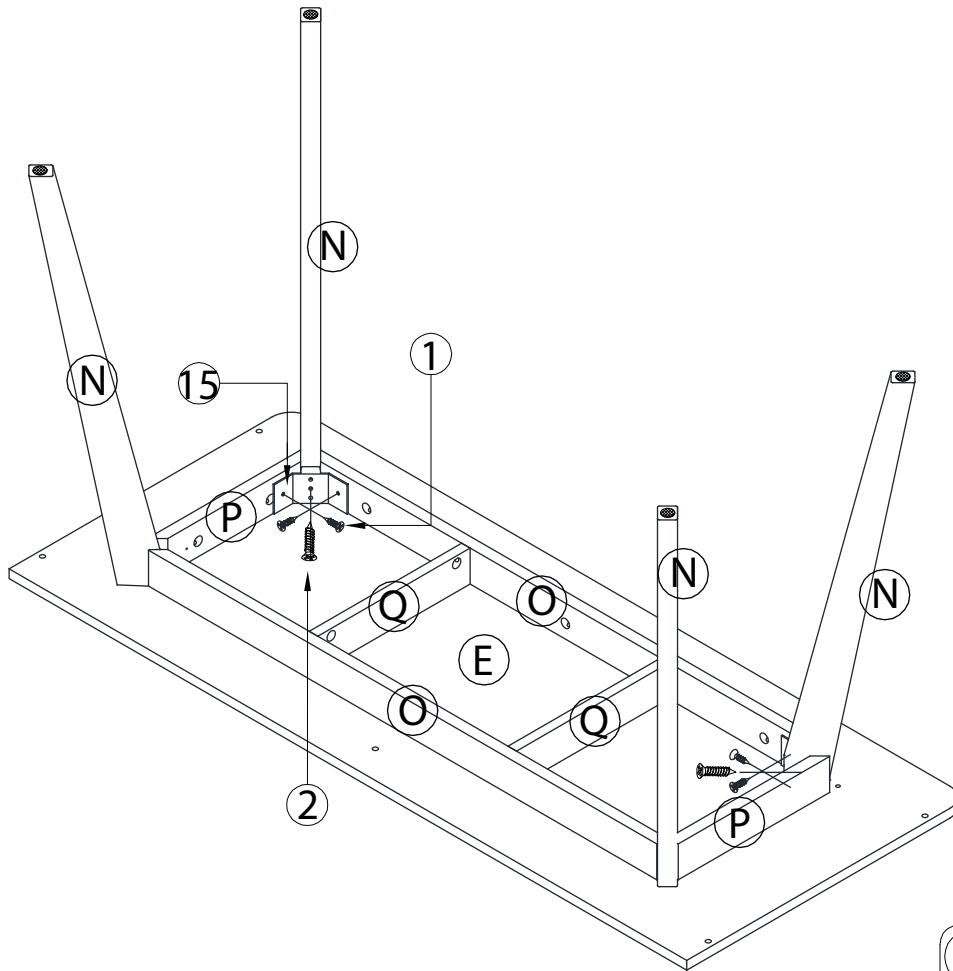 



1 X 8

 

2 X 4


15 X 4

   
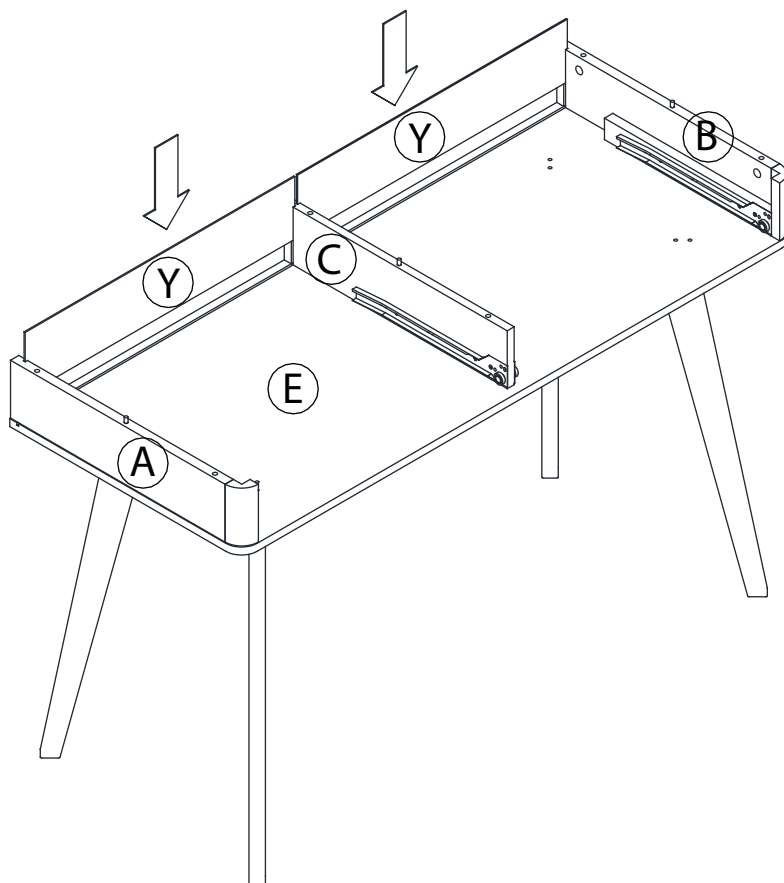 
10

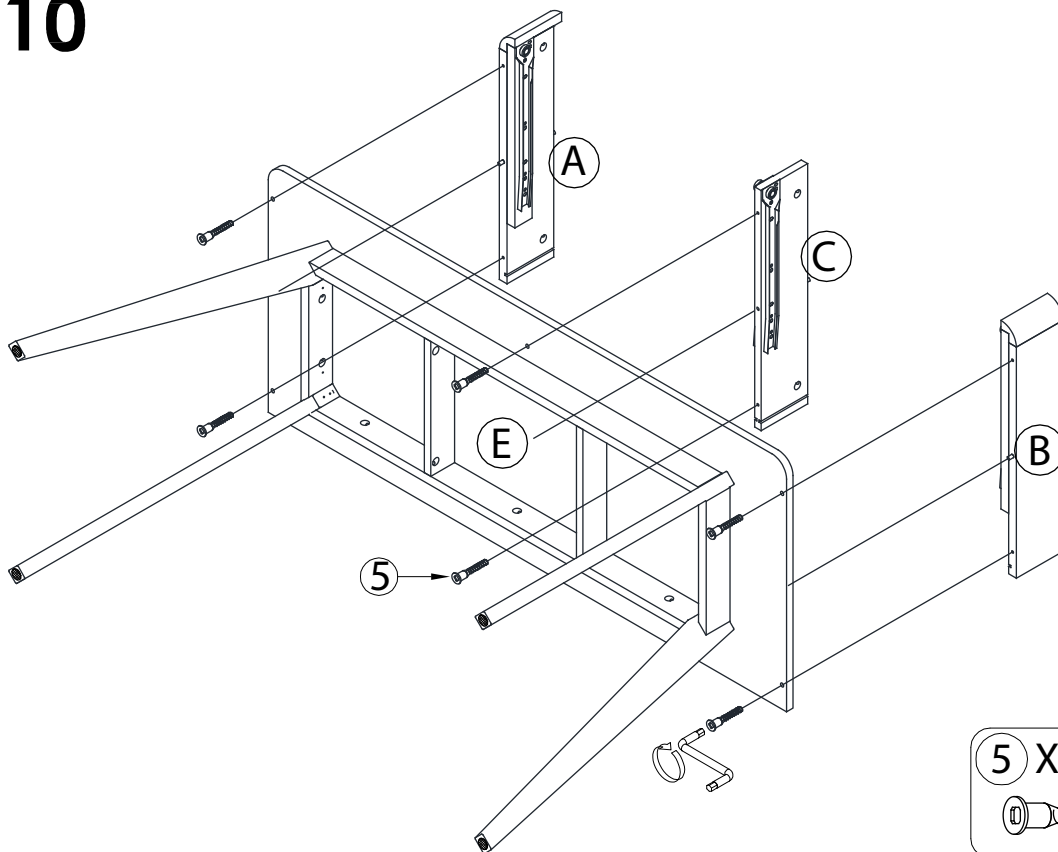




5 X 6

   
16


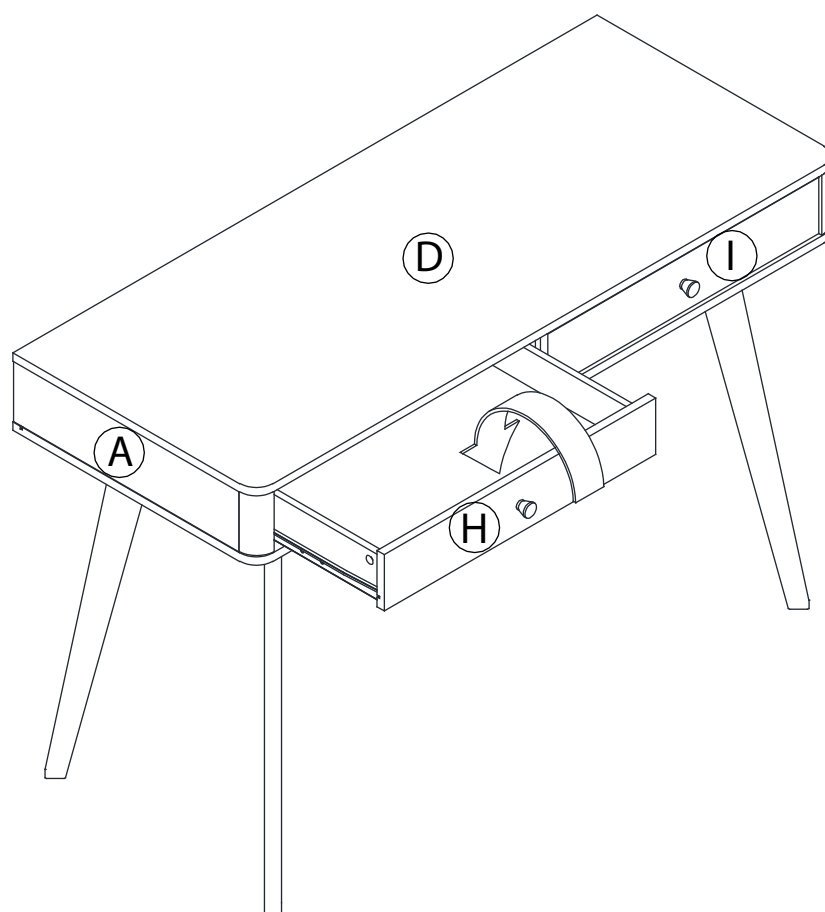 
11







12

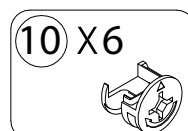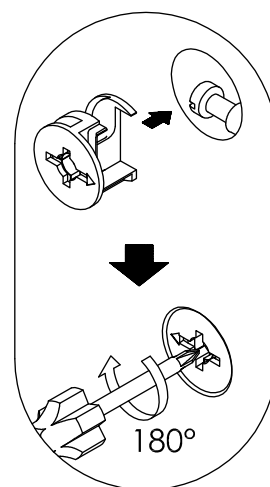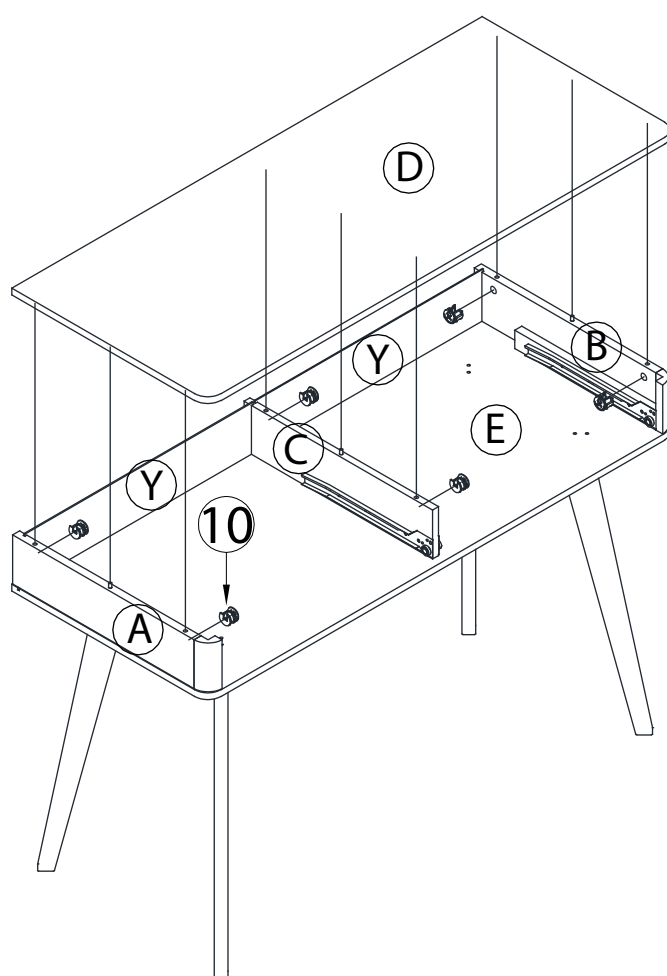

13



    14

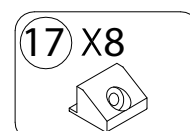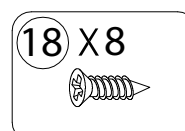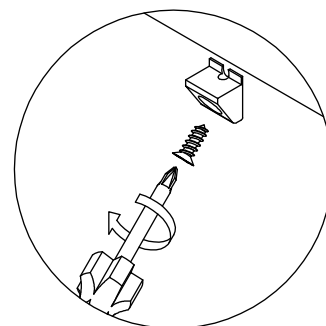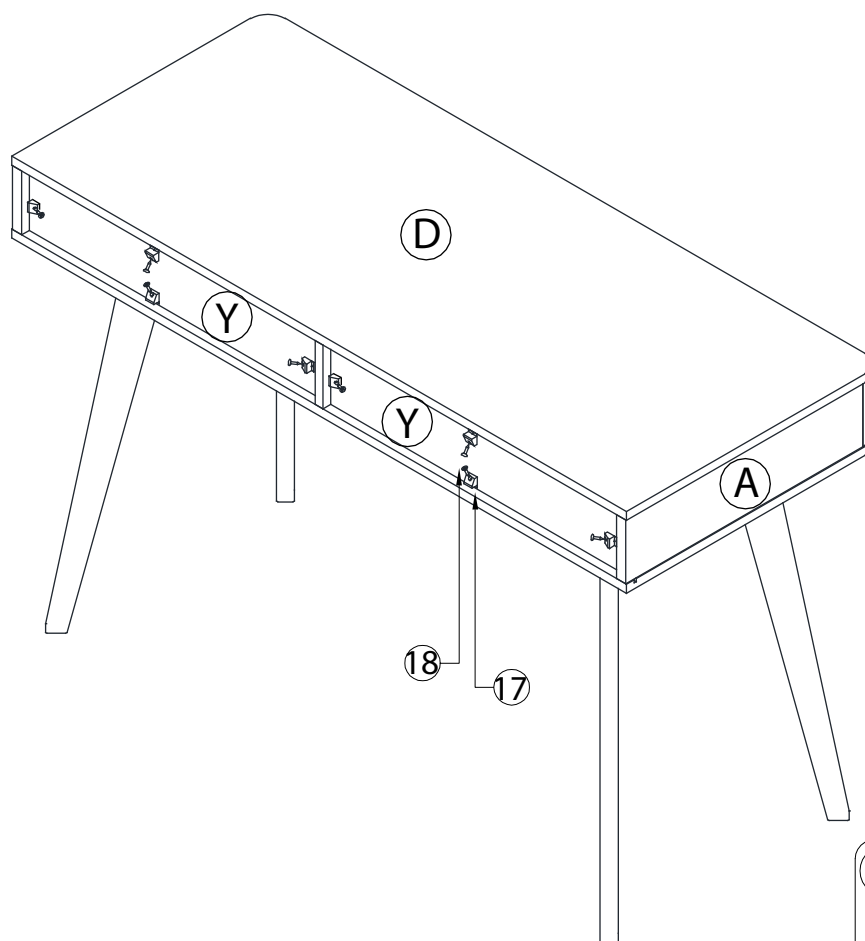

D	Bitte nur mit einem Staubtuch oder leicht feuchtem Lappen reinigen. Keine scheuernden Putzmittel verwenden.
GB	Please only clean with a duster or a damp cloth. Do not use any abrasive cleaners.
FR	Veuillez nettoyer uniquement avec un chiffon à poussière ou un chiffon légèrement humide. Ne pas utiliser de détergent abrasif.
IT	Si raccomanda di pulire solo con un panno per la polvere o uno strofinaccio umido. Non utilizzare detergenti abrasivi.
NL	Reinig alleen met een stofdoek of een lichtjes vochtige doek. Gebruik geen schurende poetsmiddelen.
PL	Czyszczenie należy wykonać wyłącznie za pomocą ściereczki lub lekko nawilżonego ręcznika. Nie stosować środków czyszczących do szorowania.
CZ	Čistěte prosím jen prachovkou nebo lehce navlhčeným hadrem. Nepoužívejte drhnoucí čisticí prostředky.
SK	Na čistenie používajte len prachovku alebo z ľahka navlhčenú utierku. Nepoužívajte žiadne drhnúce čistiace prostriedky.
HU	Kérjük, csak portörővel vagy kendővel vagy enyhén nedves ronggyal tisztítsa. Ne használjon dörzsölő tisztítószer.
RO	Vă rugăm să utilizați la curățare exclusiv o cârpă de șters praful sau o cârpă ușor umezită. Nu utilizați substanțe de curățat abrazive.
TR	Lütfen sadece bir toz beziyle veya hafif nemli yumuşak bir bezle siliniz. Aşındırıcı temizlik malzemeleri kullanmayınız.
RU	Очищайте от пыли тряпкой или слегка влажной ветошью. Не допускается применение чистящих средств, не предназначенных для ухода за мебелью.