

Hadar



D Montageanleitung

GB Assembly instructions

FR Notice de montage

NL Handleiding voor de montage

CZ Montážní návod

IT Istruzioni di montaggio

RO Instrucțiuni de montaj


RU инструкция по сборке

PL Instrukcja montażu

SK Návod na montáž



HU Szerelési útmutató

TR Montaj talimatı

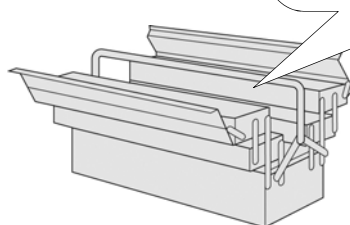



Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	Hadar DB
Nr. • No. • N° • Номер • Č • Sz	SH56
Typ • Type • Tip • Típus • Tipo Тип	BS

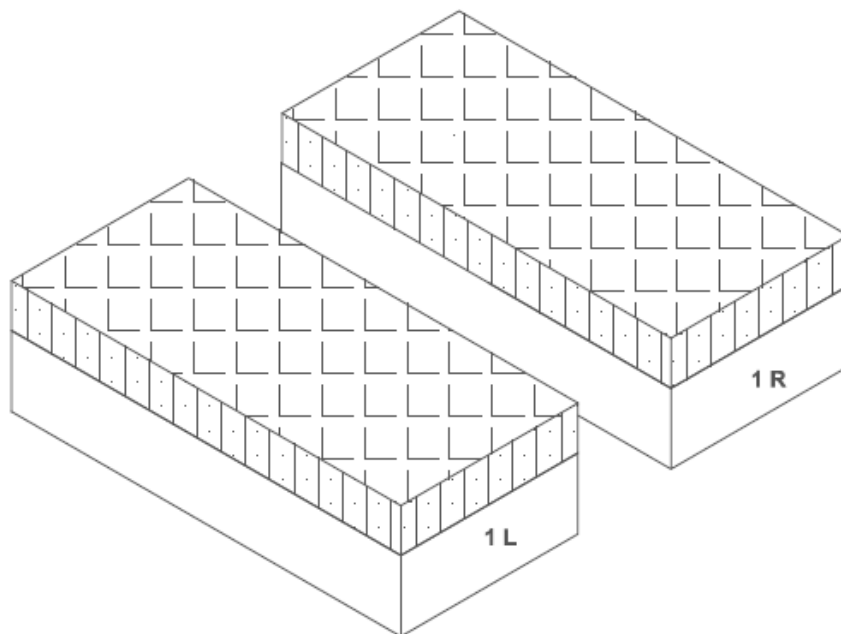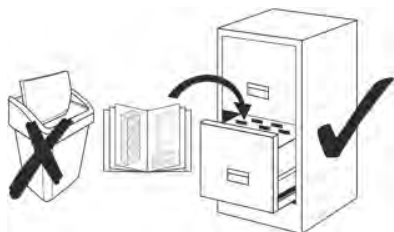

A	B	C	D	E	F	G	H
4x	4x 8x45	4x 8x20	5x 6x45	5x M6	5x M6	5x M6	2x

  

D	E	F	G	H
				
5x 6x45	5x M6	5x M6	5x M6	2x

