

Besalu



D Montageanleitung

GB Assembly instructions

FR Notice de montage

NL Handleiding voor de montage

CZ Montážní návod

IT Istruzioni di montaggio

RO Instrucțiuni de montaj



RU инструкция по сборке

PL Instrukcja montażu

SK Návod na montáž

HU Szerelési útmutató

TR Montaj talimatı

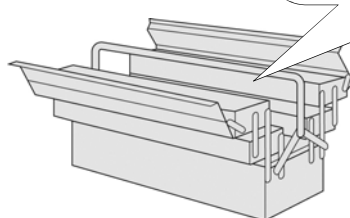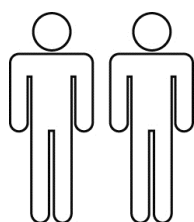

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба




Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denumire • Ísim • Название

Besalu DB

Nr. • No. • N° • Номер • Č • Sz


 
BS



Typ • Type • Tip • Típus • Tipo
Тип

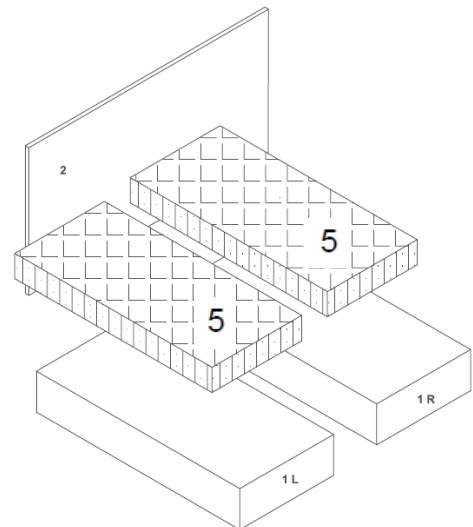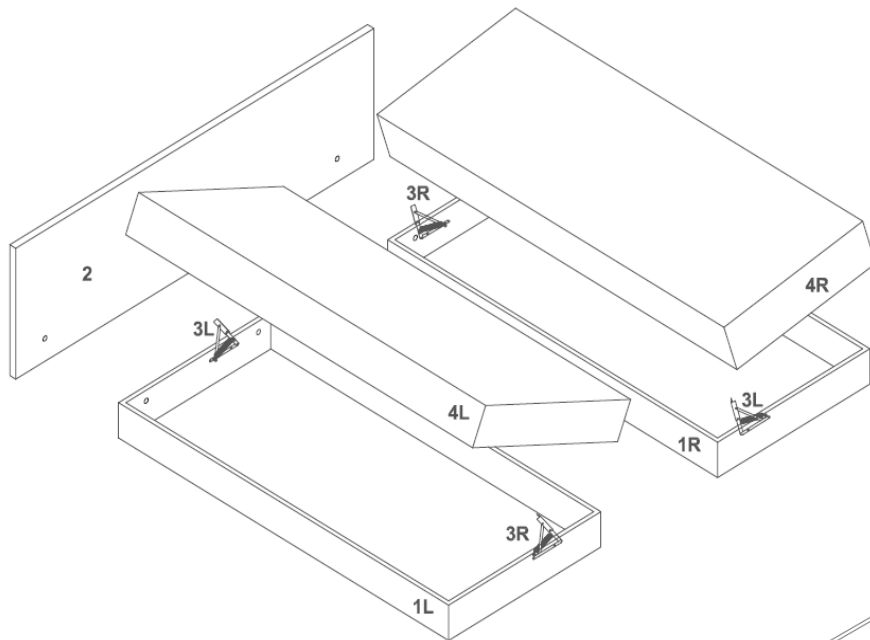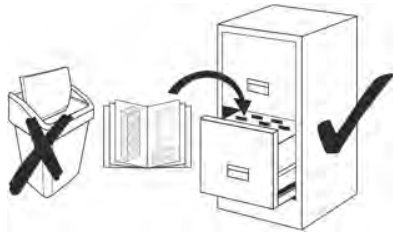

 
A	B	C	D	E	F	G	H	I	J	K	L
2x 6x45	2x 6x20	2x M6	2x M6	4x 8x70	4x 8x40	4x M8	8x	8x 6x40	8x 8x20	8x M6	8x M6

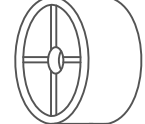


H		8x
I		8x 6x40
J		8x 8x20
K		8x M6
L		8x M6

 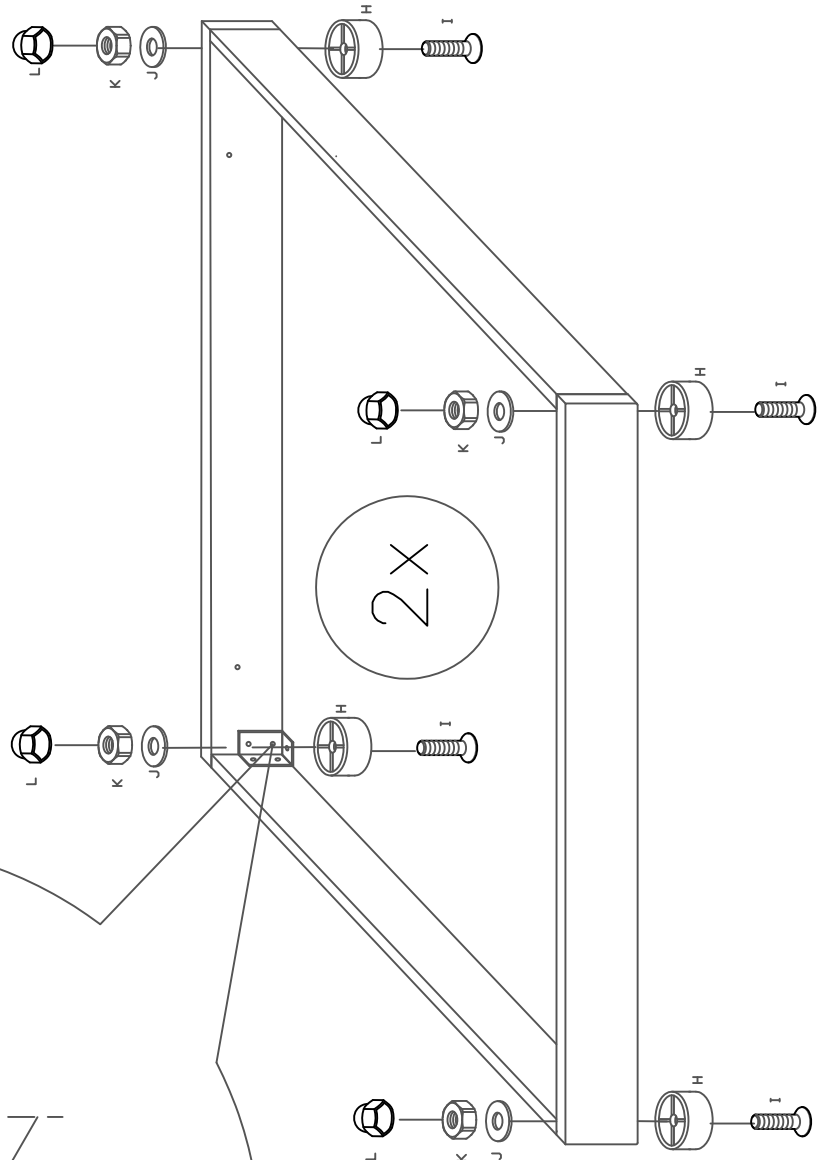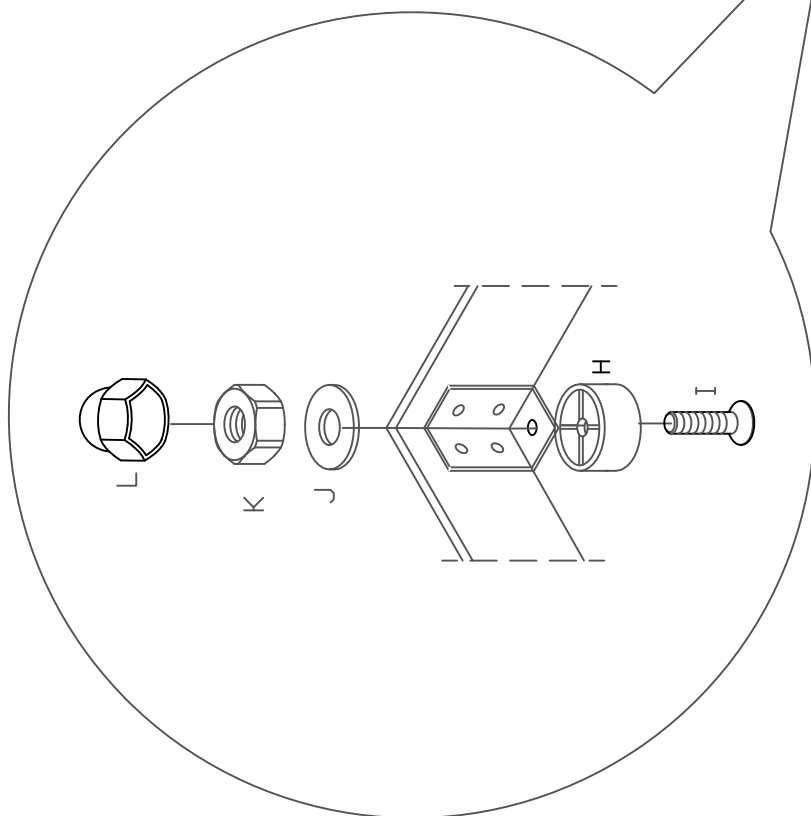




A	B	C	D
			
2x 6x45	2x 6x20	2x M6	2x M6

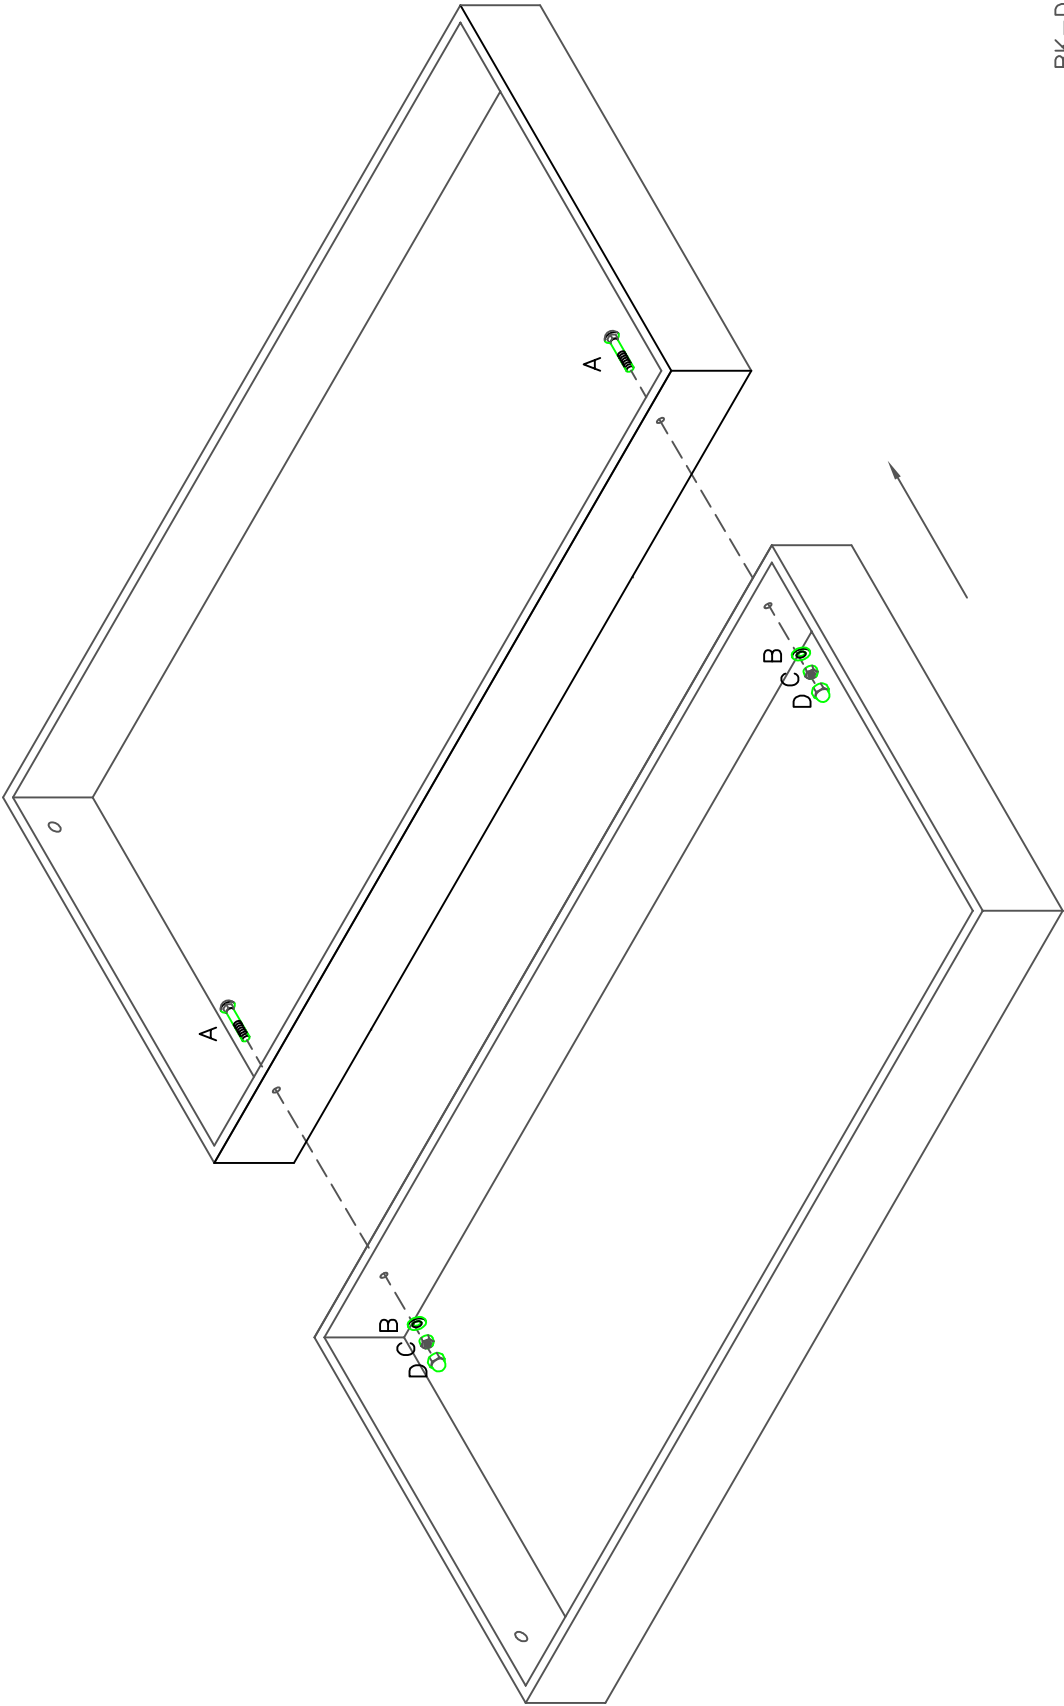



E	F	G	Achtung! Schrauben nicht überdrehen	GB Watch Out! Do not over tighten
			FR Attention! Ne serrez pas trop	NL Let Op! Niet te vast
4x 8x70	4x 8x40	4x M8	CZ Dávej Pozor! Nepřetahujte	IT Attento! Non stringere
			RO Ai Grija! Nu strângeți	RU Осторожно! Не затягивайте
			PL Uważaj! Nie dokręcać zbyt mocno	SK Dávaj Pozor! Nepreťahujte
			HU Vigyázz! Ne húzza túl	TR Dikkat! Üzerinde sıkmayın

