


## Produkteigenschaften:

- Funkgesteuerte automatische Zeiteinstellung und Zeitumstellung für Sommer- und Winterzeit
- Senderruf
- weltweite Zeitzonenumstellung
- bis zu 3 Jahre Batterielaufzeit

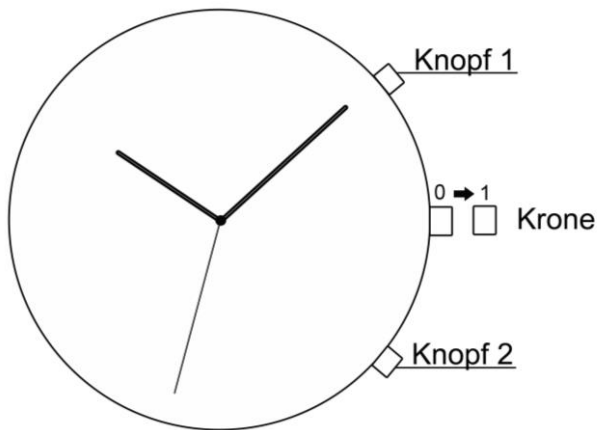

### 1. Grundeinstellung (Wichtig für die korrekte Einstellung der Funkuhr)

Durch starke Erschütterungen oder Magnetfelder kann die Zeigerstellung von der intern gespeicherten Funkzeit abweichen. Die Grundeinstellung dient der erneuten Synchronisation der Zeiger mit der intern gespeicherten Funkzeit.

- Ziehen Sie die Krone auf **Stufe 1** und drücken Sie den **Knopf 1** so oft, bis der Sekundenzeiger auf 12 steht.
- Drehen Sie die Krone ein wenig, bis alle 3 Zeiger genau auf der 12 stehen.
- Drücken Sie die Krone nun wieder hinein, auf Normalposition und der Empfang beginnt, der Sekundenzeiger springt auf 11.

### 2. Senderruf

Diese Funktion dient der Suche und der Einstellung des Funksignals. Drücken Sie **Knopf 1** für 3 Sekunden. Die Sendersuche beginnt, wenn der Sekundenzeiger auf 11:00 Uhr rotiert. Die Uhr versucht nun das Funksignal zu empfangen, der Vorgang dauert ca. 3-8 Minuten. War die Übertragung erfolgreich, wird sich automatisch die korrekte Funkuhrzeit einstellen. War die Übertragung nicht erfolgreich, wird der Sekundenzeiger auf 6:00 Uhr anhalten, nach 30 Sekunden stellt sich dann wieder die Uhrzeit ein, die zuvor eingestellt war.

### 3. Empfangskontrolle

**(Eingangskontrolle des letzten Funksignals. Das Signal wird jede Nacht zwischen 3 und 4 Uhr gesendet/empfangen)**

Drücken Sie **Knopf 2**.

Der Sekundenzeiger rotiert auf 12:00 Uhr, wenn die vorherige Sendersuche erfolgreich war. War die Sendersuche nicht erfolgreich, rotiert der Sekundenzeiger auf 6 Uhr, bleibt für 5 Sekunden stehen, nach ca. 3 Minuten wird die Funkzeit wieder angezeigt.

### 4. Manueller Modus

Wenn Sie die Uhr außerhalb der Reichweite des DCF77-Funksignals bzw. in einer anderen Zeitzone benutzen wollen, müssen Sie die Zeit manuell einstellen.

Um die Zeit manuell einstellen zu können, ziehen Sie die Krone auf **Stufe 1** und drücken **Knopf 1**, bis der Sekundenzeiger auf 6:00 Uhr steht. Dann halten Sie **Knopf 2** für 5 Sekunden gedrückt. Der Sekundenzeiger läuft nun bis 12:00 Uhr weiter. Dann drehen Sie die Krone, bis die gewünschte Zeit eingestellt ist. Drücken Sie die Krone wieder zurück, der Sekundenzeiger fängt an zu laufen und die Ortszeit ist eingestellt.

### 5. Reset (Wechsel vom Manuellen Modus zum Funk-Modus)

Verfahren Sie nach Punkt 1 (Grundeinstellung).

### 6. Konformitätserklärung

Hiermit erklären wir, dass sich diese Armbanduhr in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 2014/53/EU befindet.

### 7. Dieses Produkt entspricht den EMV Richtlinien der EU

### 8. Wasserdichtigkeit gemäß DIN 8310

Die Wasserdichtigkeit Ihrer Uhr ist auf dem Gehäuseboden vermerkt und ist im Neuzustand wie folgt:

<b>WR:</b>	Waschen, Regen, Spritzer = NEIN, Duschen = NEIN, Baden = NEIN, Schwimmen = NEIN, Tauchen ohne Ausrüstung = NEIN
<b>3 Bar:</b>	Waschen, Regen, Spritzer = JA, Duschen = NEIN, Baden = NEIN, Schwimmen = NEIN, Tauchen ohne Ausrüstung = NEIN
<b>5 Bar:</b>	Waschen, Regen, Spritzer = JA, Duschen = NEIN, Baden = JA, Schwimmen = NEIN, Tauchen ohne Ausrüstung = NEIN
<b>10 Bar:</b>	Waschen, Regen, Spritzer = JA, Duschen = NEIN, Baden = JA, Schwimmen = JA, Tauchen ohne Ausrüstung = NEIN


### 9. Hinweise zum Umweltschutz

- Entsorgung von Altgeräten. Dieses Produkt darf nach Ende seiner Lebensdauer nicht dem normalen Haushaltsabfall zugeführt werden, sondern muss an einem Sammelpunkt für Recycling von elektrischen Geräten abgegeben werden. Das Symbol auf dem Produkt oder der Bedienungsanleitung weist darauf hin. Die Werkstoffe sind gemäß Ihrer Kennzeichnung wieder verwertbar. Mit der Wiederverwendung, der stofflichen Verwertung oder anderen Formen der Verwertung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutze unserer Umwelt. Bitte erfragen Sie bei der Gemeindeverwaltung die zuständige Entsorgungsstellen.
- Verbrauchte Batterien entsorgen! Uhr nicht wegwerfen, sondern umweltgerecht entsorgen! Hierfür bestehende Sammelplätze oder Sondermüllplätze benutzen!
- Entsorgung der Verpackungsmaterialien. Verpackungsmaterialien sind Rohstoffe und somit wieder verwertbar. Bitte führen Sie diese im Interesse des Umweltschutzes einer ordnungsgemäßen Entsorgung zu! Ihre Gemeindeverwaltung informiert Sie gerne.



## Product features:

- Radio-controlled, automatic time setting and clock change for Daylight Savings.
- Reception Control
- Worldwide time zone clock change
- Battery life up to 3 years

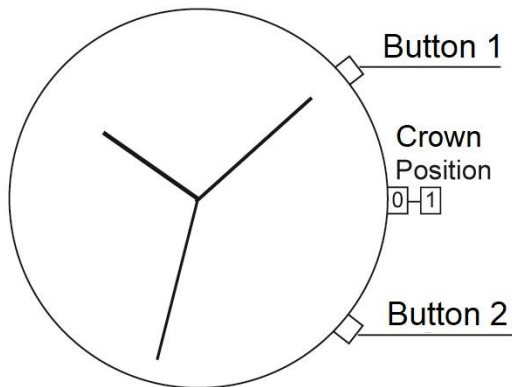

### 1. Initial Setup (important for correct setting of radio-controlled watch)

Due to heavy shocks or magnetic fields the hand position may differ from the internally saved radio time. The initial setup serves to resynchronise the hands with the internally saved radio time.

- Pull out the crown to stage 1 and press button 1 until the second hand is on 12.
- Leave the crown on stage 1 and rotate the crown left or right, until hands are on 12. Now all three hands align with 12.
- Set crown to its initial position and the watch begins to receive the signal. The second hand rotates to 11.

### 2. Reception Control

This function is for the searching and setting of the radio-control signal. Press button 1 for 3 seconds. The searching for the signal begins when the second hand rotates and aligns with 11. The watch now tries to receive the signal. This process takes 3 – 8 minutes. If this was successful, the correct time is displayed directly. If this process was unsuccessful, the second hand rotates to 6 and stops there. After 30 seconds, the watch shows the previously displayed time.

### 3. Checking Radio Reception

(Reception control of the last radio signal. The signal is sent/received every night between 3 and 4 o'clock.)  
Press button 2.

The second hand rotates and aligns with 12, if the transmitter search was successful. If the process was not successful, the second hand rotates onto 6 and stops for 5 seconds. The radio time is shown again after 3 minutes.

### 4. Manual Mode

If the watch is being used outside of DCF77 radio-signal, the time has to be set manually, because the radio signal cannot be assigned.

For the manual time setting the crown has to be on stage 1 and button 1 has to be pressed until the second hand aligns with 6. Press and hold button 2 for 5 seconds. Now the second hand rotates to 12. Then rotate the crown until the desired time is set. Bring the crown into its initial position. The second hand starts running and the local time is set.

### 5. Reset (change from manual mode to radio-controlled mode)

Follow point 1 Initial Setup.

### 6. Declaration of conformity

We hereby declare that this wristwatch is in conformity with the basic requirements and other applicable regulation of the directive 2014/53/EU.

### 7. This point equates to the EMV guidelines of the EU.

### 8. Water Resistance according to DIN 8310

The water resistance rating is shown on the back of the watch. The rating for a new watch is as follows:

**WR:** Not water resistant.

**3 Bar:** Can withstand splashes of water while washing hands or rain.

**5 Bar:** Can withstand splashes of water while washing hands or rain. Suitable for taking a bath.

**10 Bar:** Can withstand splashes of water while washing hands or rain. Suitable for taking a bath and swimming but should not be used for diving.

**Ensure that the crown is returned to the normal operating position before the watch comes in contact with water.**

### 9. Instructions for environmental protection

- Disposal of old devices. At the end of its life, this product should not be thrown into the normal household waste, but must be handed over at a collecting point for recycling electric devices. The appropriate symbol on the product or the User Guide indicates this accordingly. As per the markings, the materials are recyclable. By recycling the materials or by other forms of recycling old devices you will be making a significant contribution to the protection of our environs. Please obtain more information about this from the responsible waste disposal facilities of your community administrative authorities.
- Dispose of used batteries in a proper way. Do not throw away the watch indiscriminately, but dispose of it environmentally correctly. Use appropriate collecting points or special waste dumps for this purpose.
- Disposal of packaging material. Packaging materials are raw materials and, therefore, recyclable. For the sake of environmental protection, please dispose of these properly. Your community administrative authorities will gladly provide with more information.

