




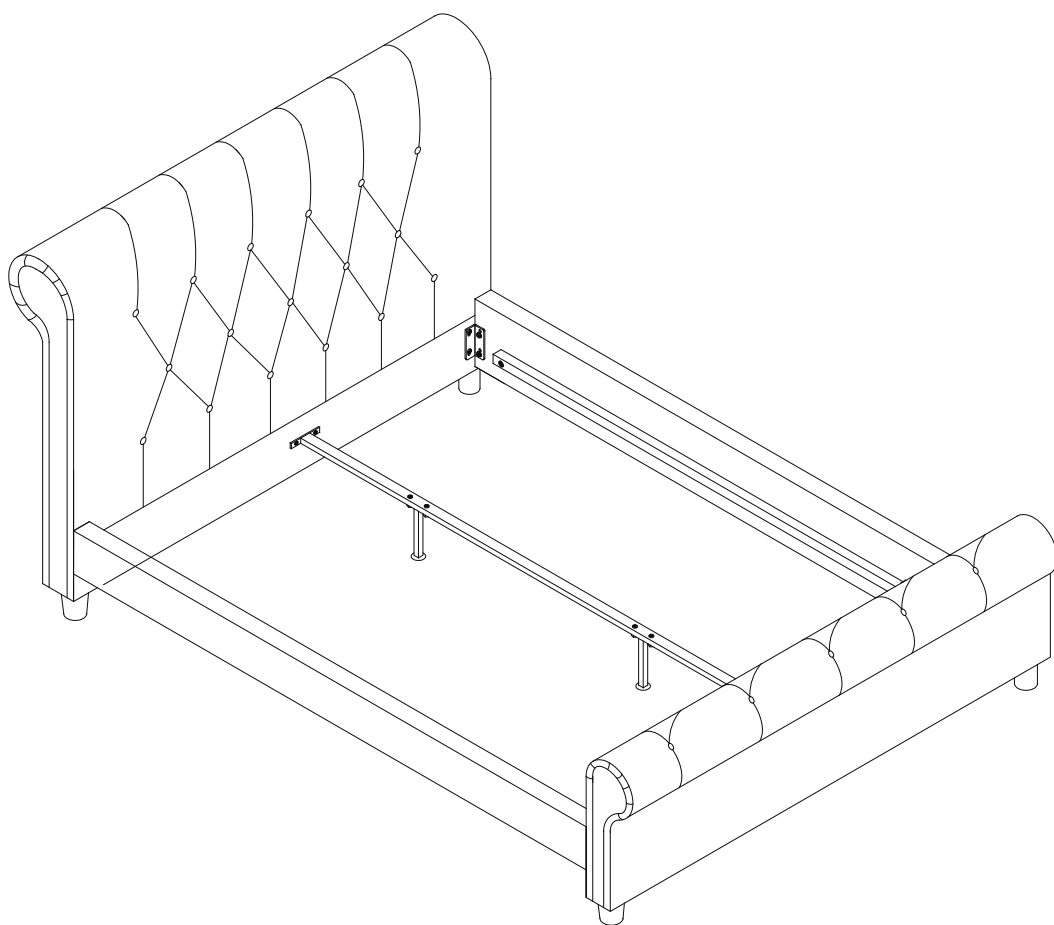



- | | |
|--------------------------------|----------------------------|
| Ⓓ Montageanleitung | ⒼⒷ Assembly instructions |
| ⒻⓇ Notice de montage | ⒾⓉ Istruzioni di montaggio |
| ⓃⓁ Handleiding voor de montage | ⓅⓁ Instrukcja montażu |
| ⒸⓏ Montážní návod | ⓈⓀ Návod na montáž |
| ⒽⓊ Szerelési utmutató | ⓇⓄ Instrucțiuni de montaj |
| ⓉⓇ Montaj talimatı | ⓇⓊ Инструкция по монтажу |

Dokument-Nr.: KB-358
Ausgabe: 20201106


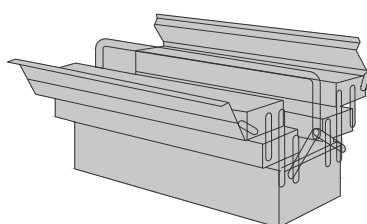


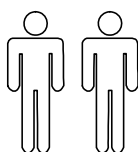




Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба		
Name • Nom • Nome • Naam • Nazwa • Иméно • Názov • Név • Denimire • Isim • Название		GORONNABETT
Nr. • No. • N° • Номер • Č • Sz		7751 8624 9706 9856 2374 7734 7162 1449 2295 5527 4137 8808 2166 5316 6127 0542 7170 6849 4555 0659 2933 1003 9294 3267 5782 6543 6983 2929 2667 2135 9548 6113 4761 6851 7311 8816 6374 4702 4718 1860
Typ • Type • Tip • Típus • Tipo • Тип		100X200CM 140X200CM 160X200CM 180X200CM
		KB-358

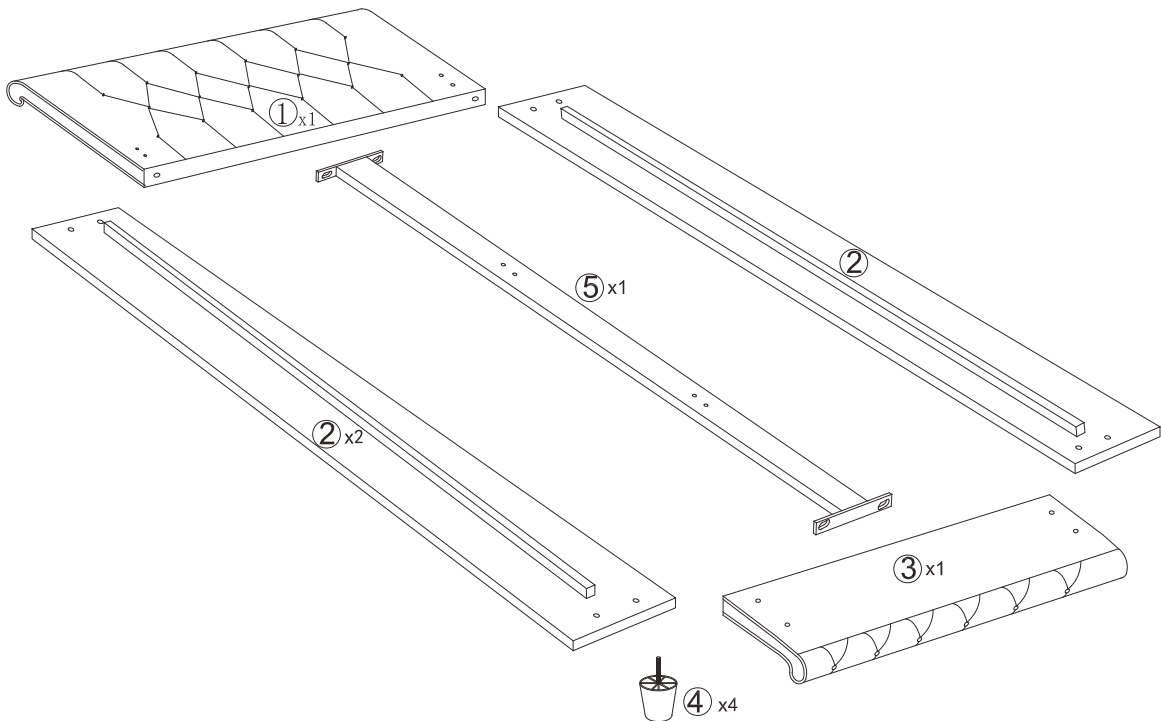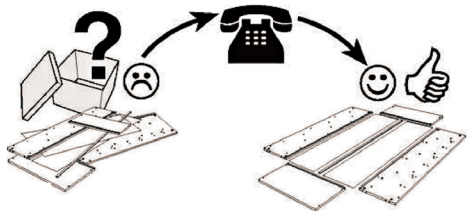




A	M8x25 8x	B	M8x40 16x	C	M8x19 16x	D	M8x13 16x	E	M8x13 4x
F	130x47x47 4x	G	92x41x150 2x	H	Ø30x3 4x	I	M5x40x100 1x	J	85x26 1x

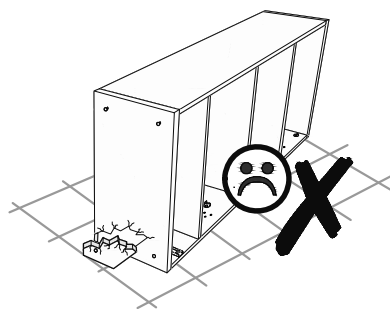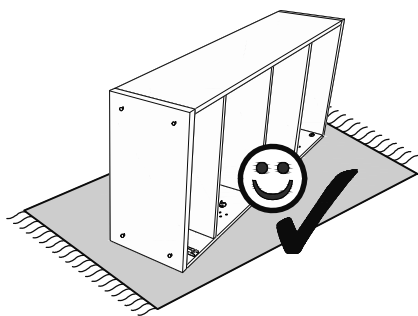


1

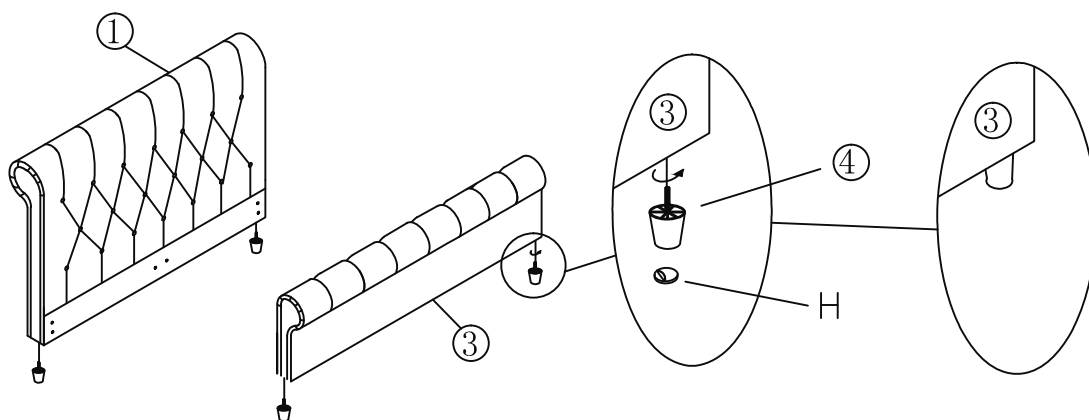

2

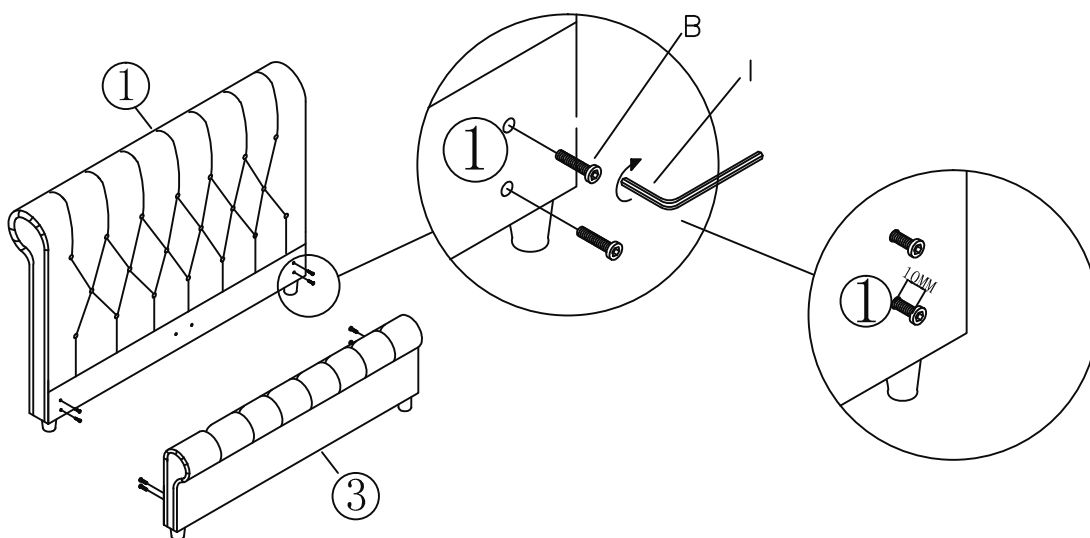


3

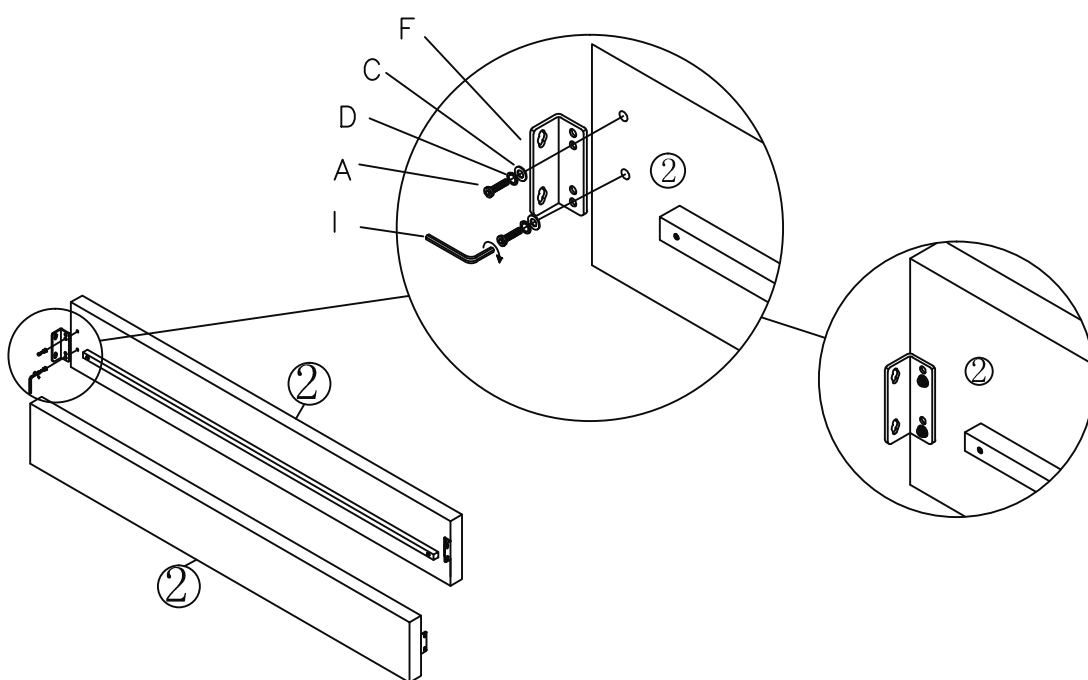


A	M8x25 8x
C	M8x19 8x
D	M8x13 8x
F	130x47x7 4x
I	M5x40x100 1x

4

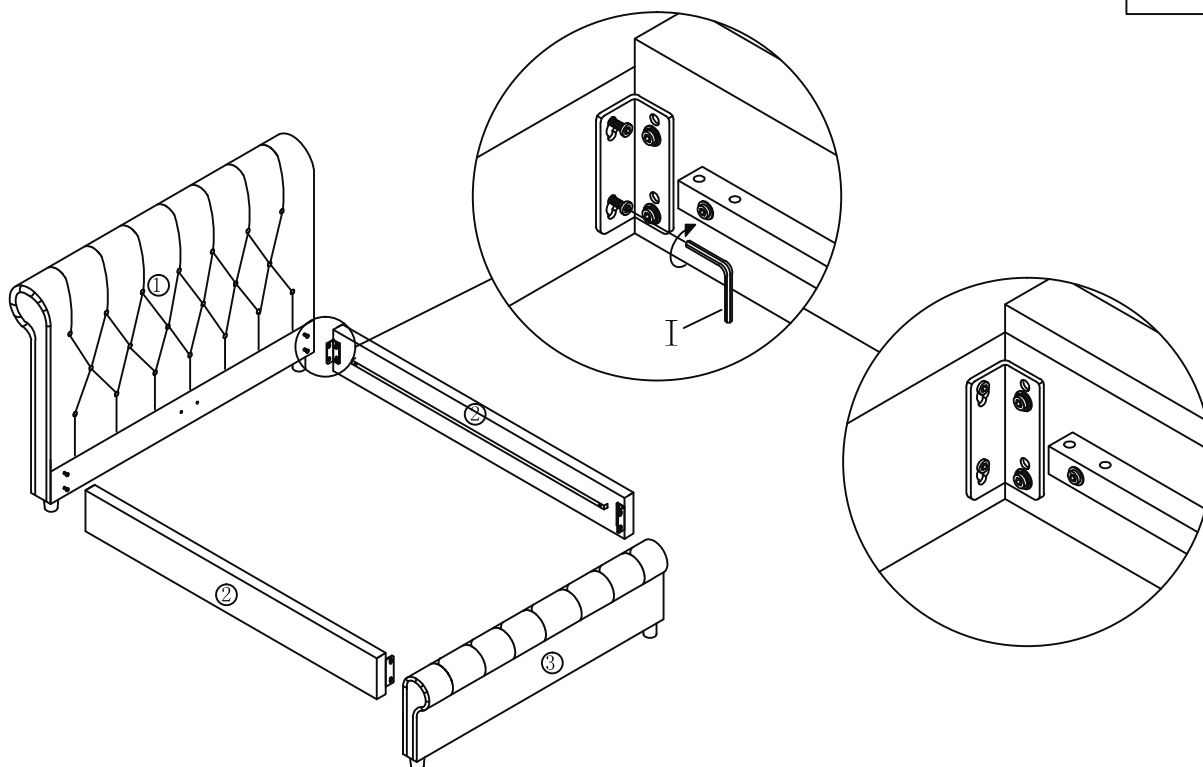


I	M5x40x100 1x
---	-----------------

5

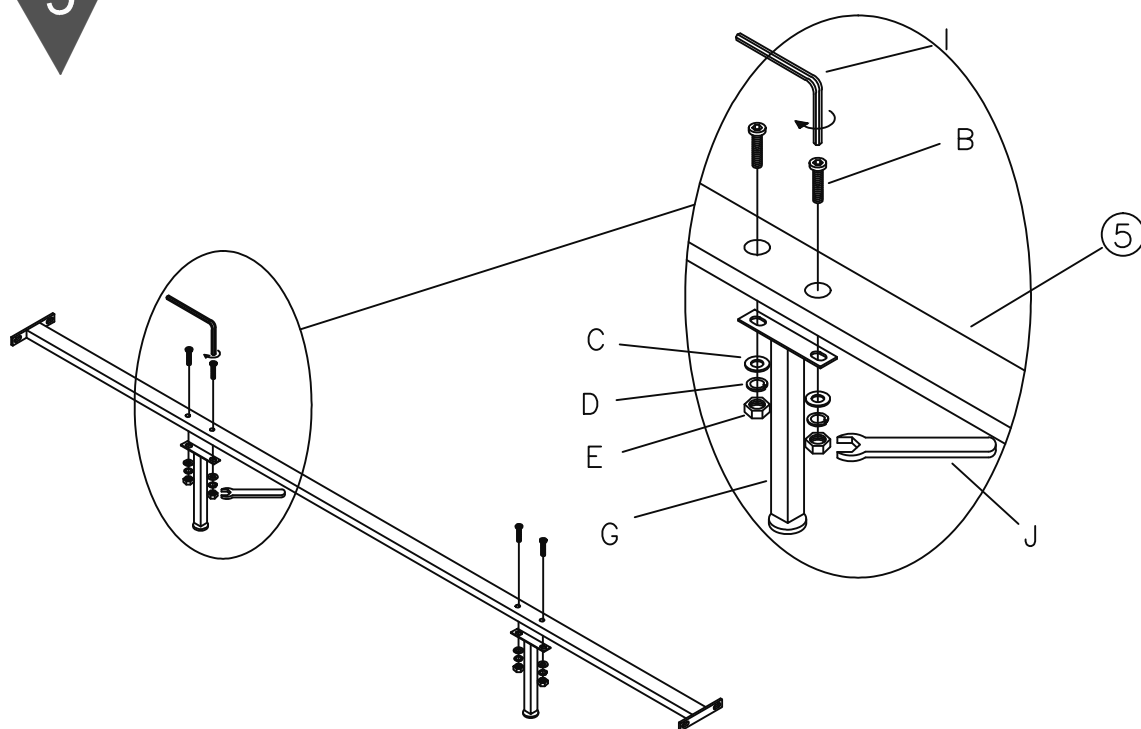

B	M8x40 4x
C	M8x19 4x
D	M8x13 4x
E	M8x13 4x
G	92x41x150 2x
I	M5x40x100 1x
J	85x26 1x

6

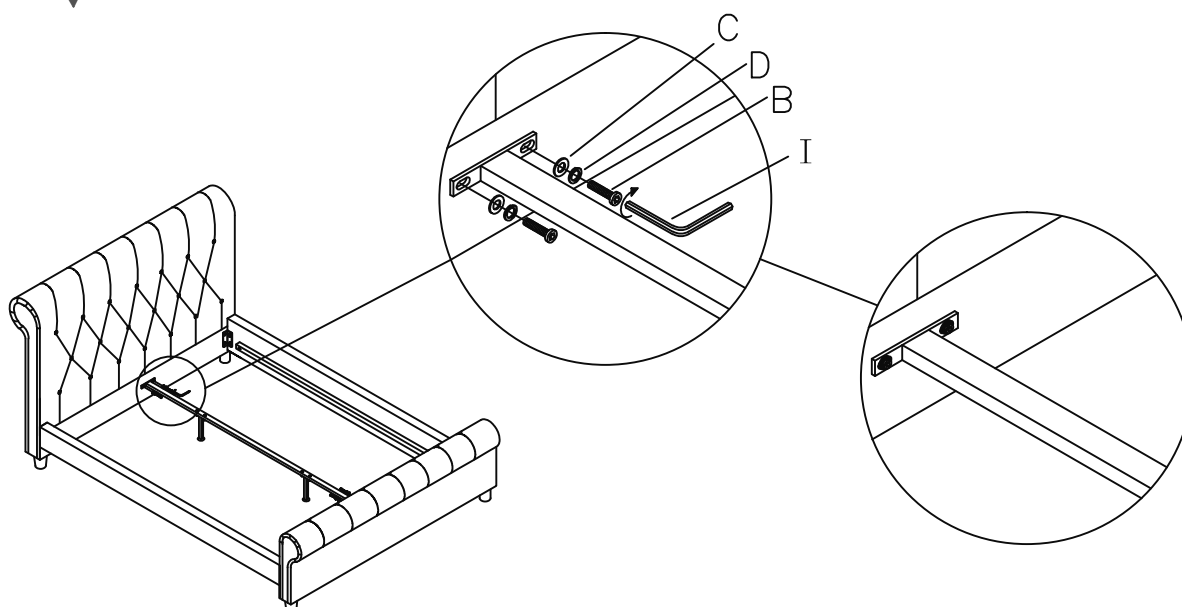

B	M8x40 4x
C	M8x19 4x
D	M8x13 4x
I	M5x40x100 1x

