


Art. Nr. 1989 6509

Art. Nr. 7464 5107

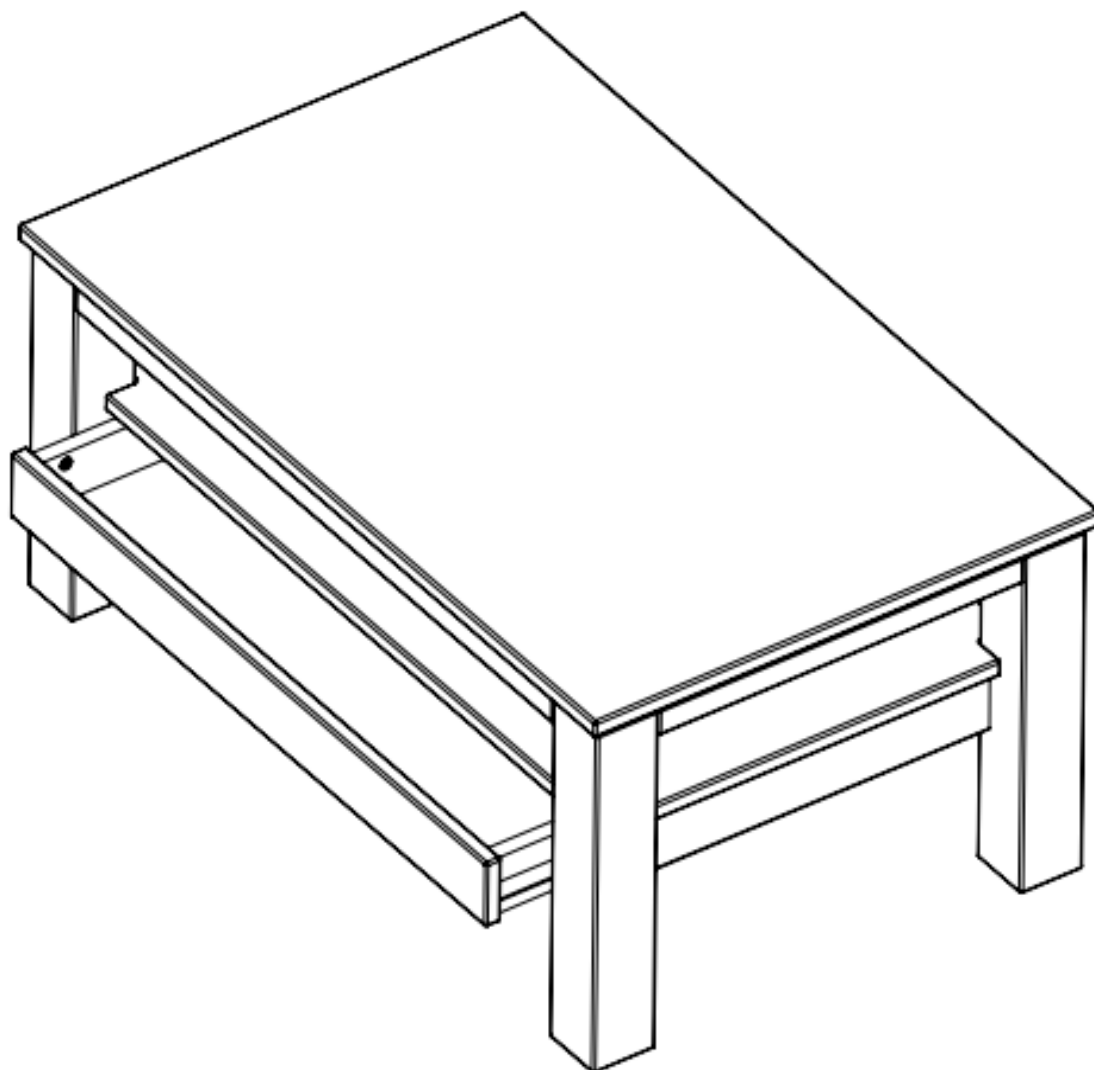

D Montageanleitung

FR Notice de montage

NL Handleiding voor de montage

CZ Montážní návod

HU Szerelési útmutató

TR Montaj talimatı

SLO Navodila za montažo

GB Assembly instructions

IT Istruzioni di montaggio



PL Instrukcja montażu

SK Návod na montáž


RO Instrucțiuni de montaj



RU Инструкция по монтажу

HR Shema montaže

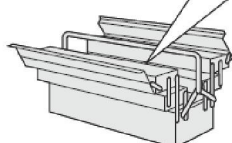
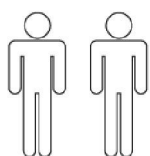


15 min

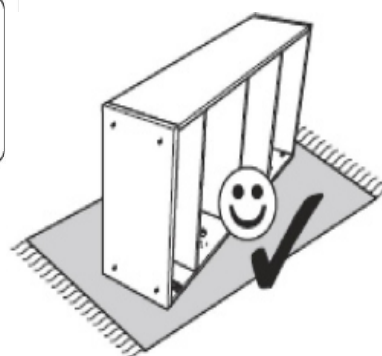


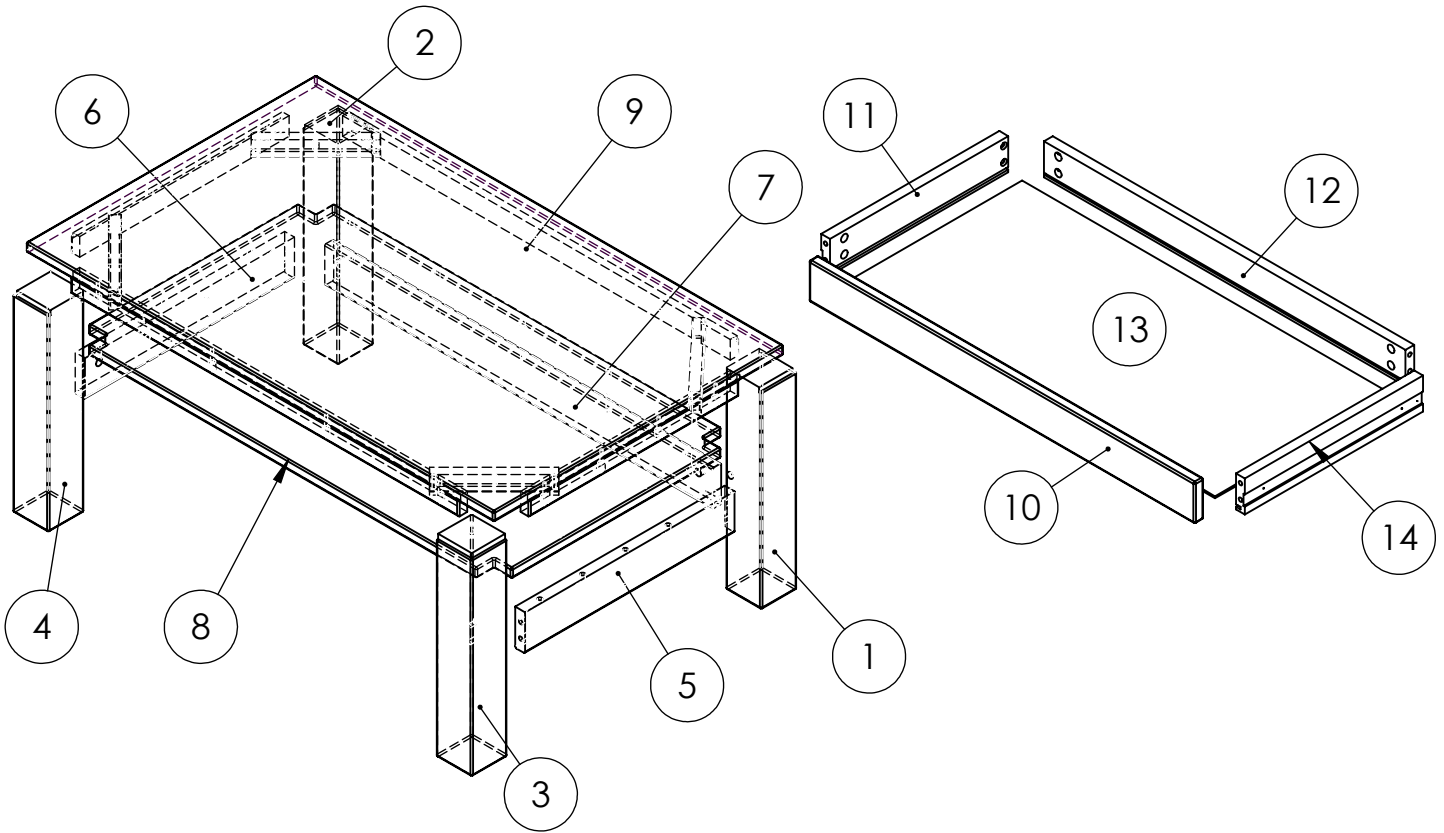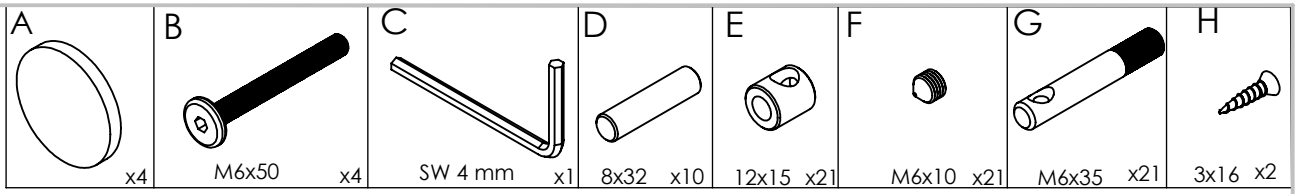

I **DETAIL A**

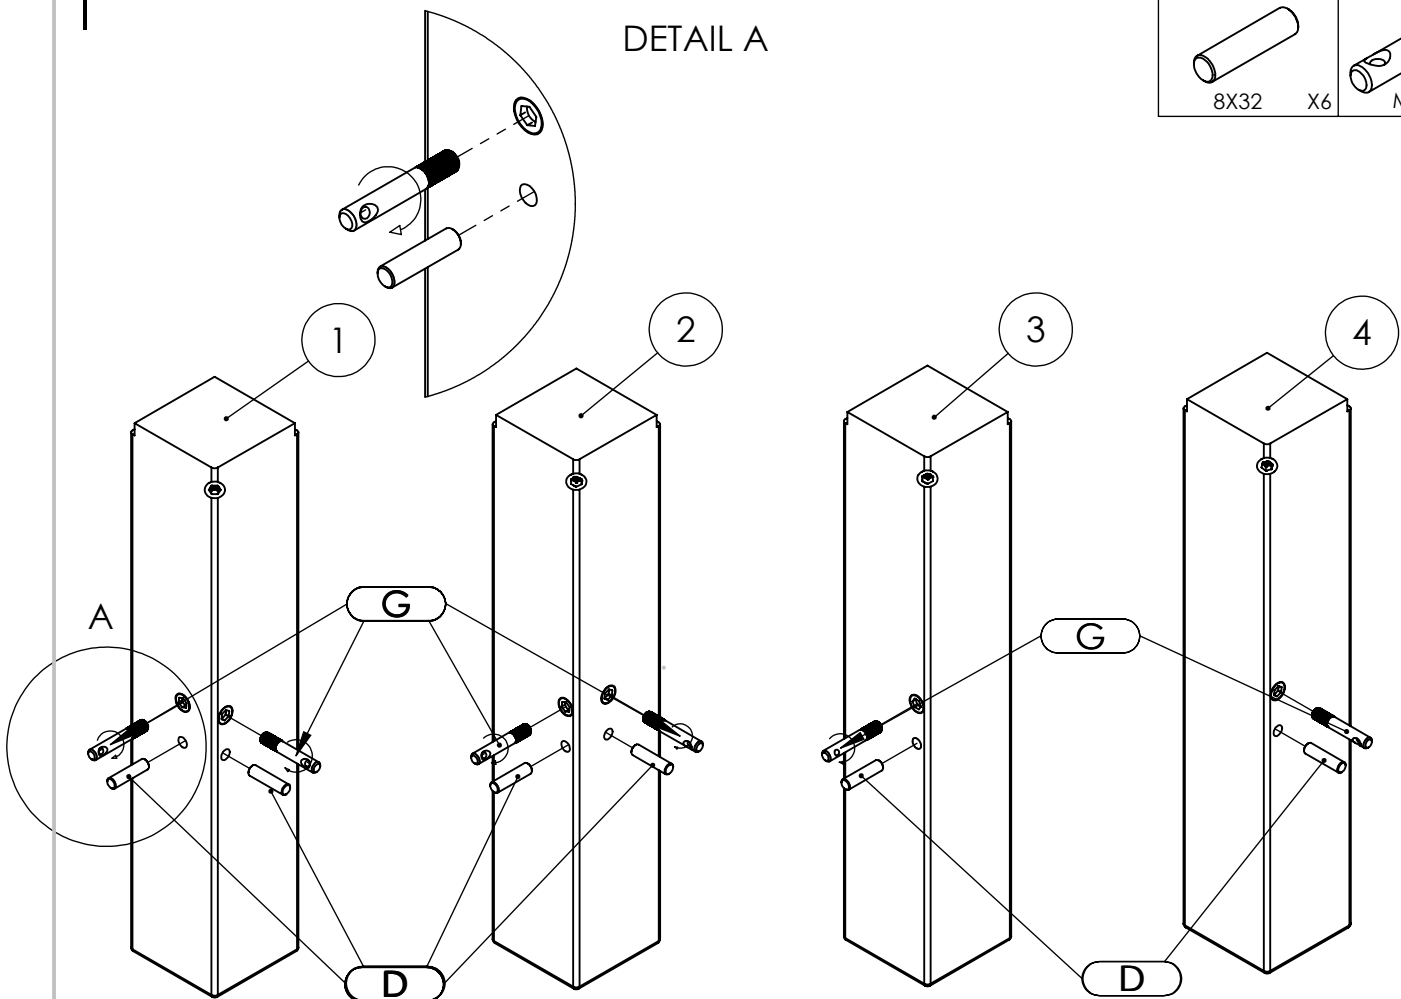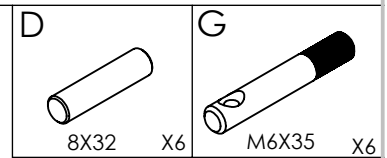


II

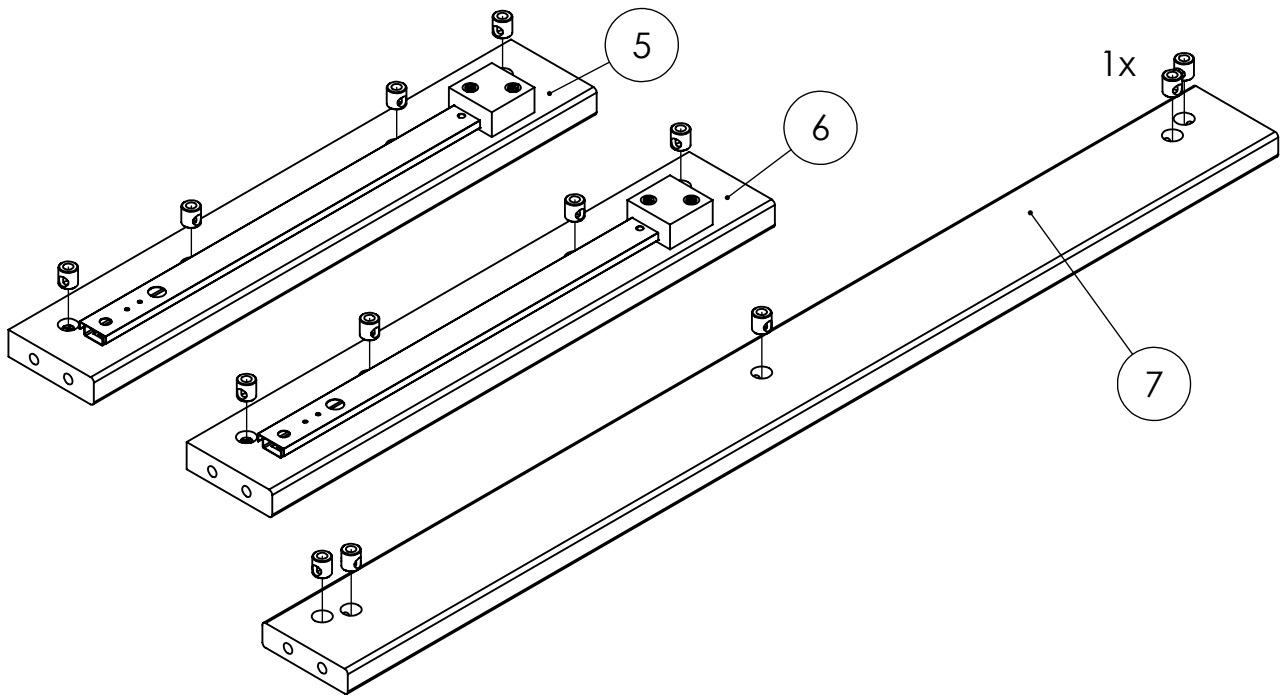

E
12x15 x13


III

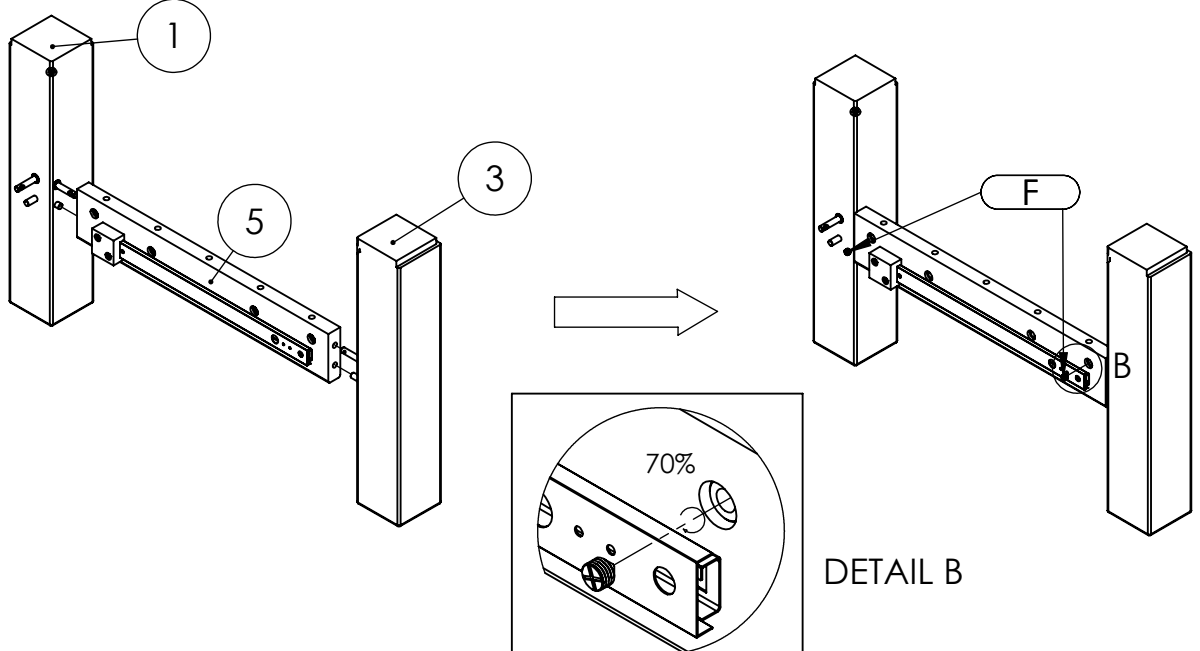

F
M6x10 x2

DETAIL B


IV

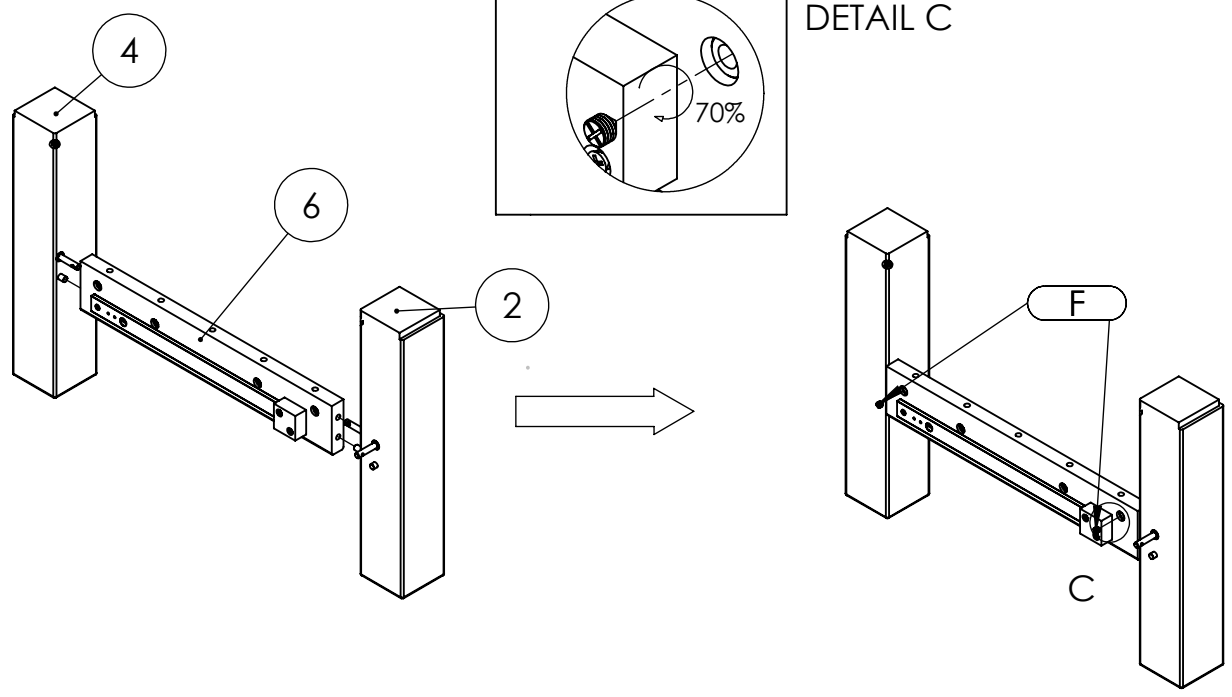

F
M6x10 x2

DETAIL C


V

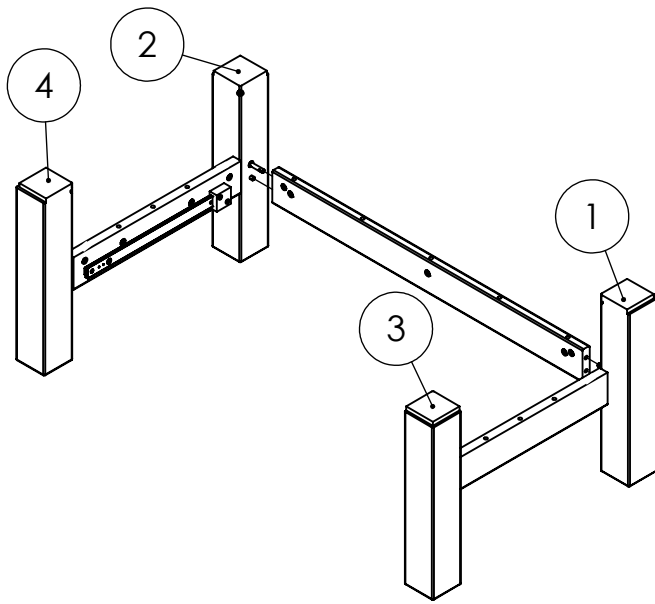

F




M6x10 x2

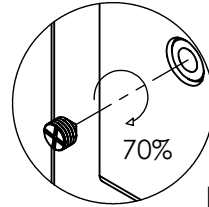


DETAIL D

VI

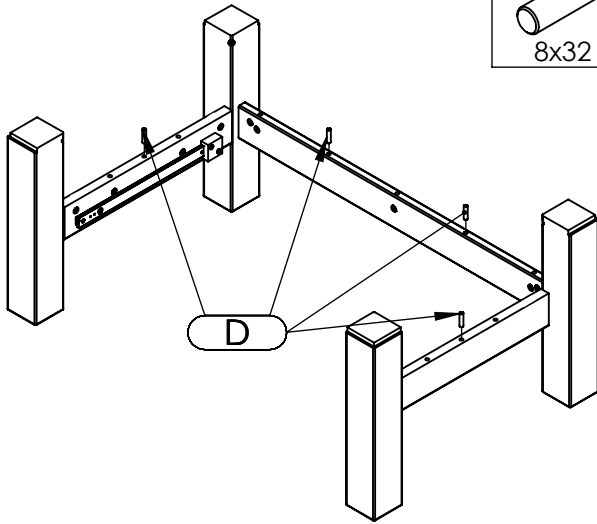


D




8x32 x4


VII

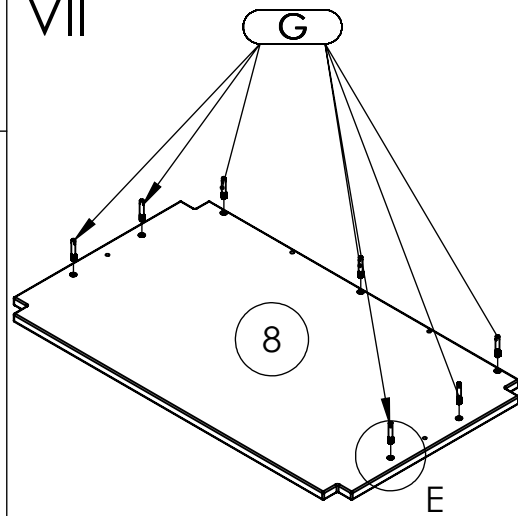

G




M6x35 x7

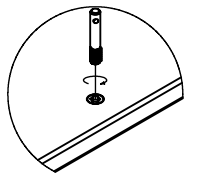

DETAIL E



VIII

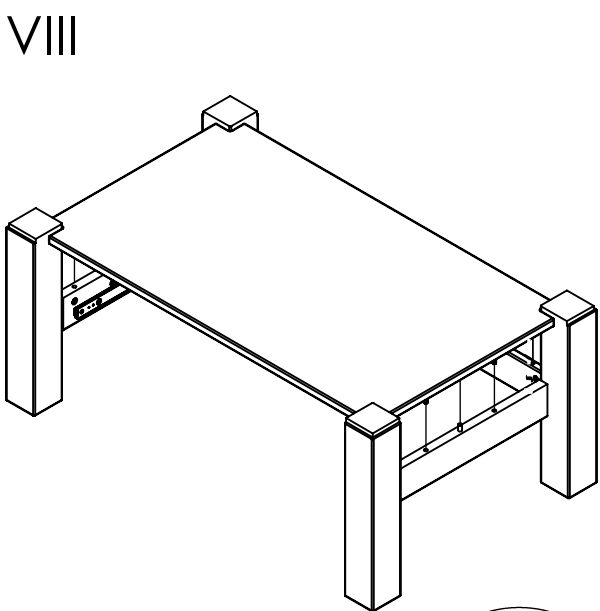

F







M6x10 x5

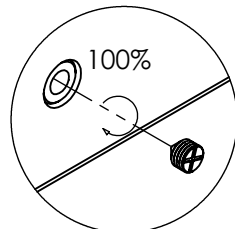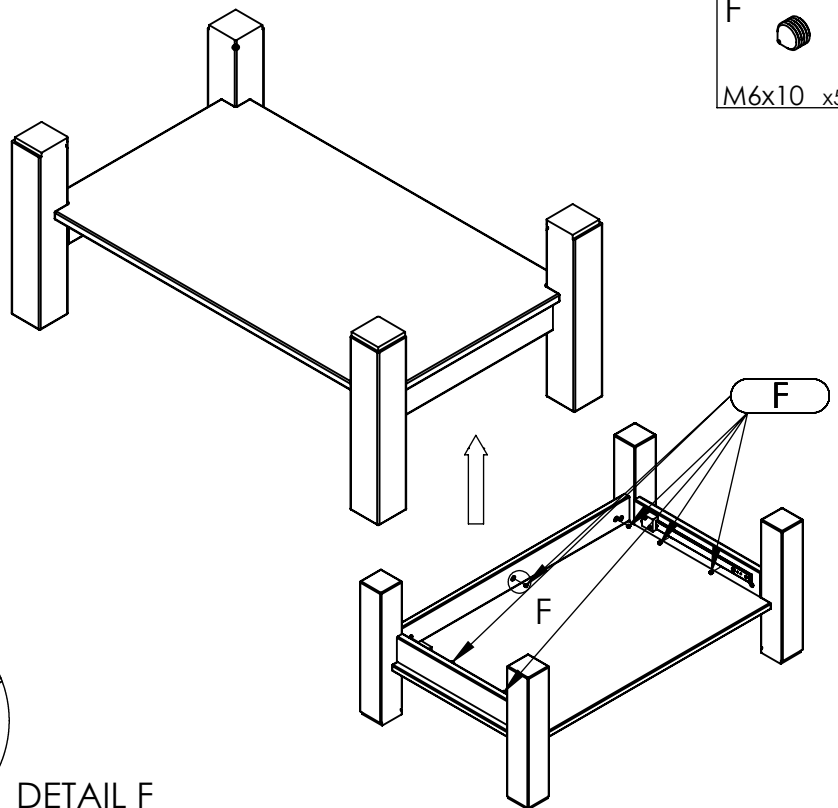


DETAIL F

IX






DETAIL G

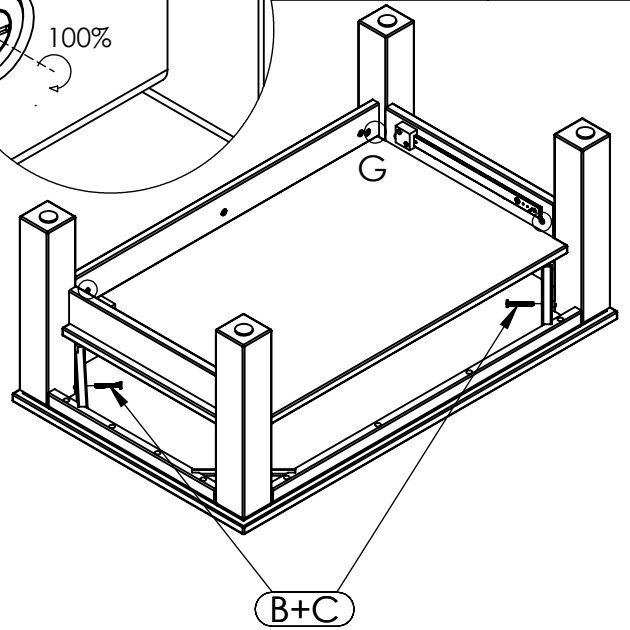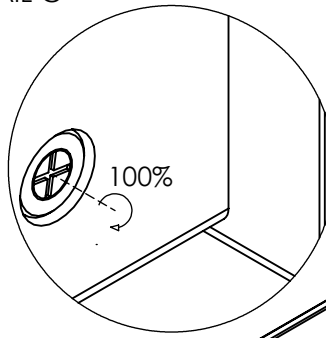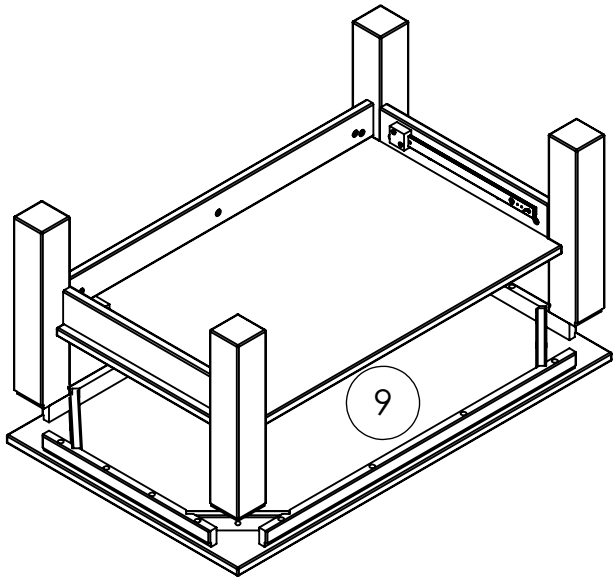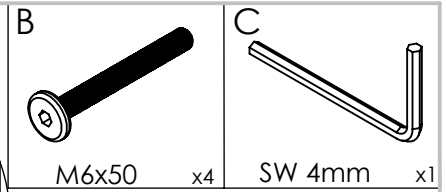

X




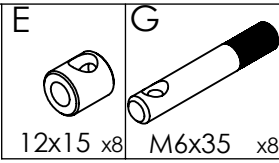


XI

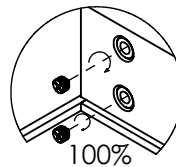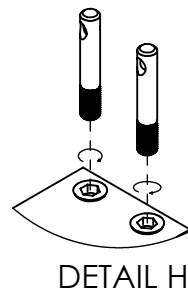
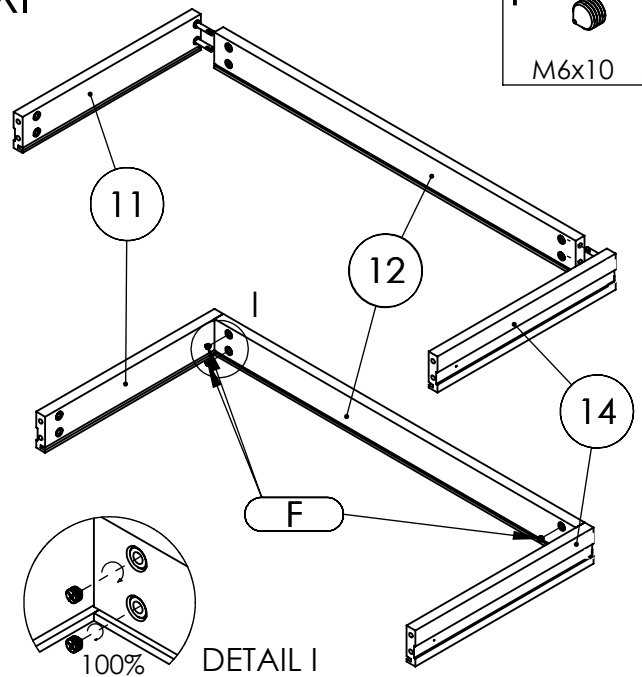
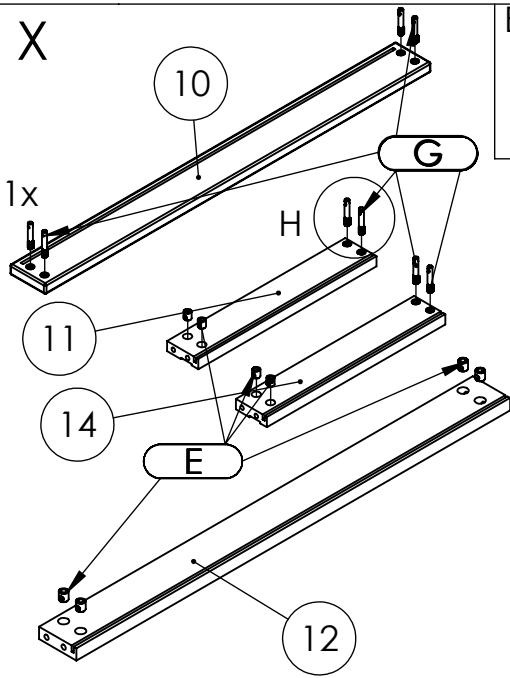
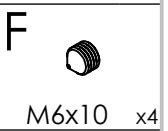


DETAIL I

XII

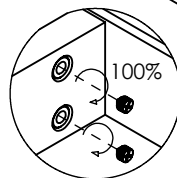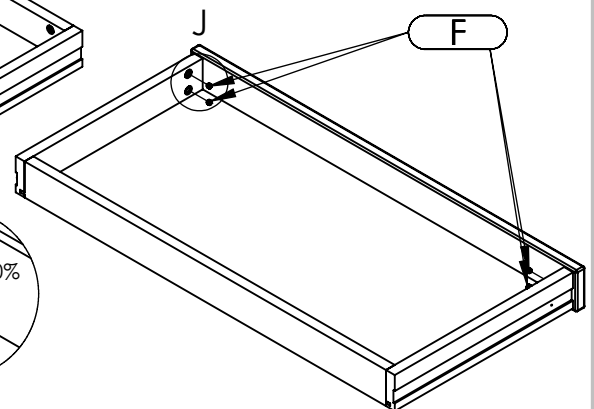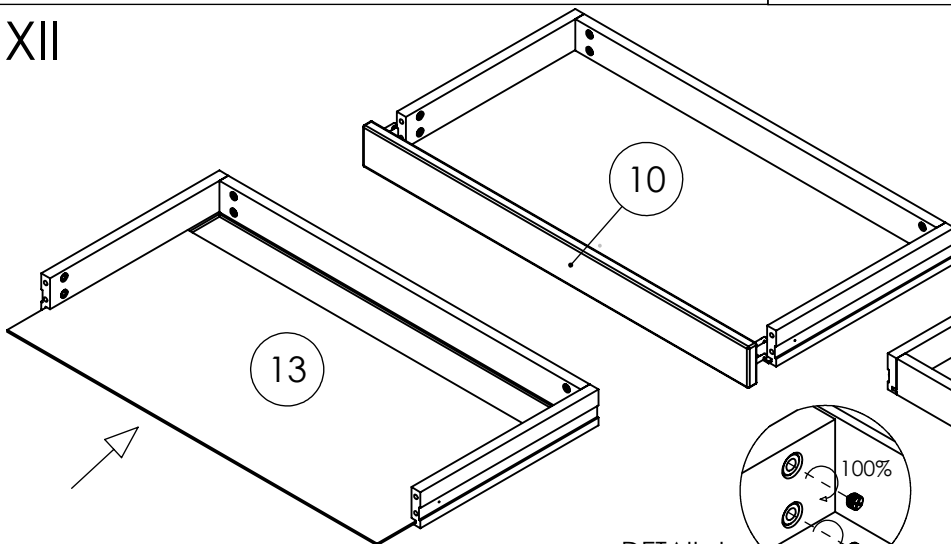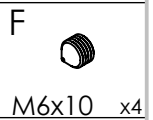

DETAIL J

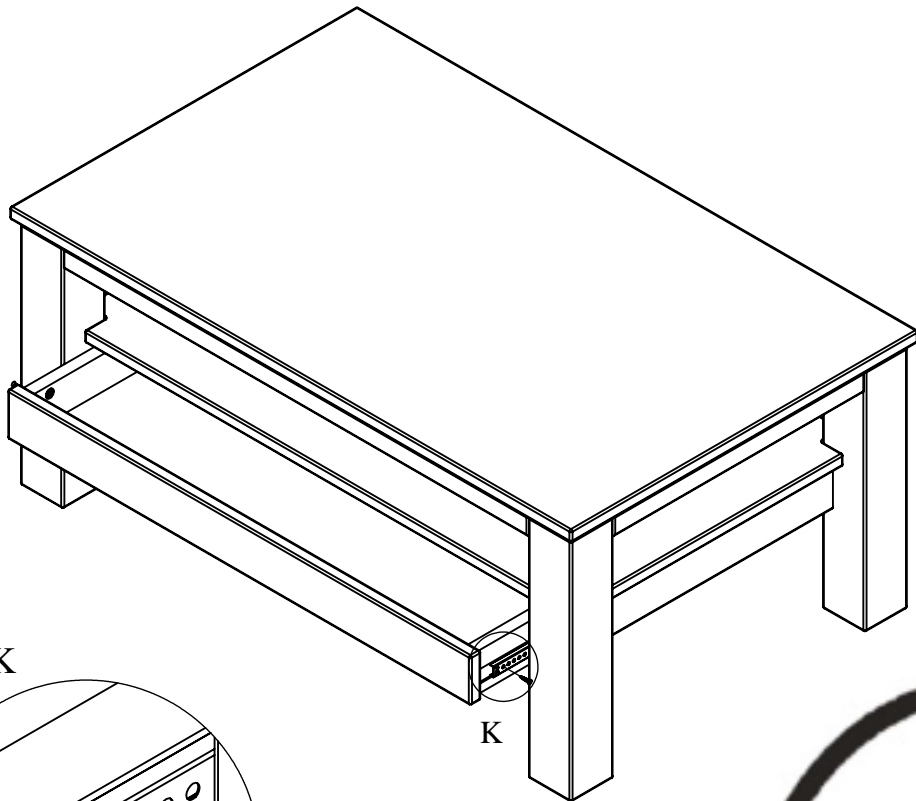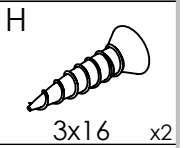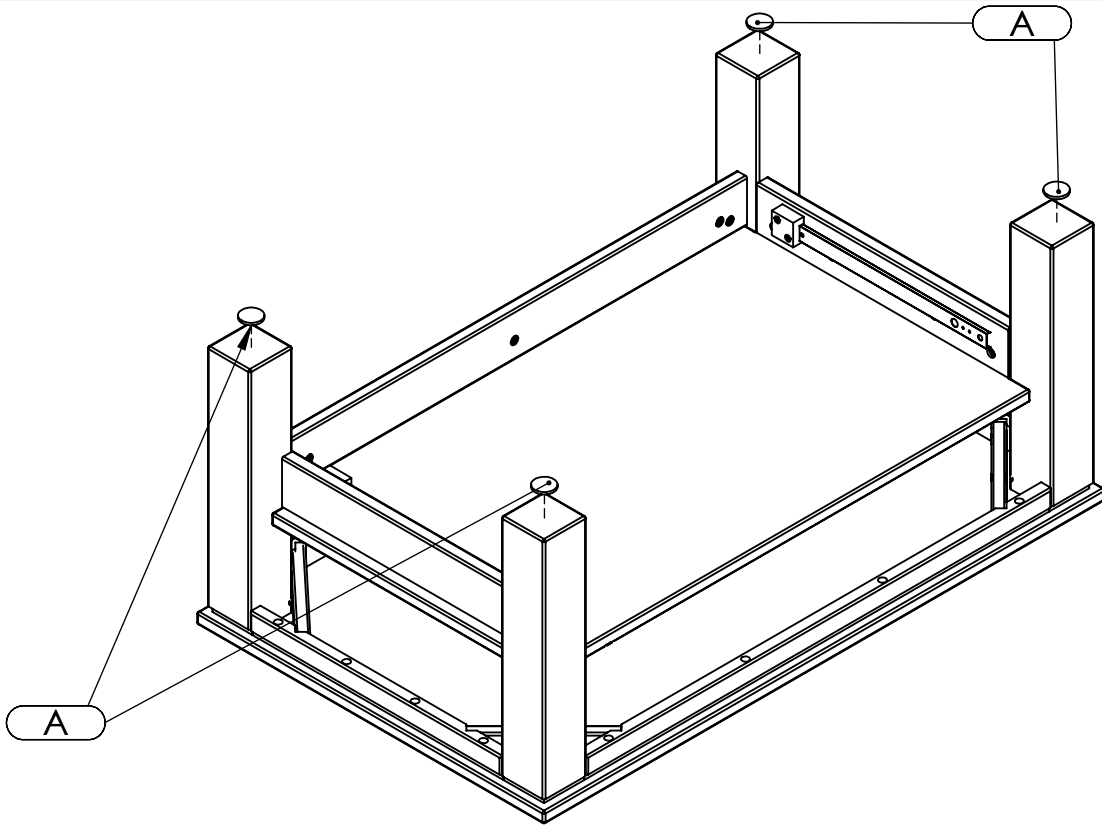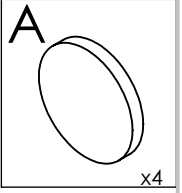

DETAIL K

