

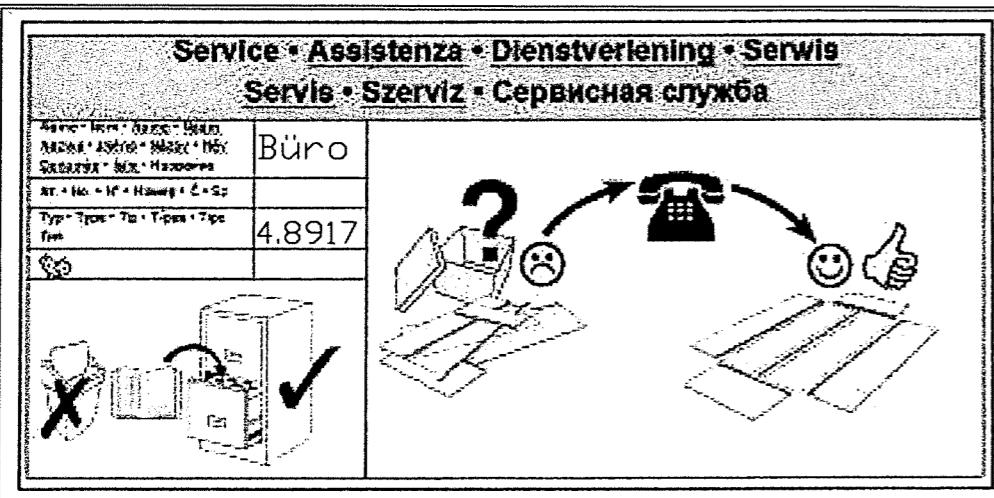



D Montageanleitung	GB Assembly Instructions	NL Handheling voor de montage	PL Instrukcja montażu	HU Szerelési útmutató	RO Instrucții de montaj
FR Notice de montage	IT Istruzioni di montaggio	CZ Montážní návod	SK Návod na montáž	TR Montaj talimatı	RU Инструкция по монтажу

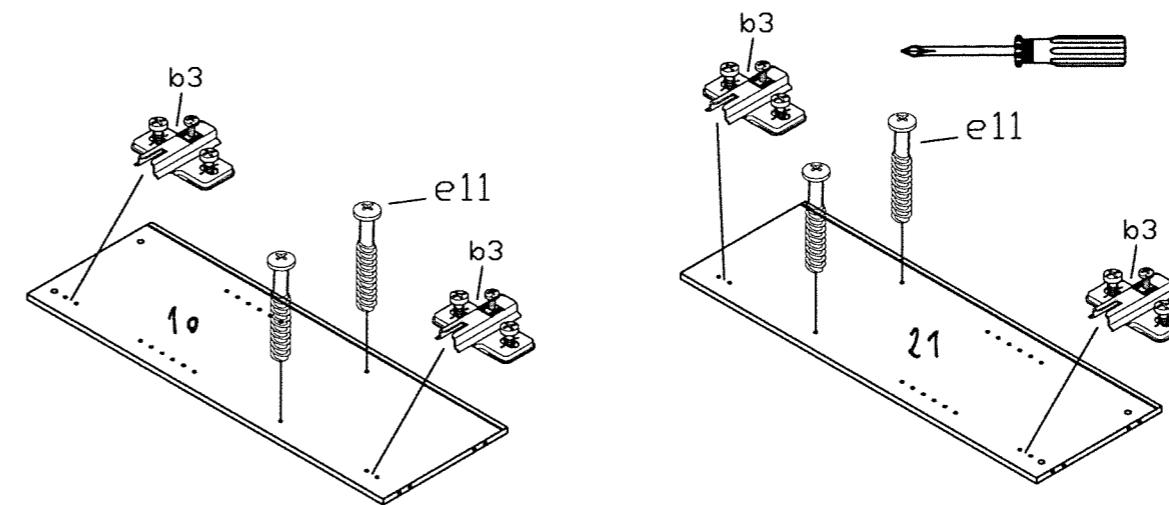

10.	ASL 1060x370x15mm	1
21.	ASR 1060x370x15mm	1
31.	BL 730x370x15mm	1
41.	BO 730x370x15mm	1
51.	ZB 699x335x15mm	1
6.	TR 1054x346x15mm	2
7.	EB 699x335x15mm	1
8.	RW 1072x711x3mm	1

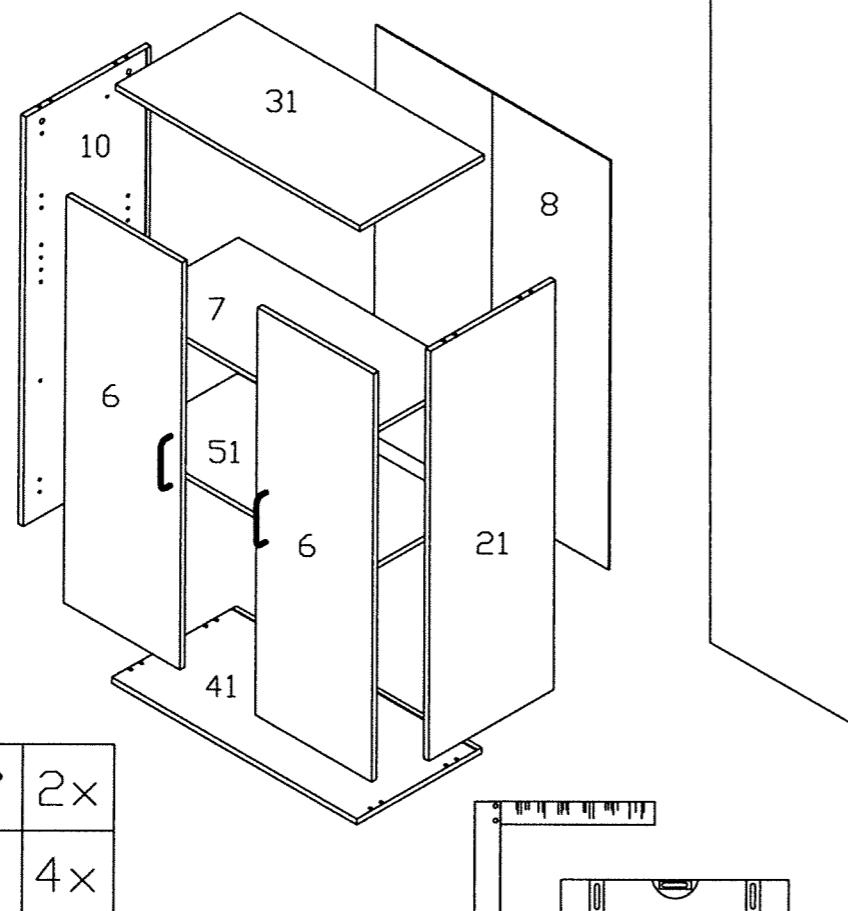

A7		15mm ↗	4x	
b3		KA37	4x	
e11		24,3	8x	
s6		4x27	4x	
v				2x

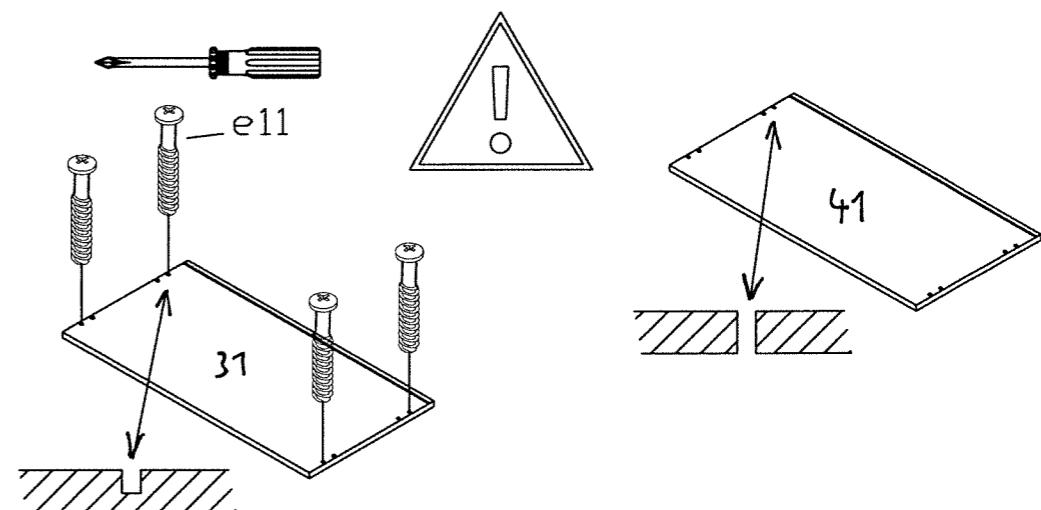

A7		15mm ↗	4x	r4		8x40	2x
b3		KA37	4x	s3		4x21	4x
e11		24,3	8x	s6		4x27	8x
f1			8x	t1		3,5x15	2x
k9		Blattschraube	2x	v			2x
l			4x	x		Möbelfuß	4x
n		8x30mm	8x	y14			8x
r			4x	z			10x

