

Artikel.-Nr.:








5015-VT

Montageanleitung.-Nr.:

MA1-00587


REPC-Nr.:			

BT1-00687 Colli 1/1


B01-110		B01-120		B01-39-16		B01-90	
8x	3,5x35	10x	3,5x45	24x	5x16	2x	3,5x20
B02-170		B02-174		B05-260			
2x		4x		1x			

BT1-00001 Colli 1/1


B05-265	
1x	Pflegeanweisung





Colli 1/1

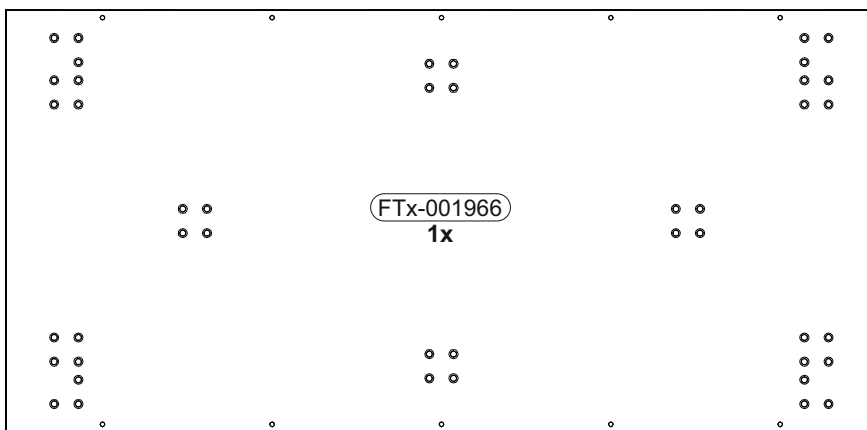


1152x558





1152x44

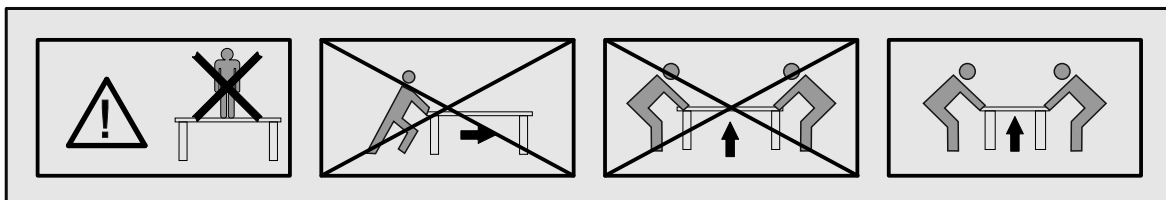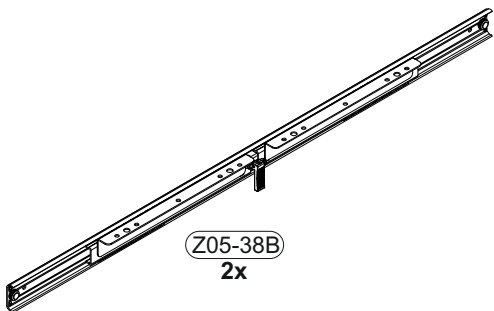




1

B01-39-16	
12x	5x16

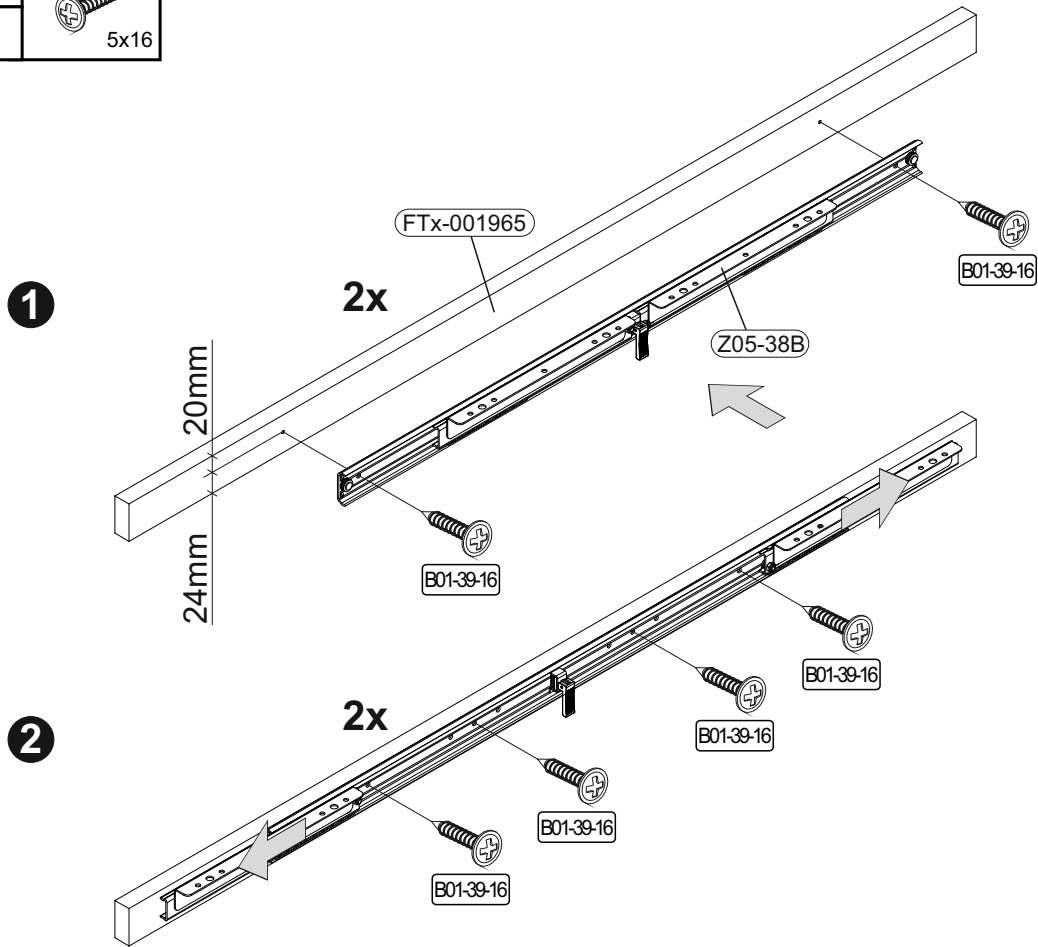



2

B01-120	
10x	3,5x45

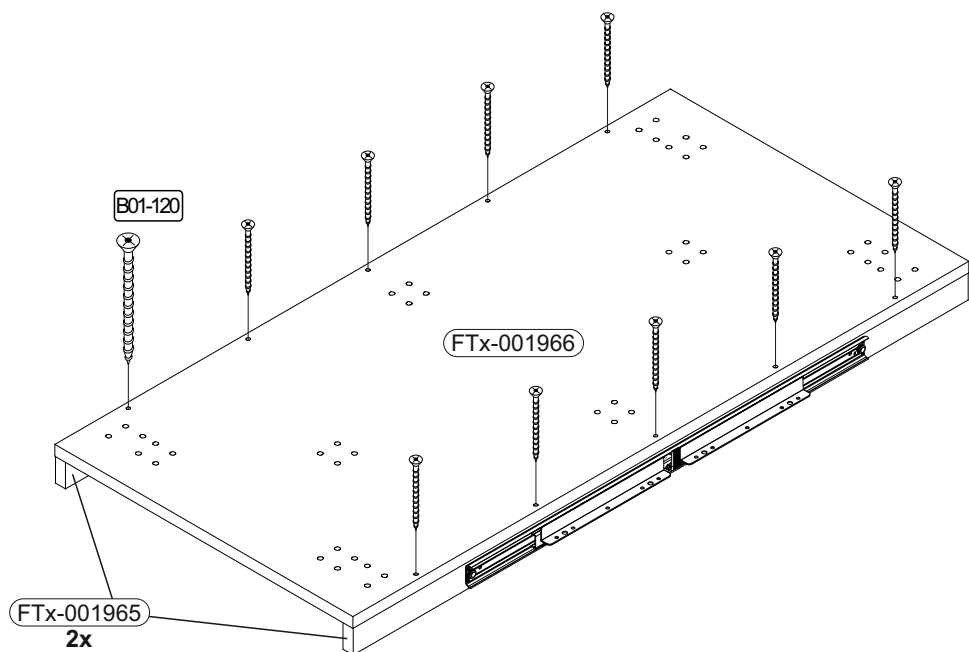


NEW ATLANTA

3



B01-110	
8x	3,5x35
B02-174	
4x	




180°

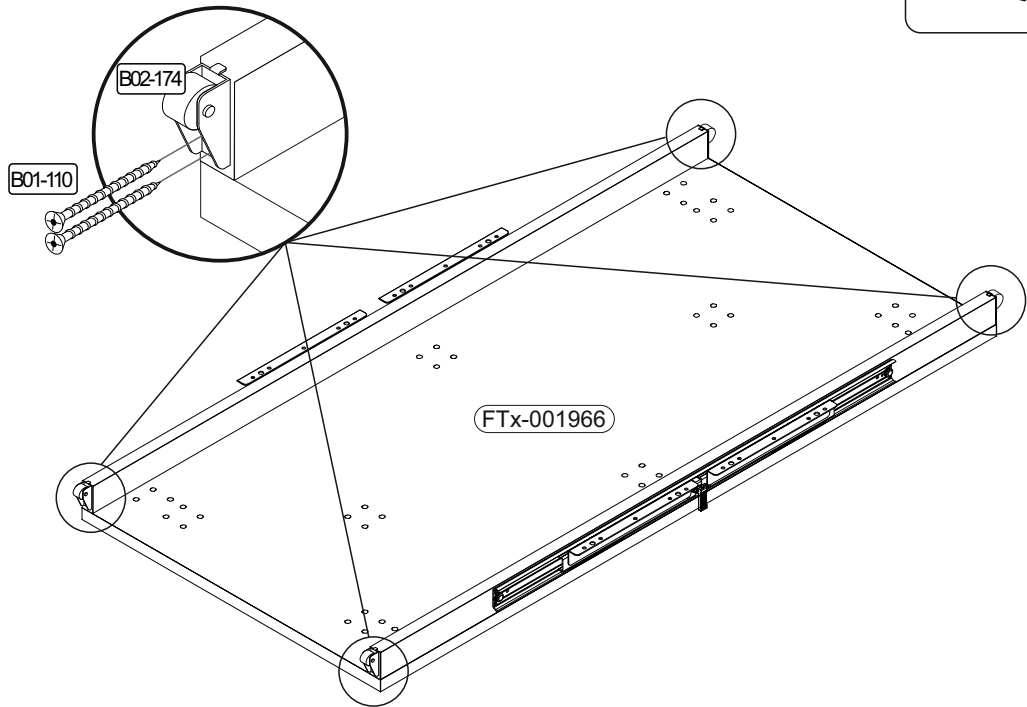



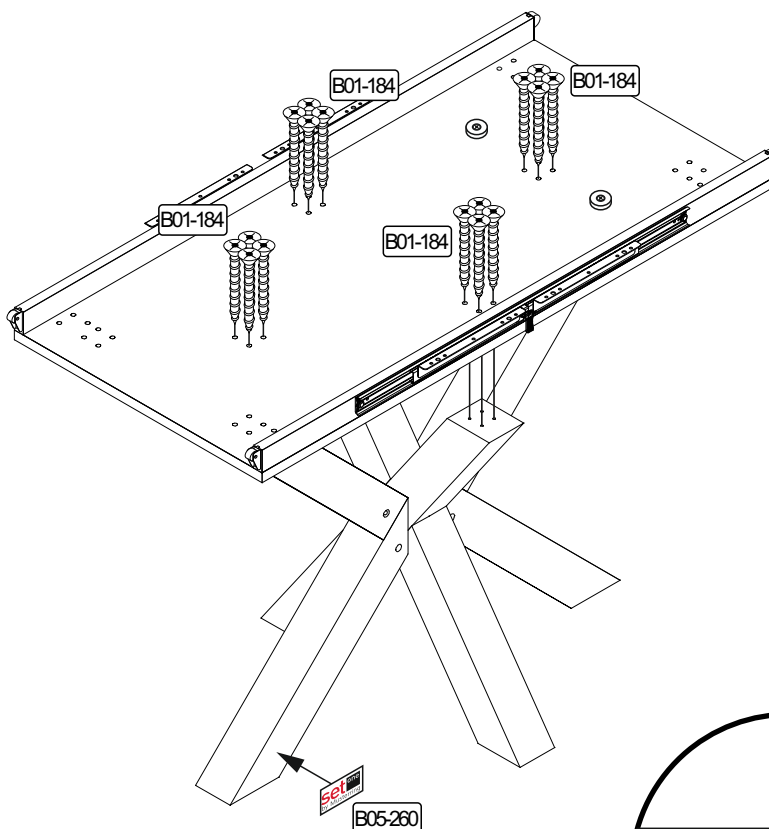

4

B01-90		B02-170	
2x	3,5x20	2x	

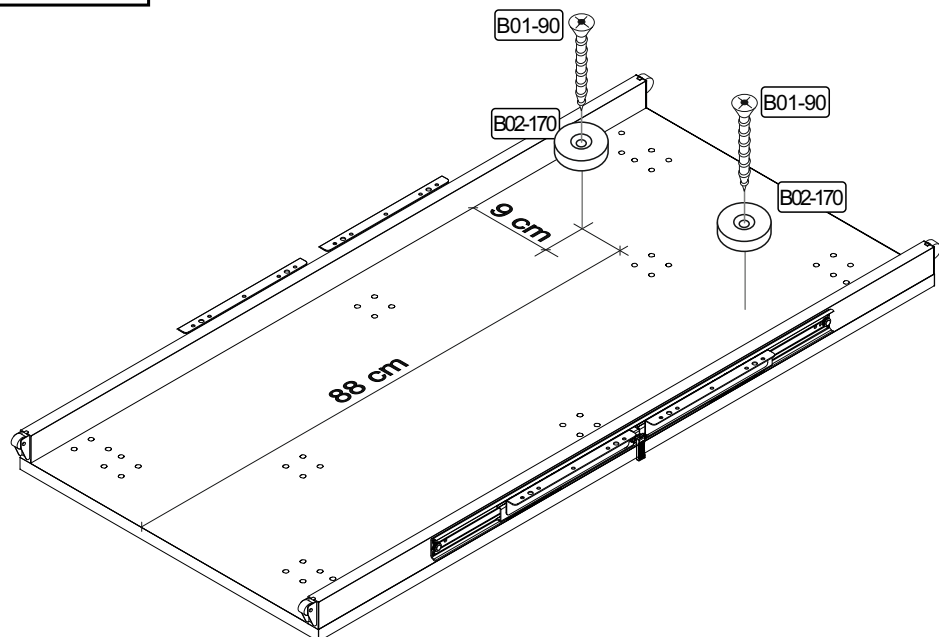



5


B01-184	
16x	6x70
B05-260	
1x	set one by Musterring



Art.-Nr. :
0784_Stern P2


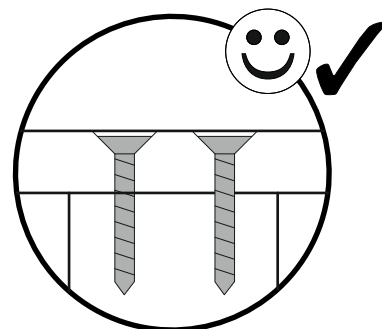


B01-184	
16x	6x70

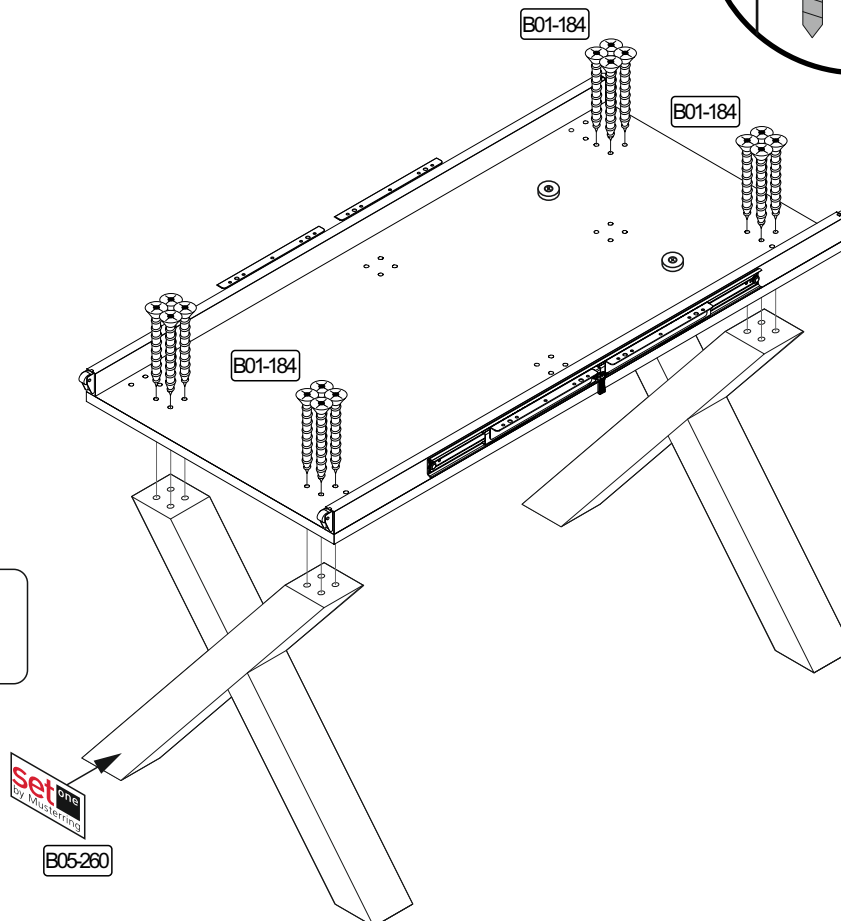


Art.-Nr. :
0547_X P2


NEW ATLANTA

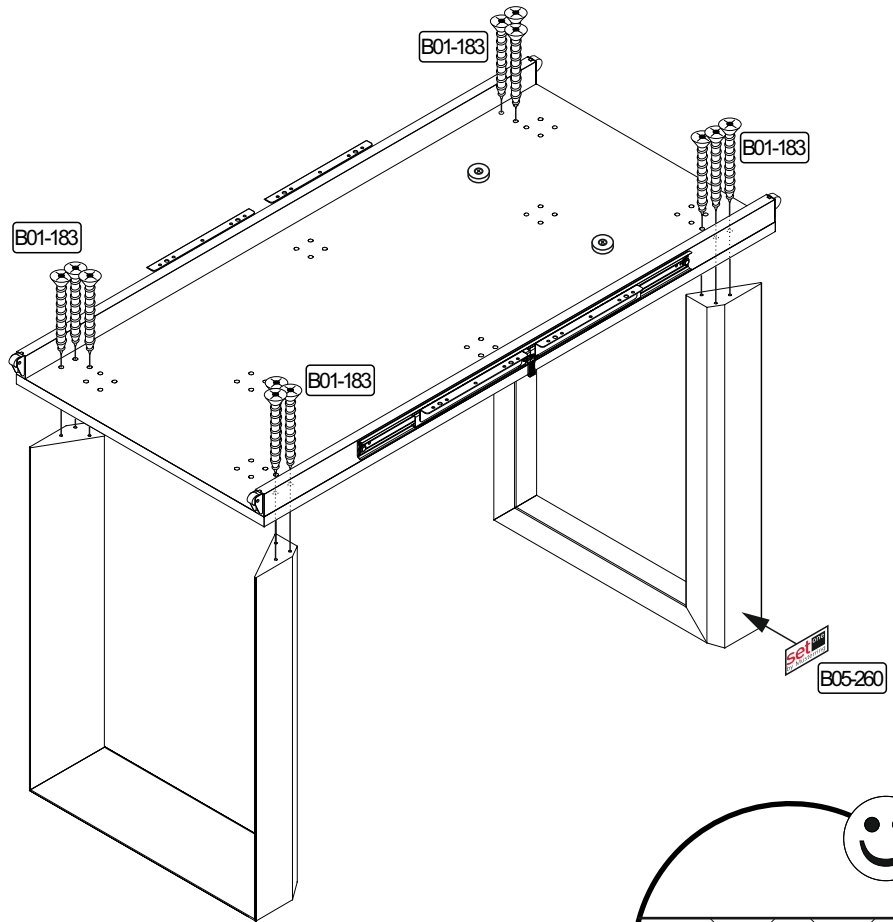


Art.-Nr. :
0515-U

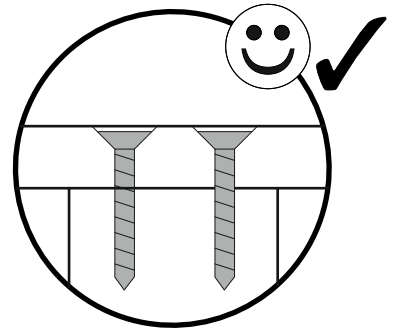


**Art.-Nr. :
5015-TP-170-220**

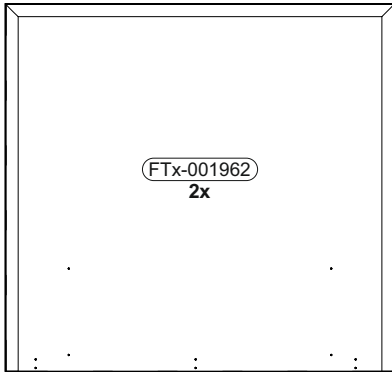


900x850

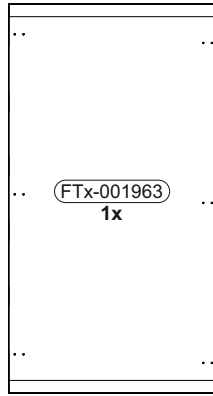


900x484

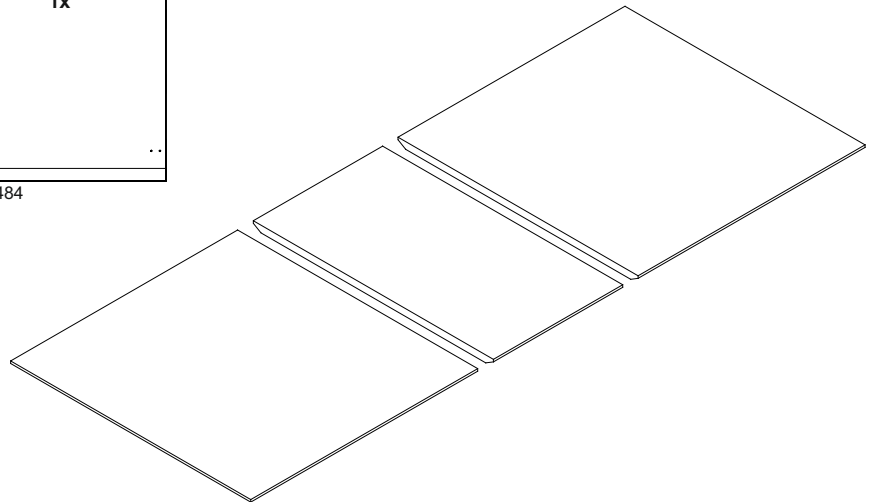

**Art.-Nr. :
5015-TP-190-240**

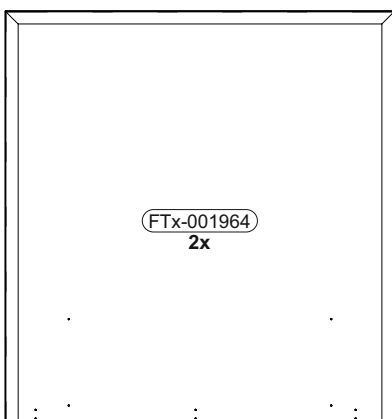

900x950

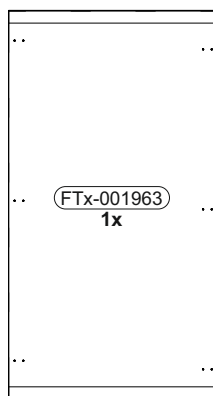

900x484

