



(D) Videounterstützte Montageanleitung

(TR) Video destekli kurulum talimatları

(RU) инструкция по монтажу с помощью видеосигнала

(RO) Instrucțiuni de instalare acceptate video

(GB) Video-assisted assembly instructions

(IT) Istruzioni di montaggio video-assistite

(CZ) Instalační pokyny podporované videem



(PL) Instrukcje montażu wspomagane sygnałem wizyjnym

(FR) Instructions de montage assistées par vidéo

(NL) Video-ondersteunde montage-instructies

(HU) Video-támogatott telepítési utasítások







(SK) Inštalčné pokyny podporované videom

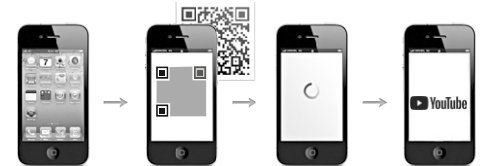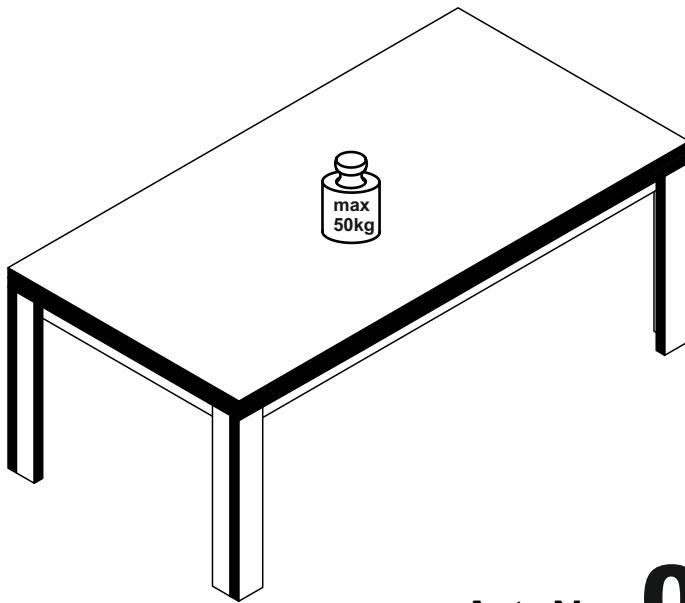

Art.-Nr.: **0560_180-280**
Esstisch

REPC-Nr.:







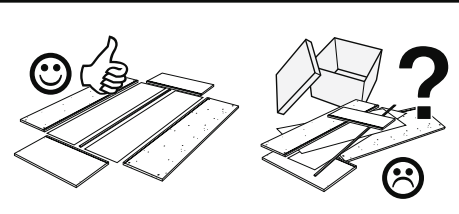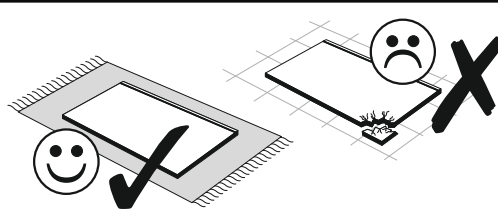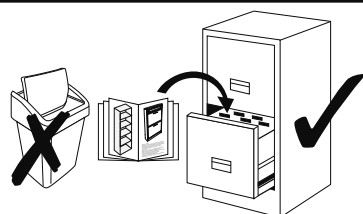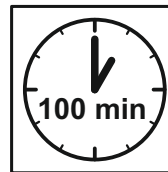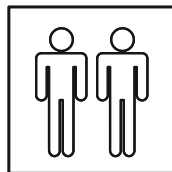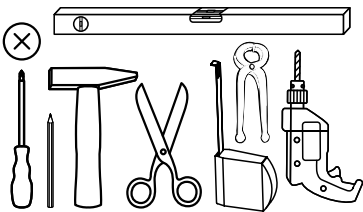



Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба



SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>




BT1-00269 Colli 2/2

B01-10 4x  6.3x50	B01-90 8x  3.5x20	B01-172 34x  4.5x40	B01-174 4x  4.5x50
B02-10 8x  h=12mm	B02-20 8x 	B02-90 4x  6x30	B05-130 1x 
B05-190 8x 	B01-355 4x  M6		





▶ SCAN ME



BT1-00267 Colli 2/2

B01-300-12 4x  M6x65	B02-107 8x  8x70	B05-20 8x 
--	--	---



BT1-00268 Colli 2/2


B01-122 8x  4x13	B02-174 4x 
--	--

BT1-00010 Colli 2/2






B01-30 4x  3x16	B02-179 4x 
---	--

BT1-00270 Colli 1/2





B01-90 32x  3.5x20	B08-50 8x 
--	---











Colli 1/2

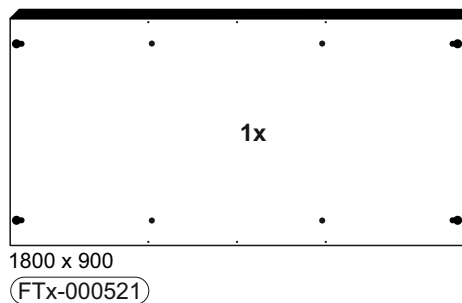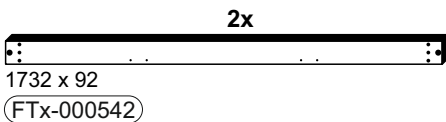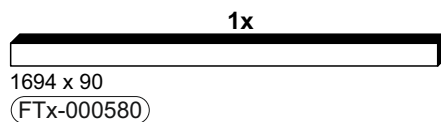



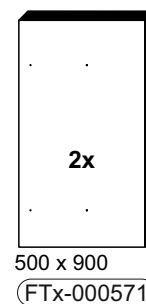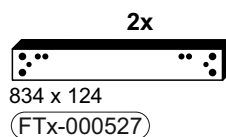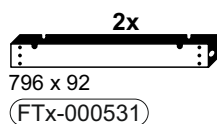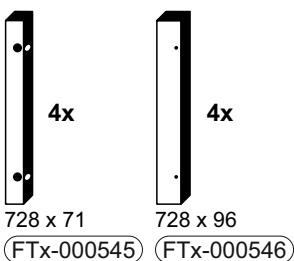





Colli 2/2

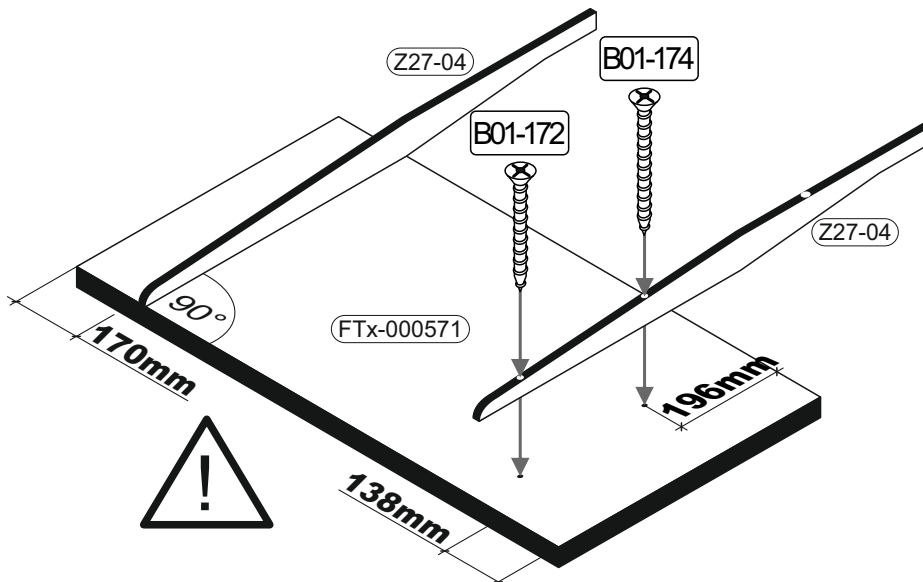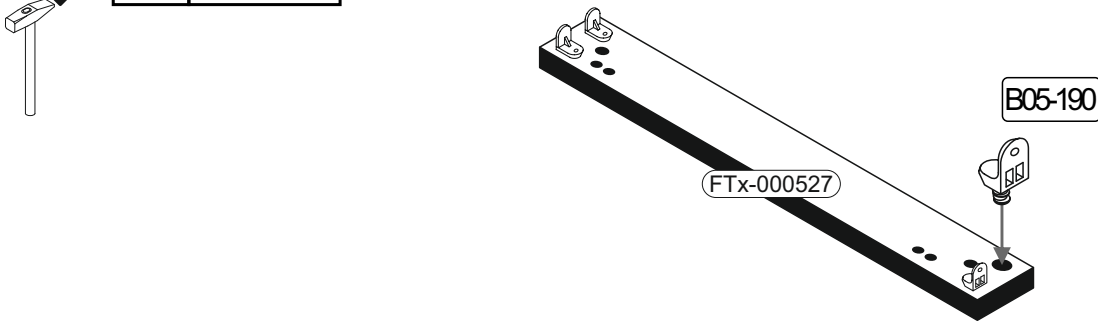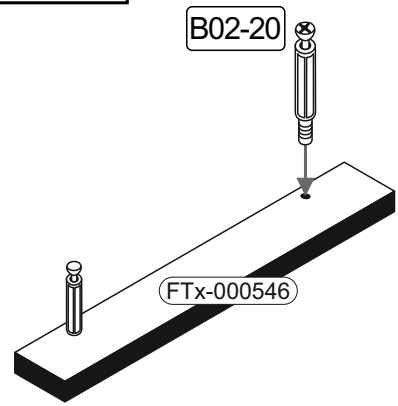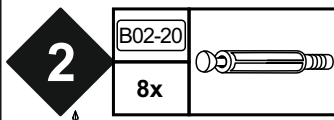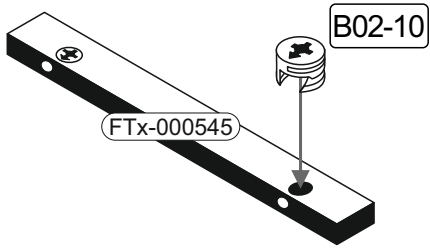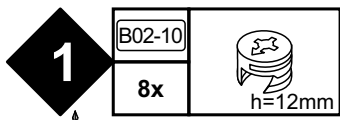




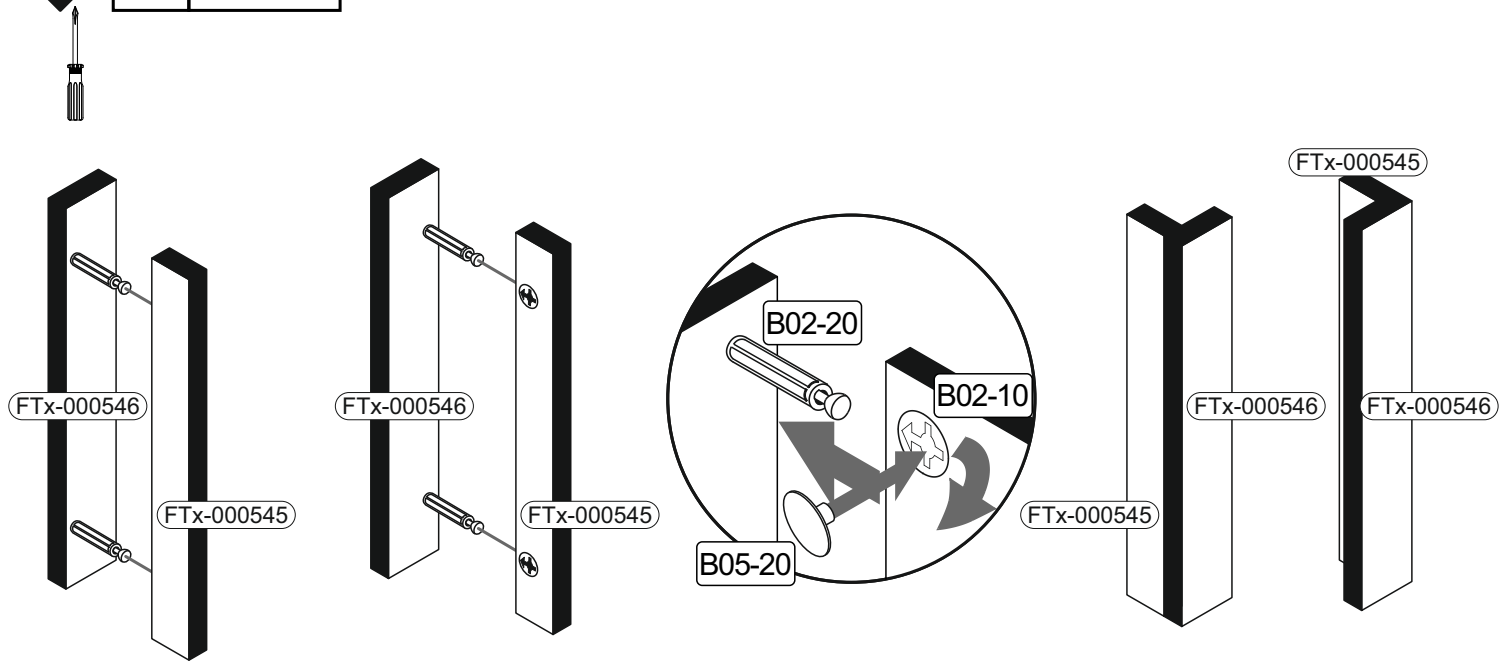
5






B01-30		B02-179		B01-355	
4x	3x16	4x		4x	M6
B05-130		B01-172			
1x		6x	4,5x40		

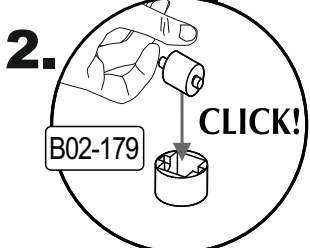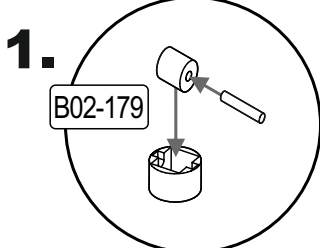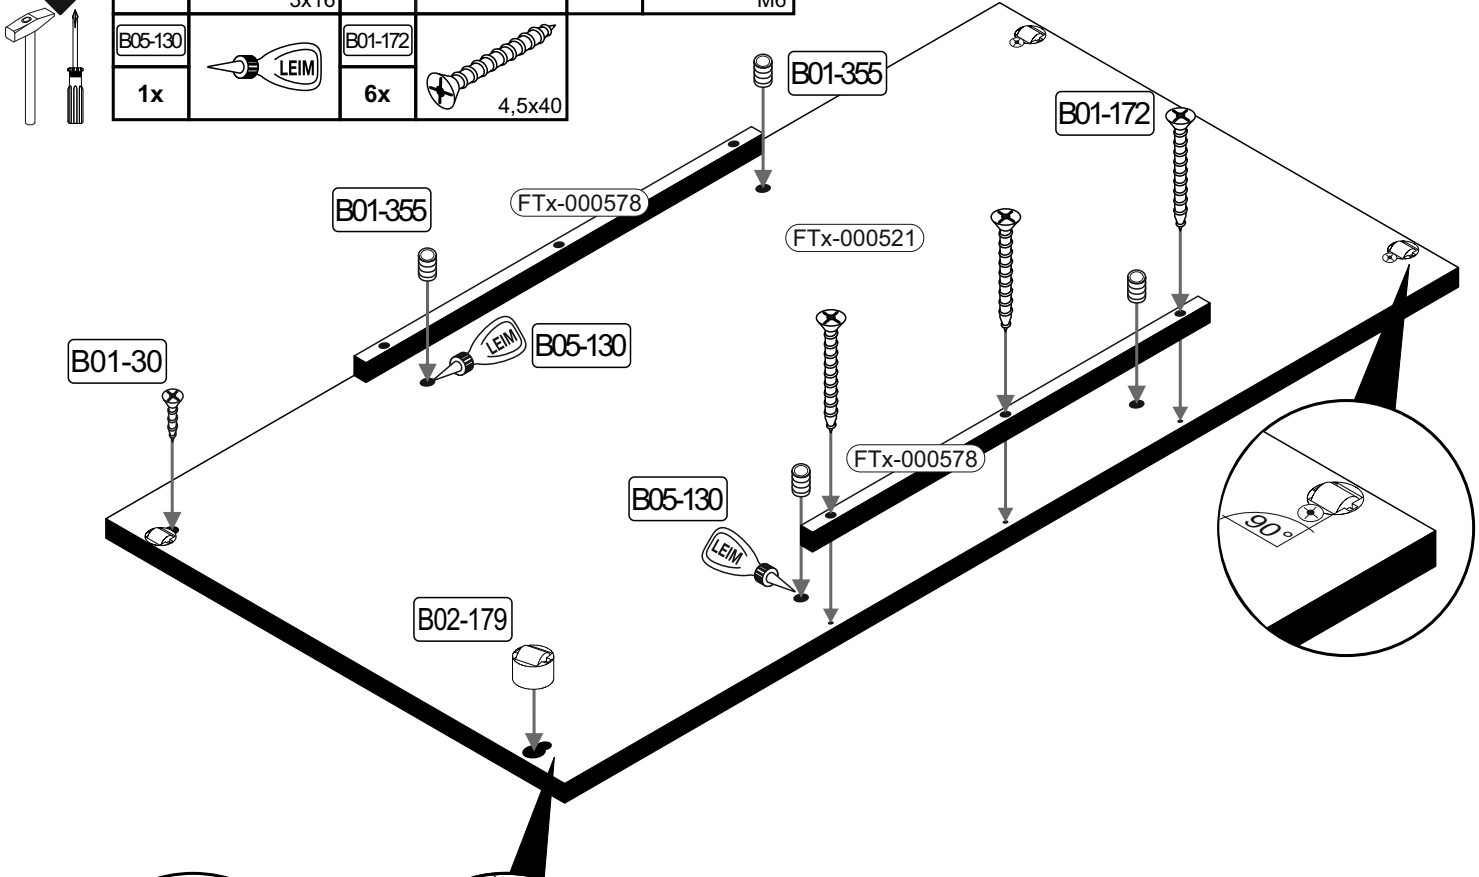



6


B05-20	
8x	

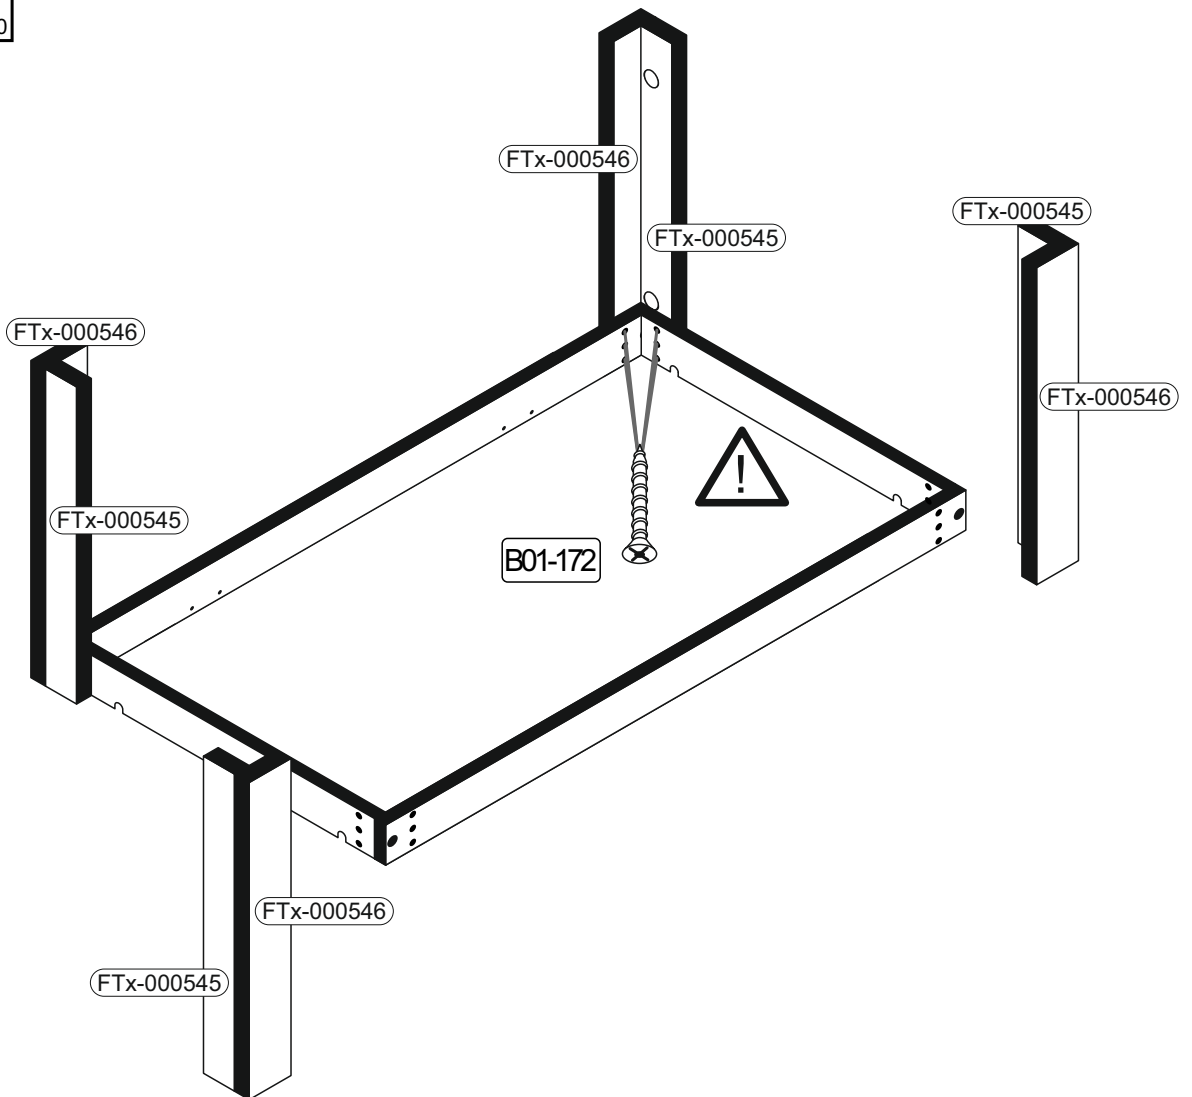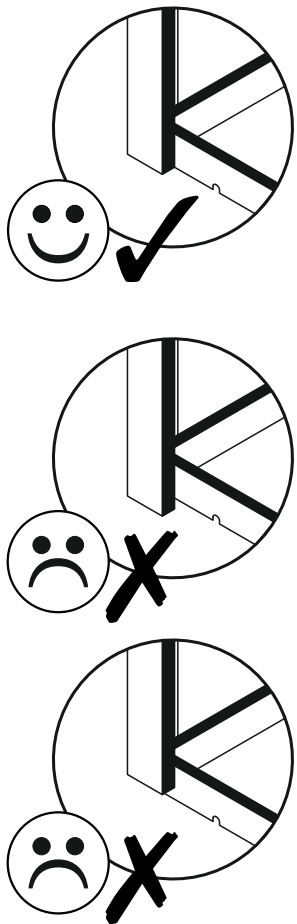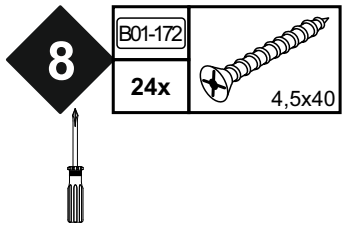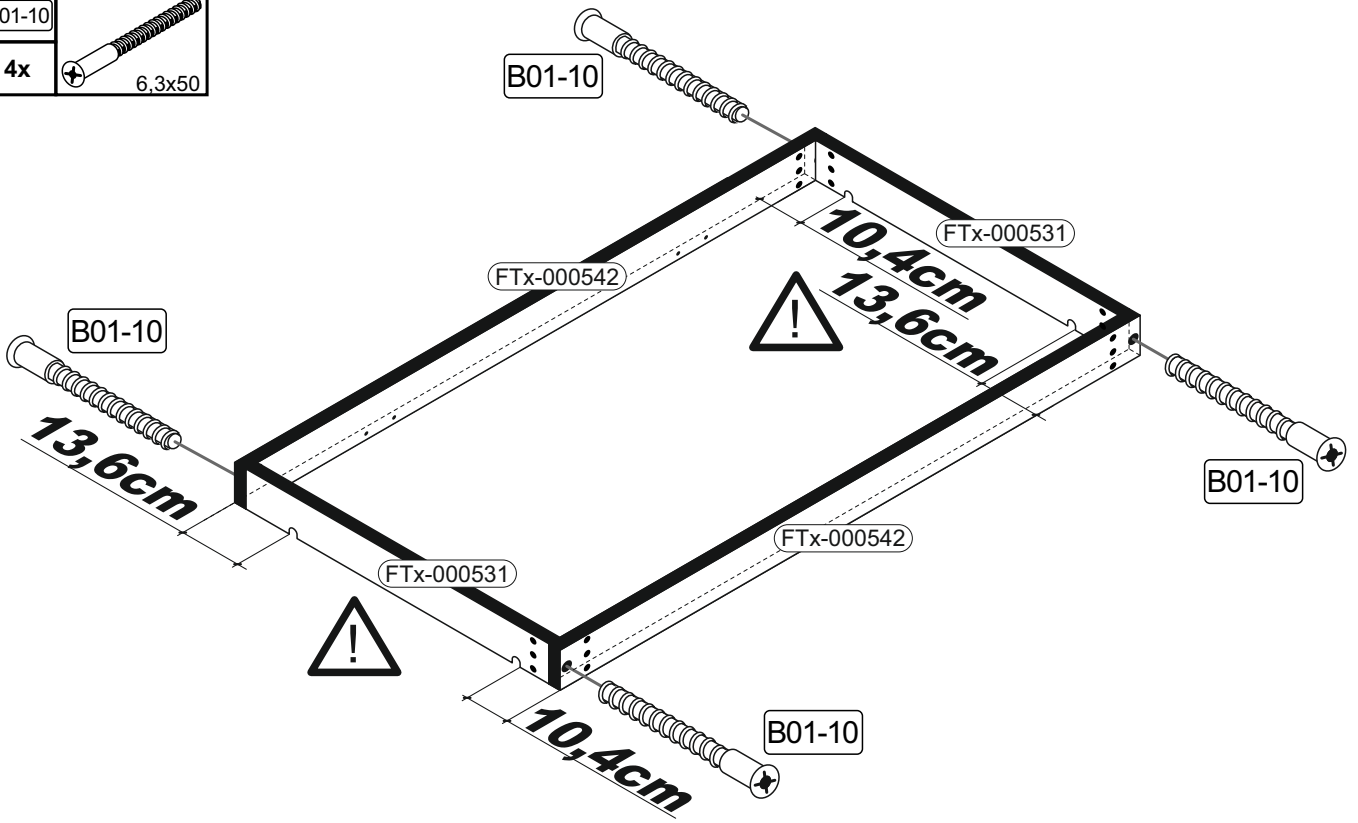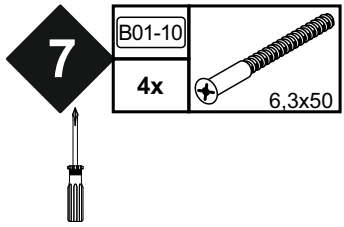





9


B01-90	
8x	3,5x20
B02-107	
8x	8x70





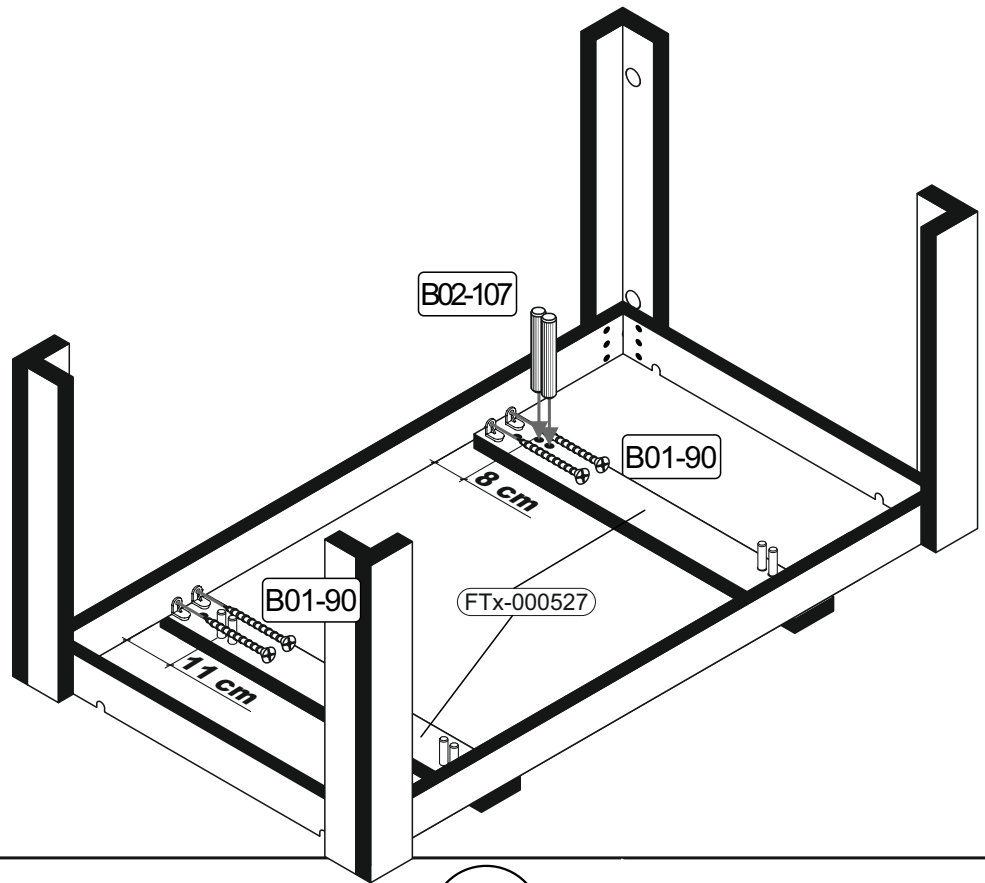


10



B01-300-12	
4x	M6x65




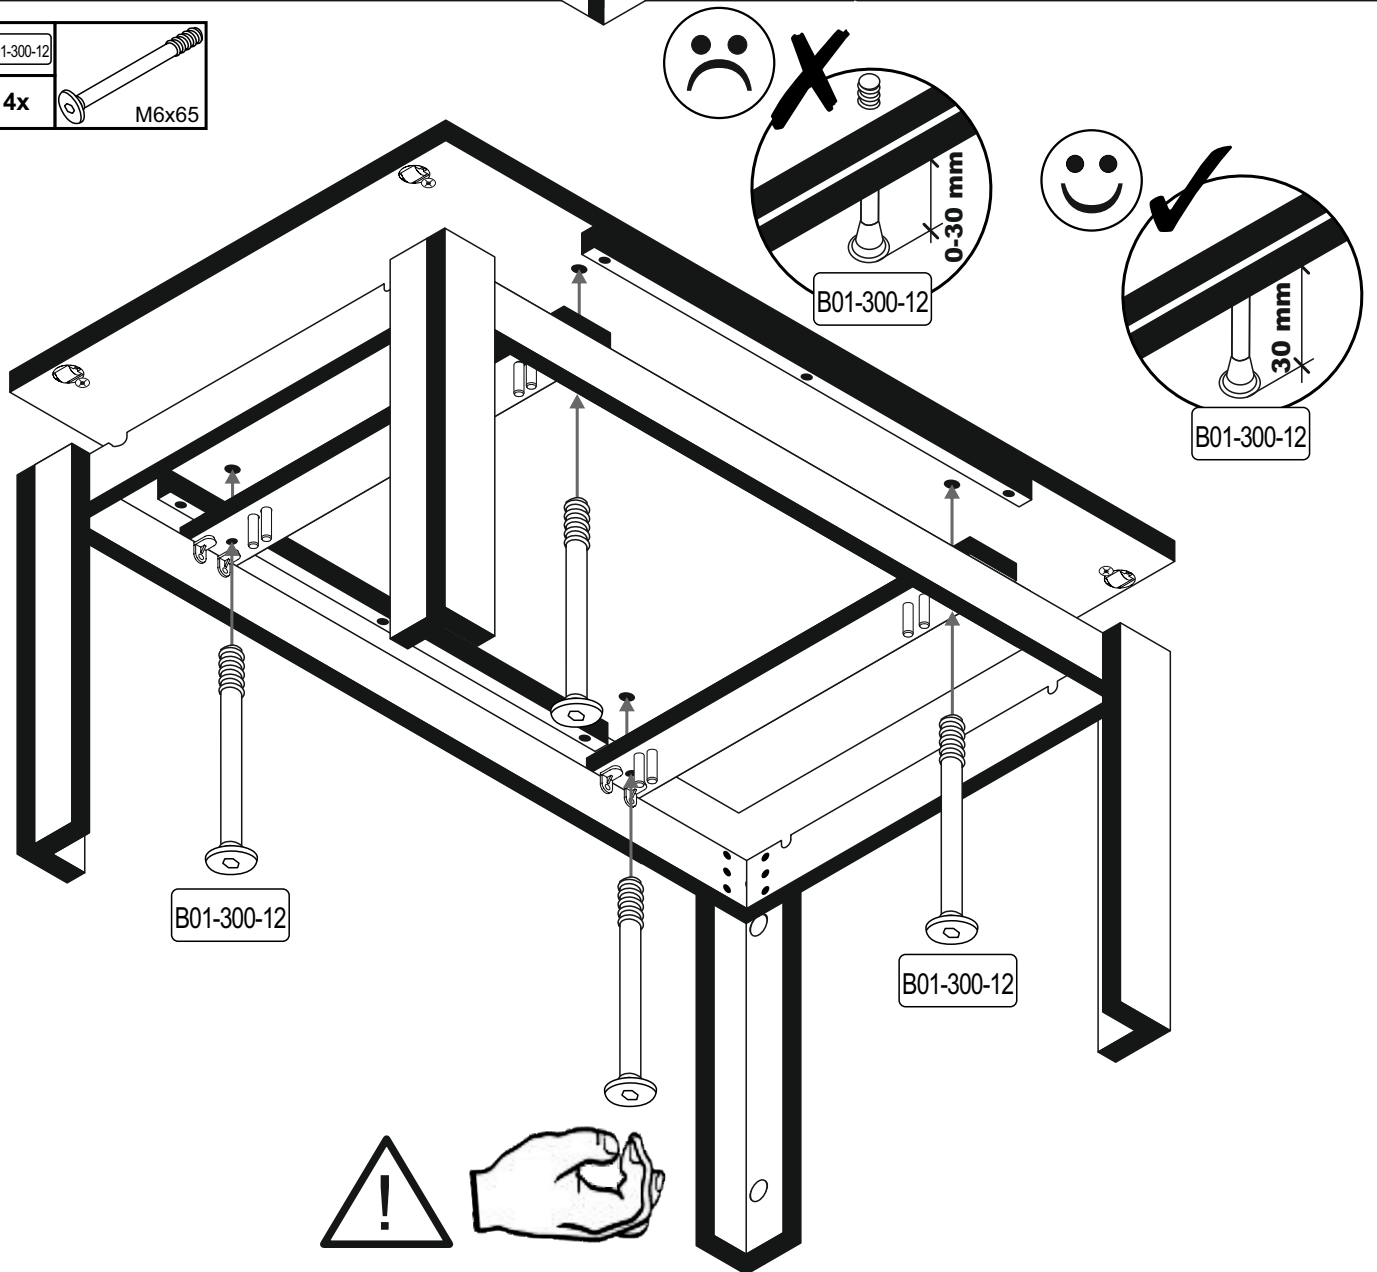

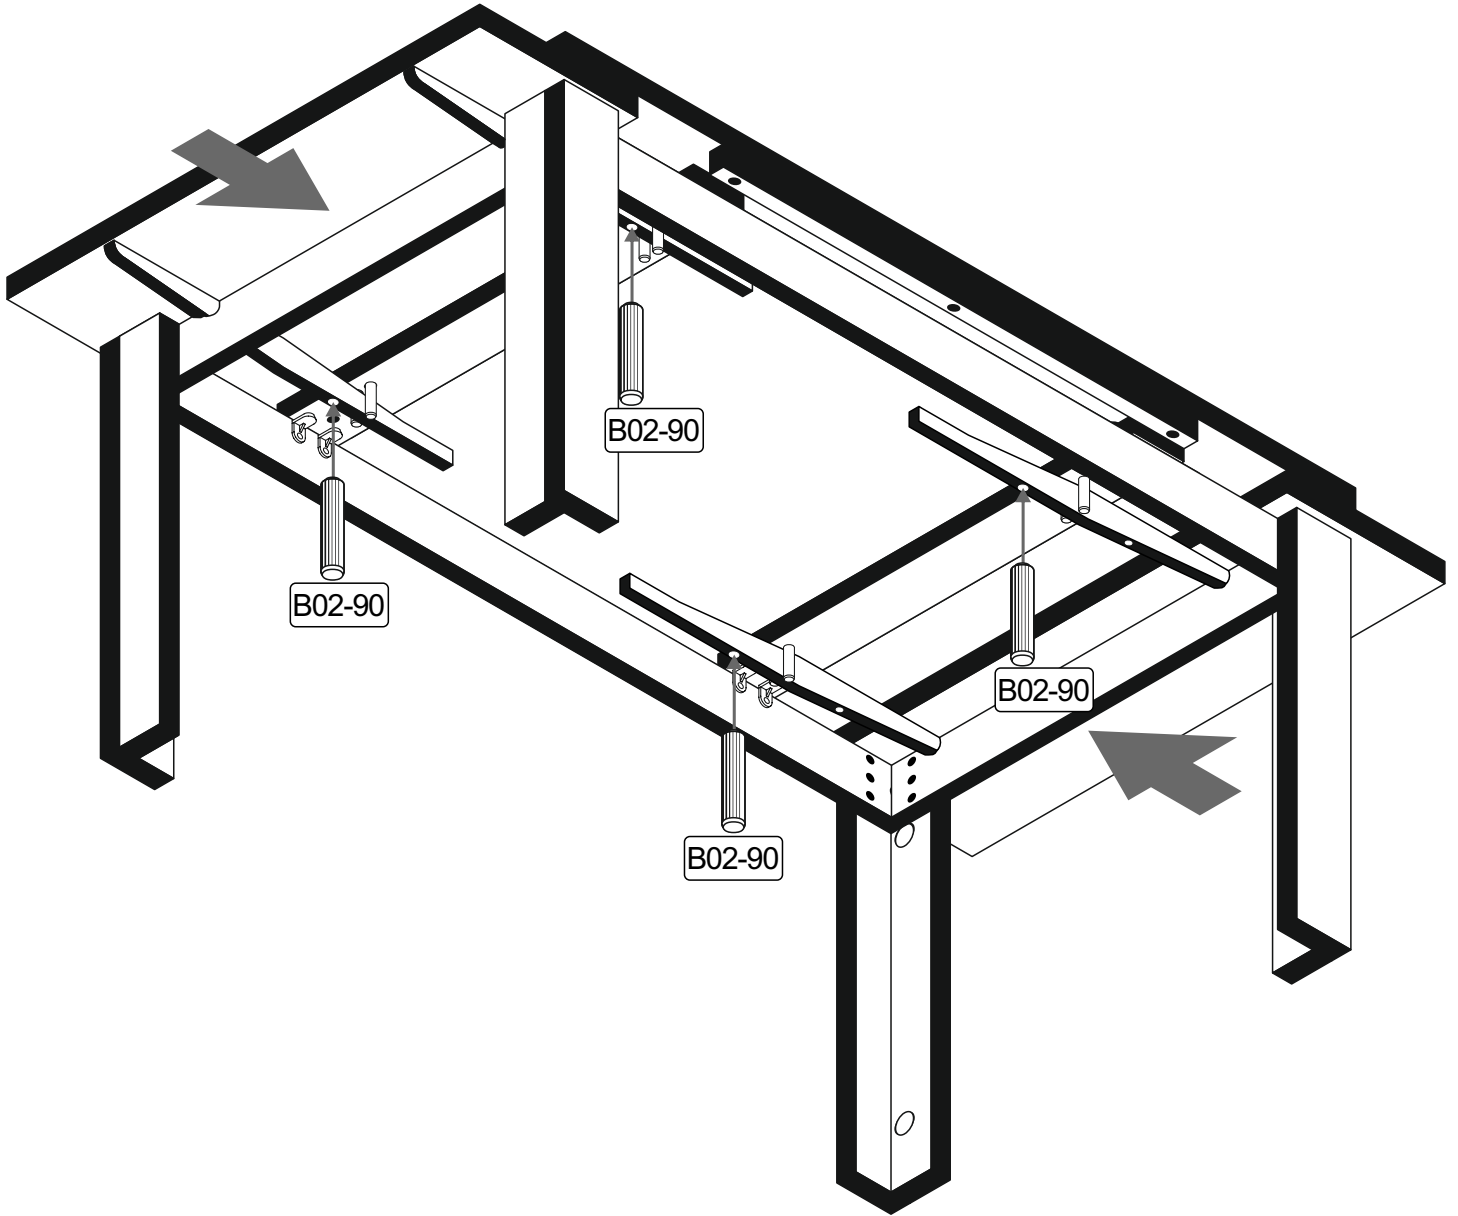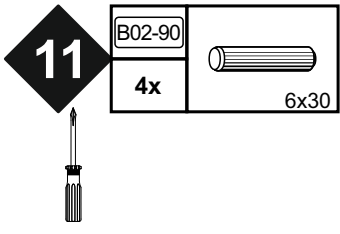





12

B01-122		B02-174	
8x	4x13	4x	





▶ SCAN ME

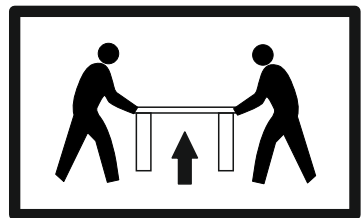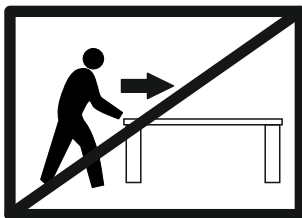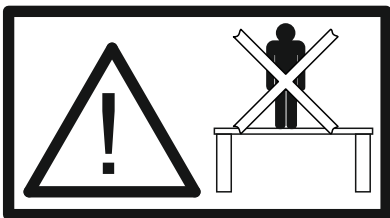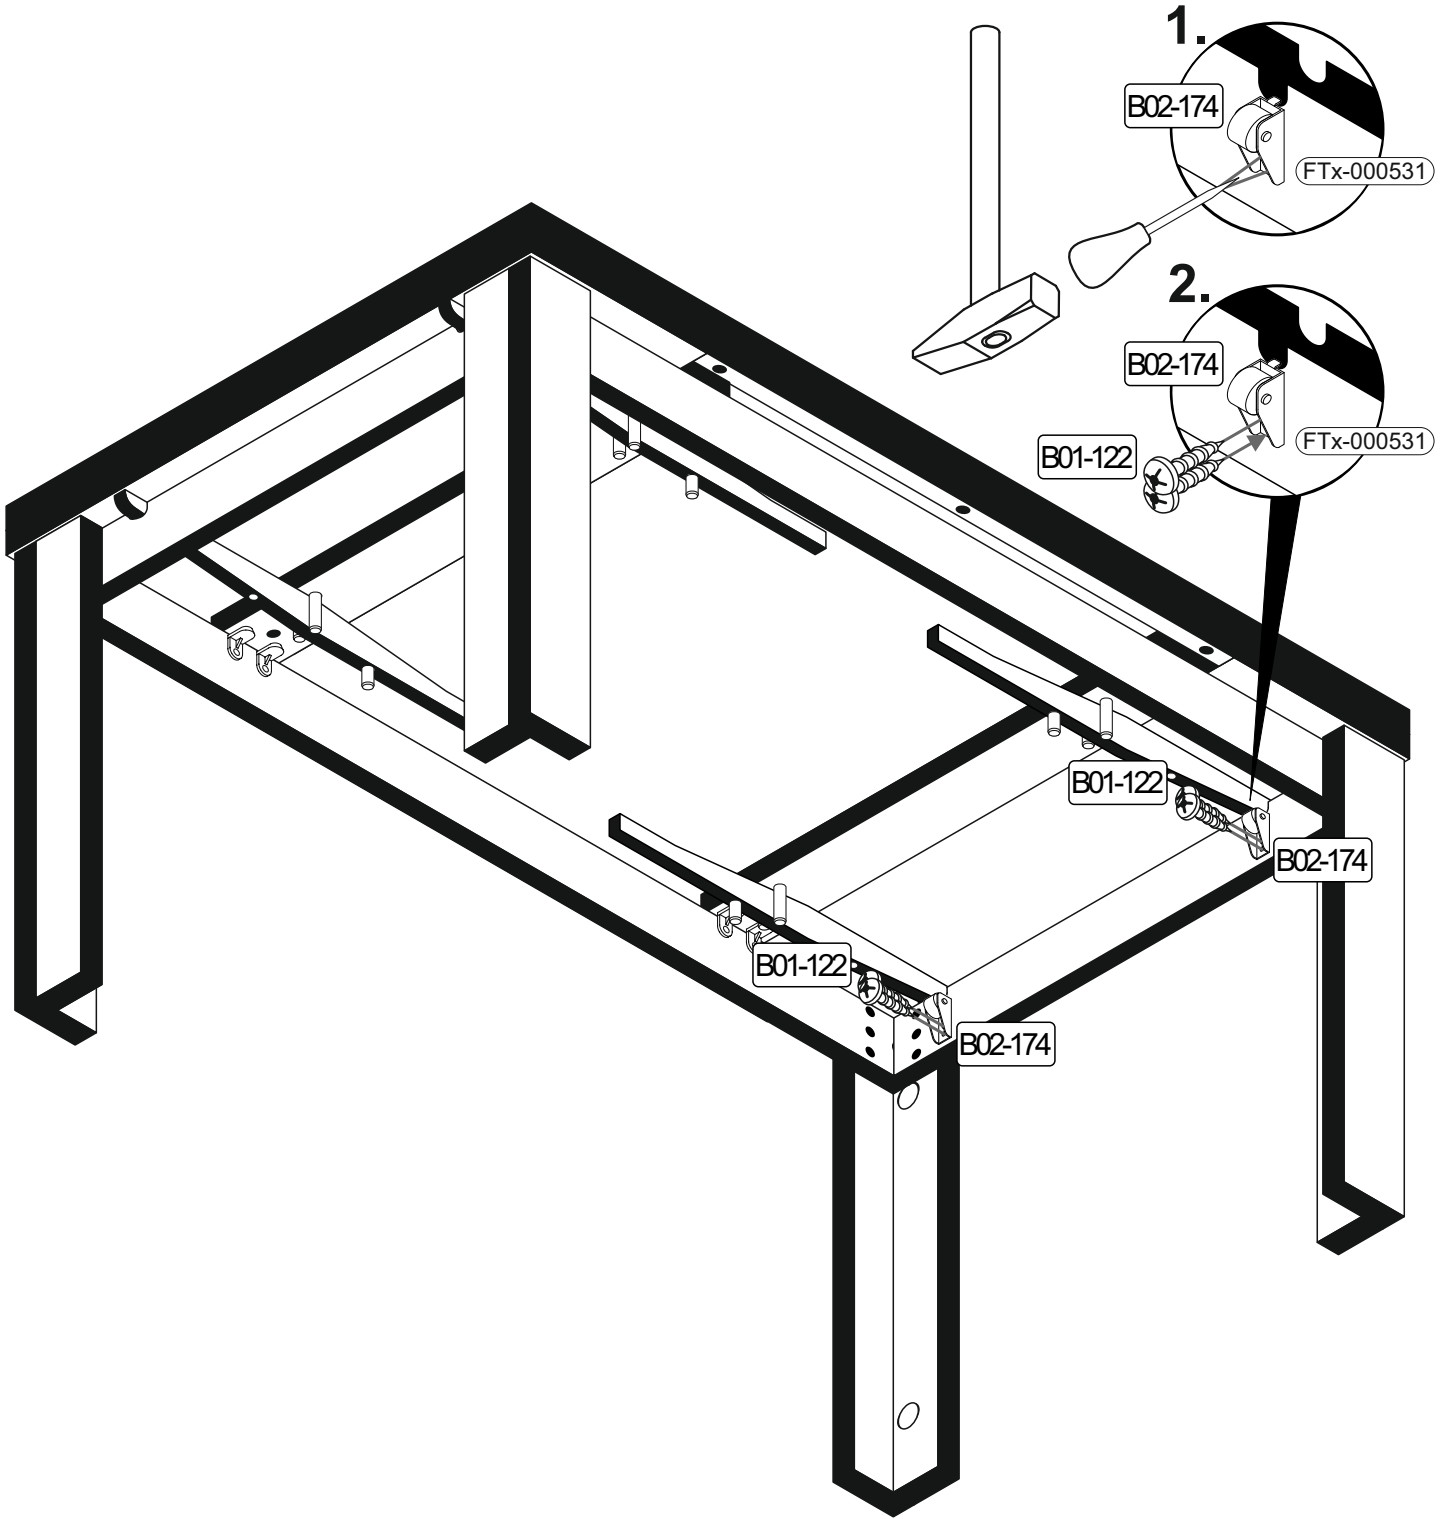

13



B01-90		B08-50	
32x	3,5x20	8x	

