

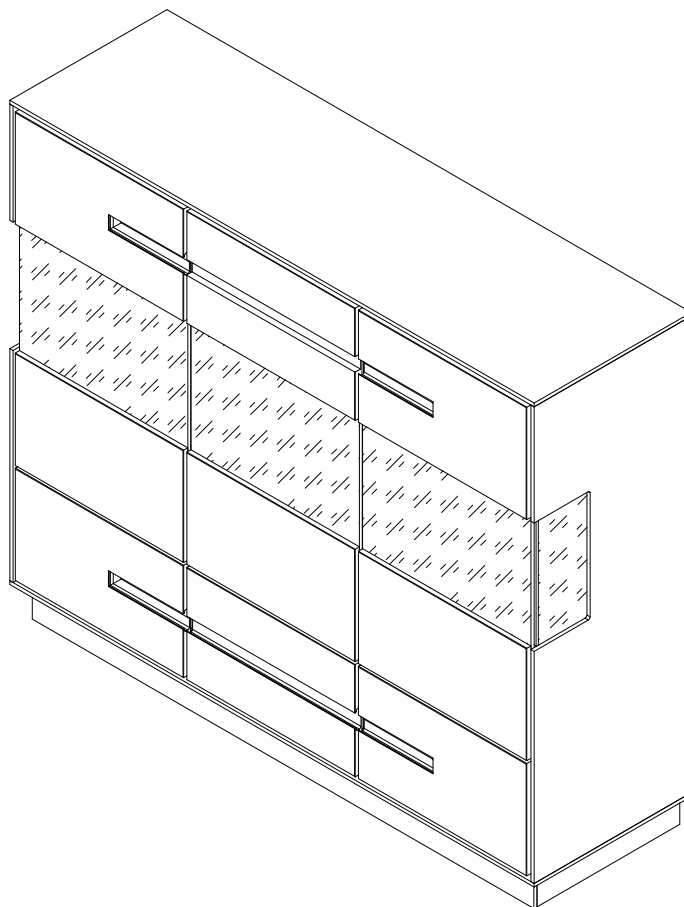
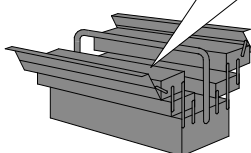


Art. Nr. 26960059

LKZ 40605

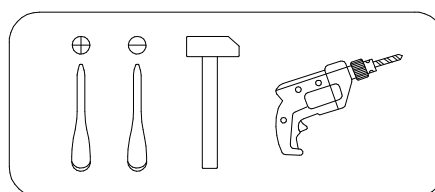

- | | | | |
|-----------|------------------------------------|-----------|--------------------------------|
| D | Montageanleitung | GB | Assembly instructions |
| FR | Notice de montage | IT | Istruzioni di montaggio |
| NL | Handleiding voor de montage | PL | Instrukcja montażu |
| CZ | Montážní návod | SK | Návod na montáž |
| HU | Szerelési útmutató | RO | Instrukțiuni de montaj |
| TR | Montaj talimatı | RU | Инструкция по монтажу |


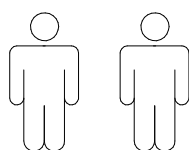


Service · Dienstverlening · Serwis · Servis · Сервисная служба

Name · Naam · Nazwa · Isim · Название




Nr. · No. · Номер



Typ · Type · Tip · Тип

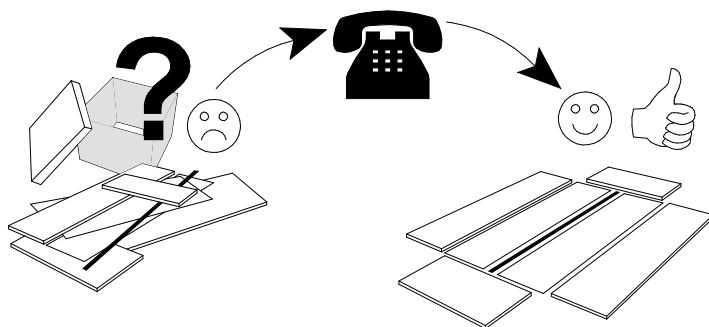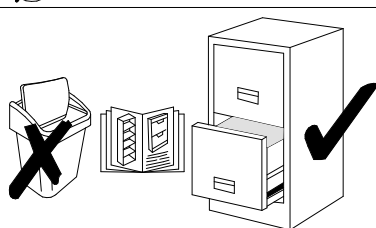


A 9  5×30 ×32	B 1  15×9.5 ×12	C 1  7×24 ×12	D 24  2.9×13 ×54	D 30  3.5×15 ×12
D 179  4.2×19 ×112	P 37  6.2×20 ×16	D 47  3.5×35 ×12	D 91  4.0×60 ×2	G 50  ×3
G 51  ×3	H 111  ×6	H 159  ×4	D 139  3.9×9.5 ×2	L 25  ×4
N 2  8×50 ×2	N 18  ×2	D 61  ×18	P 43  6.3×18 ×12	P 176  M4×9 ×4
P 266  4.2×16 ×112	S 72  ×6	L 40  ×1	X 25  ×1	Z 89  ×56
N 50  ×4	Z 223  L R ×3	D 141  4.2×16 ×8	E 41  ×16	H 112  ×2

N	Size/MaB (mm)	Qty	✓	N	Size/MaB (mm)	Qty	✓
1	1340×80	1		18	397×344	3	
2	381,5×80	1		19	1394×313	1	
3	381,5×80	1		20	1394×263	1	
4	1323×80	1		21	1394×253	1	
5	80×24	2		22	1394×277	1	
6	1384×394	2		23	1103×420	1	
7	458×394	1		24	1103×420	1	
8	458×394	1		25	1401×420	1	
9	450×394	1		26	1401×420	1	
10	523,5×394	1		27	450×260	1	
11	523,5×394	1		28	450×260	1	
12	394×255	1		29	450×260	1	
13	394×255	1		30	818×450	1	
14	241×35	6		31	818×450	1	
15	350×160	3		32	818×450	1	
16	350×160	3		33	303×166	2	
17	388×160	3		34	80×24	2	

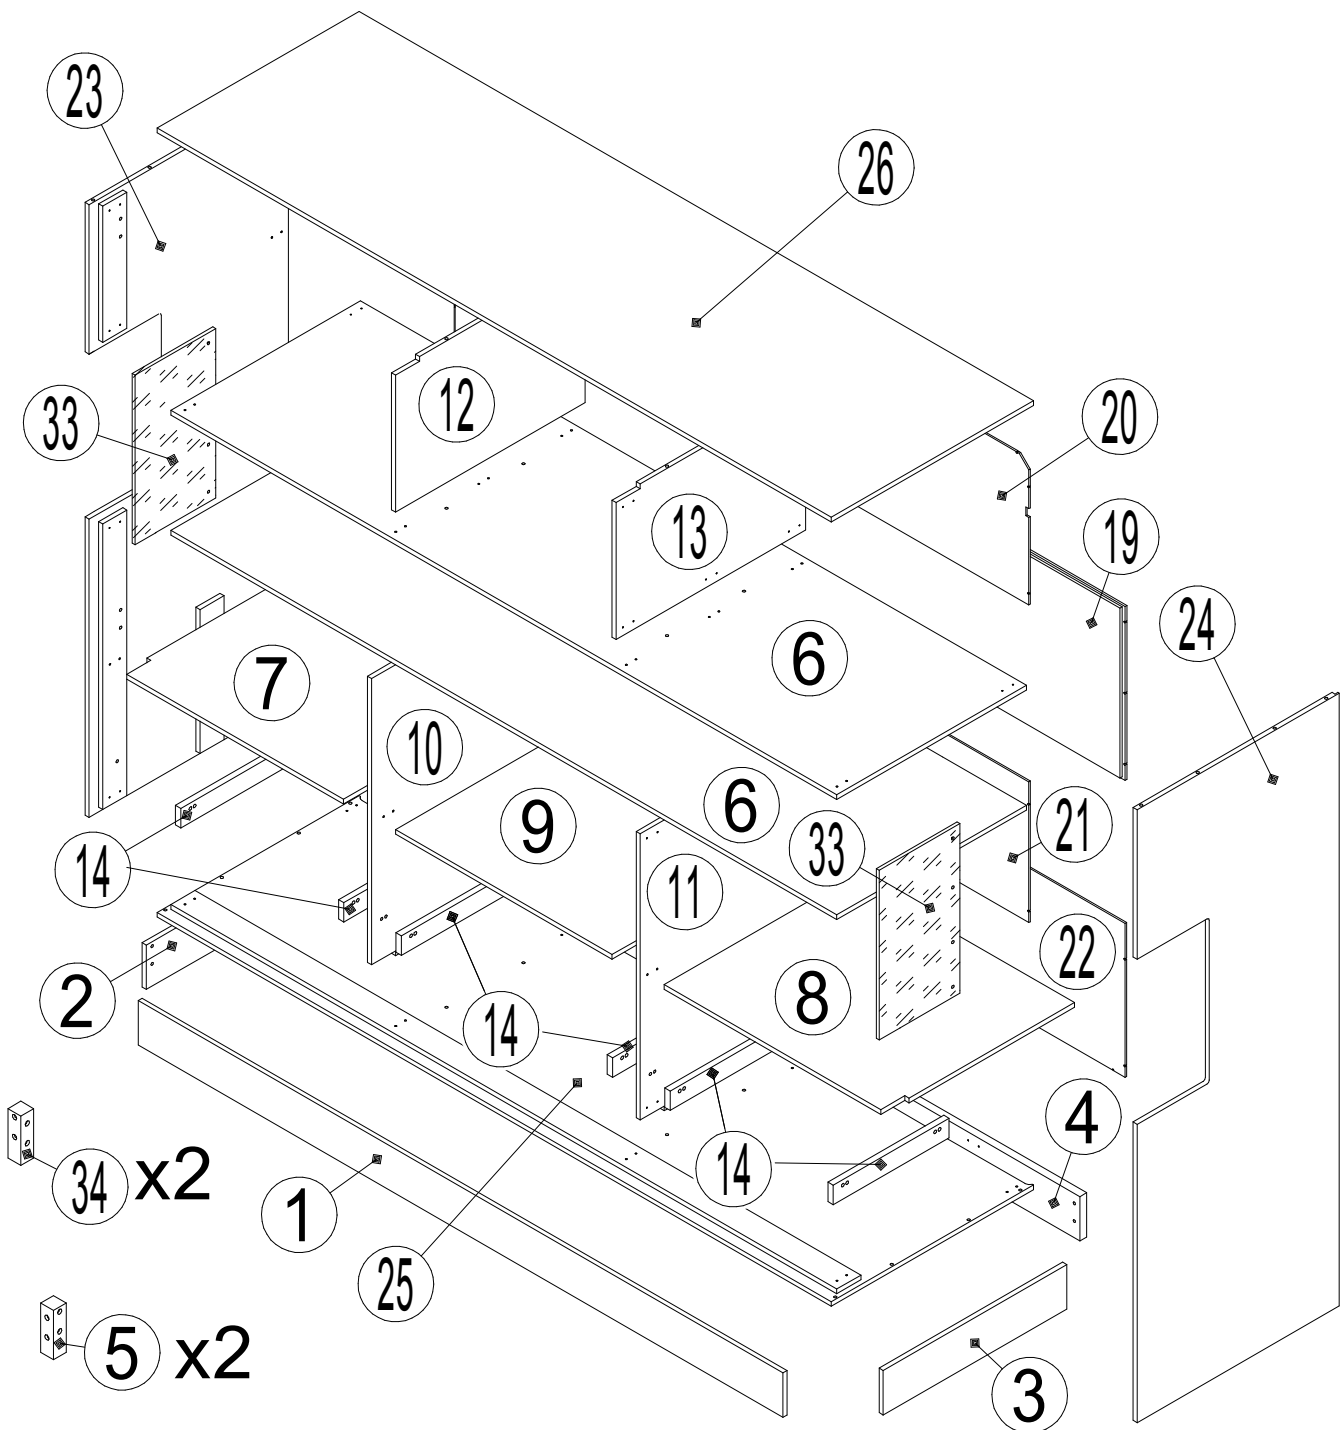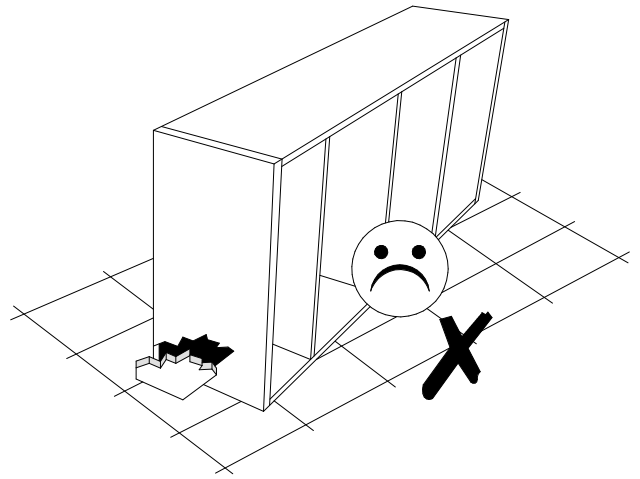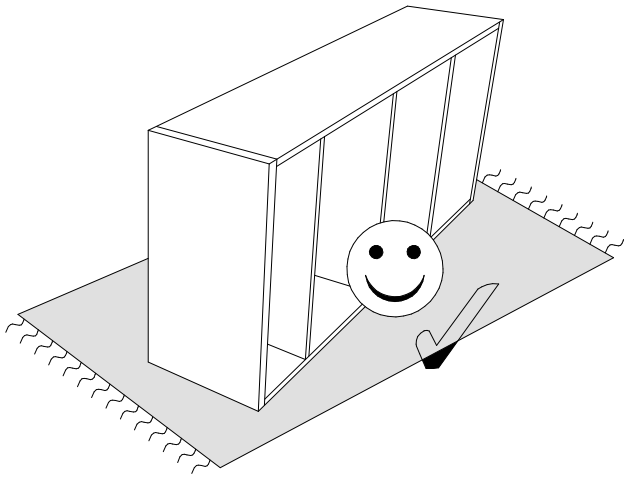


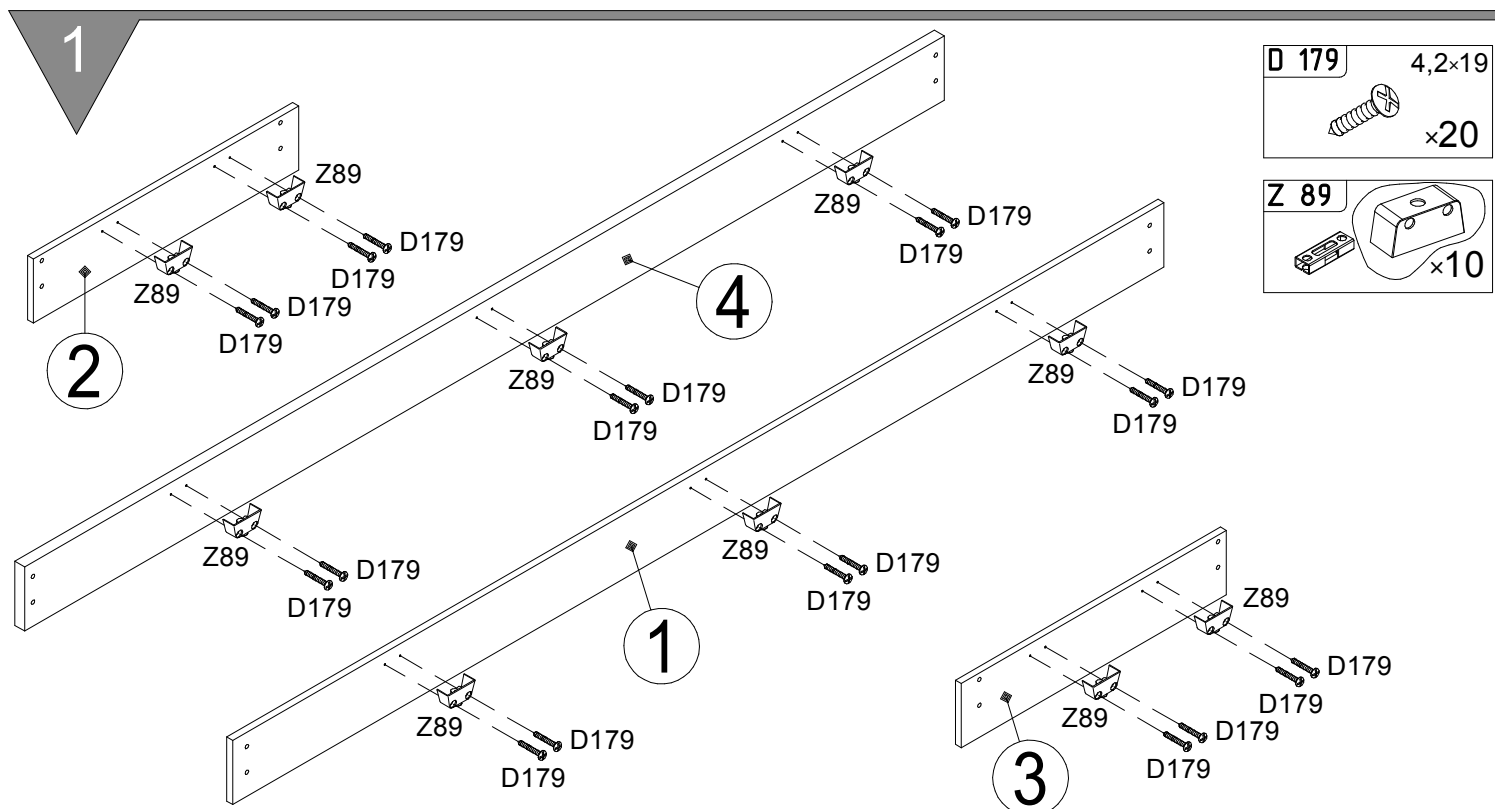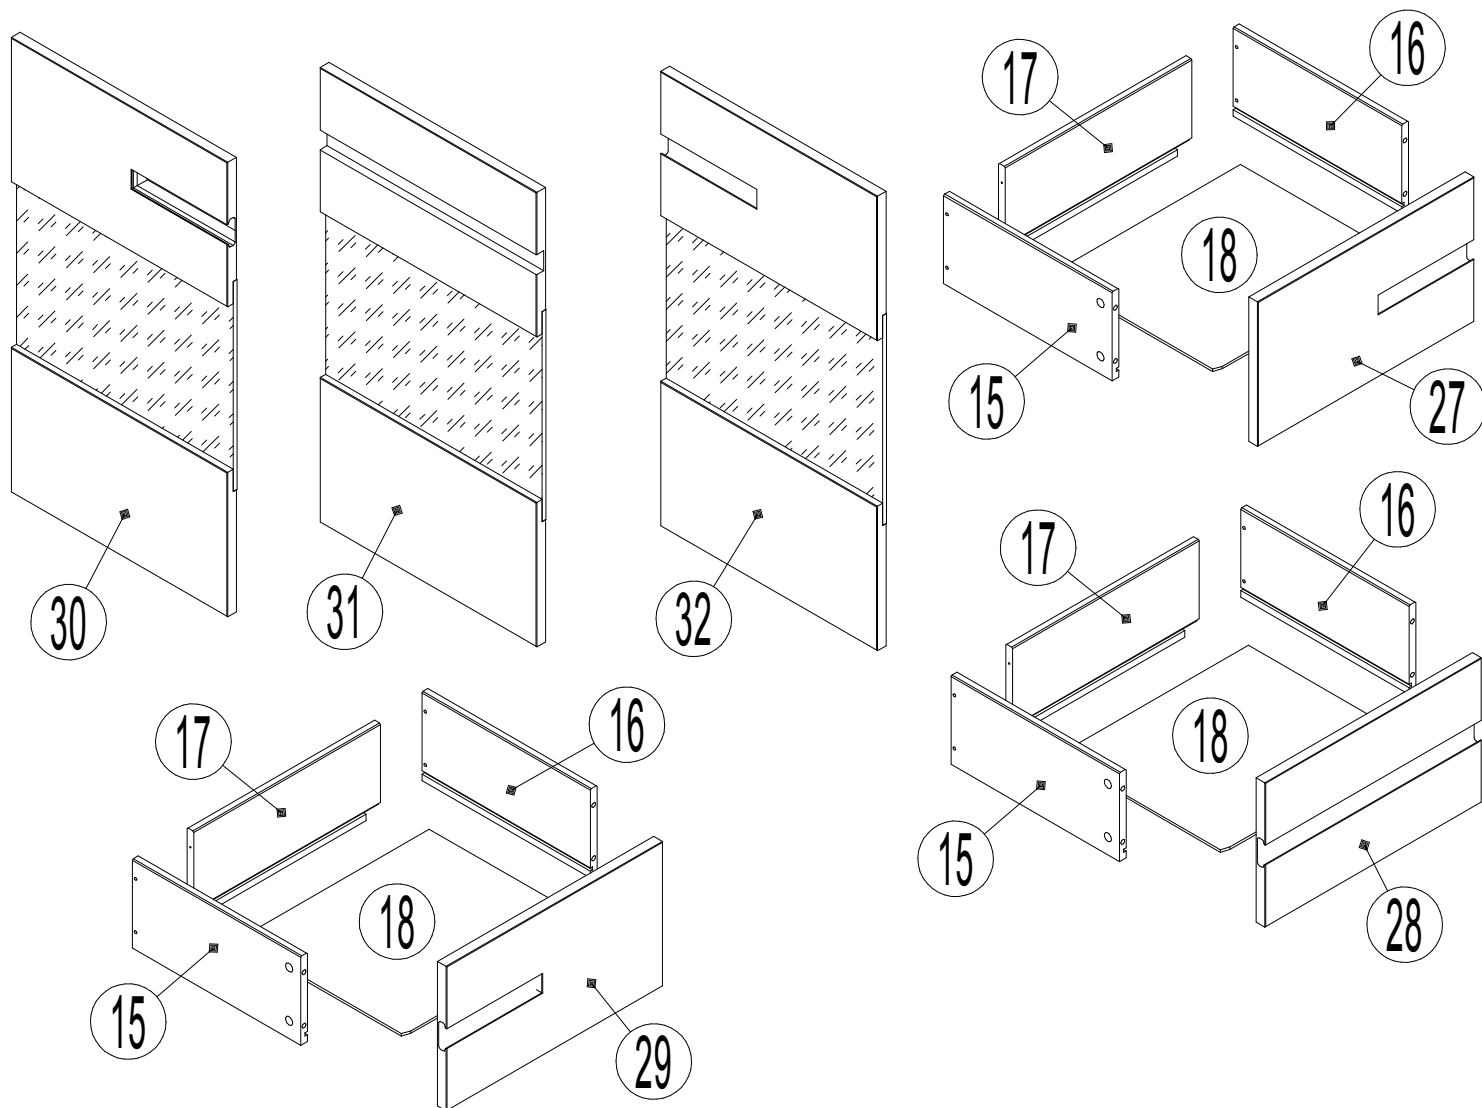


2

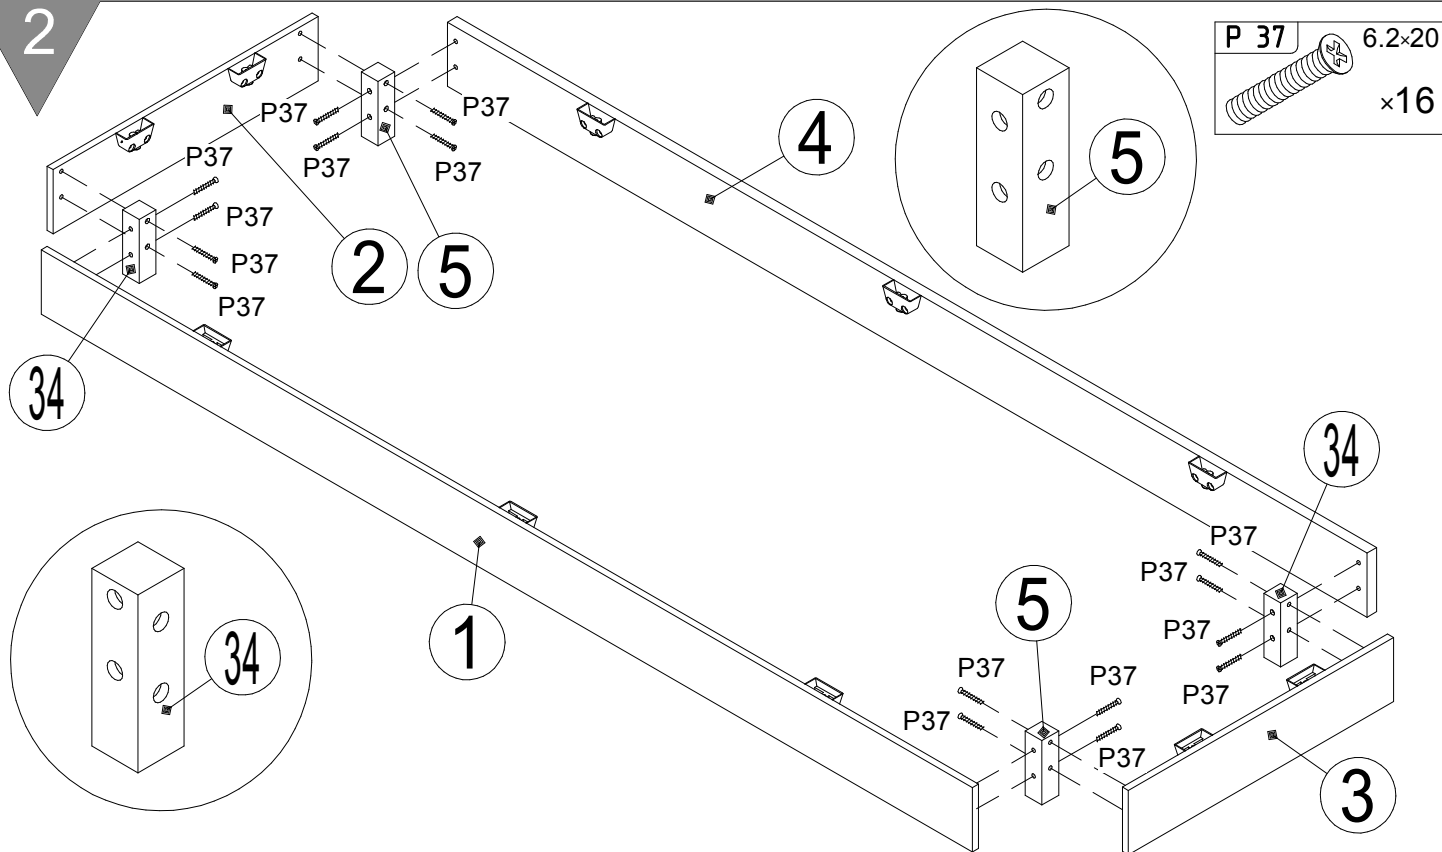


3

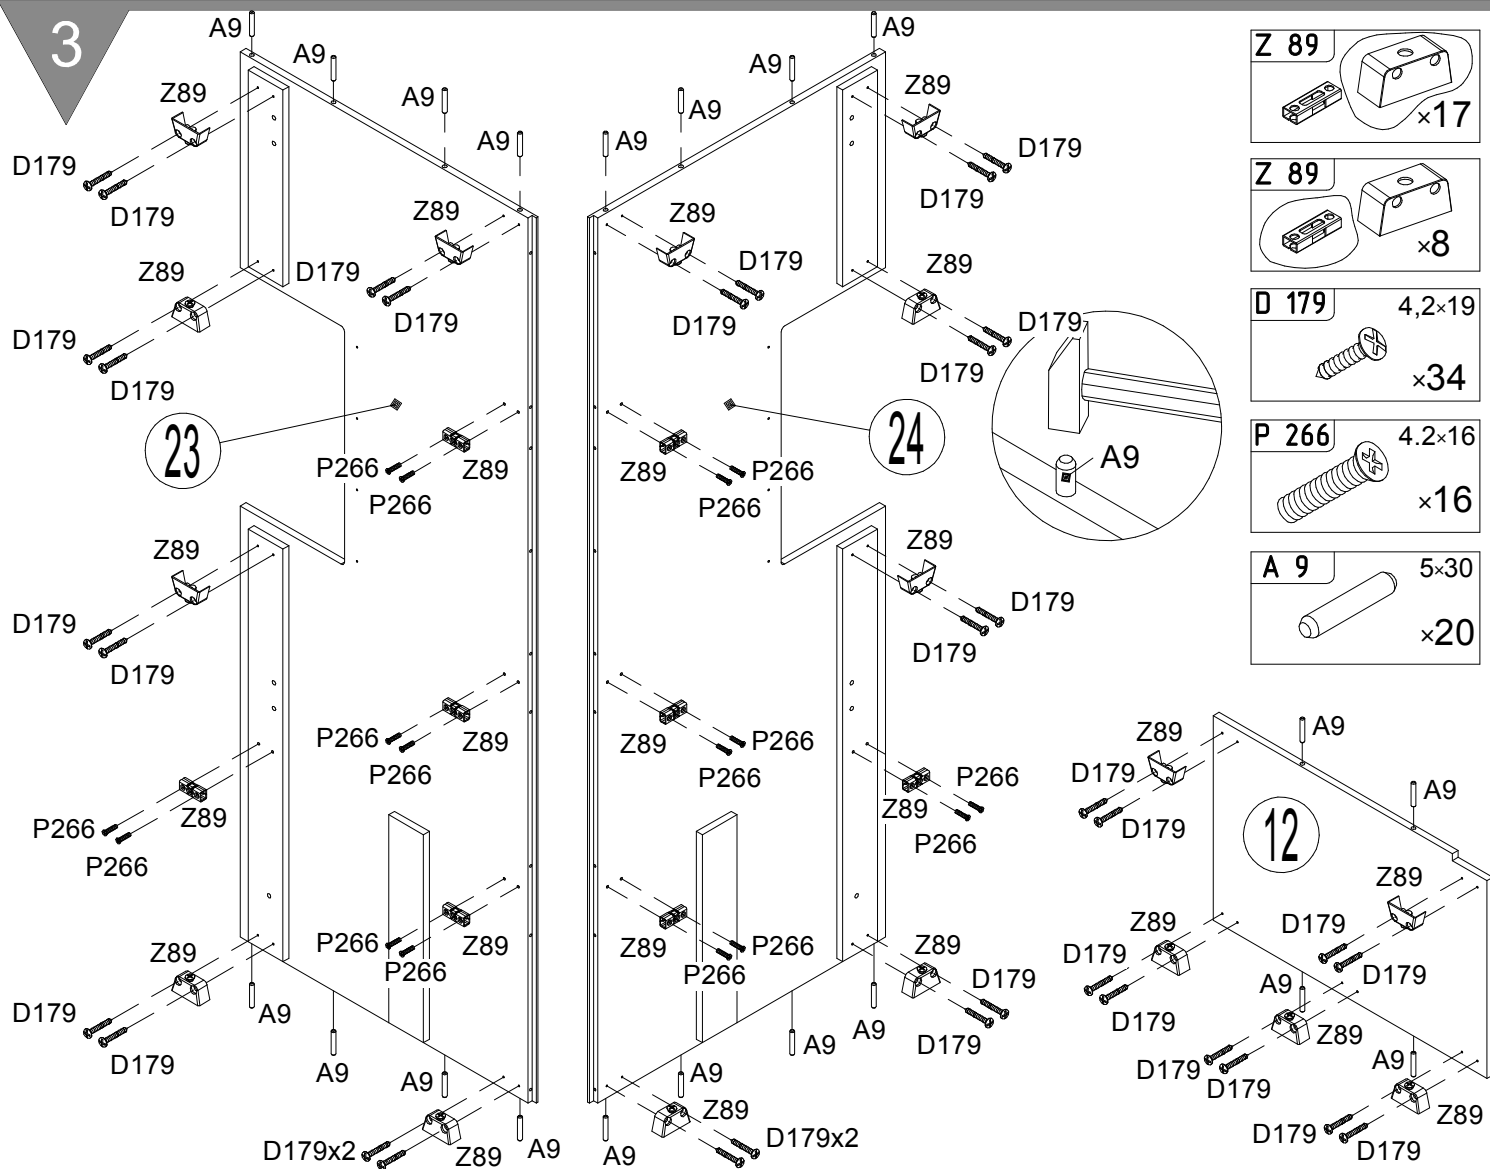


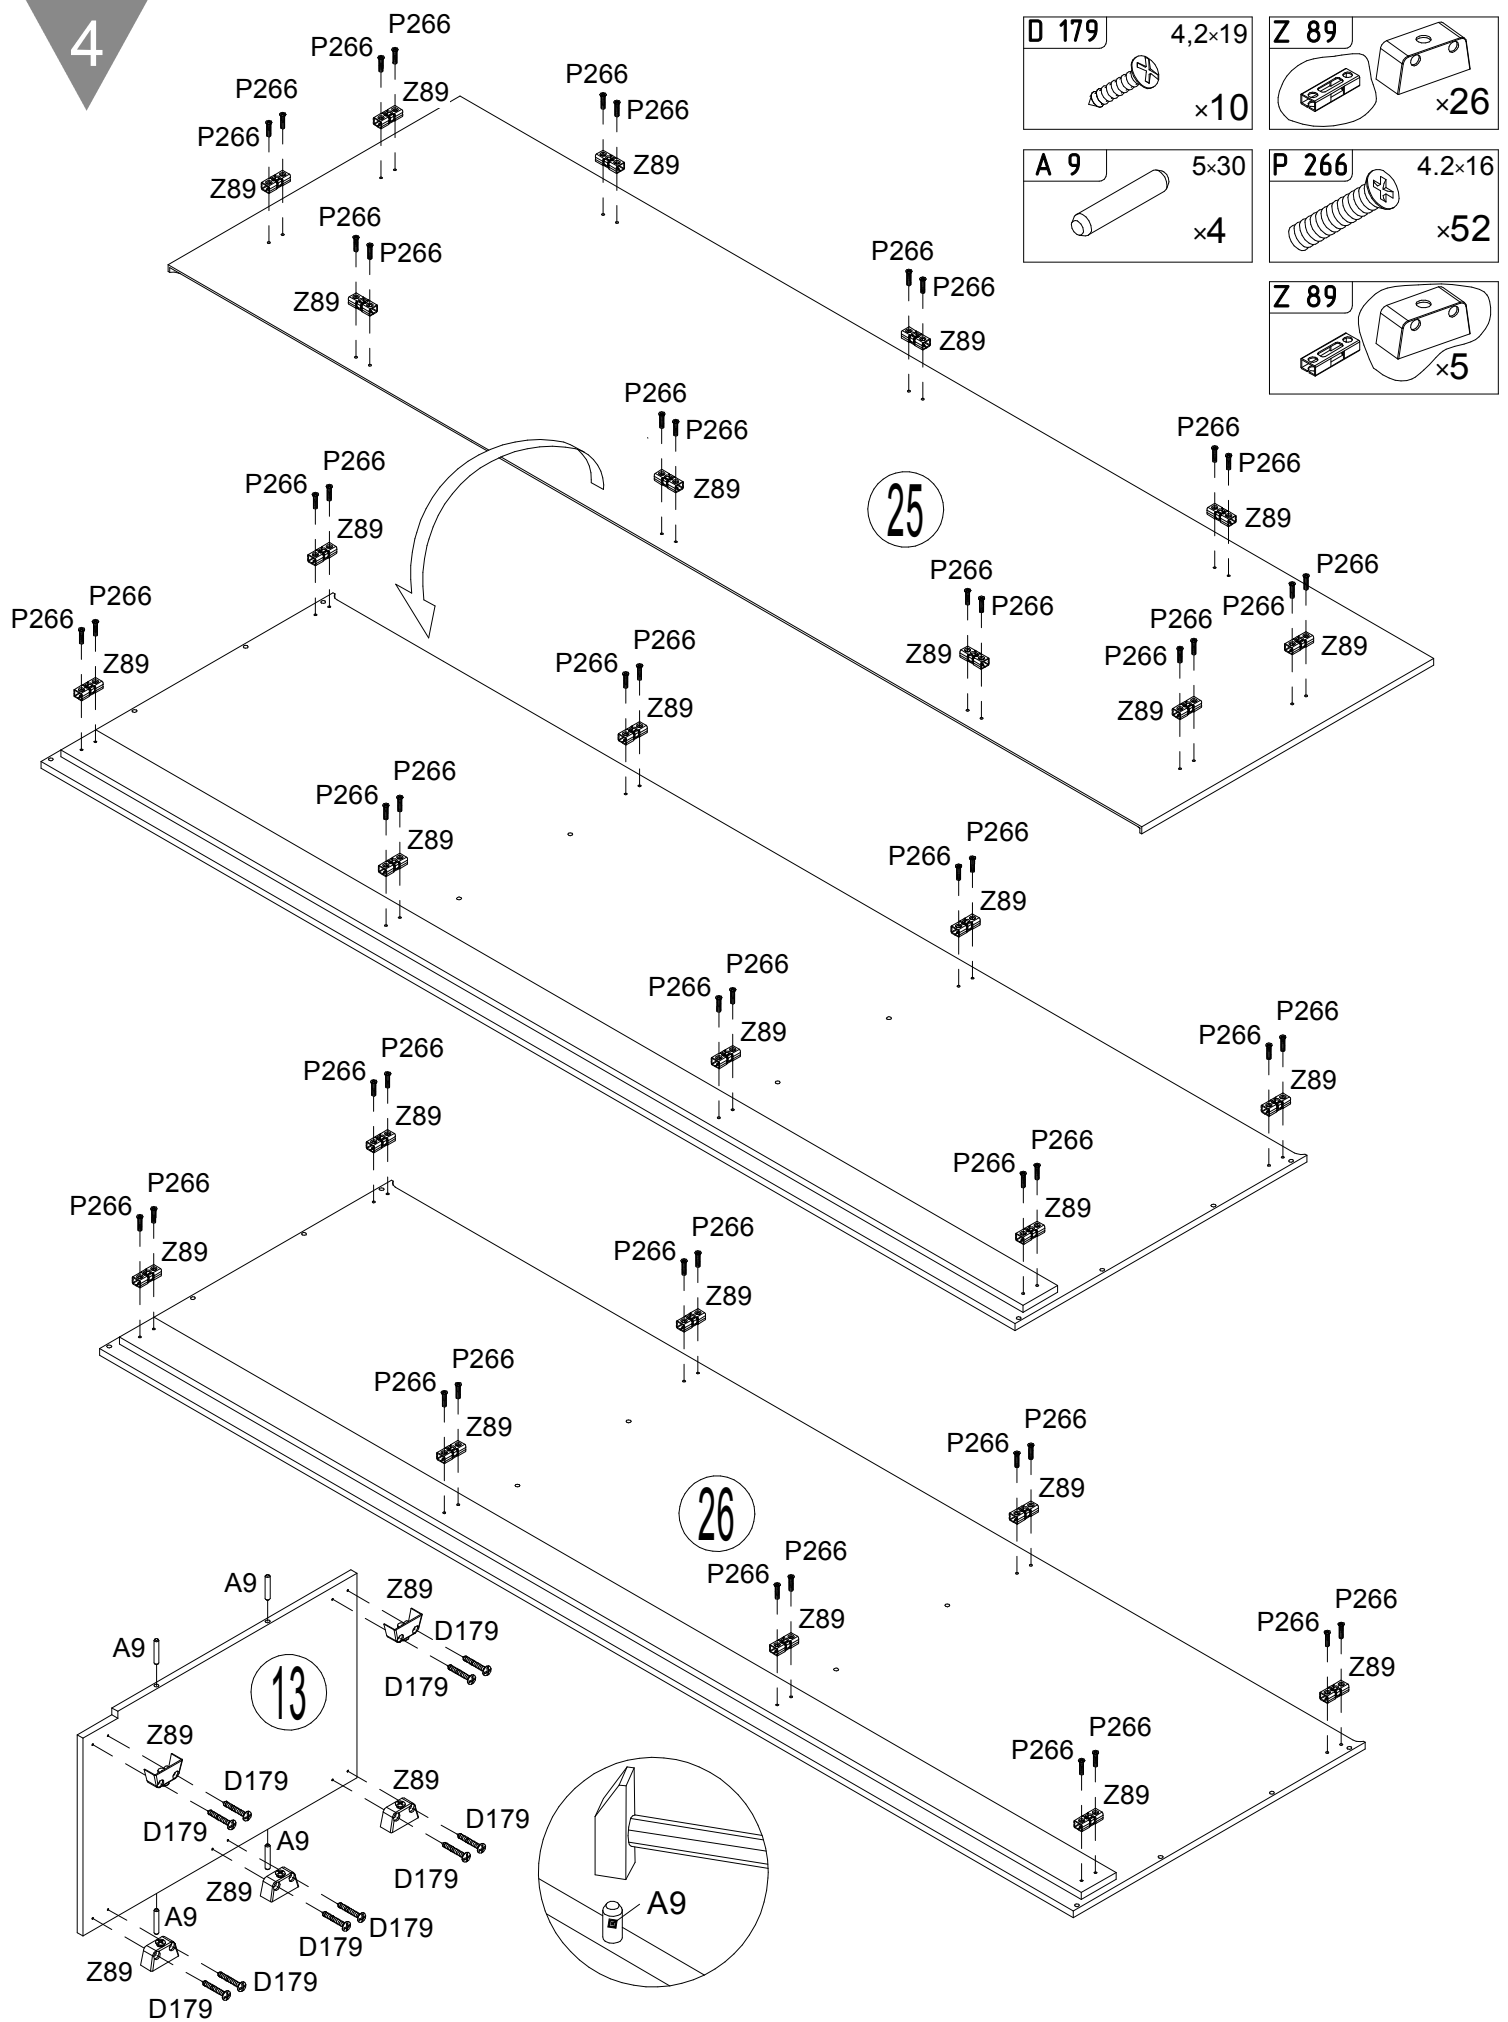


5

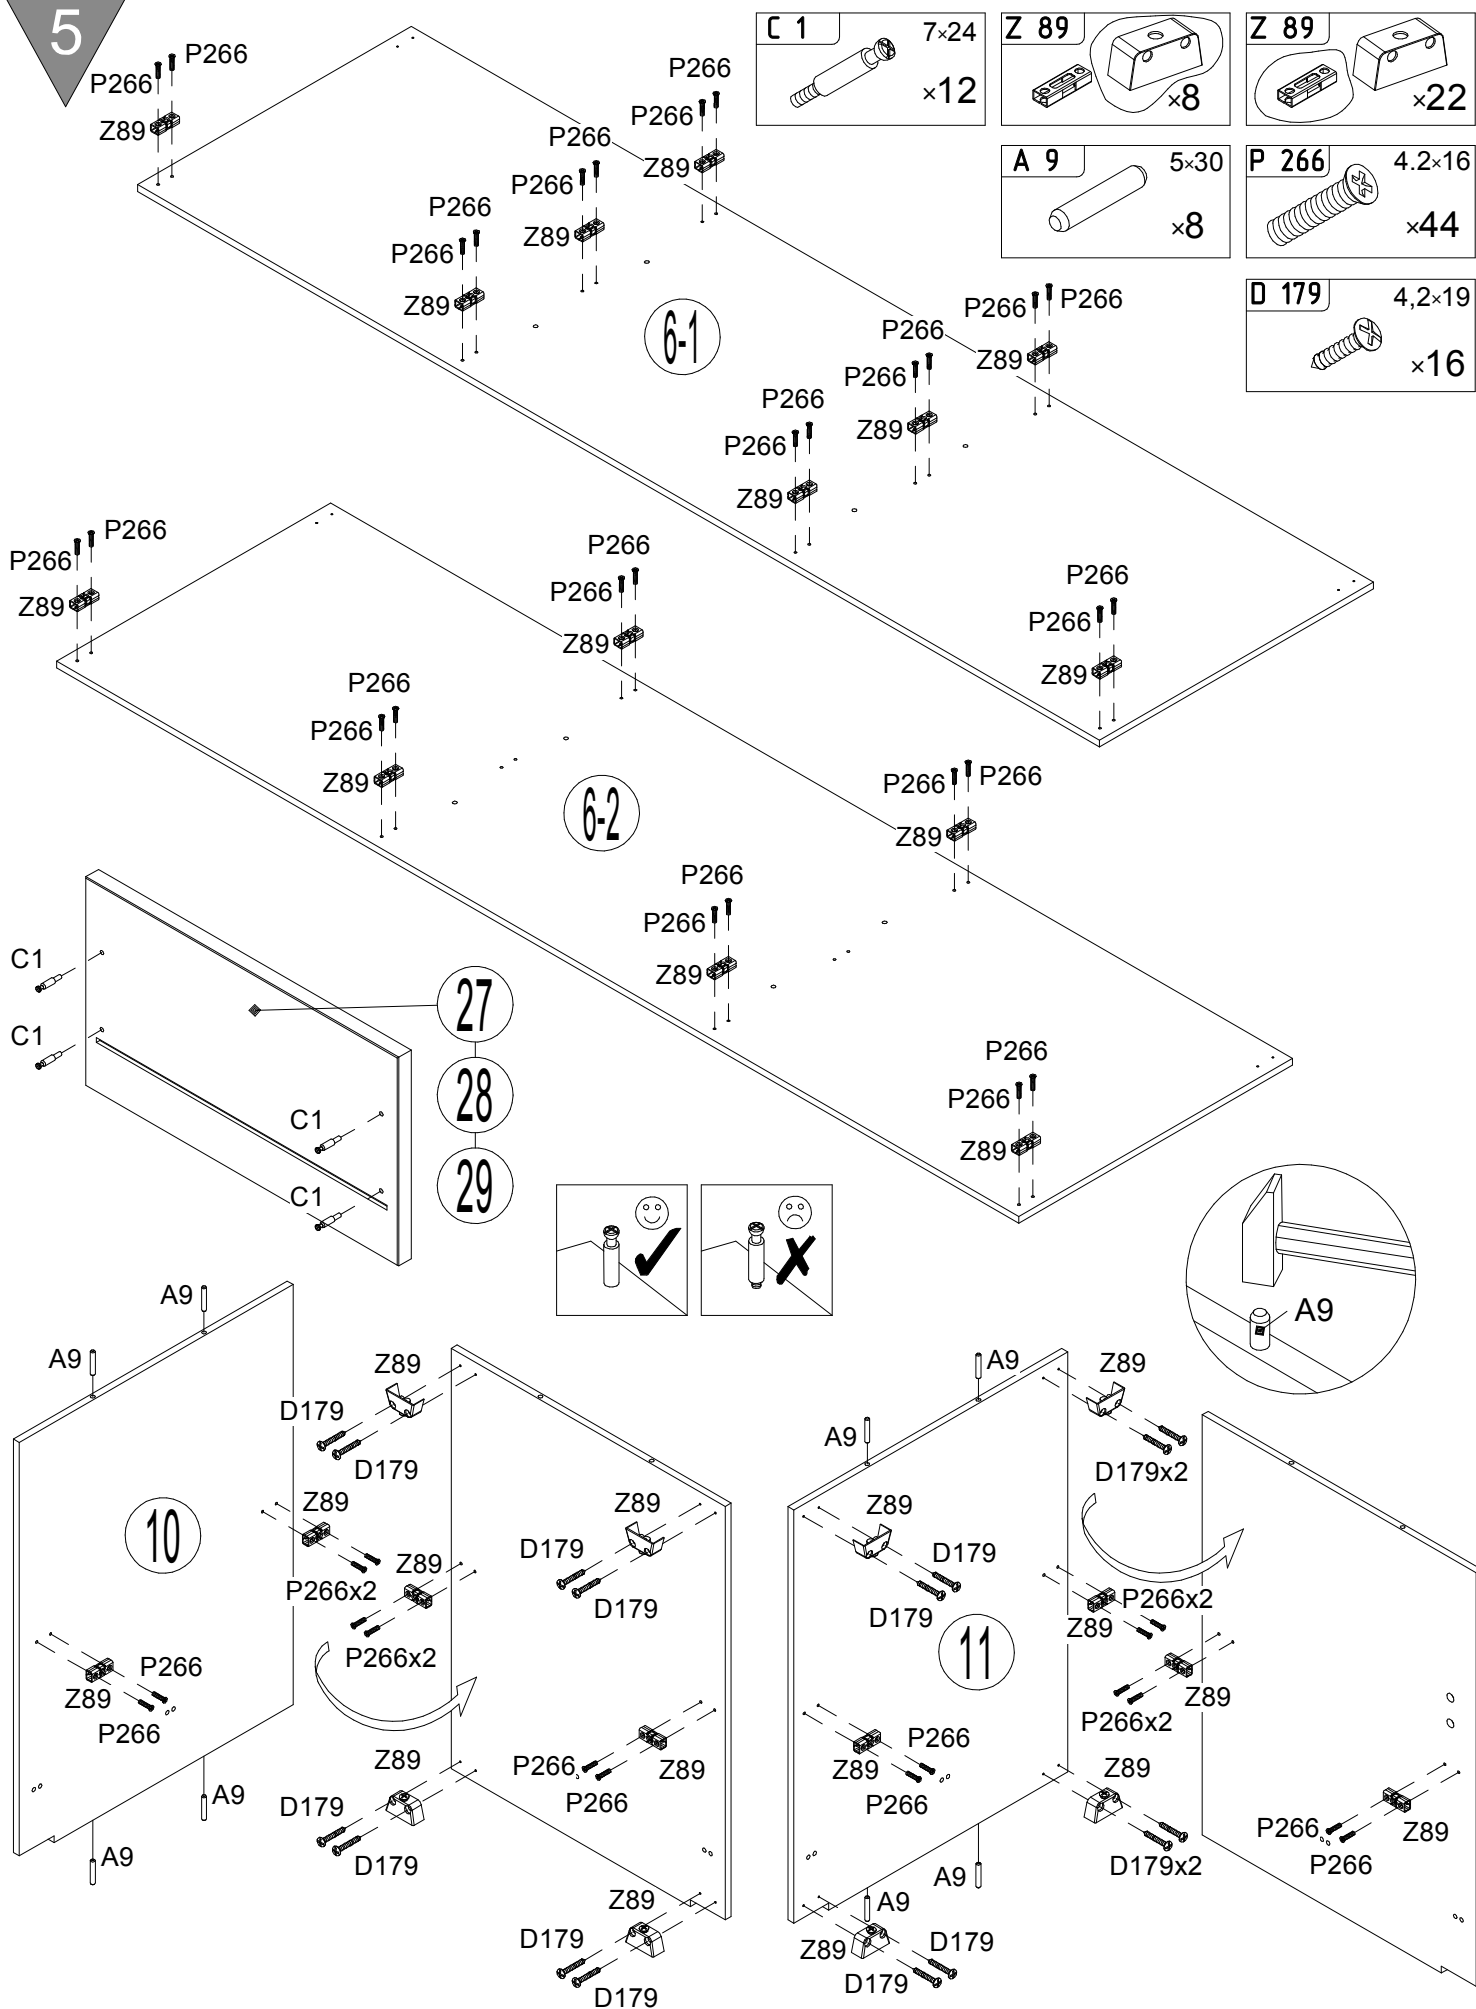

6



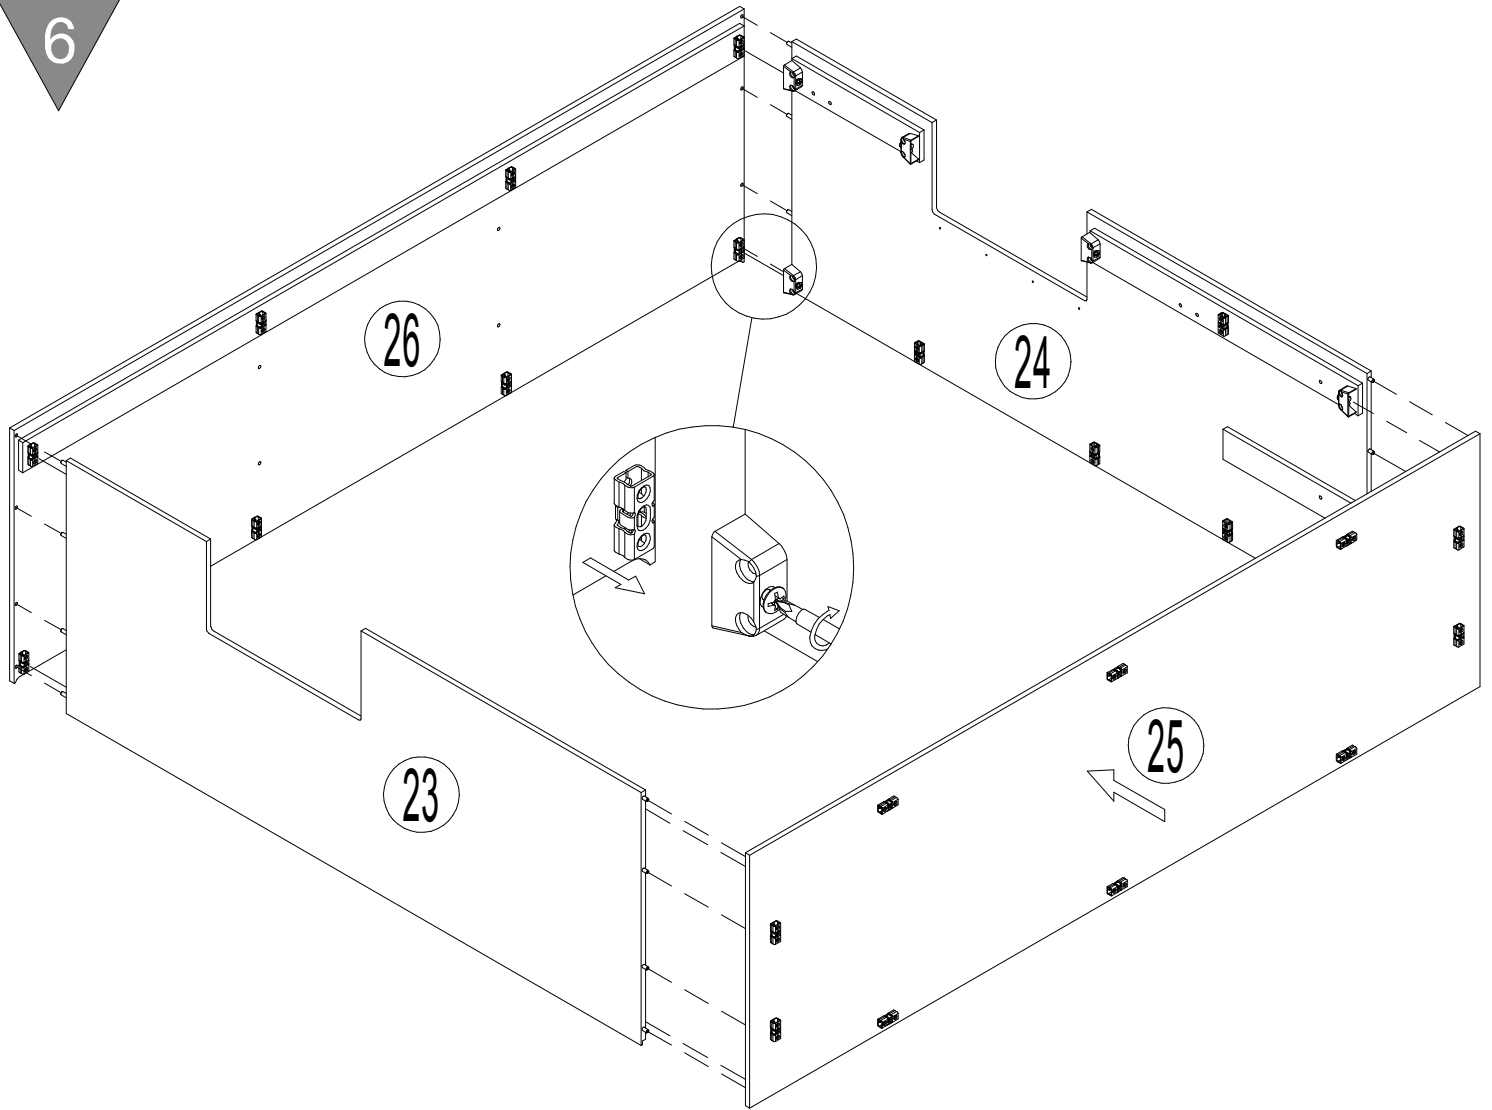


7

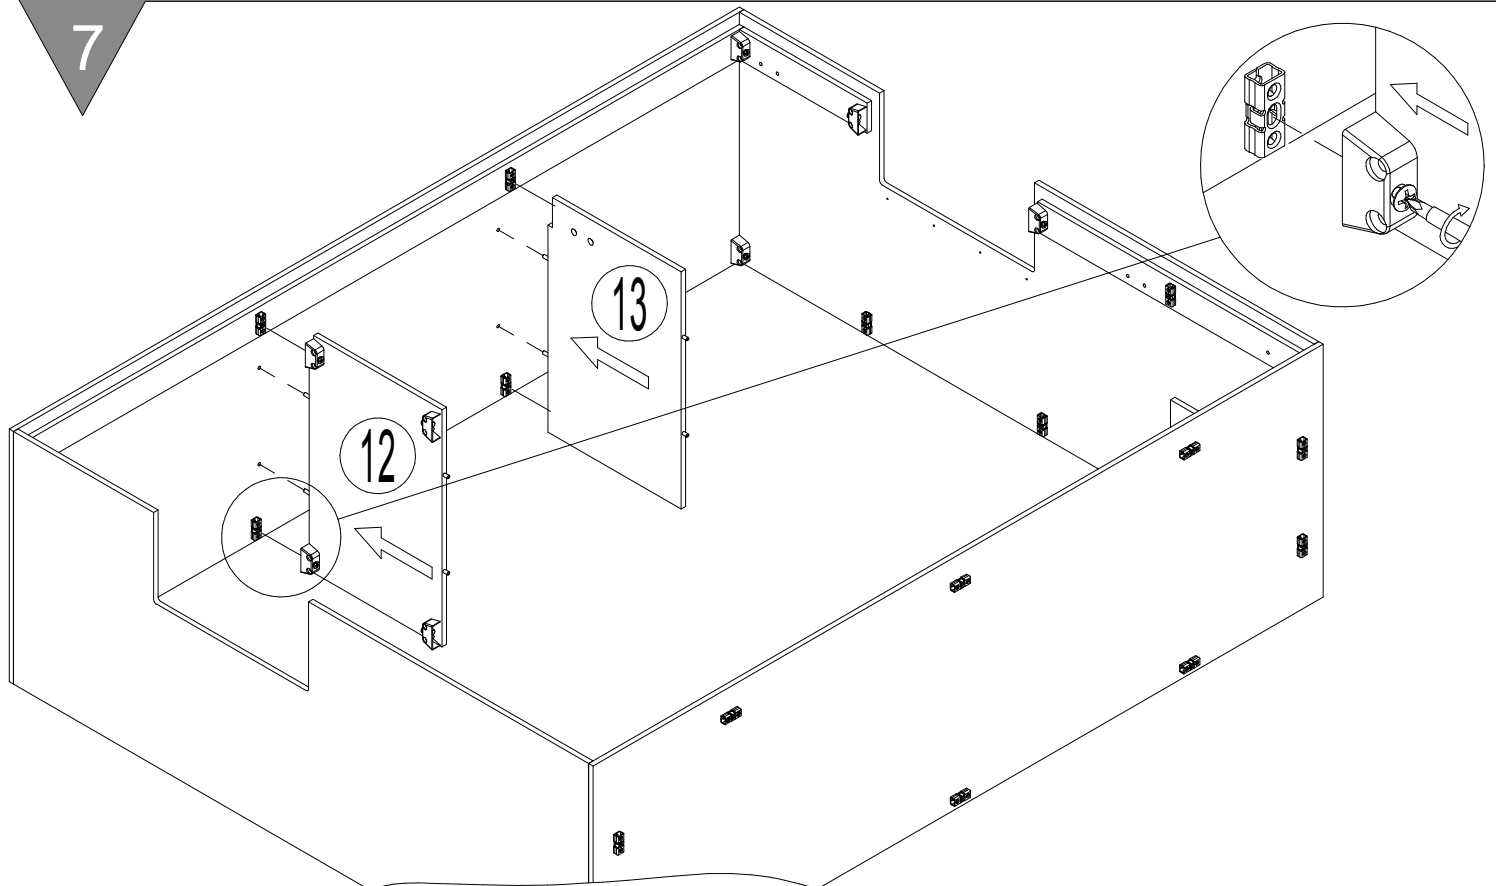


8

1)

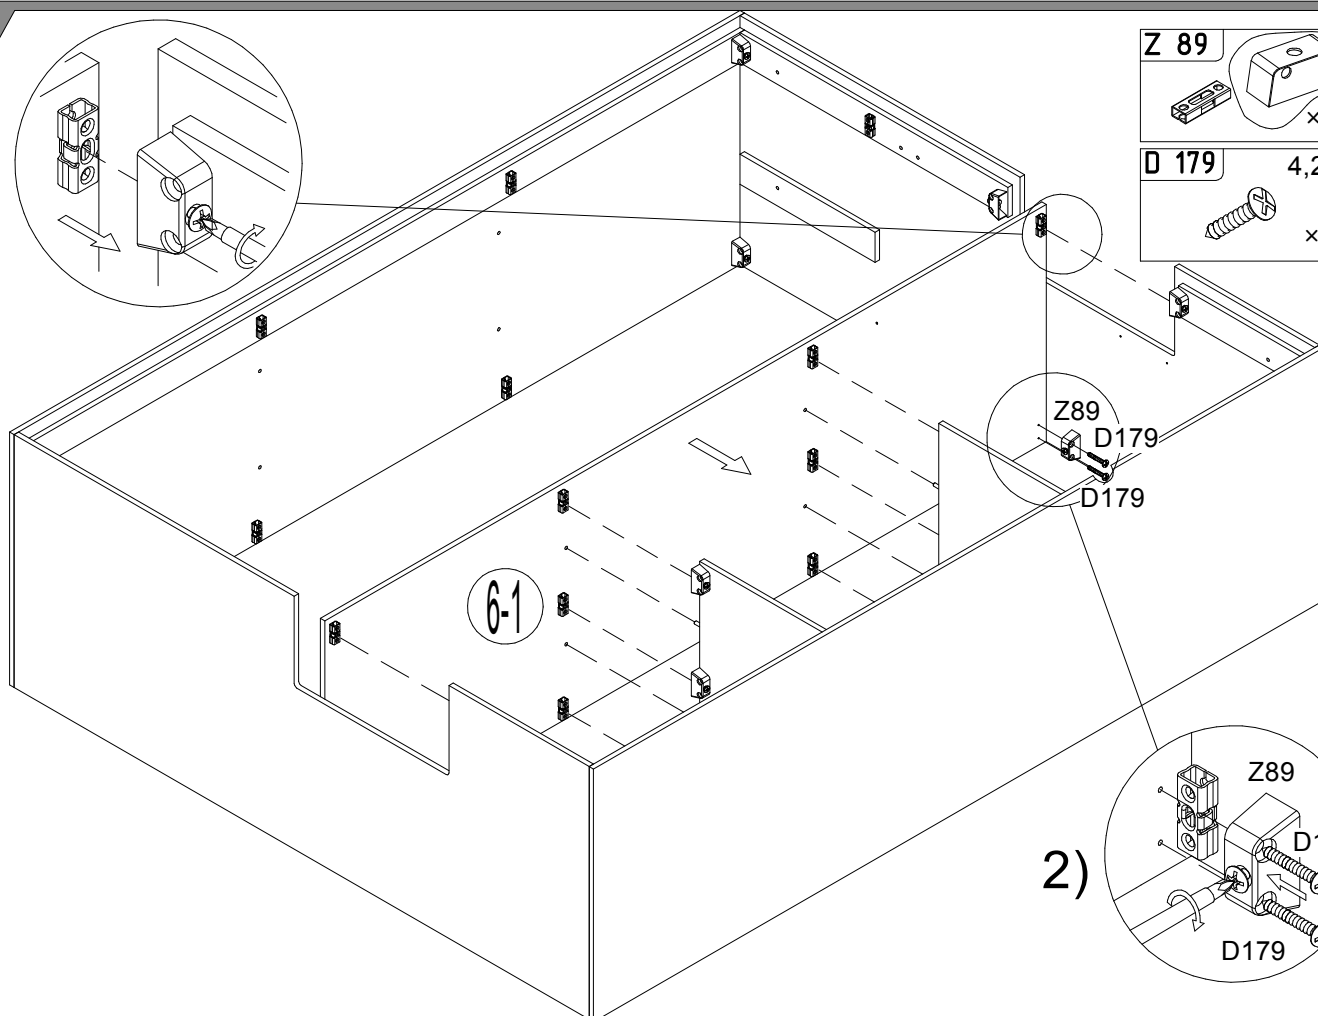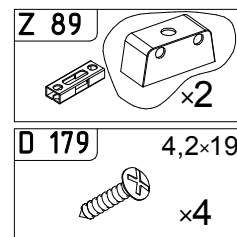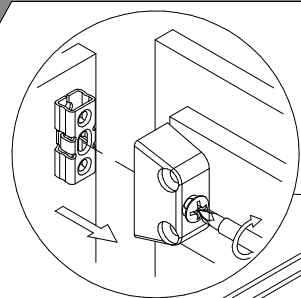

9

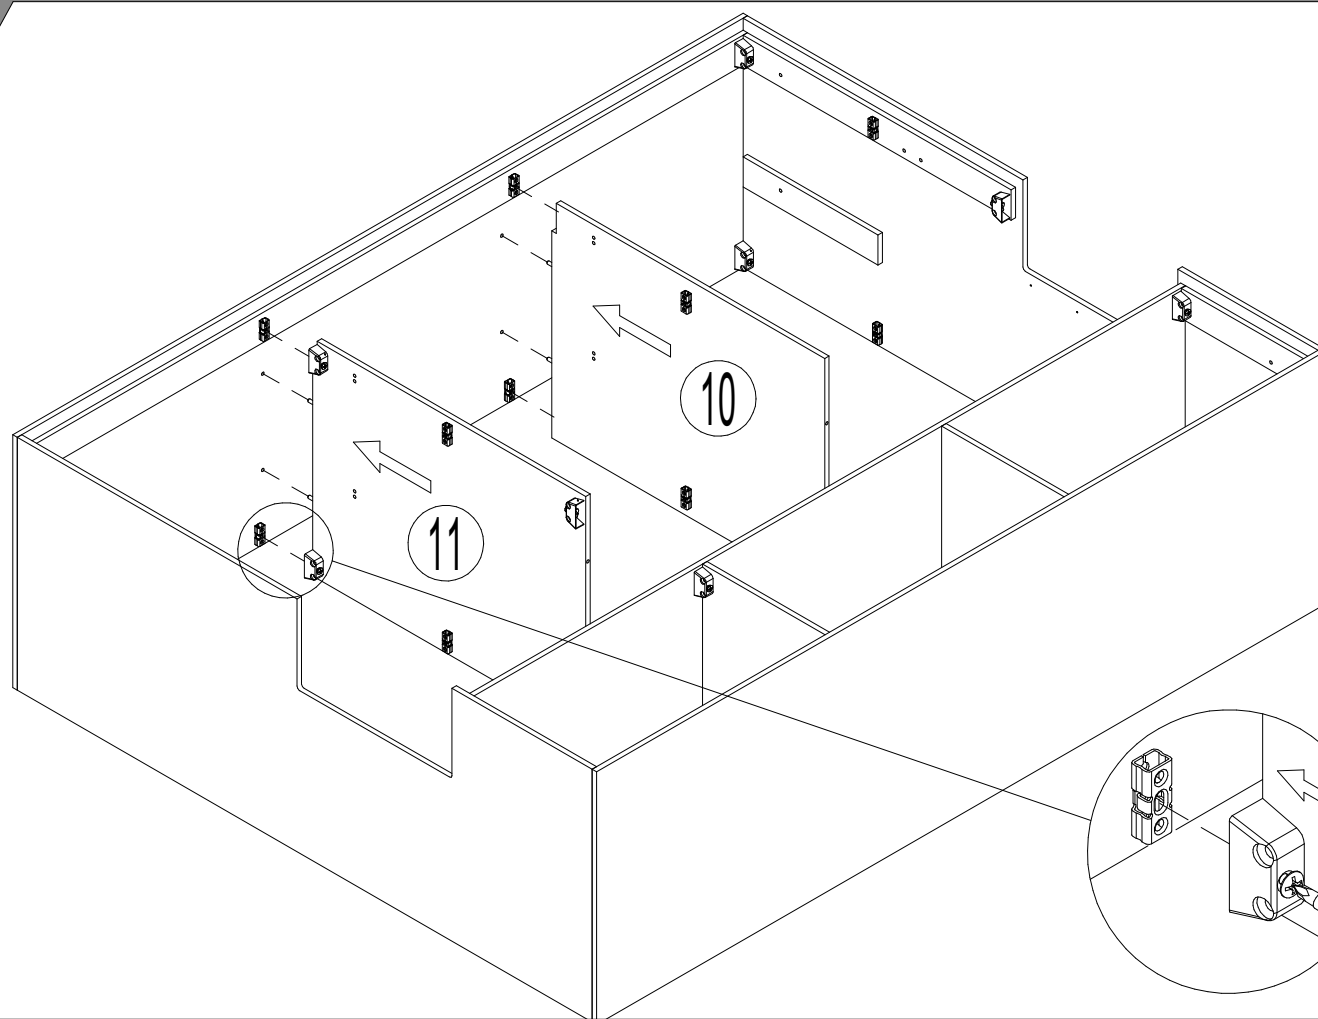


10

1)

D 179 4,2×19
×4


Z 89
×2

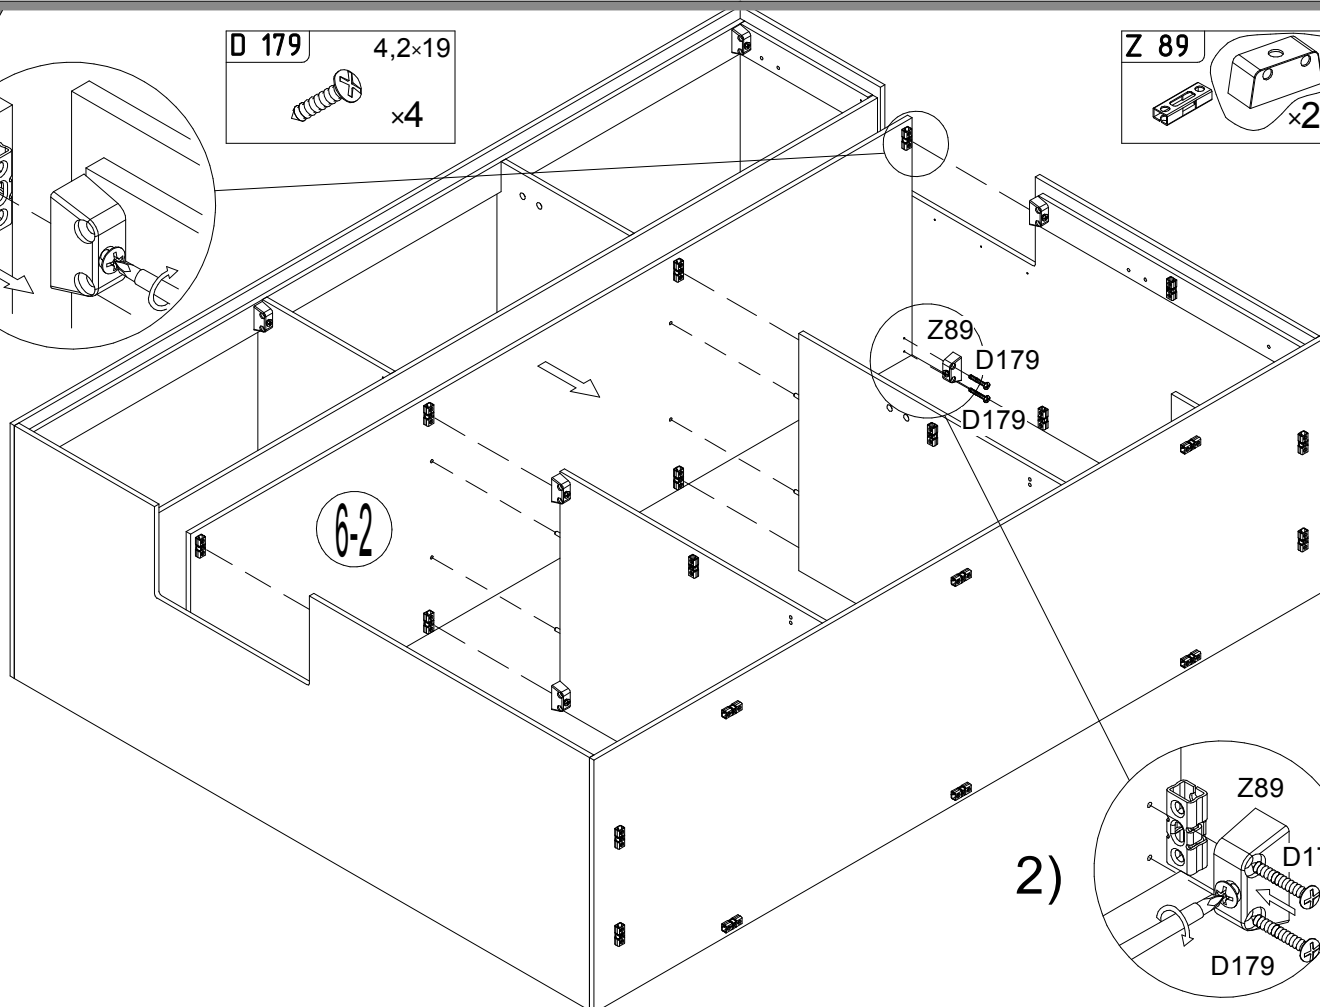



11

Z 89
×12








D 179 4,2×19
×24

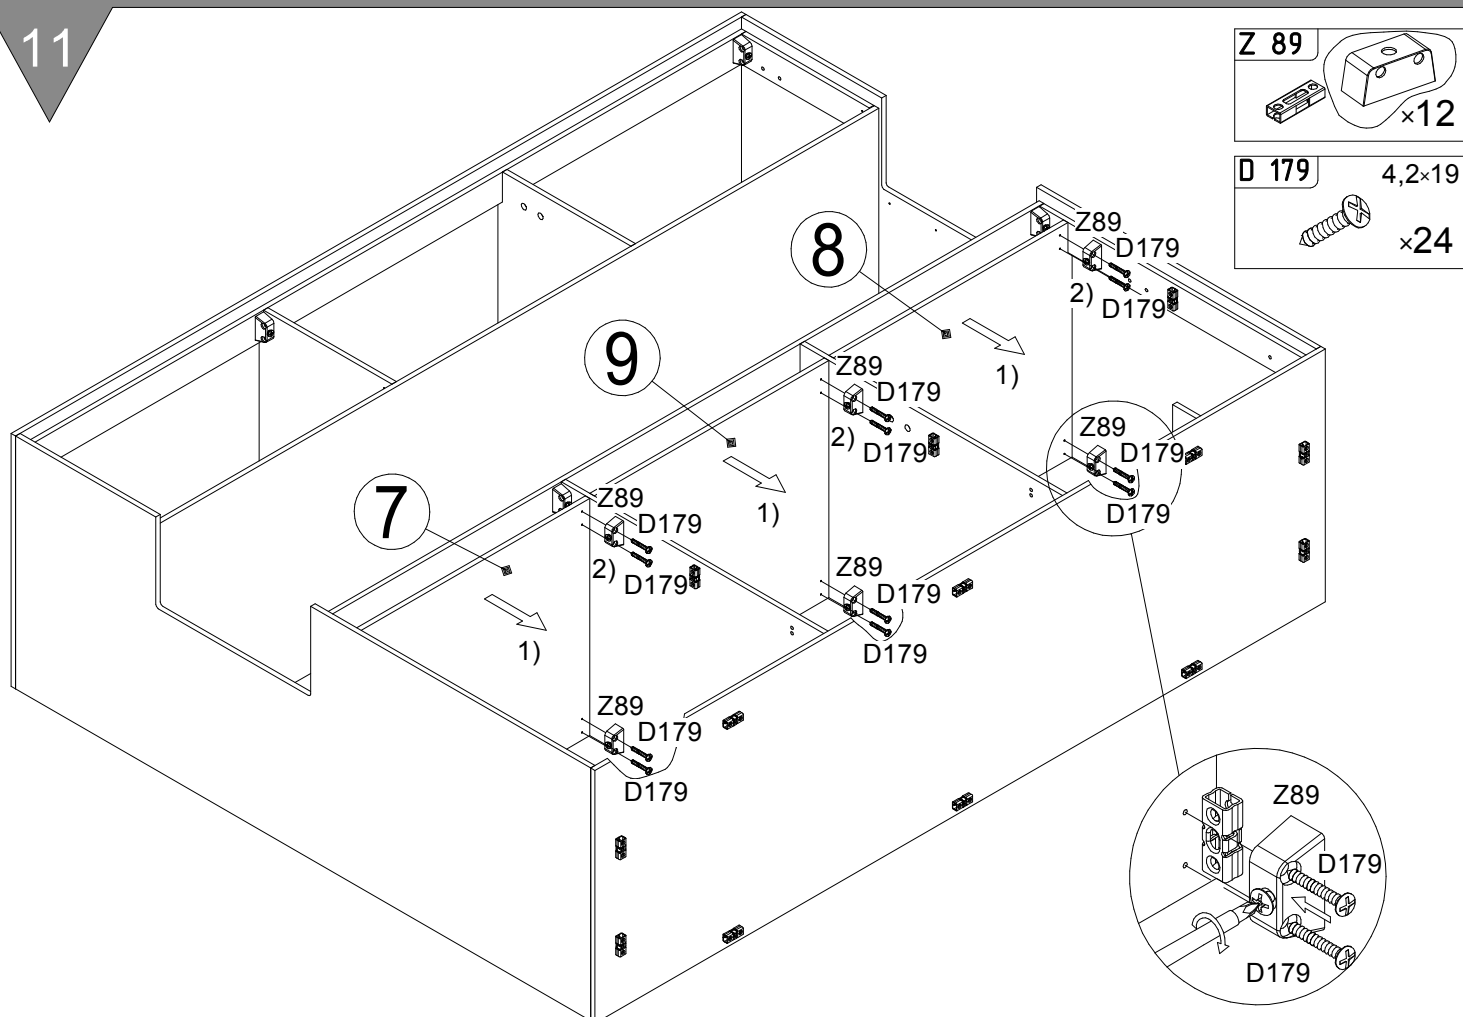



14

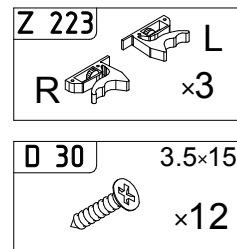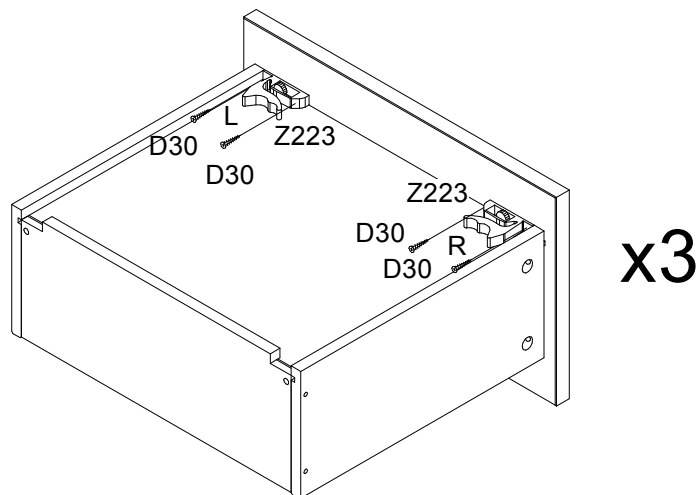


15

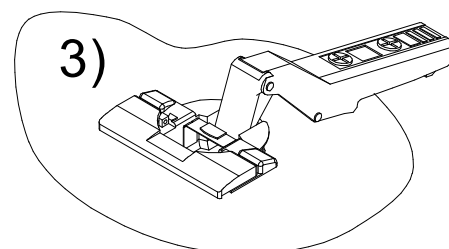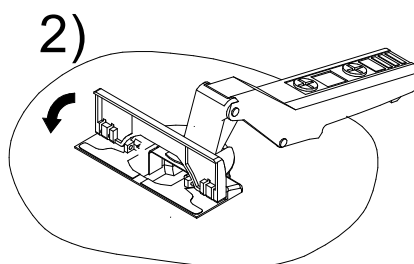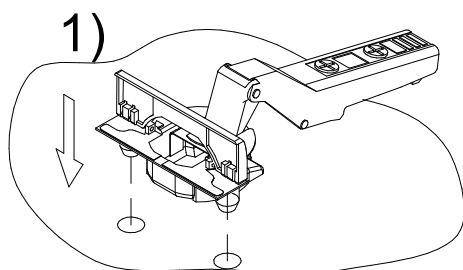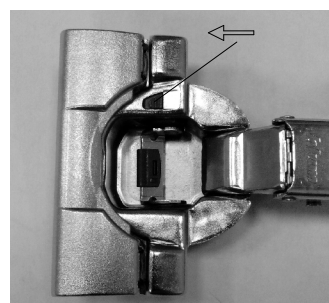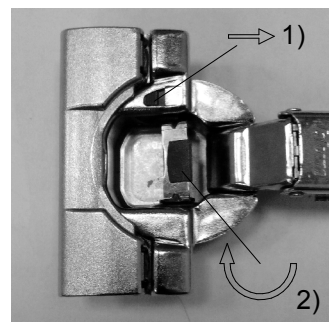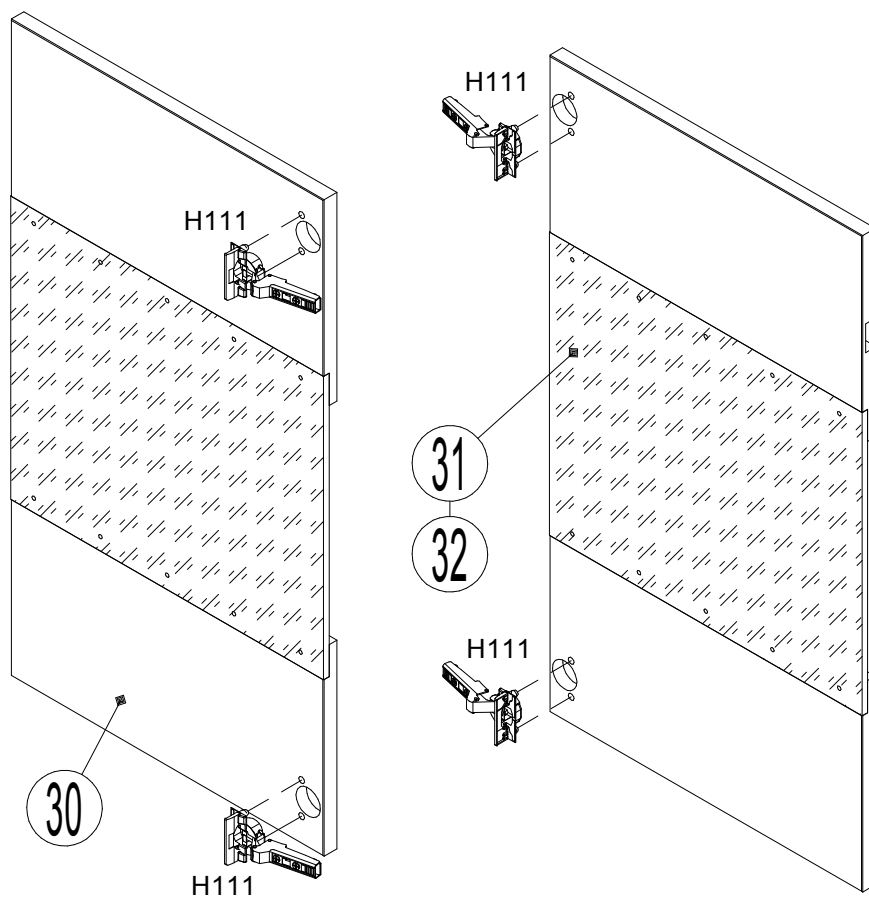


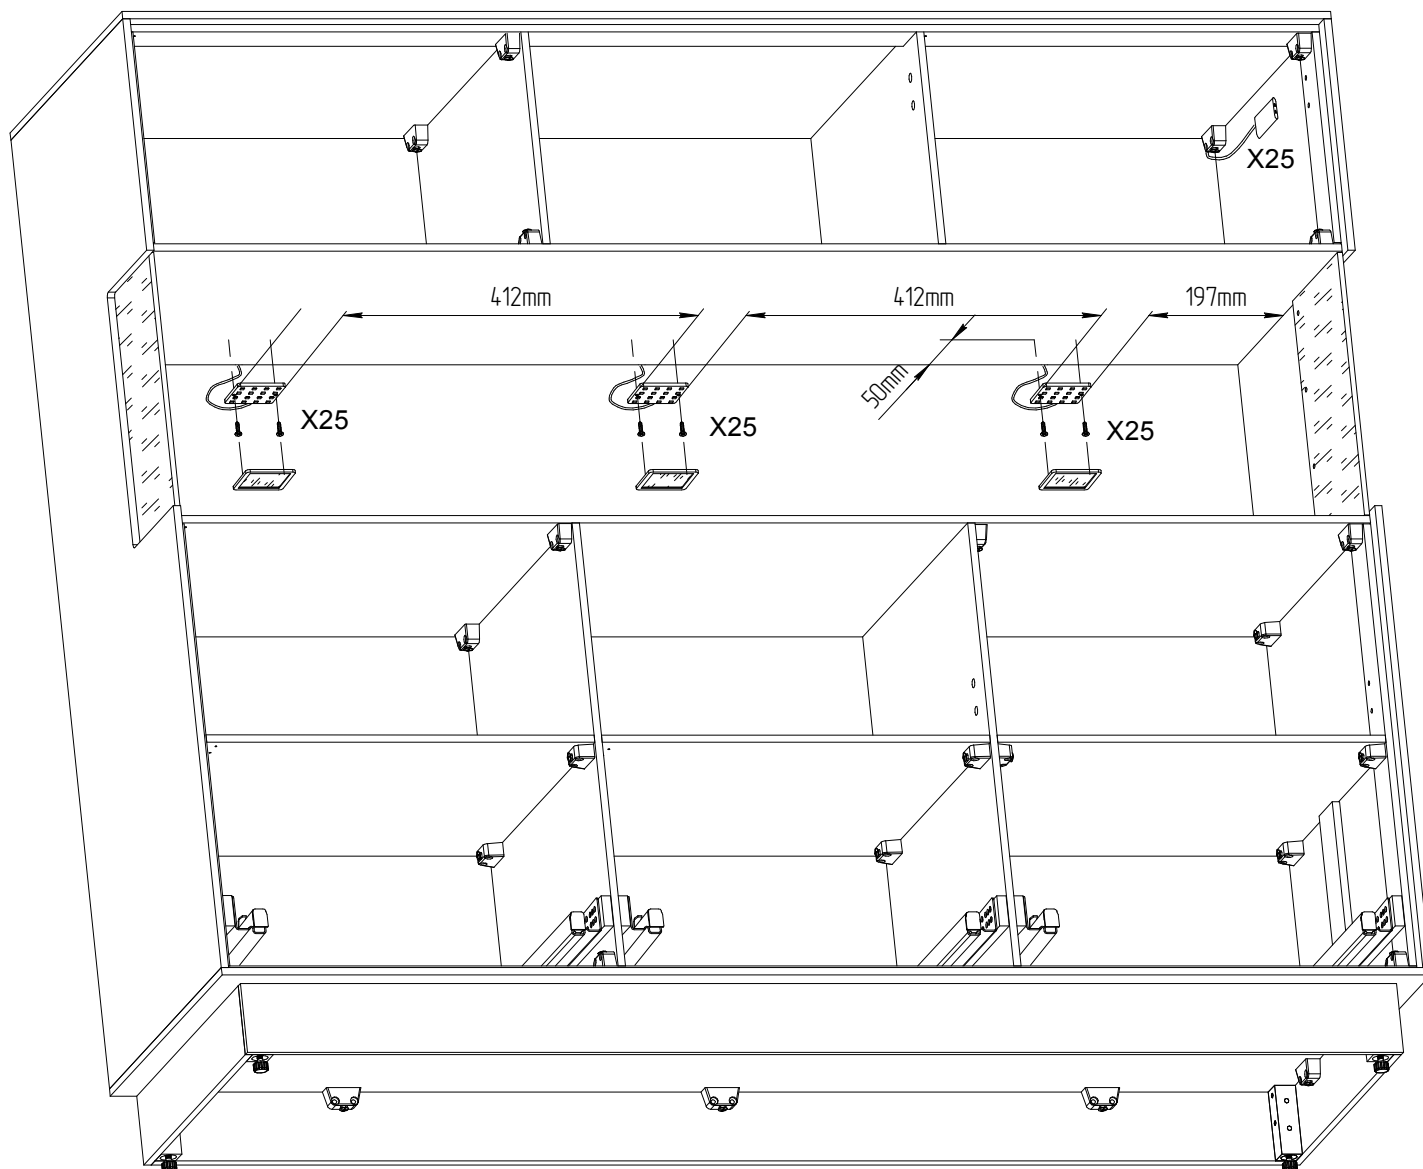

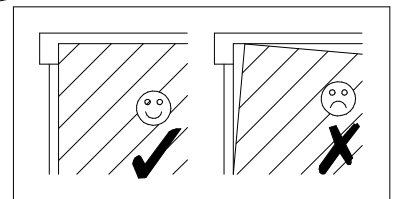

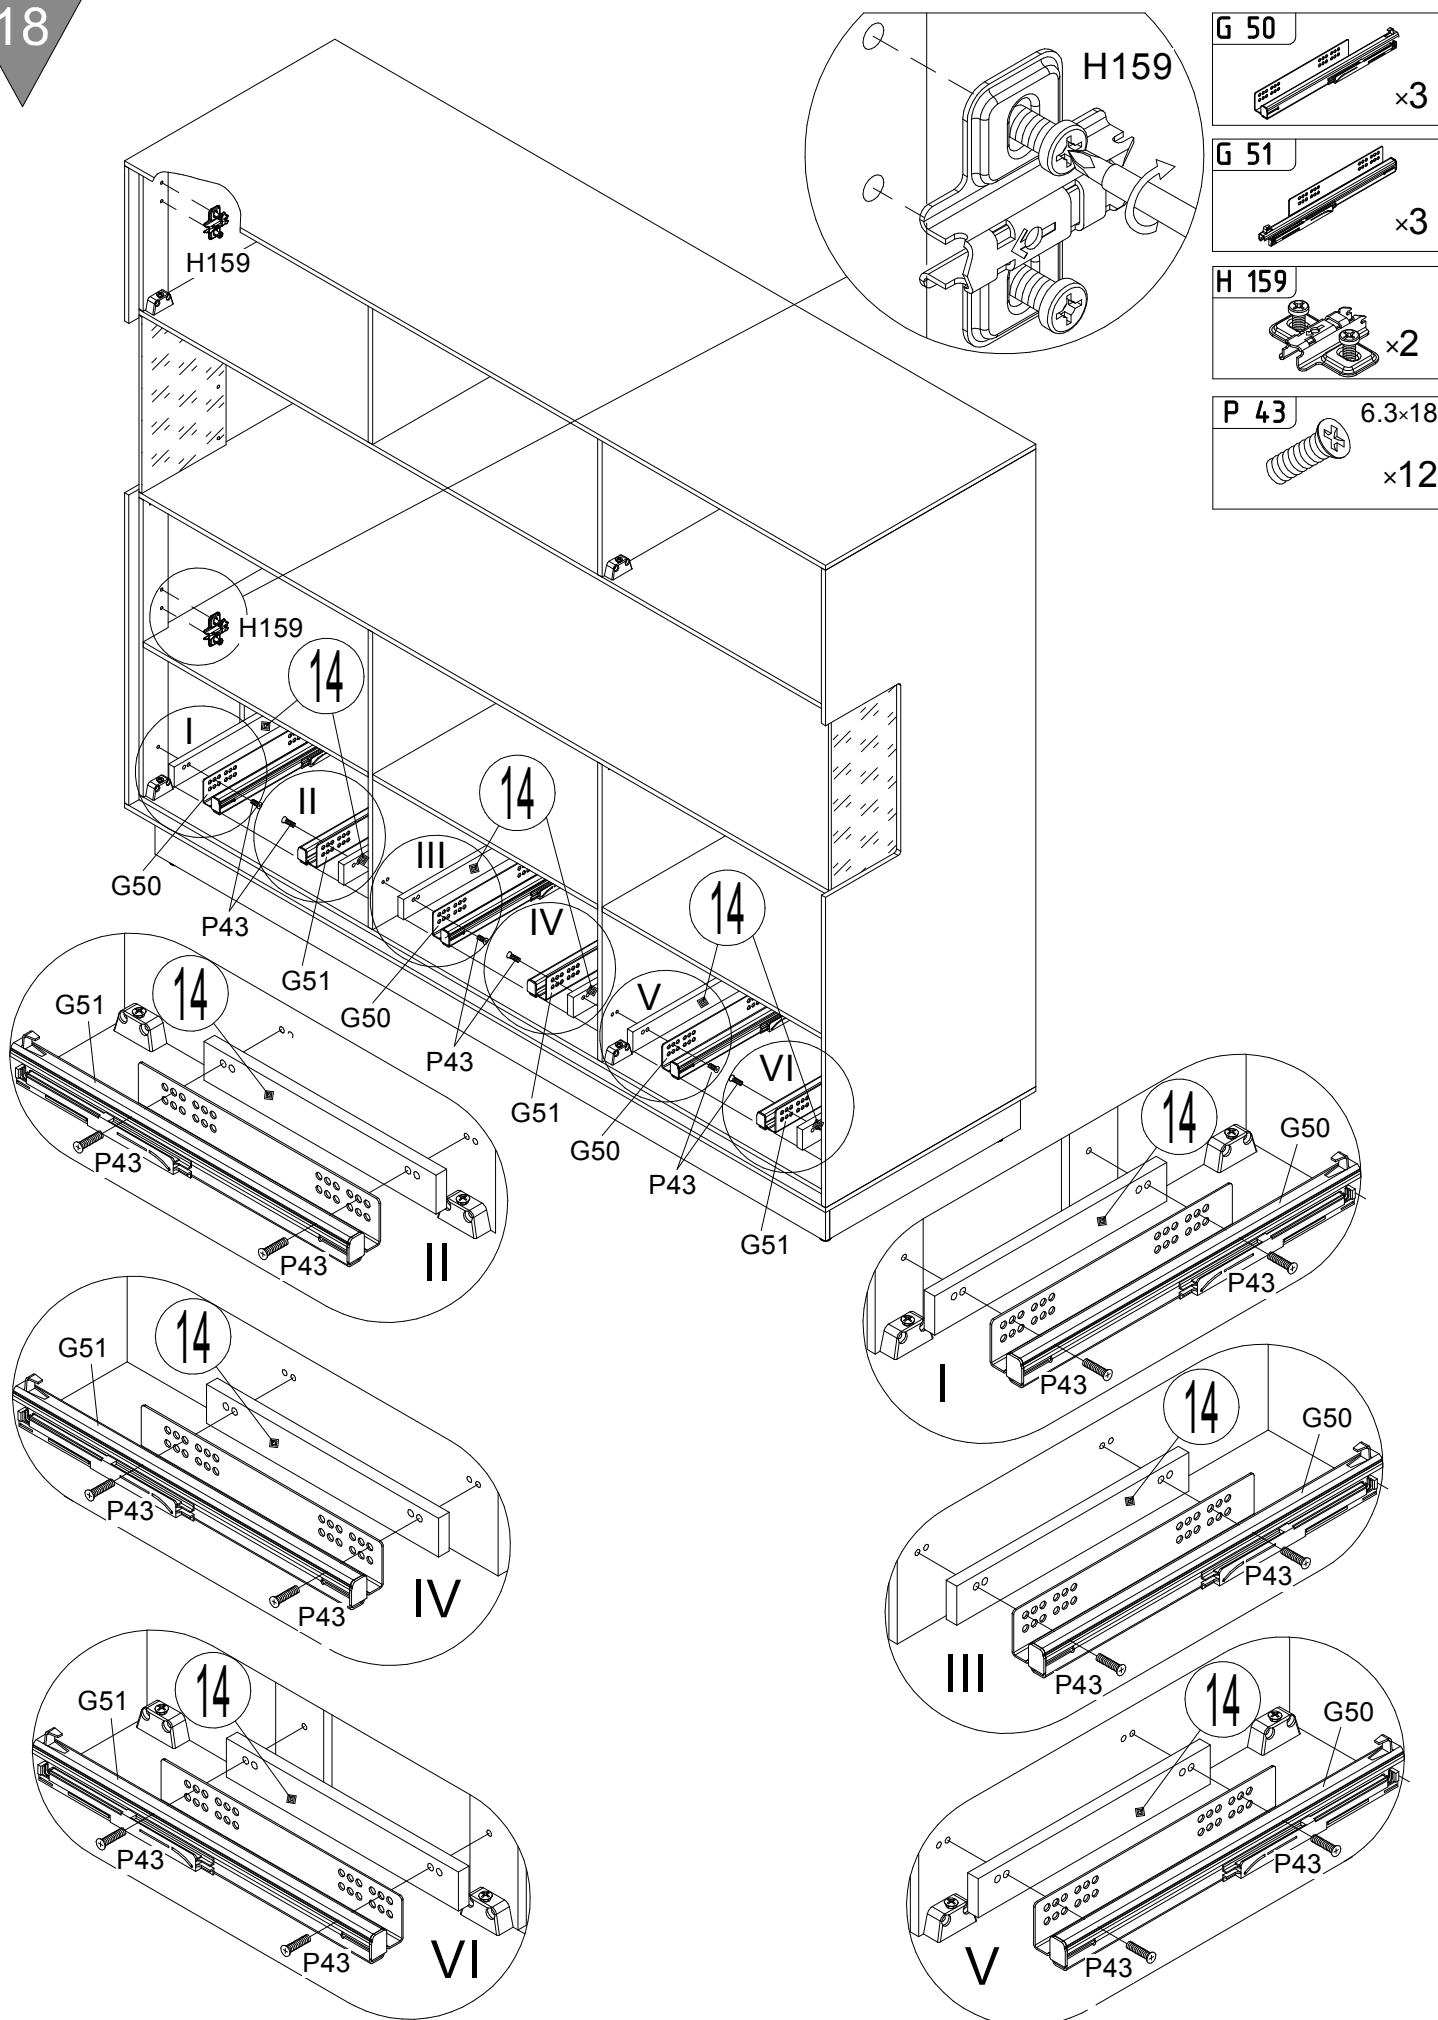

1)

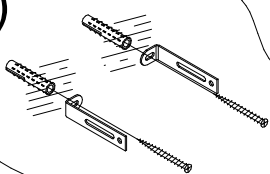

D 139 3.9x9.5
x2

N 18
x2

N 50
x4

H 112
x2


D 91 4.0x60
x2

P 176 M4x9
x4


H 159
x2

N 2 8x50
x2

2)

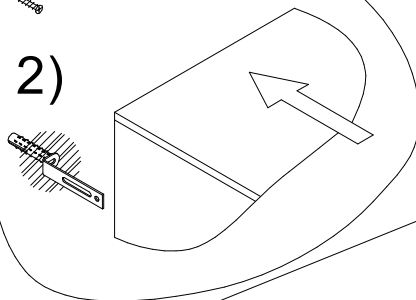

H159

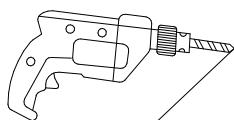

N2
N18
D139
D91

H159

N50
P176
H112
N50
P176

N2
D139
N18
D91

H159


N50
H112
P176
N50
P176

1)

N50
N50

2)

H112 N50
P176 N50
P176



×6

1)

2)

S72

30

31

32

5kg

5kg

5kg



**Achtung • Attention • Attenzione
Opgelet • Uwaga • Pozor • Figyelem
Atenție • Dikkat • Внимание**



(D)	Wandbefestigung dient als Kippschutz – unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping – be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
(FR)	La fixation murale sert de protection contre le basculement – à installer impérativement ! Pour certains types de murs il faut des chevilles spéciales !
(IT)	Il fissaggio alla parete serve da protezione anti-ribaltamento – attaccarla assolutamente! Per alcune strutture di parete può essere necessario un tassello speciale!
(NL)	Bevestiging aan de muur dient als kantelbescherming – zeker en vast bevestigen! Bij enkele muurtypes is een speciale plug misschien vereist!
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem – koniecznie zamontować! Do niektórych rodzajów ścian koniecznie zastosować specjalne kołki mocujące.
(CZ)	Montáž na stěnu slouží jako ochrana proti převrnutí – bezpodmínečně umístěte! U některých typů stěn může být zapotřebí speciální hmoždinka!
(SK)	Upevnenie na stenu slúži ako ochrana proti prevráteniu – bezpodmienečne použite! Pre niektoré druhy stien môže byť potrebná špeciálna hmoždinka!
(HU)	A terméket a falhoz kel rögzíteni, különben az felborulhat! Egyes faltípusoknál speciális tiplit kell használni!
(RO)	Sistemul de fixare la perete servește ca protecție la răsturnare – de montat obligatoriu! Pentru unele tipuri de pereți este posibil să fie necesar un diblu special!
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir dübel gerekli olabilir!
(RU)	Обязательно установите крепление на стене во избежание опрокидывания! Для некоторых типов стен может потребоваться специальный дюбель!

