
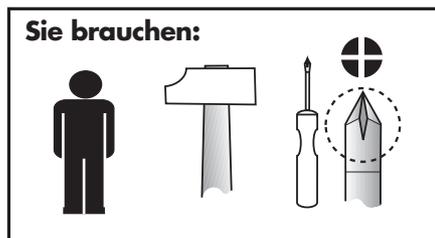


Montageanleitung


!! Bitte gehen Sie bei der Montage genau nach der Anleitung vor !!

Unterschrank

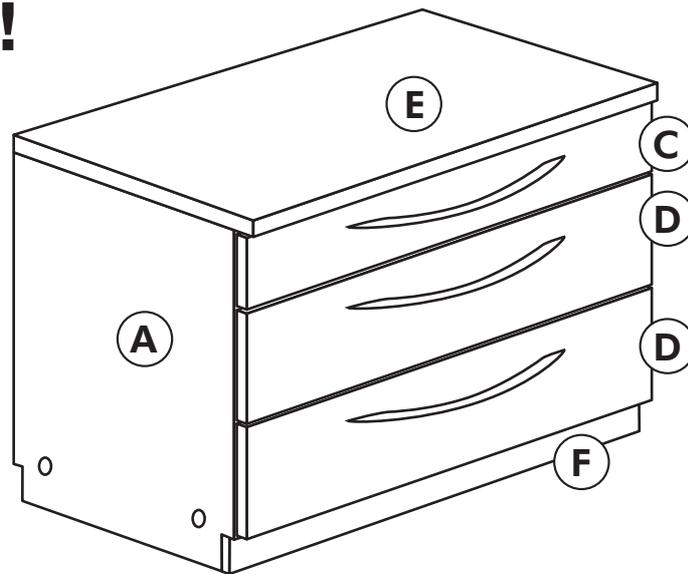


Beschlage:					
1  6x	2  4x	3  3x links	4  3x rechts	5  4x	6  60x 3,5 x 16
7  4x	8  3x	9  24x 3,0 x 20	10  6x	11  6x	12  6x M4 x 19


Holzteile:

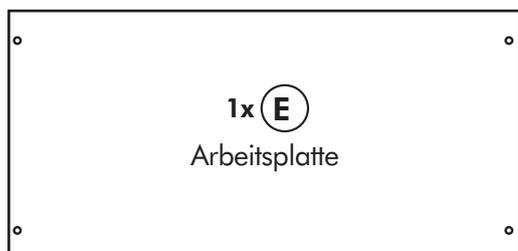





1x **F** Sockel

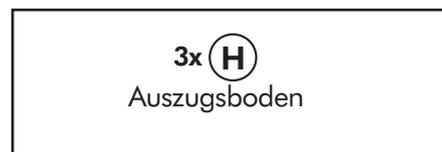


2x **I** Hinterstuck Auszug





1x **M** Hinterstuck Schubkasten

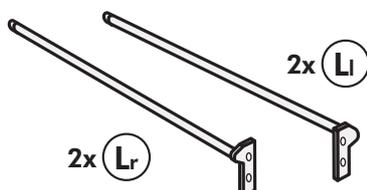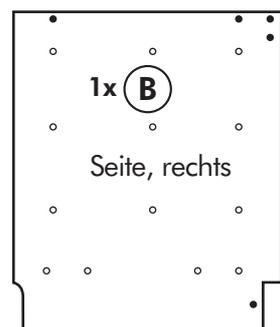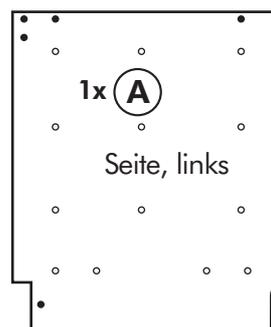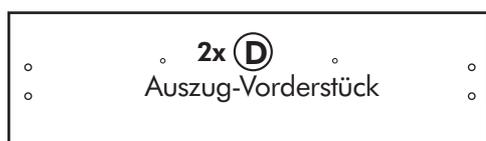


1


10 6x		11 6x		6 18x	3,5 x 16 
		4 3x rechts		3 3x links	

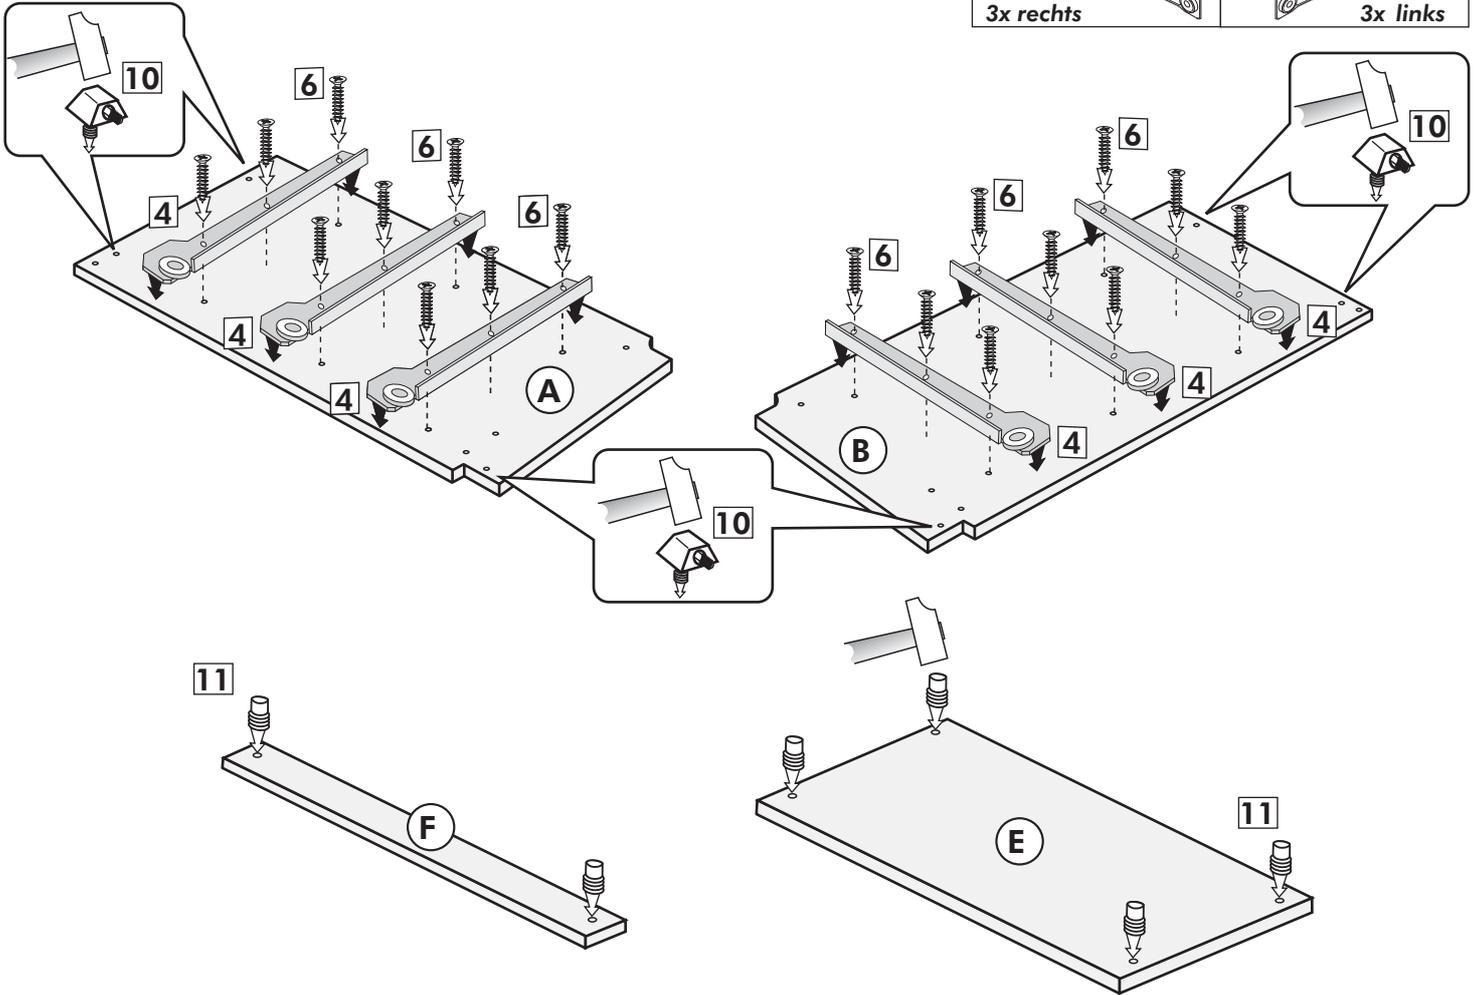**2**


5 4x	
----------------	---

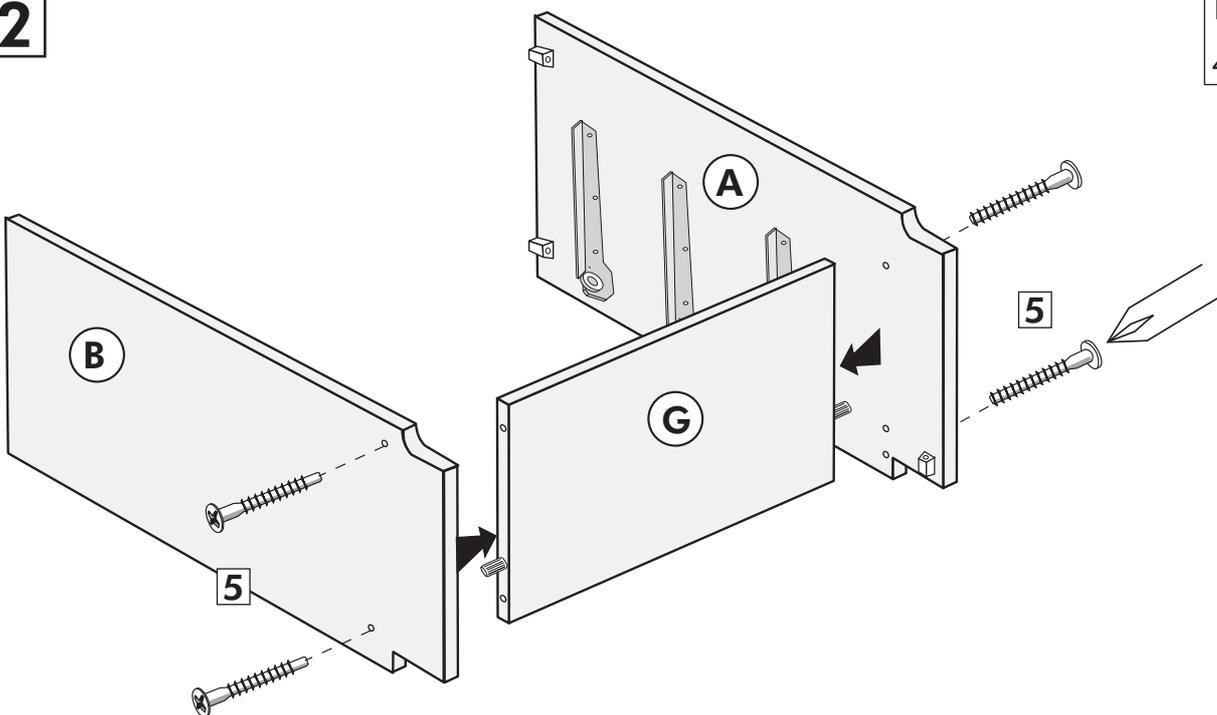

3

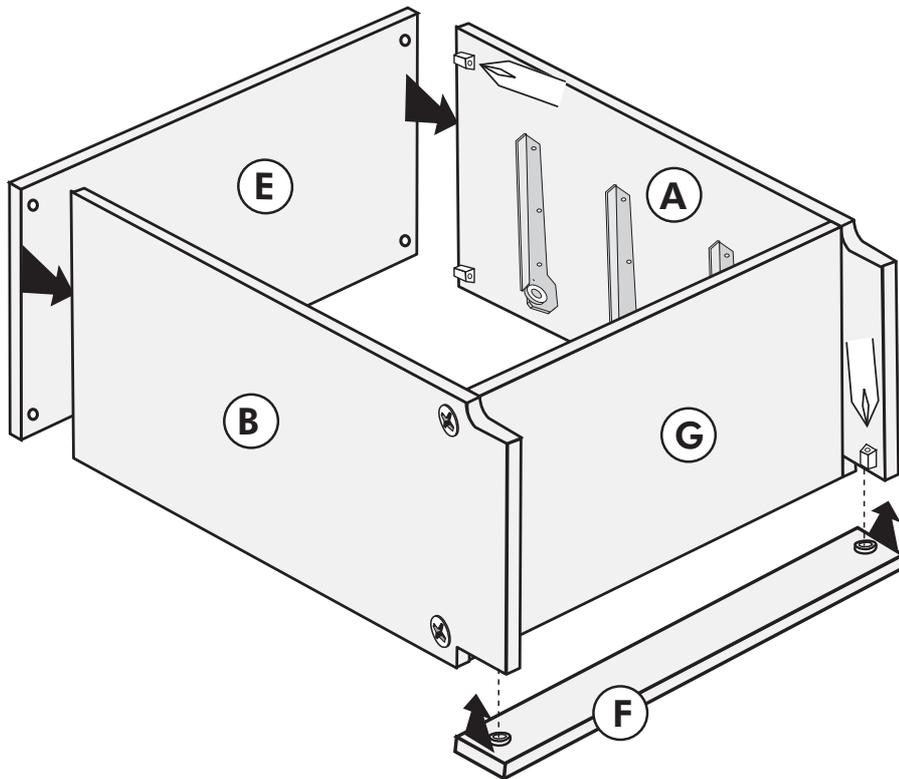


4

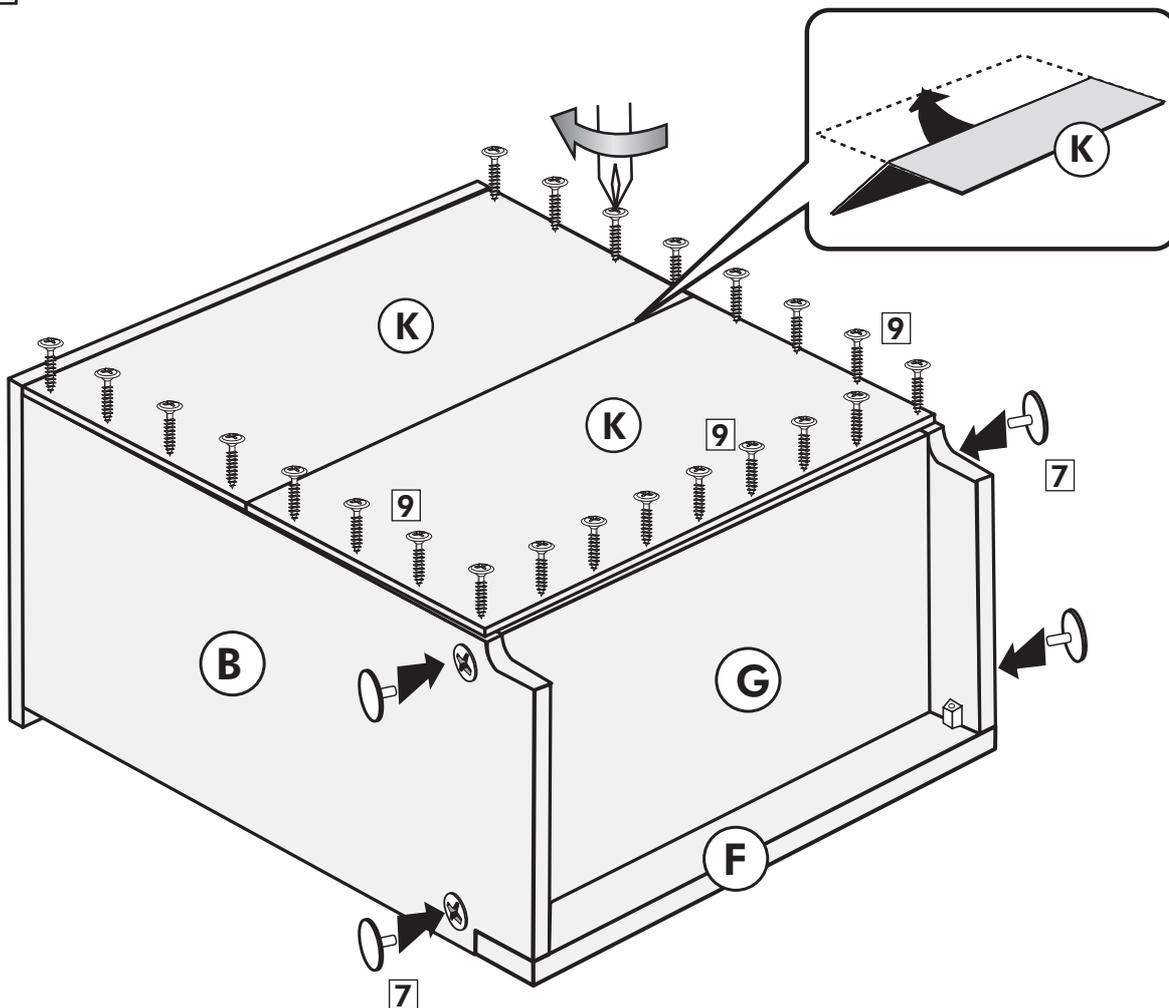


9	3,0 x 20
24x	
7	
4x	

5

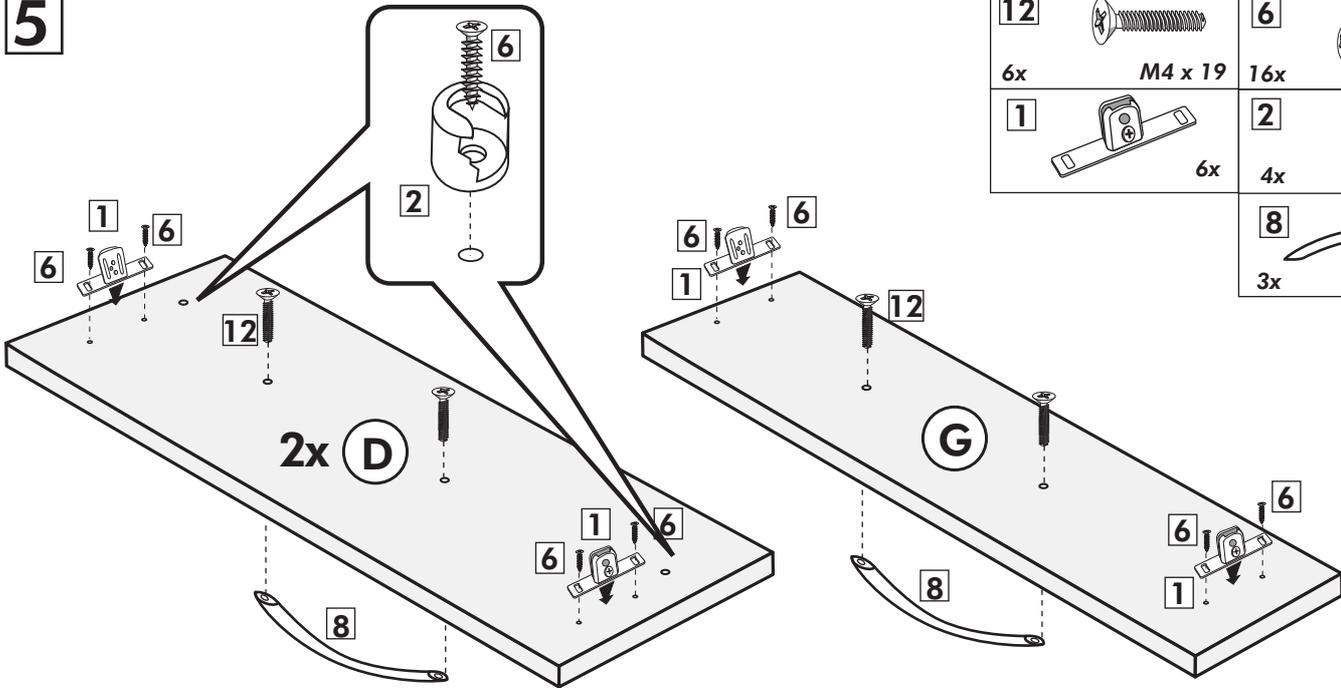



12		6	3,5 x 16
6x	M4 x 19	16x	
1		2	
6x		4x	
		8	
		3x	

6 2x

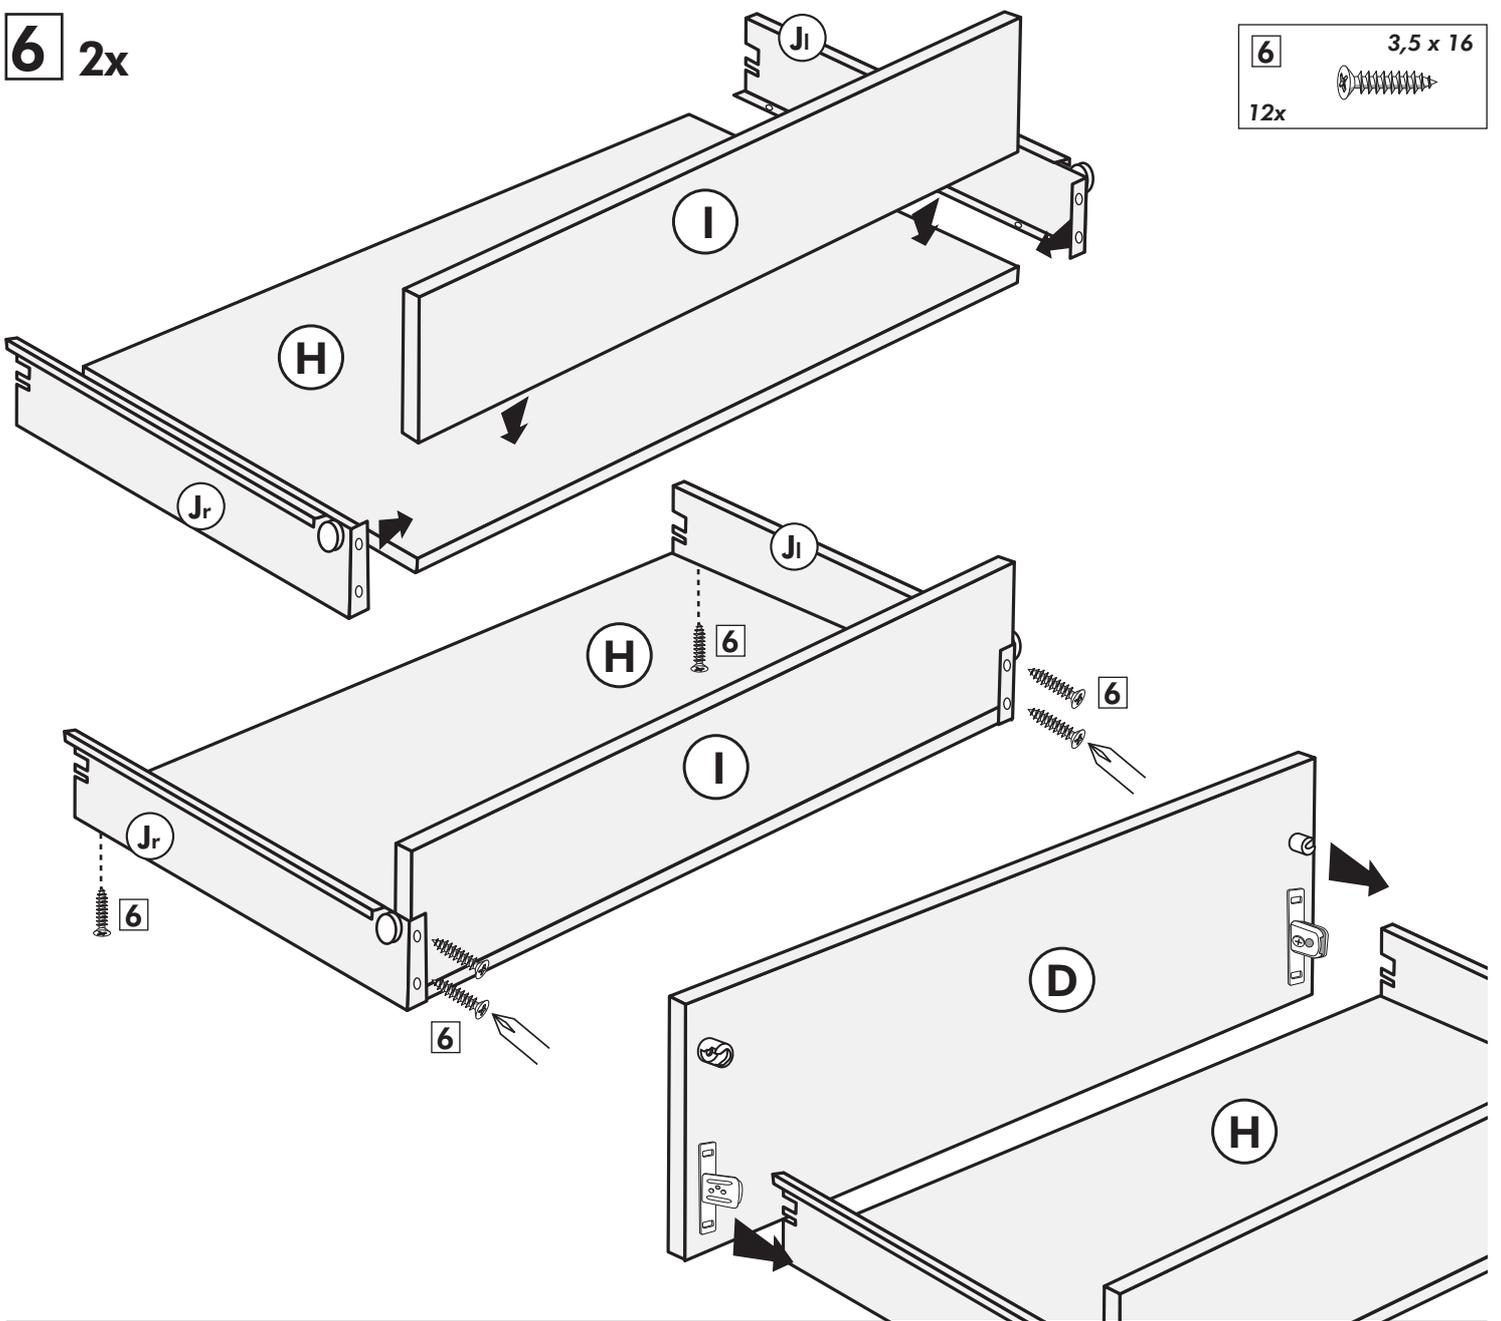


6	3,5 x 16
12x	

7

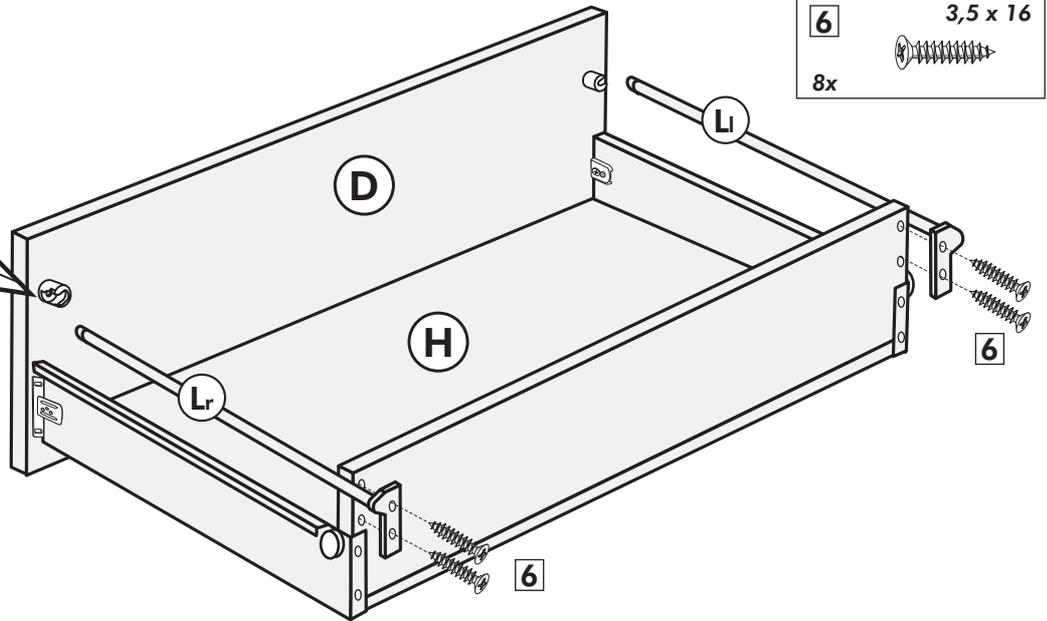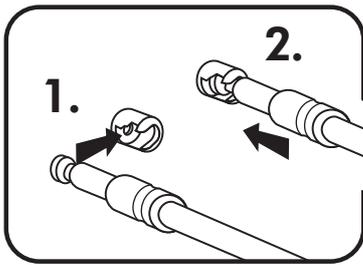


8

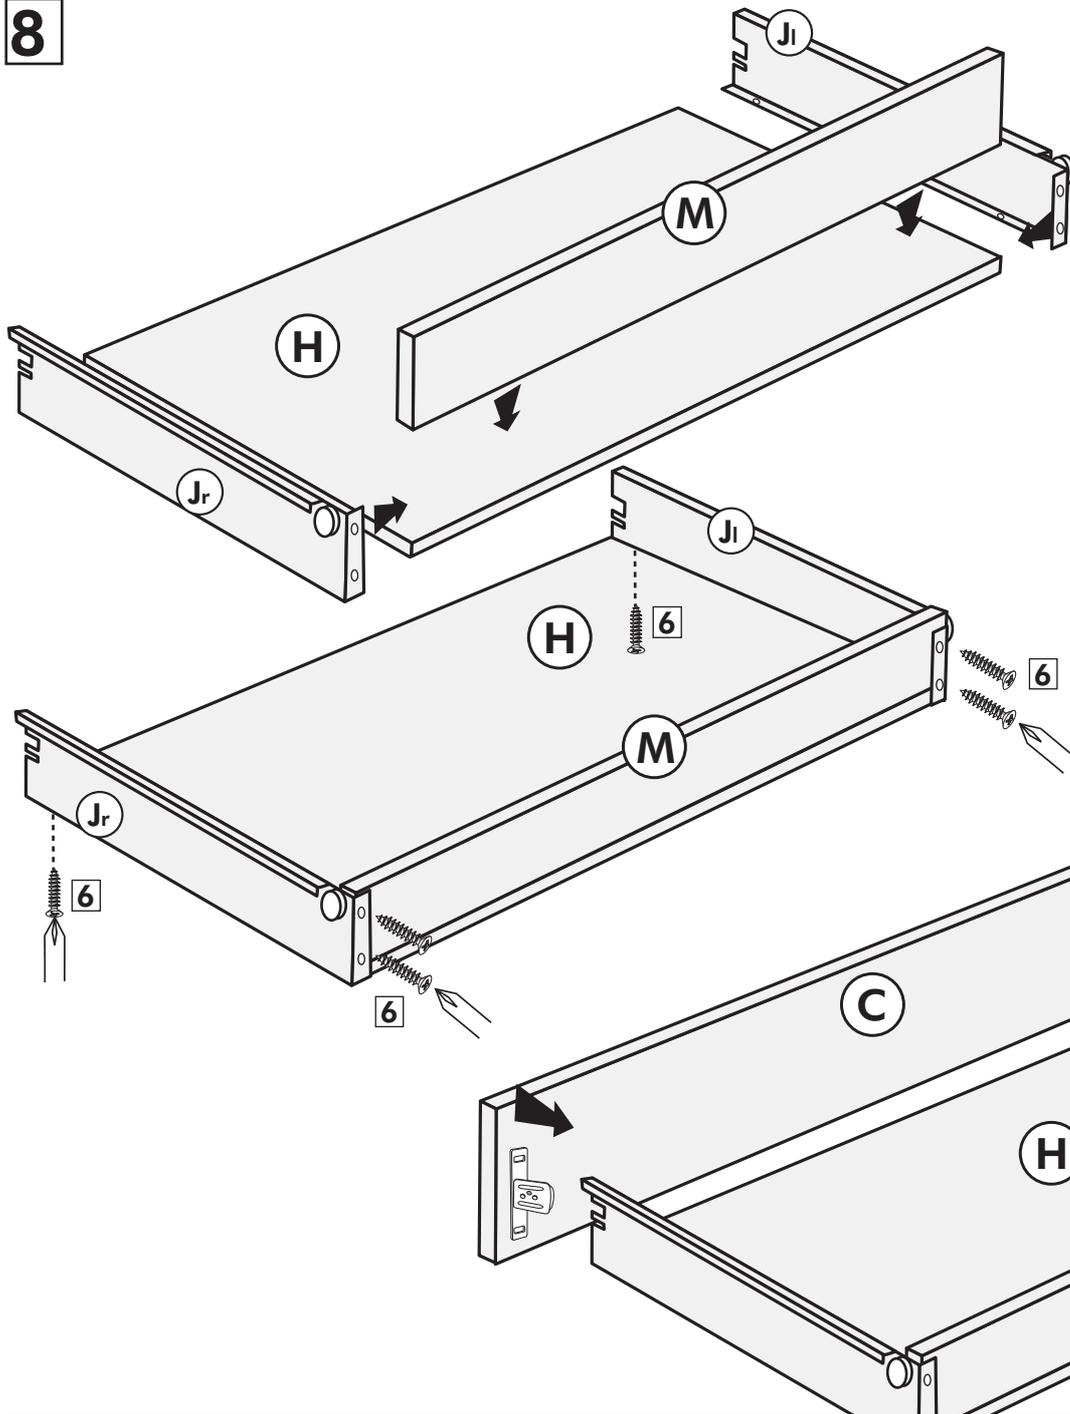

6 3,5 x 16
6x

9

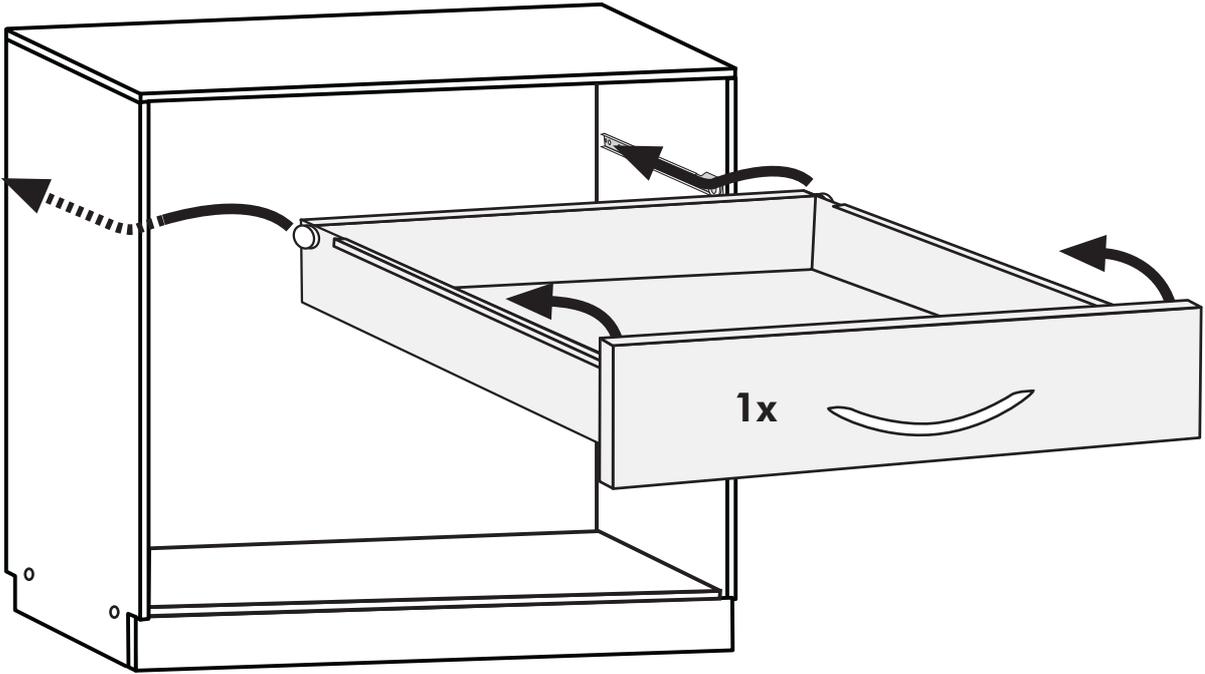

10

