

D Aufbauanleitung

NL Handleiding voor de Montage

PL Instrukcja montażu

SK Montážny návod

RO Instrucțiuni de asamblare

GB Assembly Instruction

TR Montaj Talimatları

CZ Shromazďování instrukce

I Istruzioni per il montaggio



F Instructions de montage

RU Инструкция по монтажу

H Gennyesevés utasítások


Boxspringbett Lifestyle

Polsterbett-Gestoffteerde bed-Tapicerowane łóżko-Tapitate pat-Upholstered bed-Мягкая кровать-яатак kapitone-Letto imbottito-Lit rembourré
Čalunené posteľ Čalunené posteľ kárpitovaný ágy

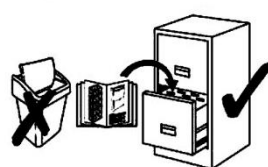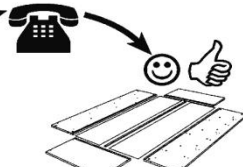


160/180/200 cm

2x

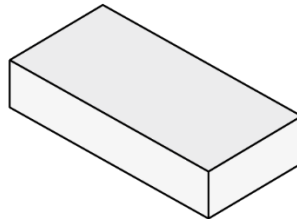


2x

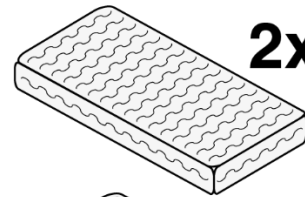


8x


1x

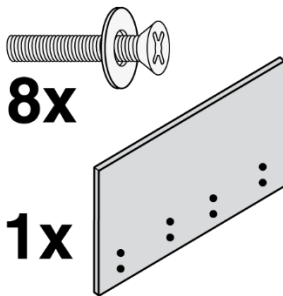


8x

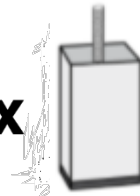


1x

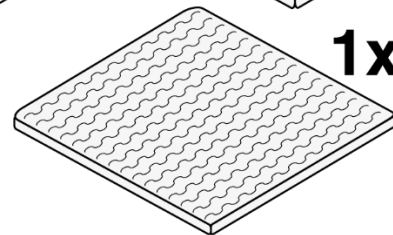


1

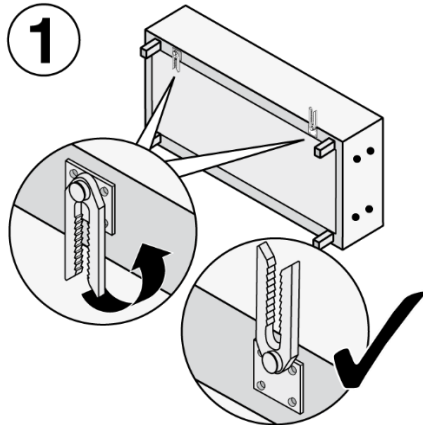


2

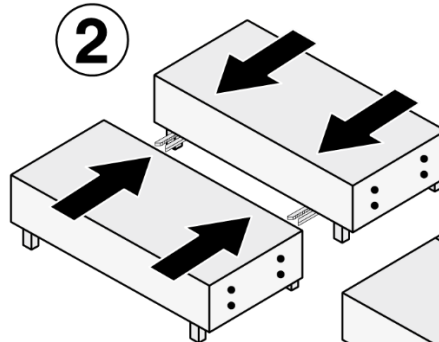

3



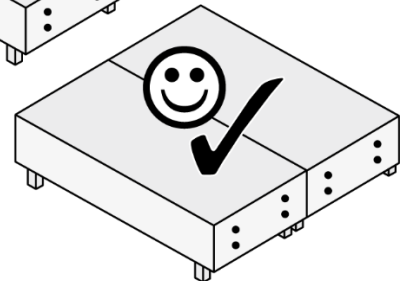


4

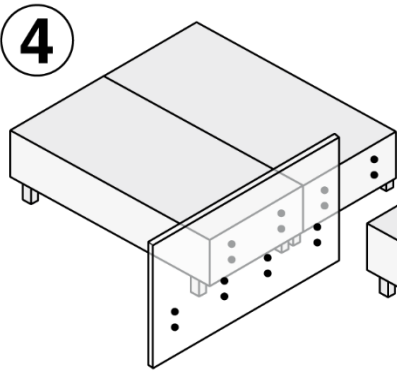


5


8x

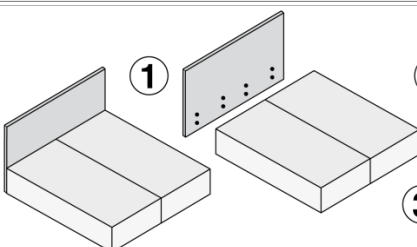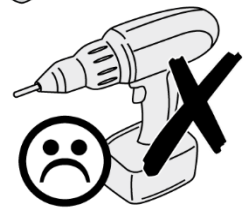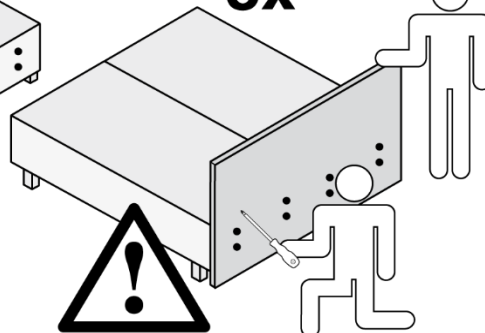

2



3



WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Straße 123
32584 Löhne