
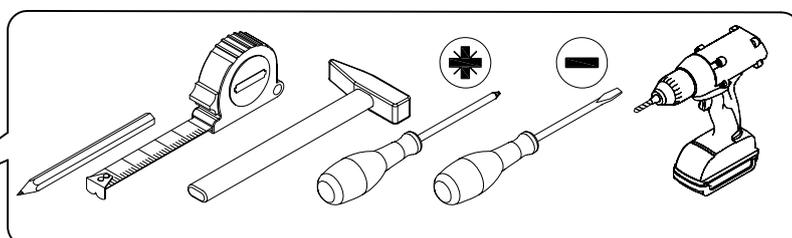





- |                                  |                              |
|----------------------------------|------------------------------|
| (D) Montageanleitung             | (GB) Assembly instructions   |
| (FR) Notice de montage           | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu      |
| (CZ) Montážní návod              | (SK) Návod na montáž         |
| (HU) Szerelési útmutató          | (RO) Instrucțiuni de montaj  |
| (TR) Montaj talimatları          | (RU) Инструкция по монтажу   |

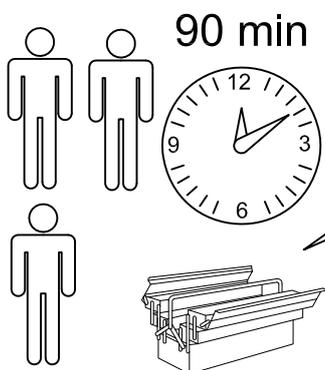

Name • Nom • Nome • Naam • Nazwa • Jaméno  
• Názov • Név • Denumire • Isim • Название















Nr. • No. • N° • Номер • Č • Sz



Typ • Type • Tip • Tipus • Tipo • Тип

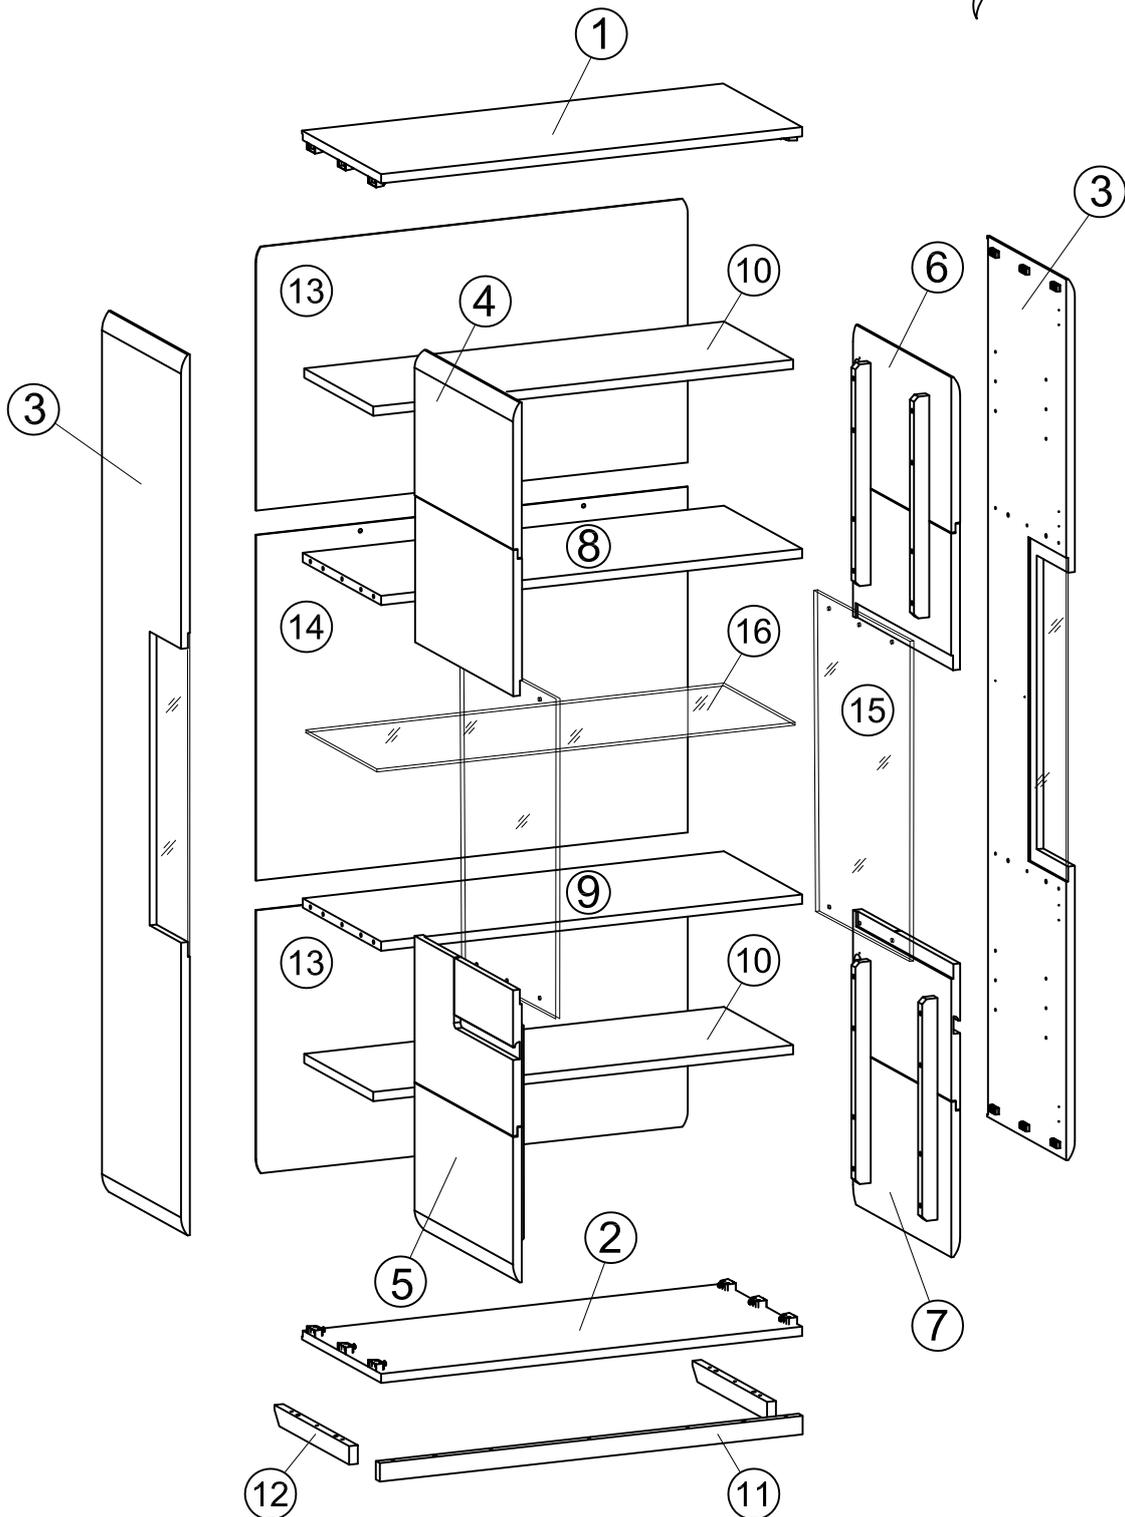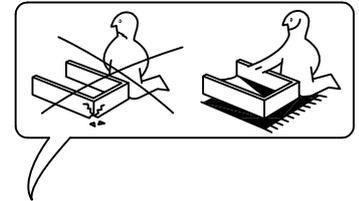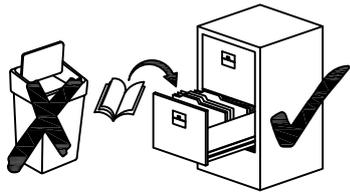


No	Size/MaB	Qty	✓
1	960x400x20	1	
2	960x400x20	1	
3	1906x400x20	2	
4	498x634x55	1	
5	498x634x55	1	
6	498x634x55	1	
7	498x634x55	1	
8	960x396x20	1	
9	960x396x20	1	
10	957x350x20	2	
11	964x40x20	1	
12	378x40x20	2	
13	570x984x3.2	2	
14	748x984x3.2	1	
15	698x482x4	2	
16	953x360x4	1	

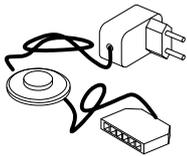

<b>C11a</b> x12 	<b>C11b</b> x12 	<b>J14</b> x48  4x25	<b>K1</b> x14  Ø8x35	<b>J6</b> x11  4x50	<b>R1</b> x5 	<b>J2</b> x36  4x16
<b>M1</b> x8 	<b>L1</b> x8 	<b>B1</b> x12 	<b>C1</b> x12  Ø15	<b>J1</b> x12  3.5x16	<b>S4</b> x1 	<b>S5</b> x2 
<b>J8</b> x4 	<b>P1</b> x2 	<b>G1</b> x2 	<b>V1</b> x2 	<b>Z2</b> x8 	<b>J9</b> x52  2x20	<b>W1</b> x14 
<b>Q2</b> x12 	<b>J15</b> x4  3x16					

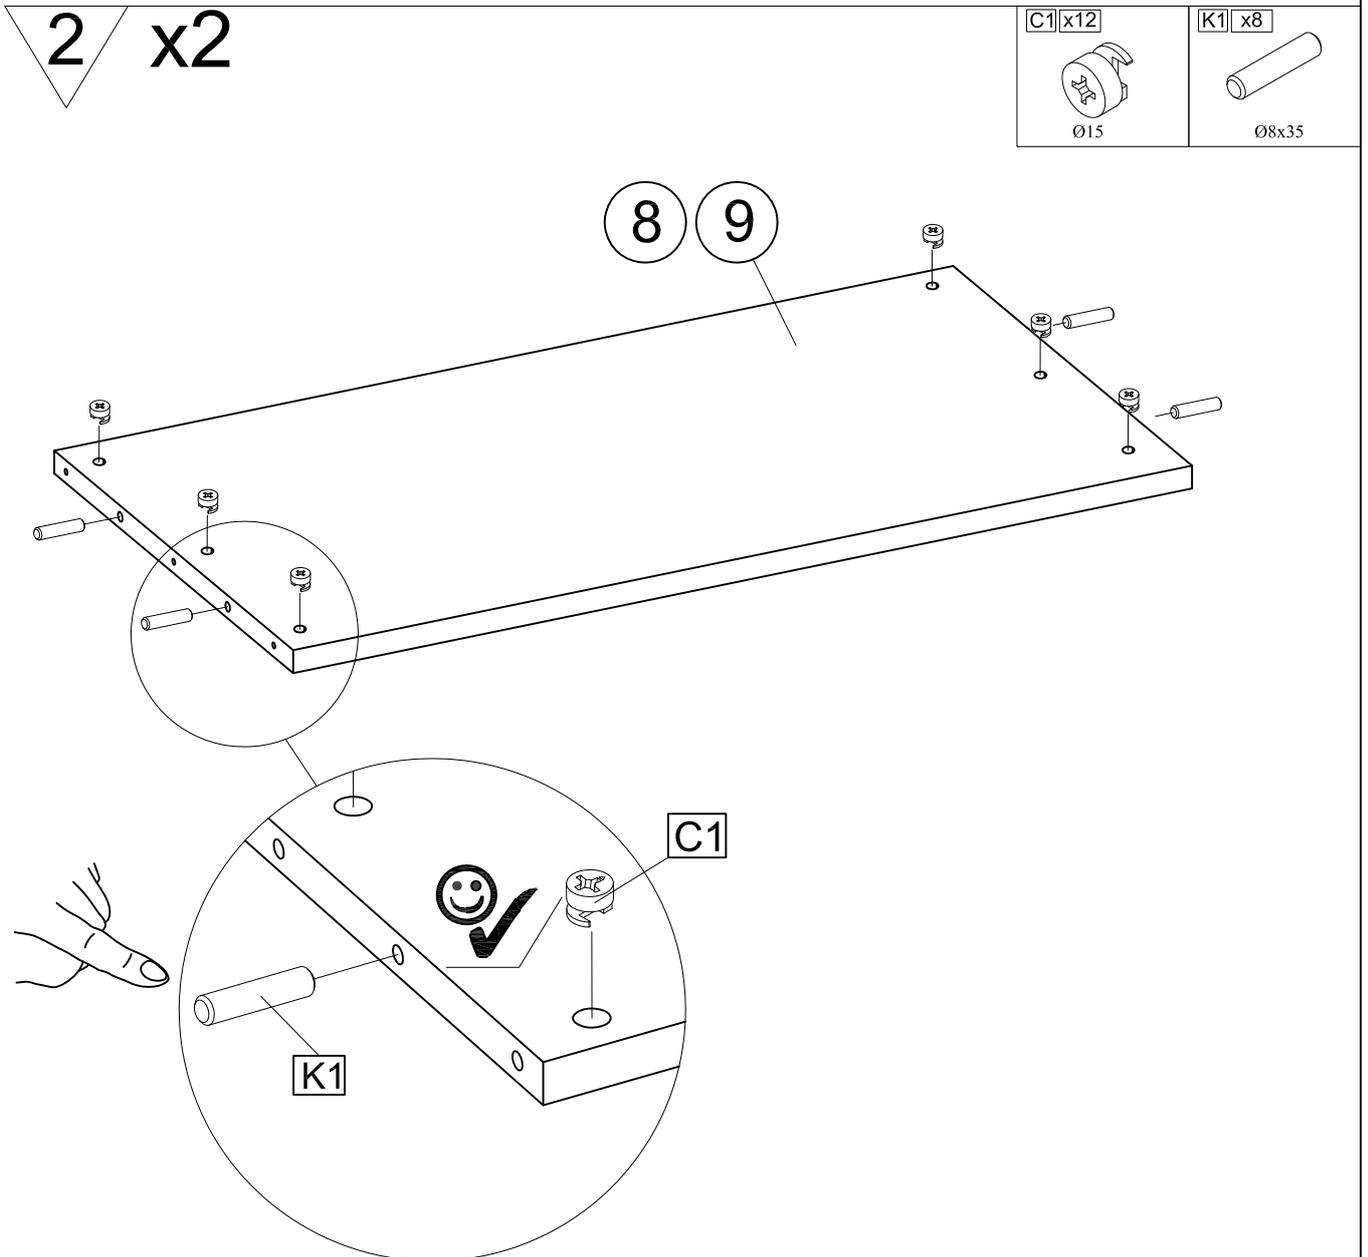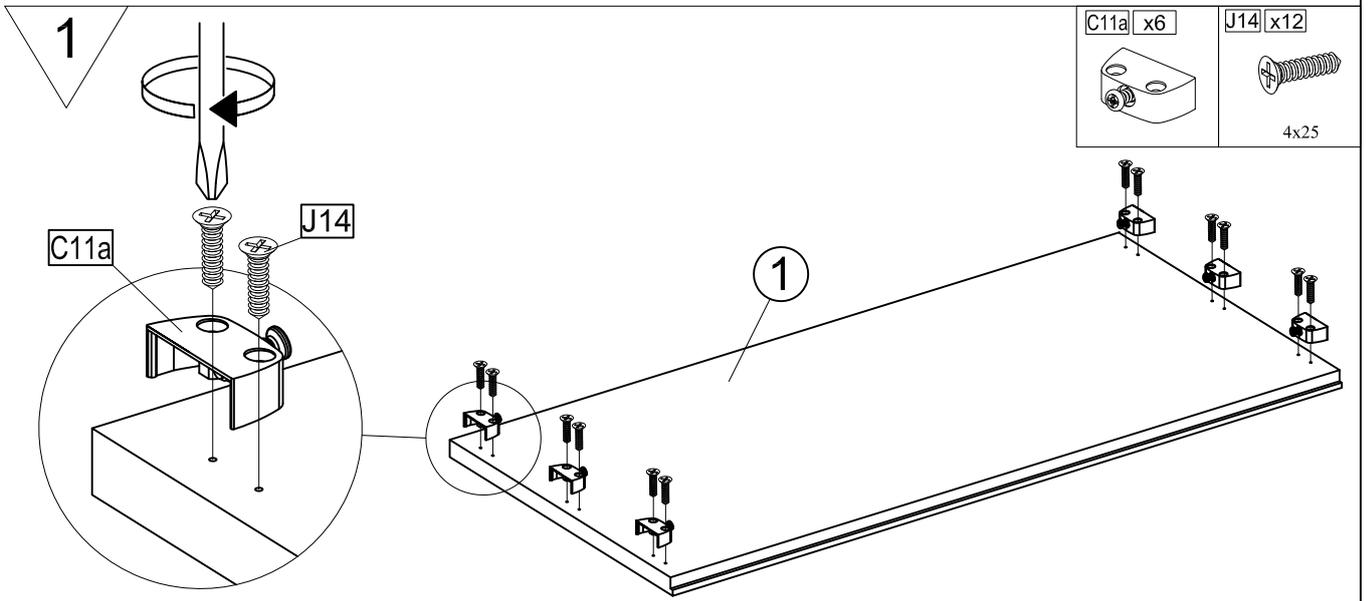



3

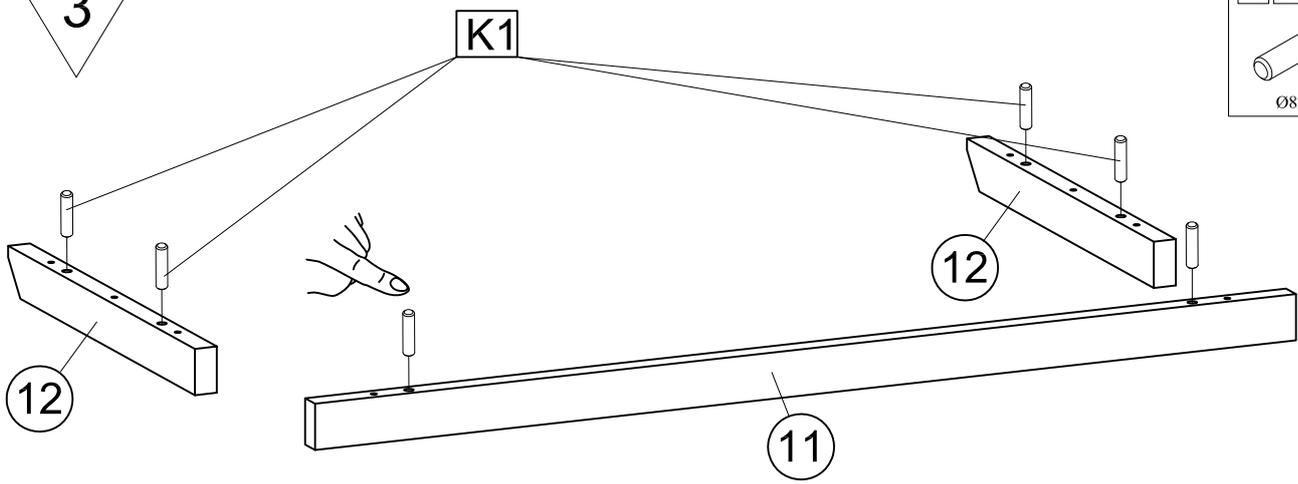

K1 x6  
  
 Ø8x35

4

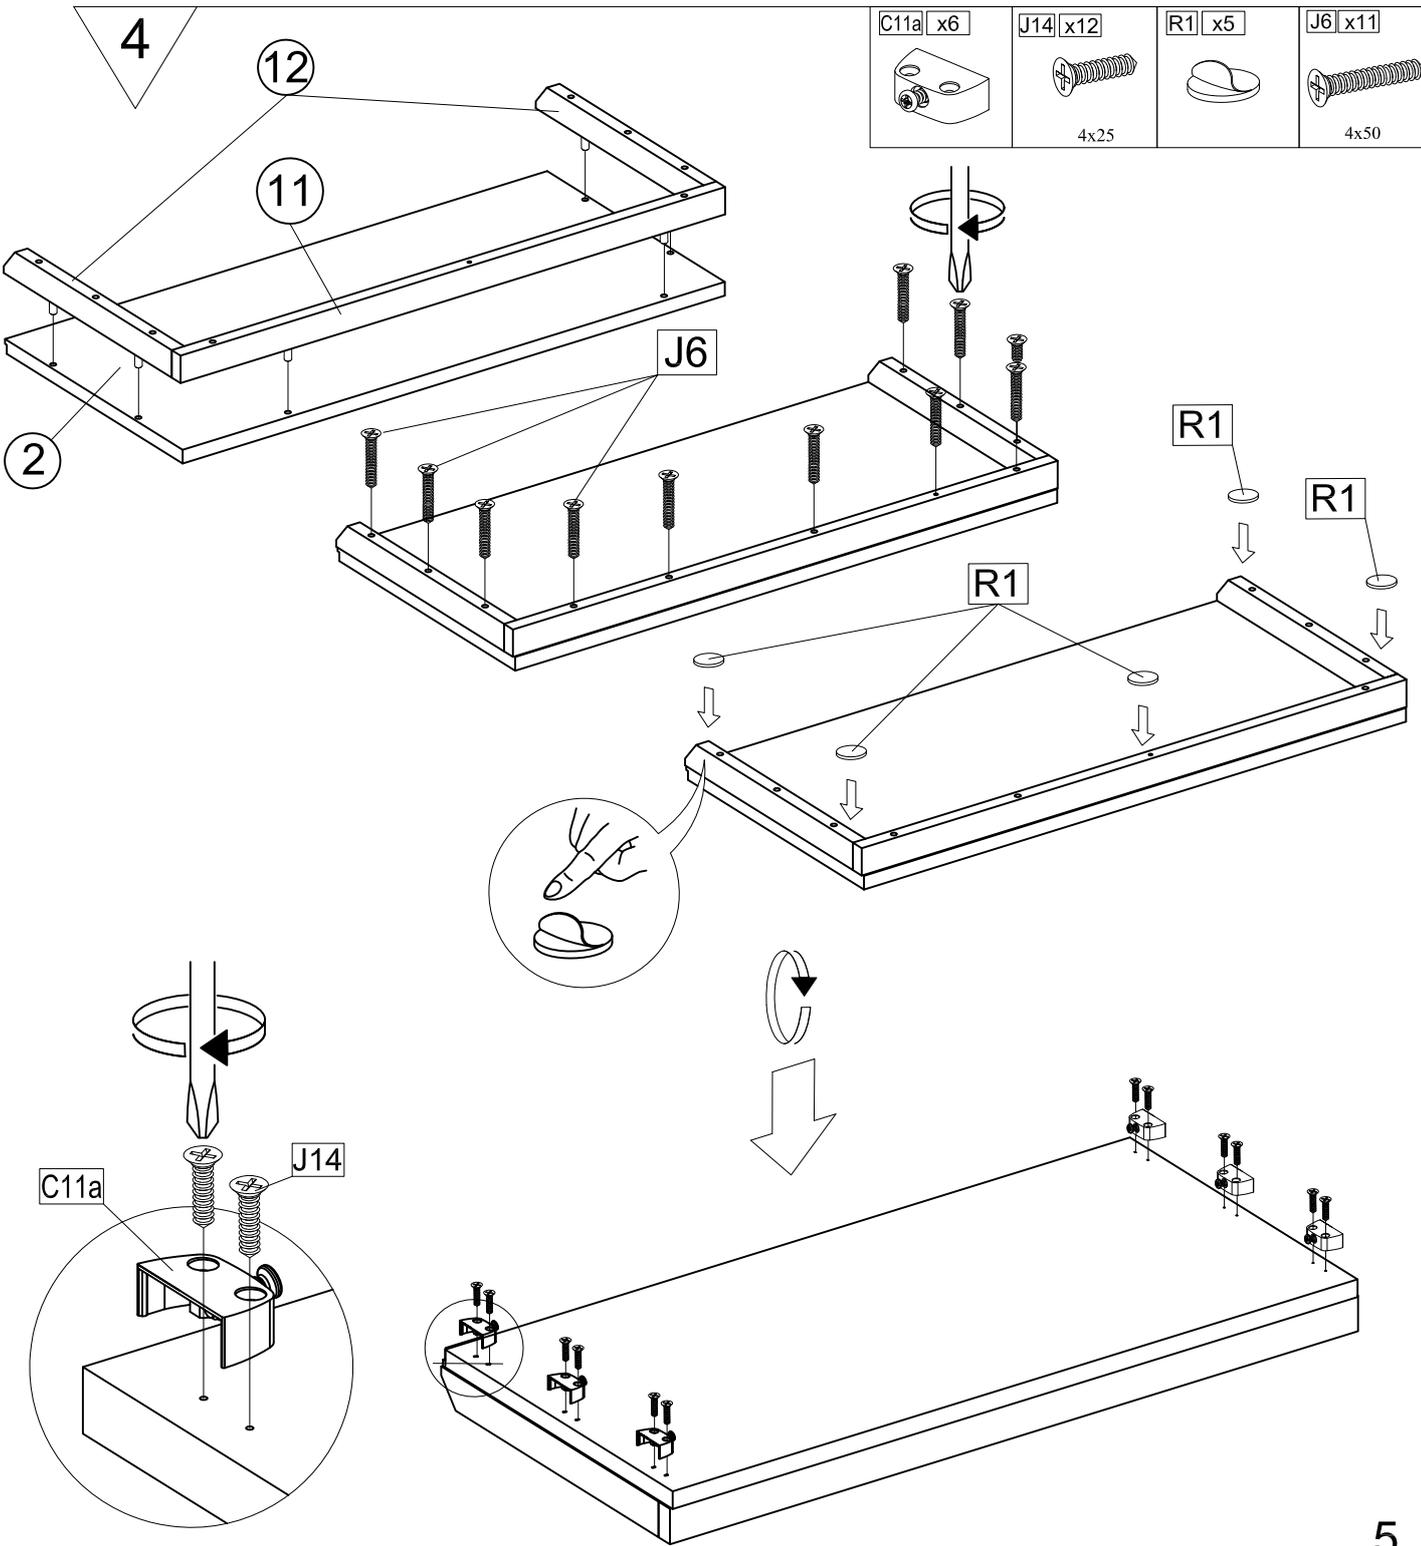

C11a x6  
  
 J14 x12  
  
 4x25  
 R1 x5  
  
 J6 x11  
  
 4x50

5

5 x2

J15 x4



3x16

C11b x12



J14 x24



4x25

J8 x4



B1 x12




L1 x8






J2 x16




4x16

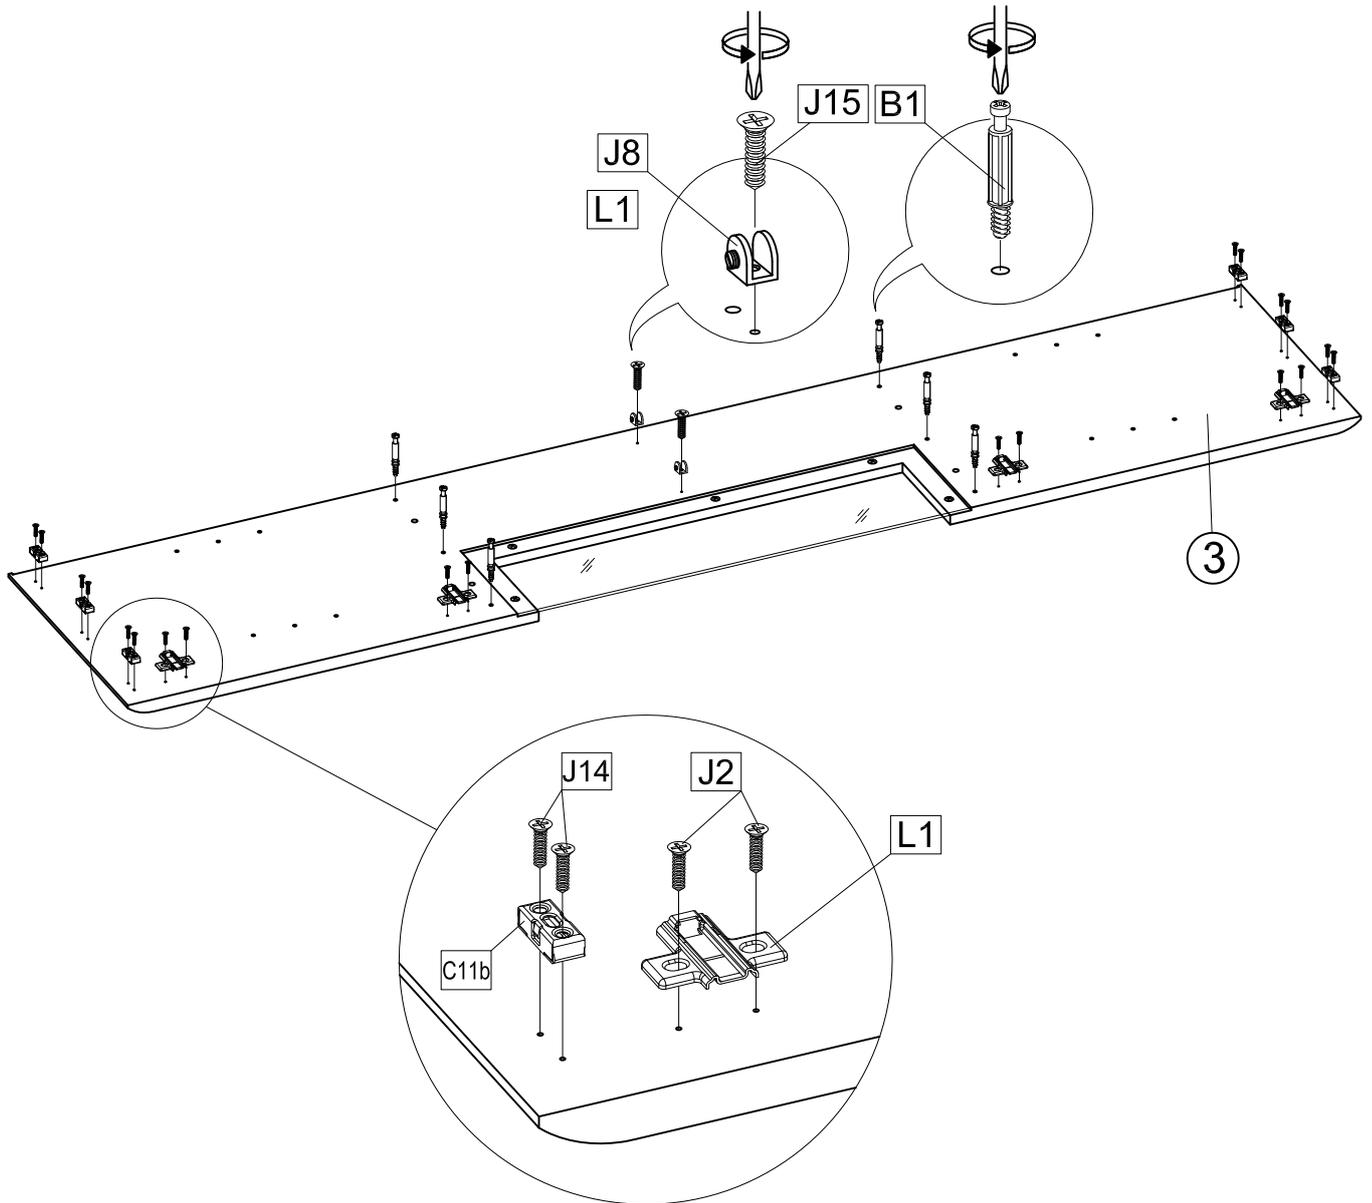

7

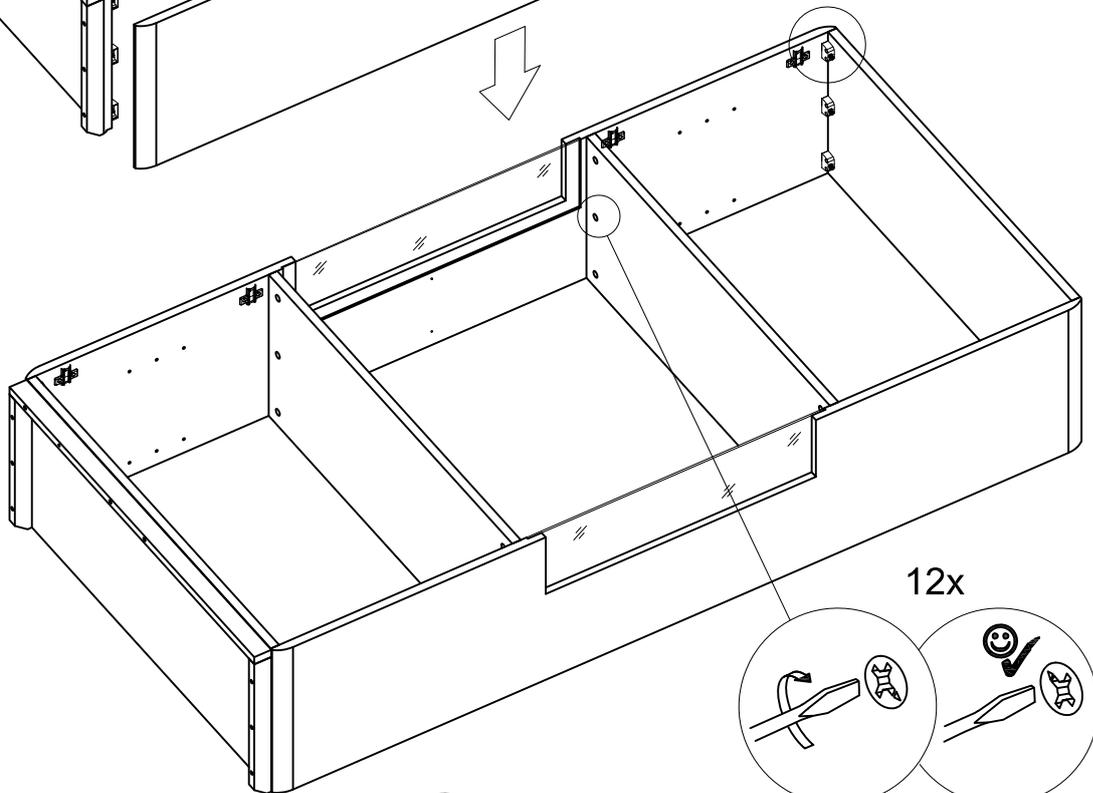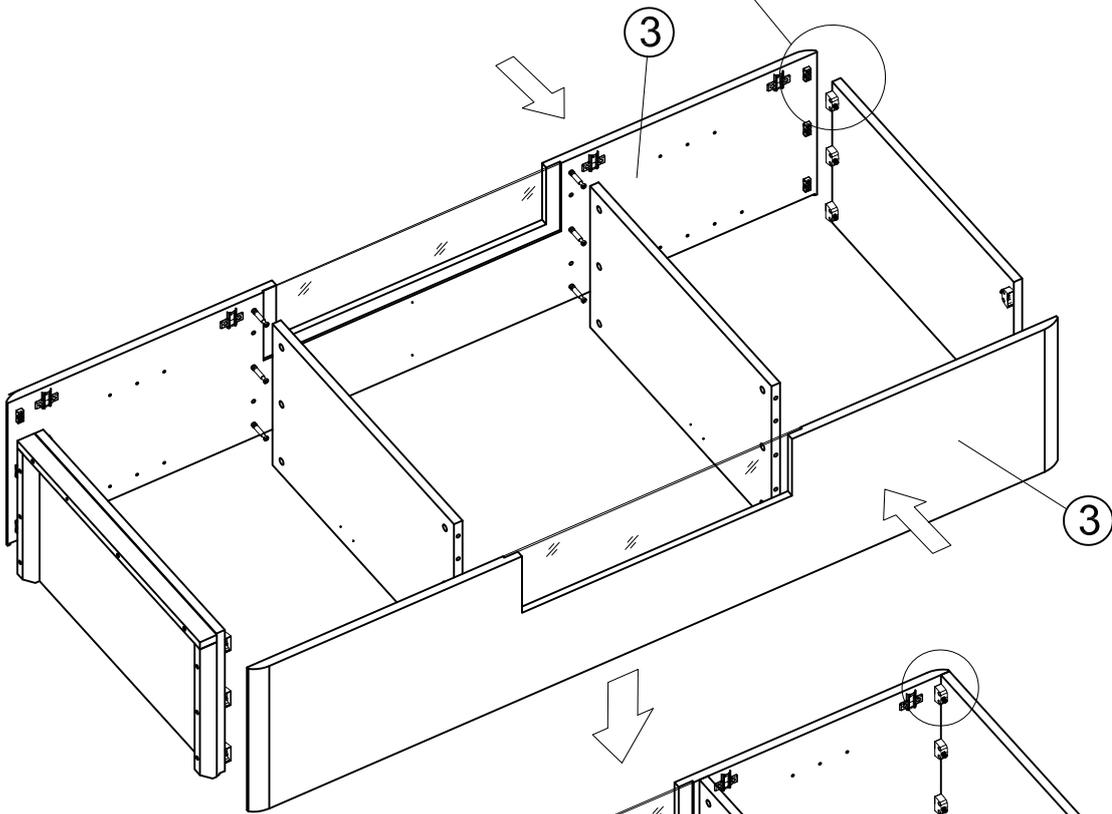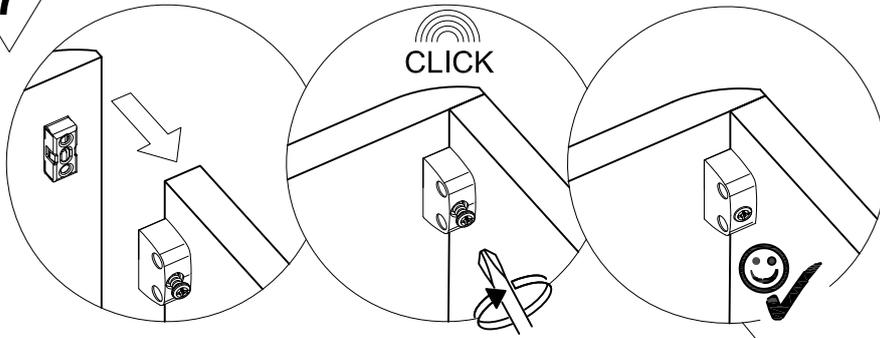

12x

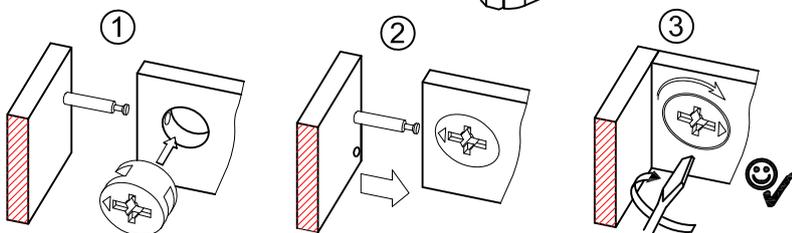



8

W1 x14

J9 x48






2x20

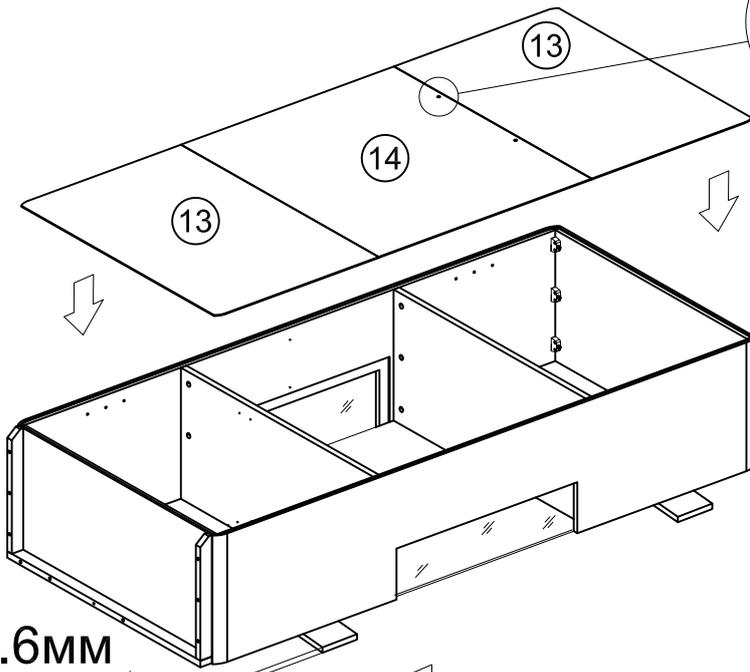
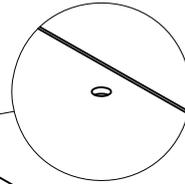


≈3...6MM



L1=L2 ☺ ✓

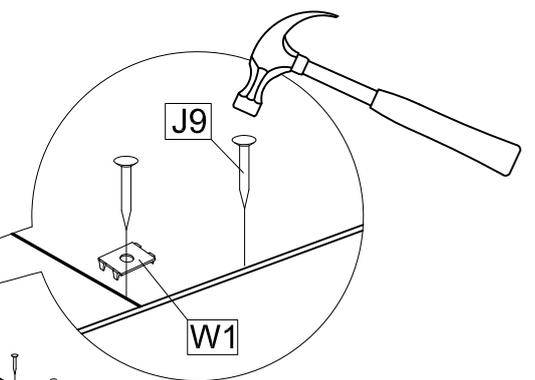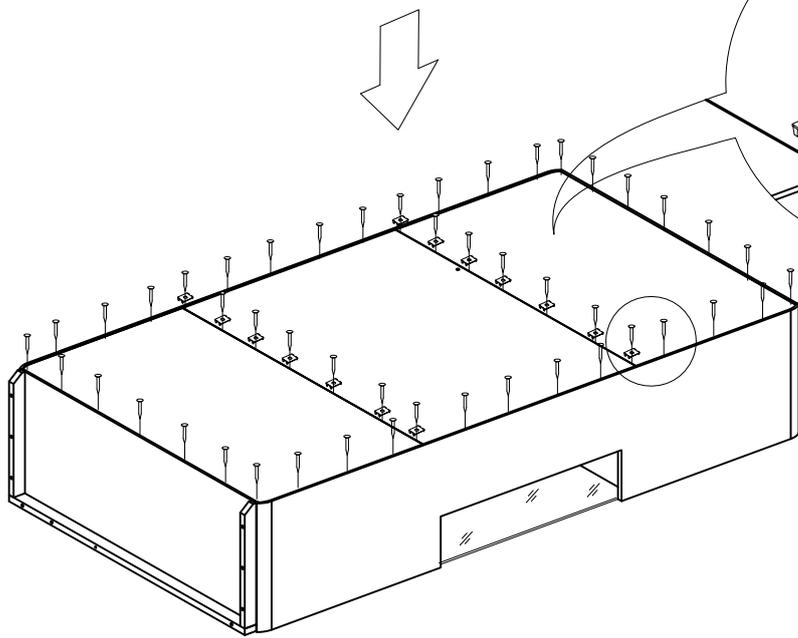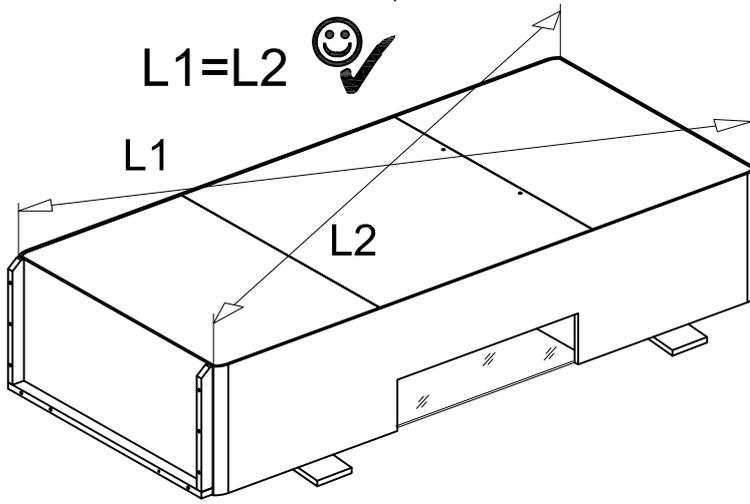

9

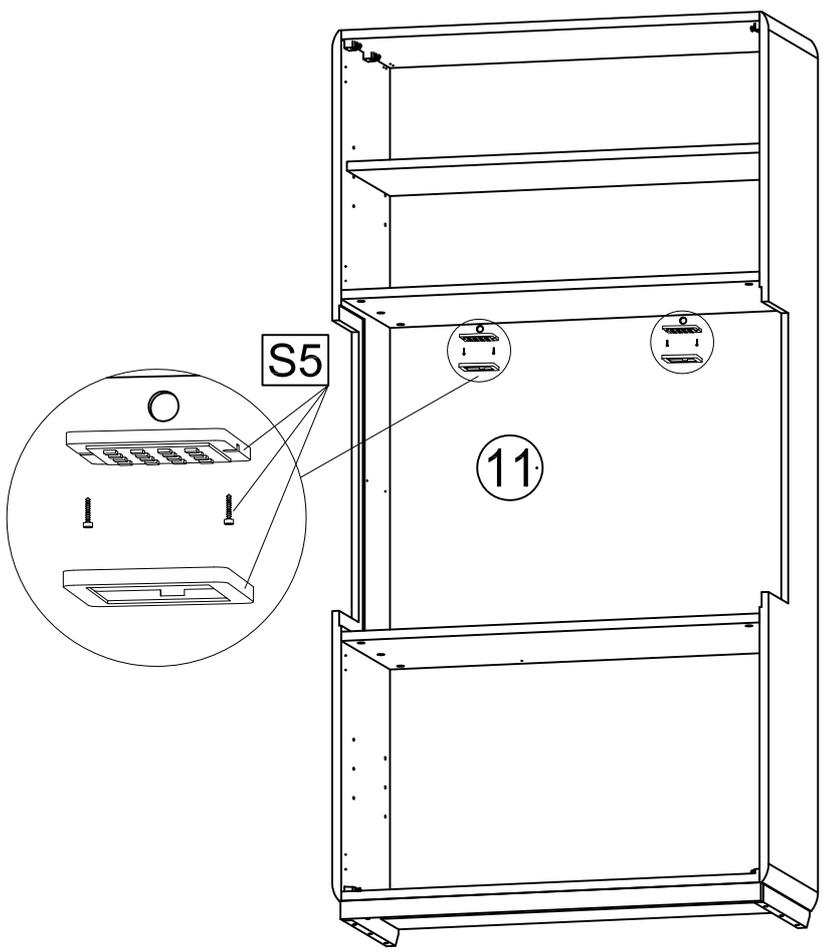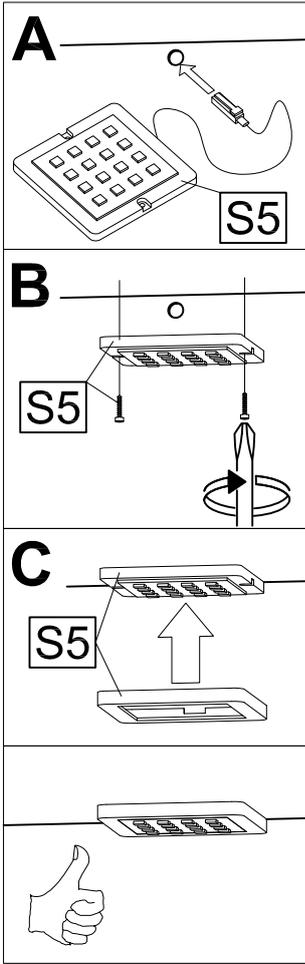

10

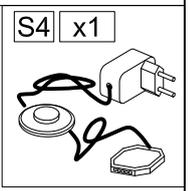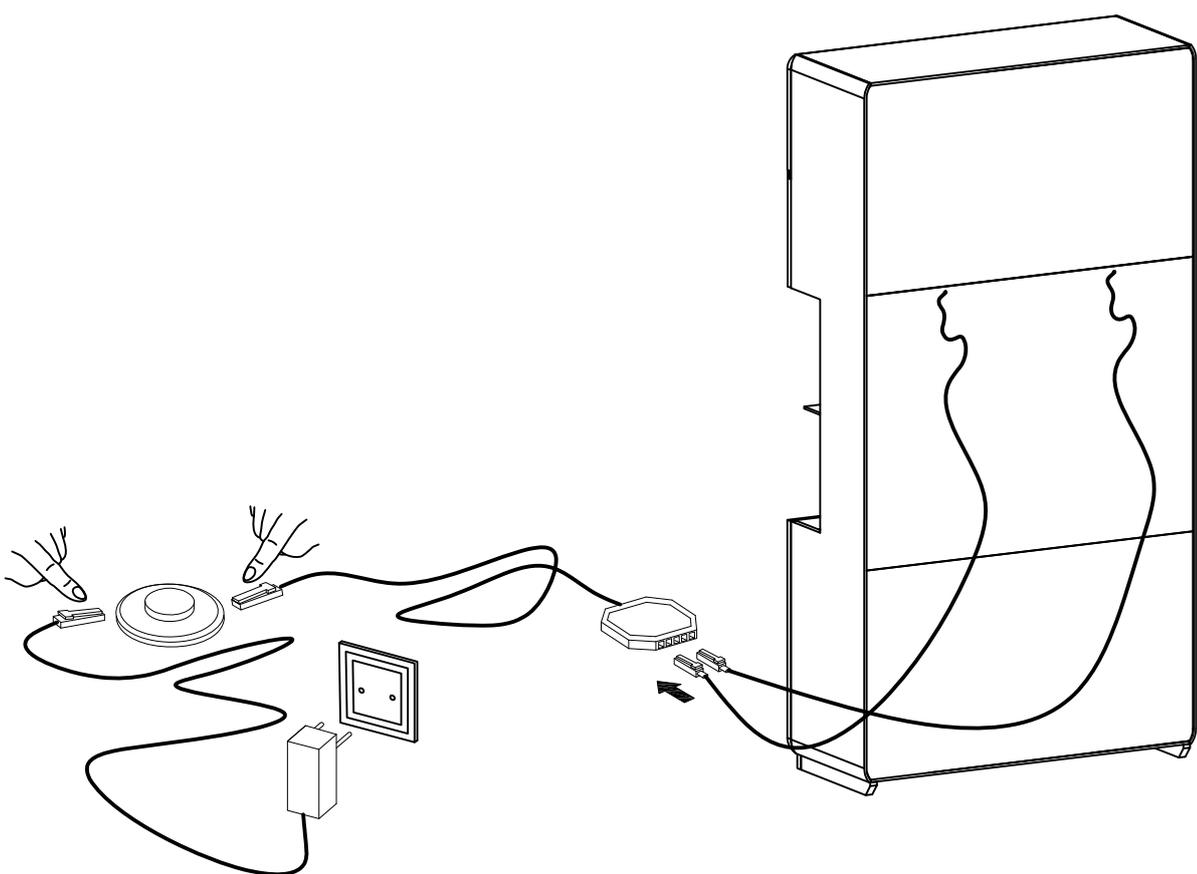

J2 x16



4x16

Q2 x12




J1 x12




3.5x16



M1 x8





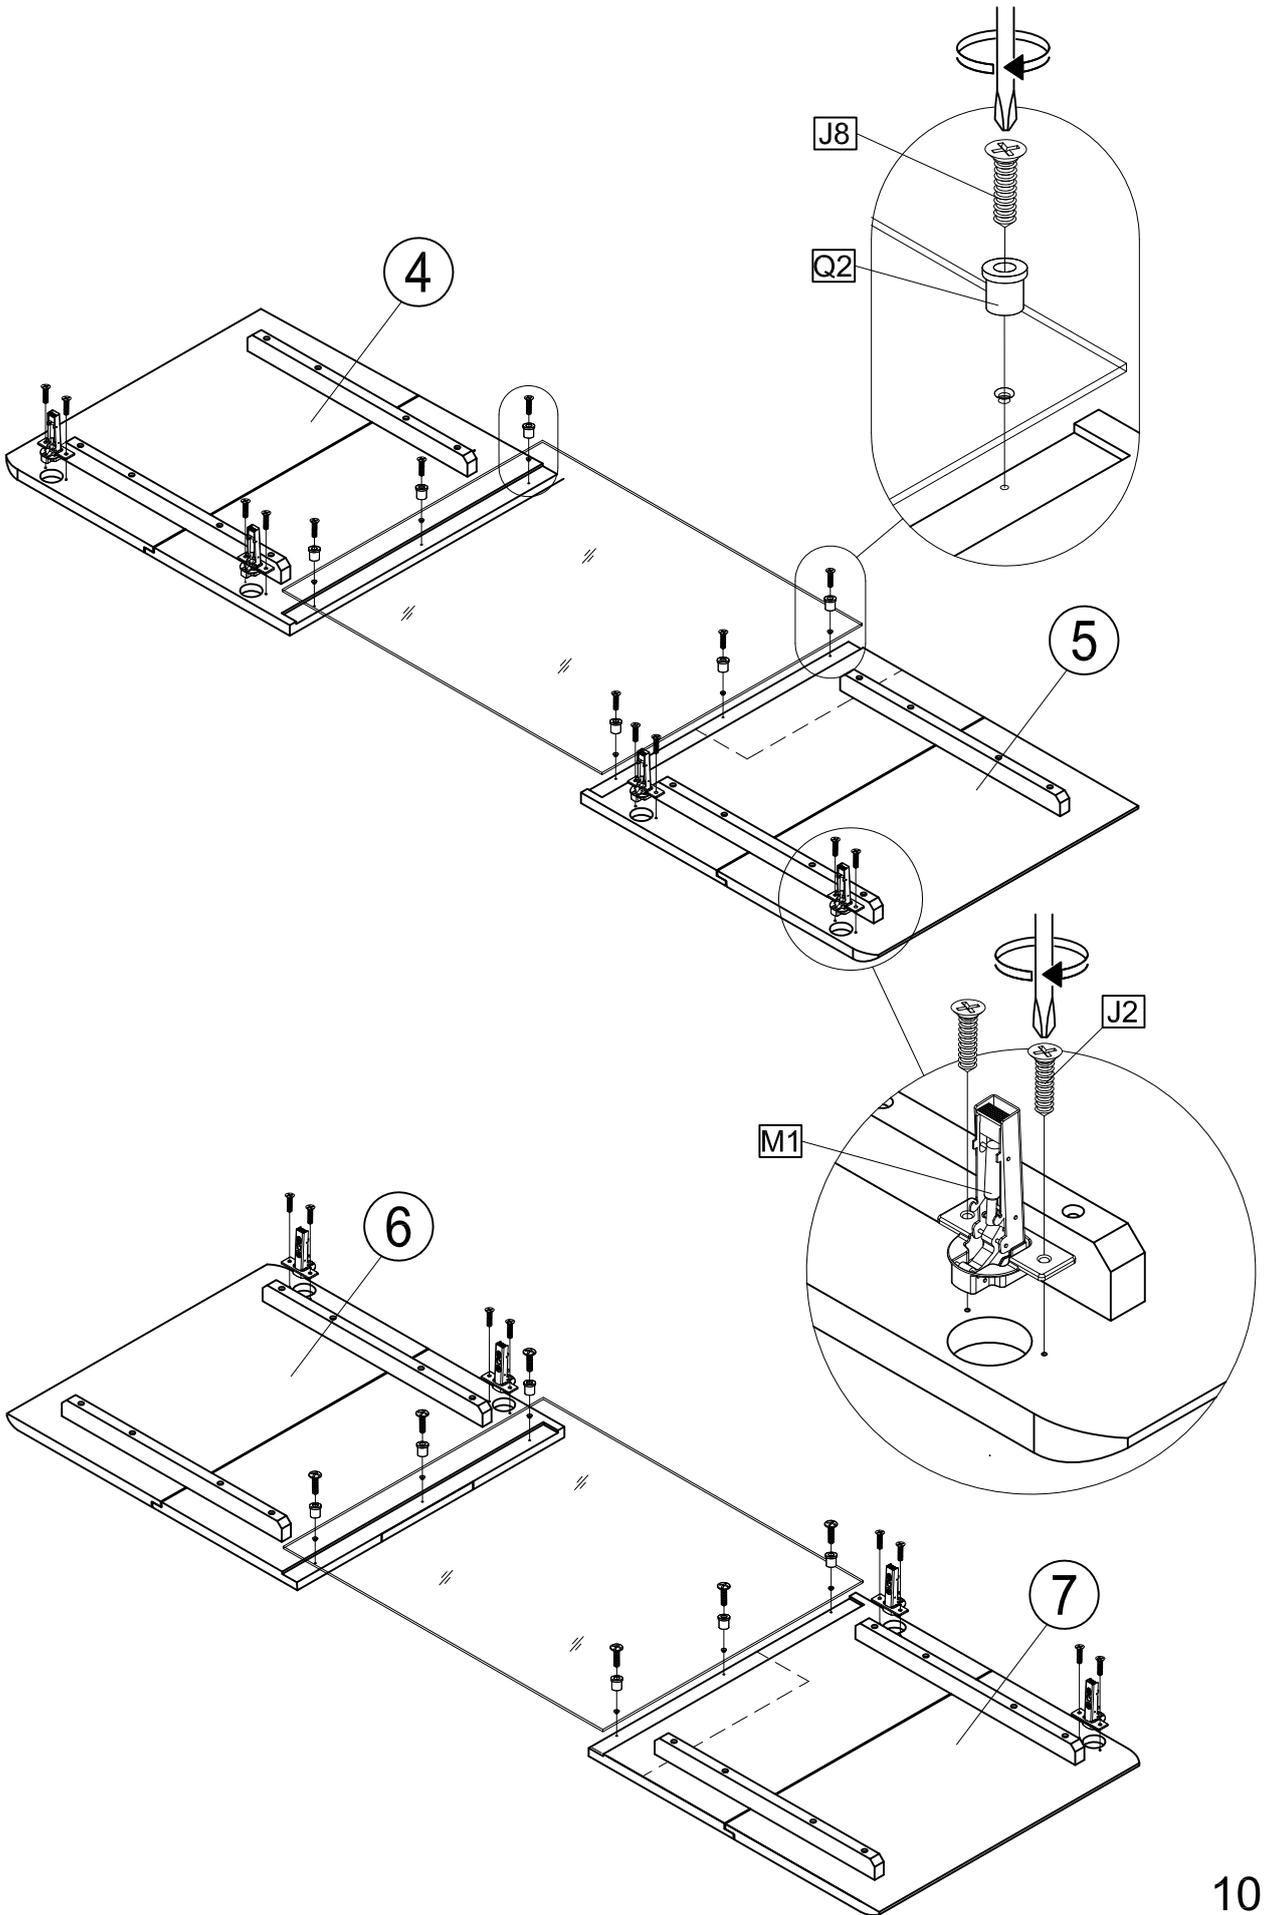


12

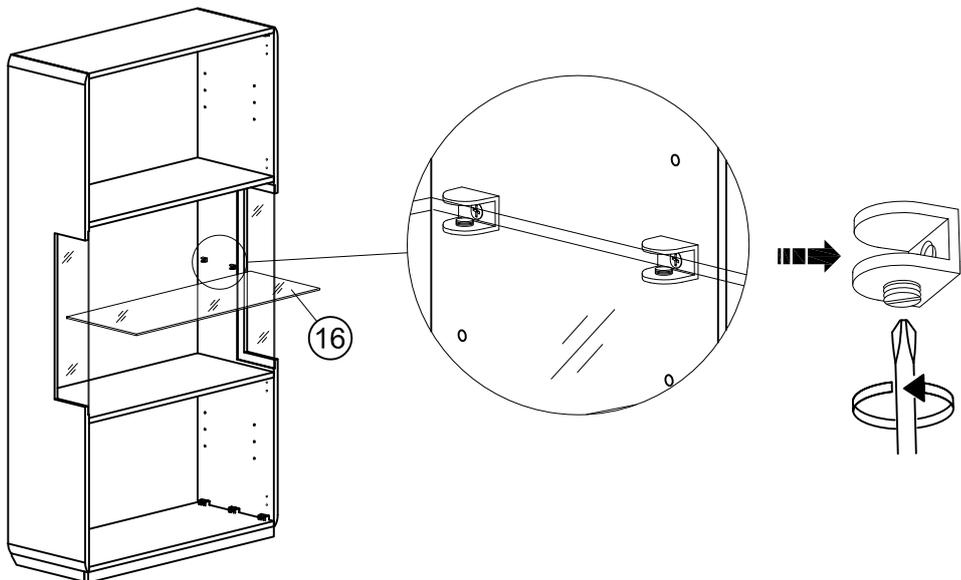



13

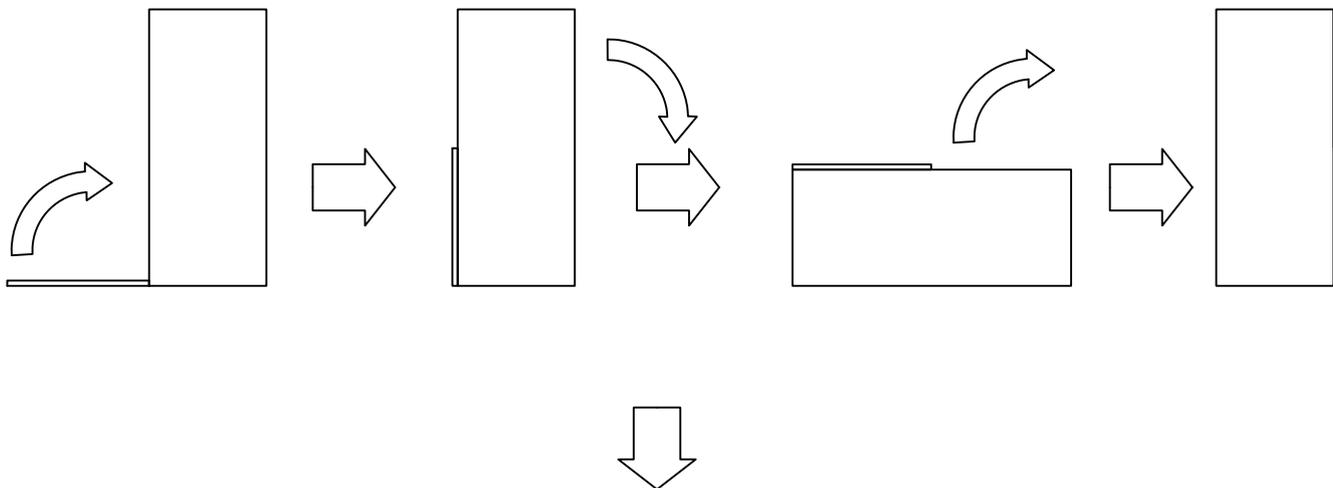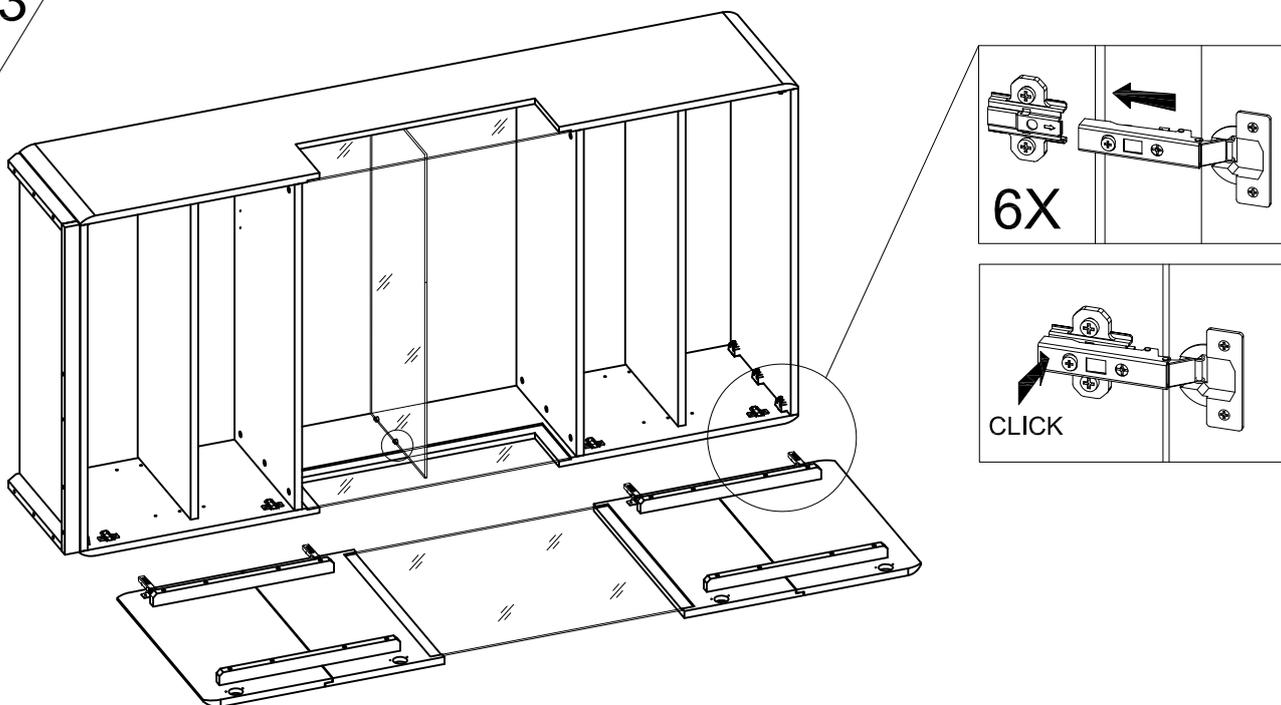





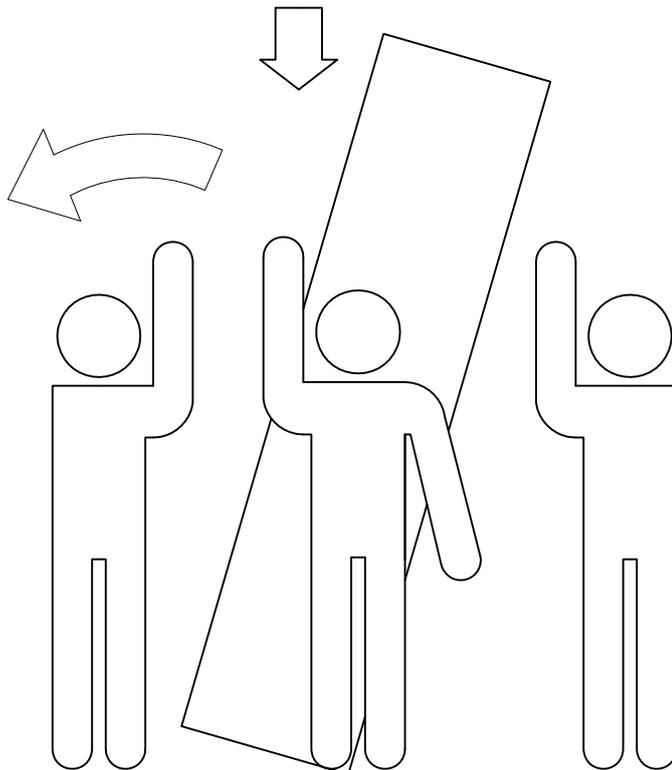
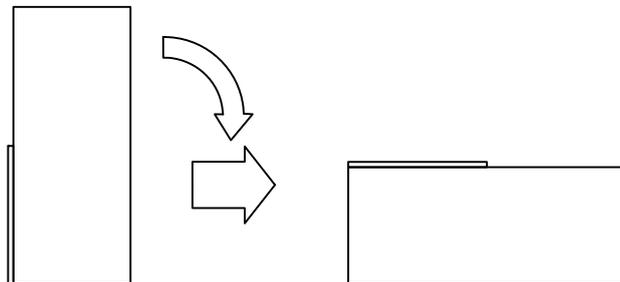
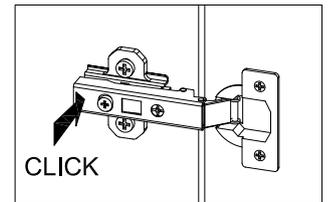
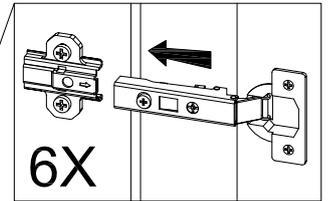
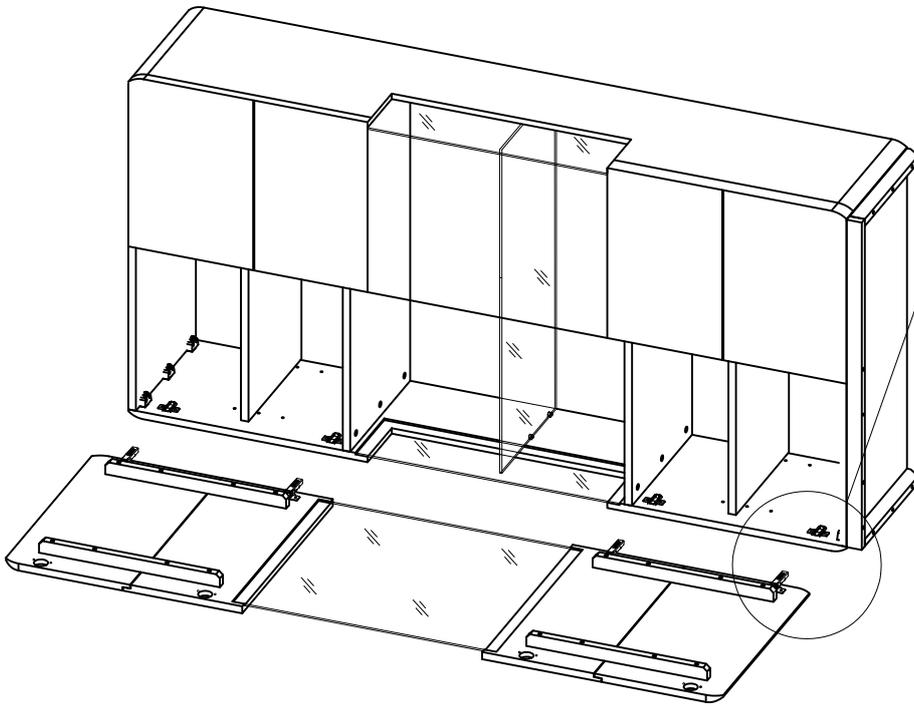




Z1

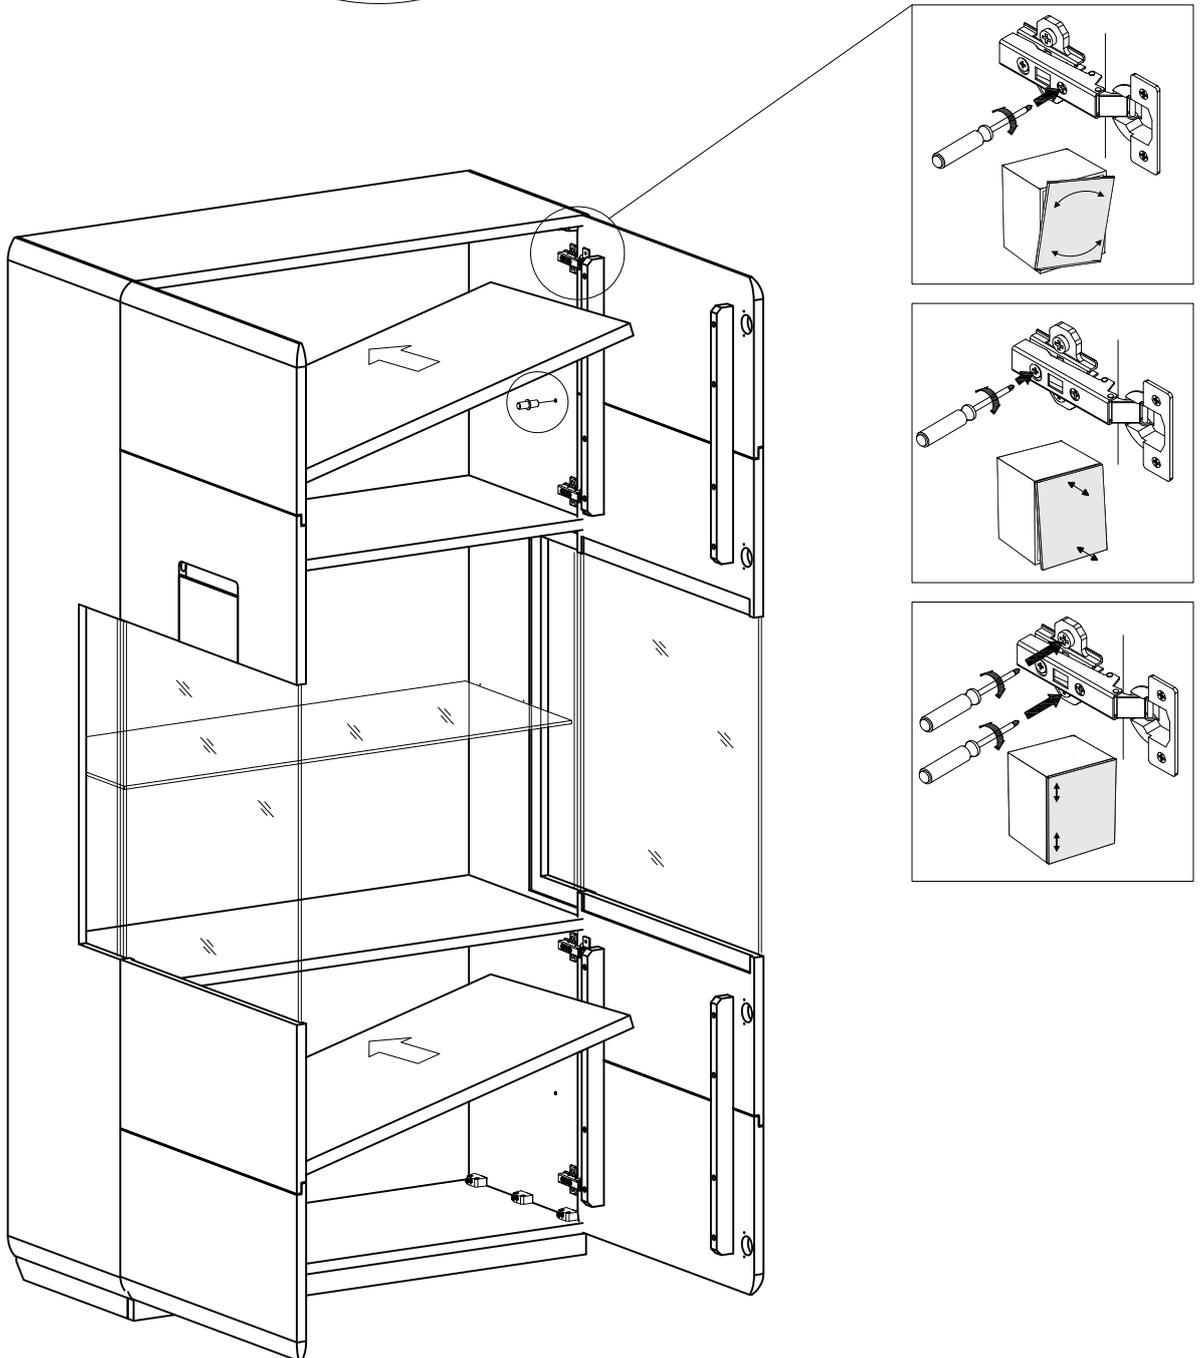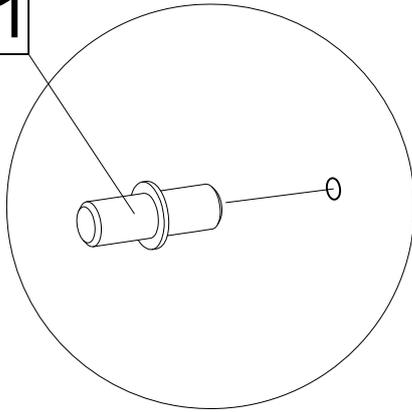

15

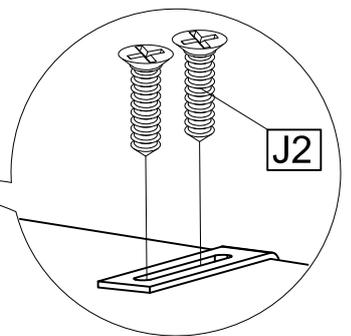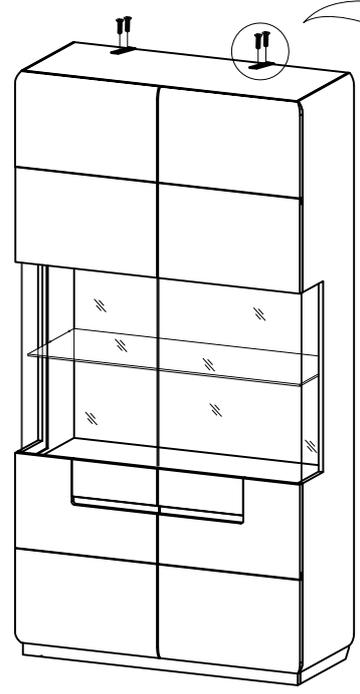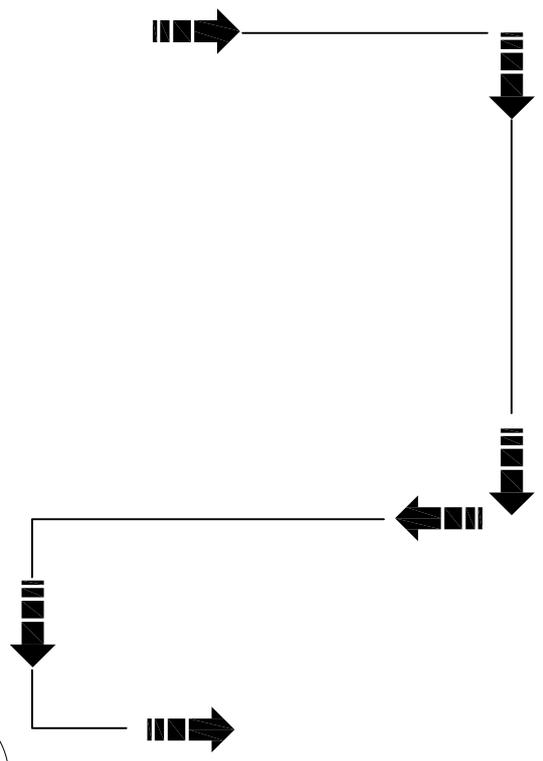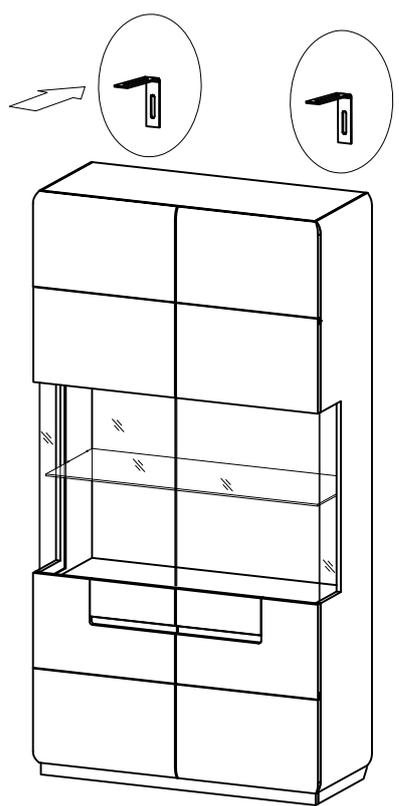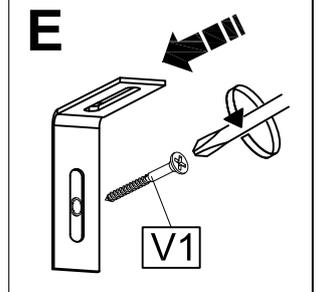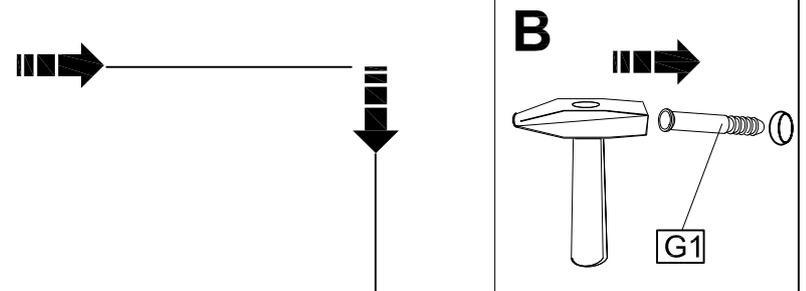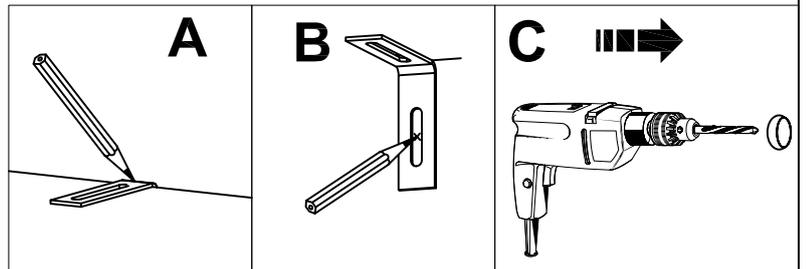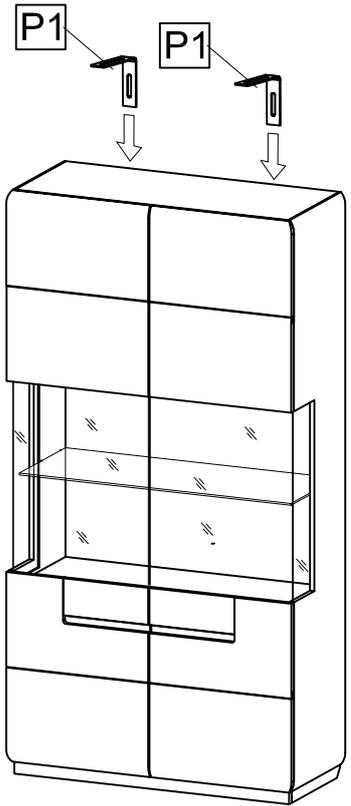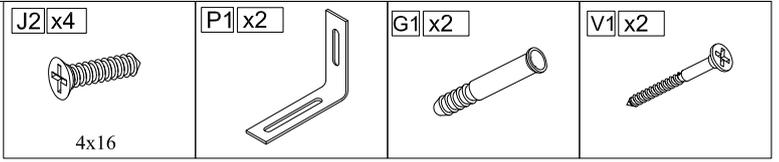



Achtung • Attention • Attenzione  
Opgelet • Uwaga • Pozor • Figyelem  
Atenție • Dikkat • Внимание



(D)	Wandbefestigung dient als Kippschutz - unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping - be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
(FR)	La fixation murale sert de protection contre le basculement - à installer impérativement ! Pour certains types de murs il faut des chevilles spéciales !
(IT)	Il fissaggio alla parete serve da protezione anti-ribaltamento - attaccarla assolutamente! Per alcune strutture di parete può essere necessario un tassello speciale!
(NL)	Bevestiging aan de muur dient als kantelbescherming - zeker en vast bevestigen! Bij enkele muurtypes is een speciale plug misschien vereist!
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem - koniecznie zamontować! Do niektórych rodzajów ścian koniecznie zastosować specjalne kołki mocujące.
(CZ)	Montáž na stěnu slouží jako ochrana proti převrnutí - bezpodmi- nečně umístěte! U některých typu stěn může být zapotřebí speci- ální hmoždinka!
(SK)	Upevnenie na stenu slúži ako ochrana proti prevráteniu - bezpod- mienečne použite! Pre niektoré druhy stien môže byť potrebná špeciálna hmoždinka!
(HU)	A terméket a falhoz kel rögzíténi, különben az felborulhat! Egyes faltípusoknál speciális tiplit kell használni!
(RO)	Sistemul de fixare la perete servește ca protecție la răsturnare - de montat obligatoriu! Pentru unele tipuri de pereți este posibil să fie necesar un diblu special!
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir dübel gerekli olabilir!
(RU)	Обязательно установите крепление к стене во избежание опрокидывания ! Для некоторых типов стен может потребо- ваться специальный дюбель!