

Carolina 180x200 MA/DFL



D Montageanleitung

GB Assembly instructions

NL Handleiding voor de montage

PL Instrukcja montazu

TR Montaj talimati

RU Инструкция по монтажу

RO Instrucțiunile de instalare

I Istruzioni per l'installazione

F Instructions d'installation

SK Pokyny k inštalácii

CZ Pokyny k instalaci

H Telepítési utasítások





Dokument-Nr:

46755104







Ausgabe:

20120104

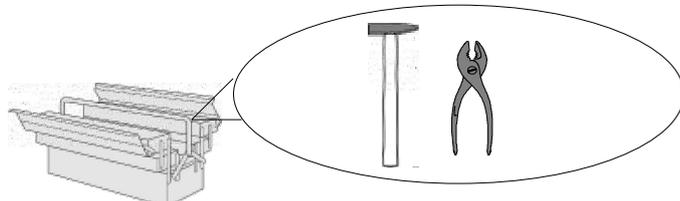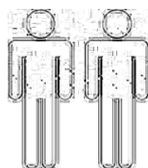


Service • Dienstverlening • Serwis • Servis • Сервисная служба

| |
|--|
| Name • Naam • Nazwa • İsim • Название |
| Carolina MA |
| Nr. • No. • Номер |
| 46755104 |
| Typ • Type • Тип • Тип |
| Polsterbett 180 x200 |
|  schwarz/weißbeige |

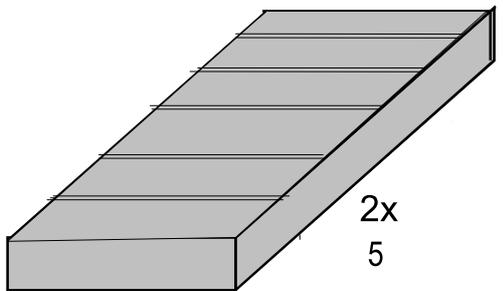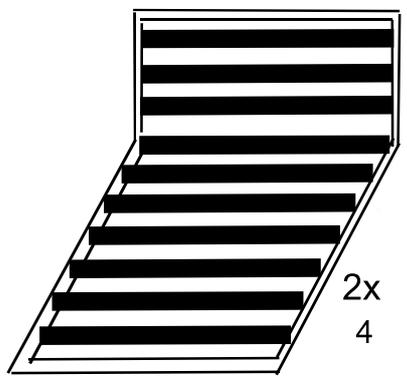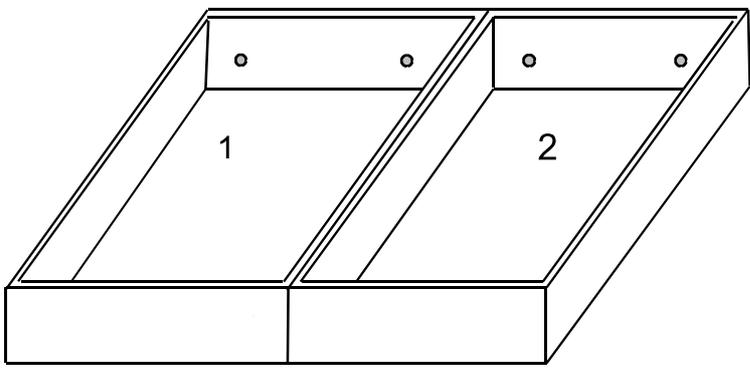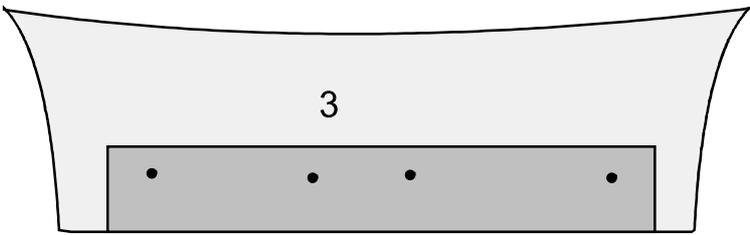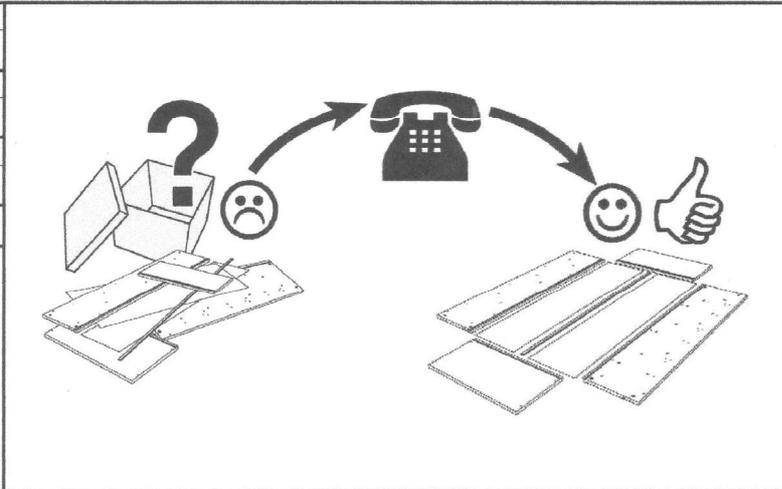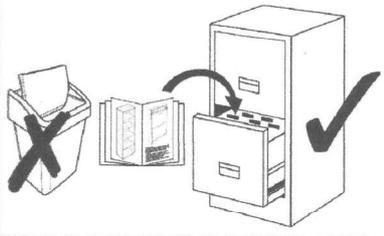

| | | | | | |
|---|----|---|----|---|----|
| A | 4X | B | 4X | C | 1X |
|  | |  | |  | |
| SCHLOSSCHRAUBE M 8 X 60 | | FLÜGELMUTTER M 8 | | U-Winkel | |

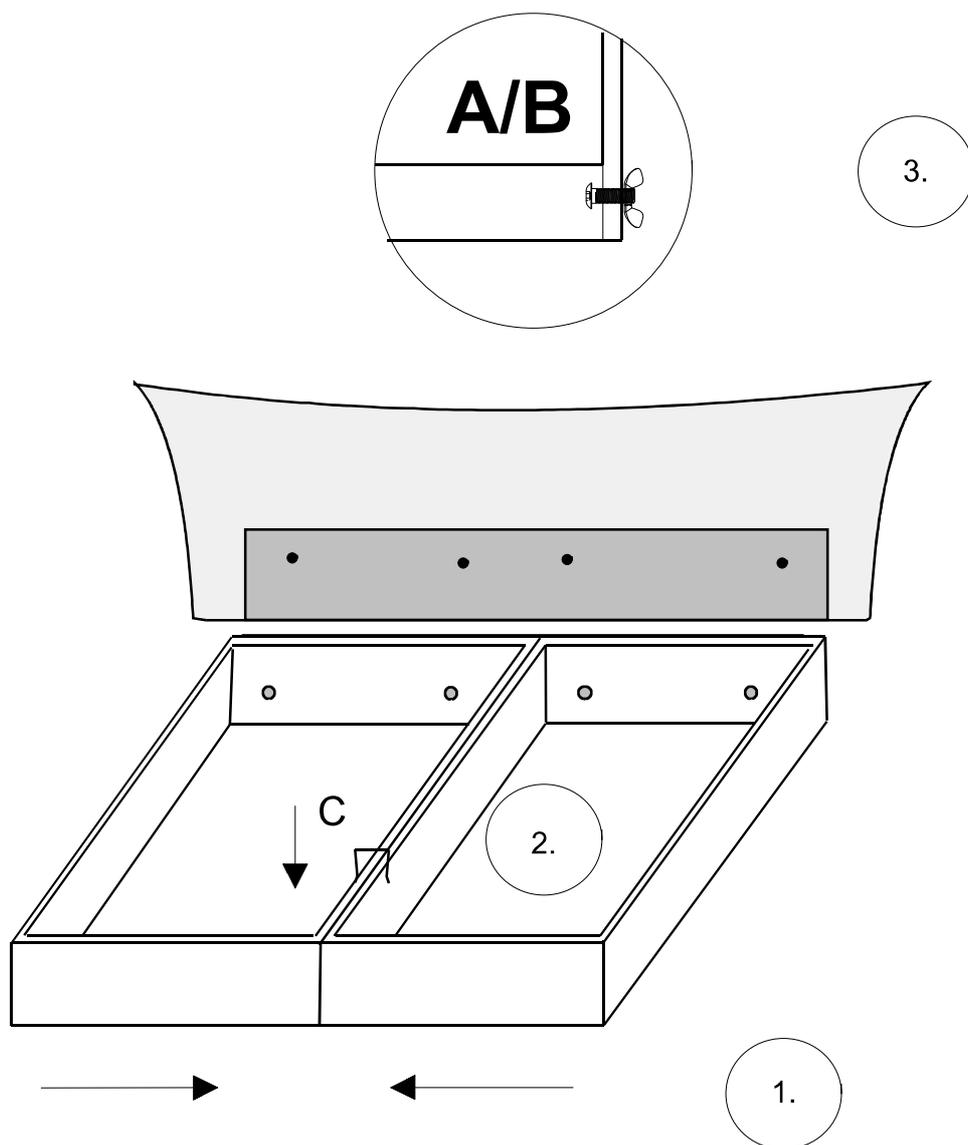

4.

D Rahmen in gewünschte Position bringen, Matratzen einlegen

GB Bed frame into the desired position, load mattresses

NL Bedframe in de gewenste positie, de belasting matrassen

PL SZAFY w odpowiedniej pozycji, załadowac materace

TR İstediginiz pozisyona Yatak çerçeve, yük minder

RU Каркас кровати в нормальное положение и вставить матрас

RO Rame de pat în poziția dorită, de încărcare saltele

I Struttura letto nella posizione desiderata, caricare materassi

F Cadre de lit dans la position souhaitée, la charge matelas

SK Rám posteľe do požadovanej polohy, zataženie matracc

CZ Rám posteľe do požadované polohy, zatížení matracc

H Ágykeret a kívánt helyre, teher matraccok