












MONTAGEANLEITUNG ASSEMBLY INSTRUCTION






SIDEBORD MONTANA 2276

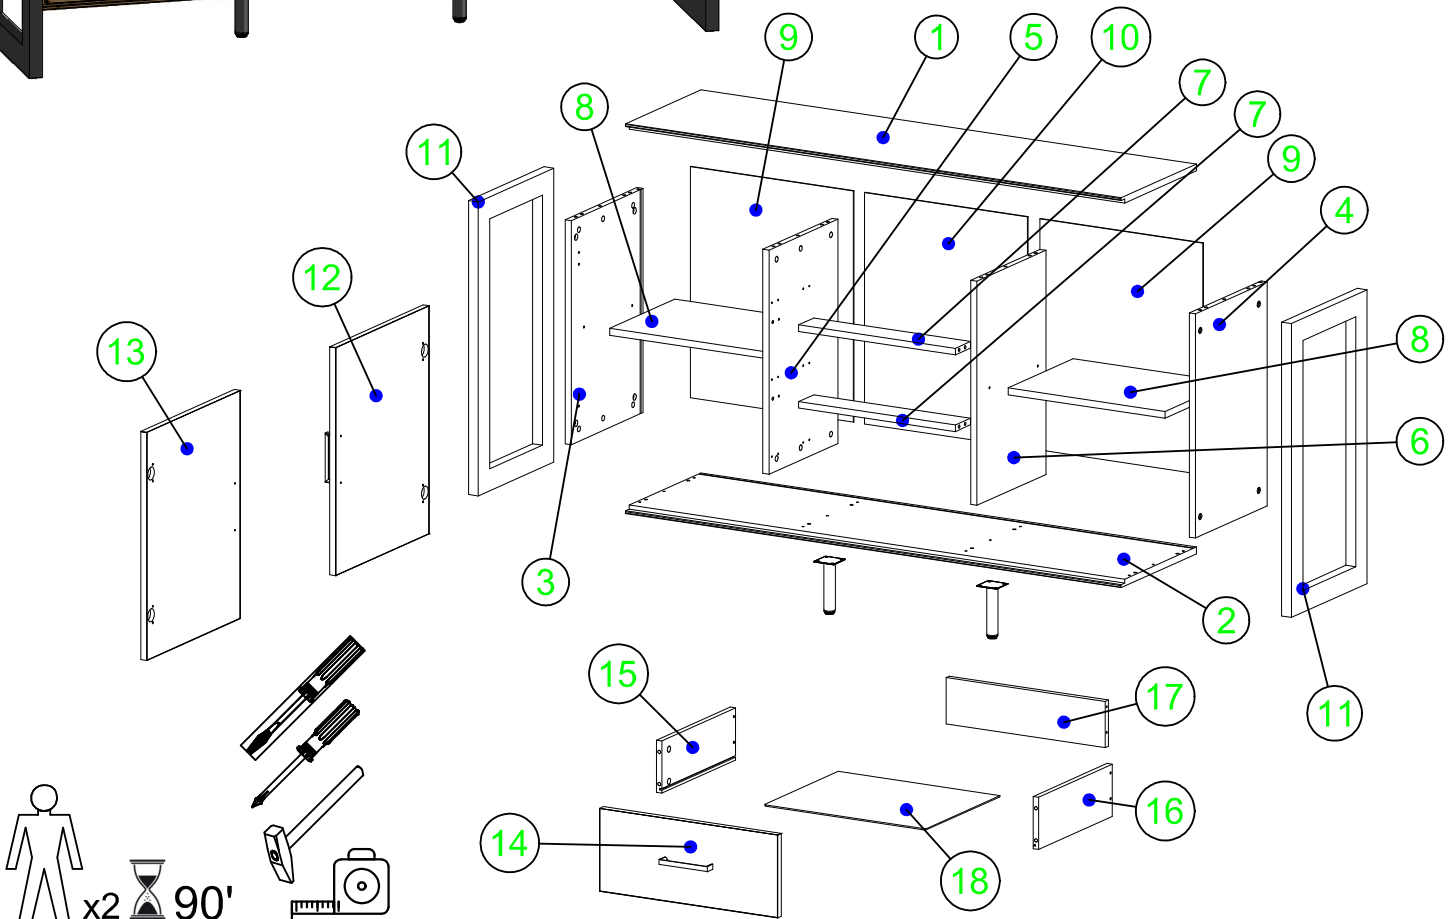




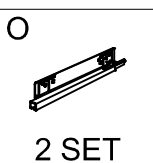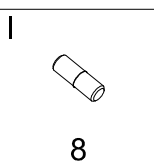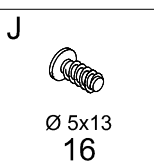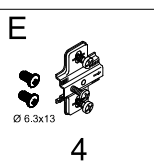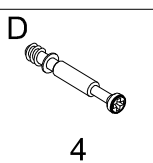
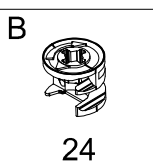
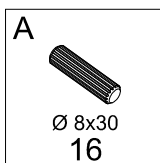

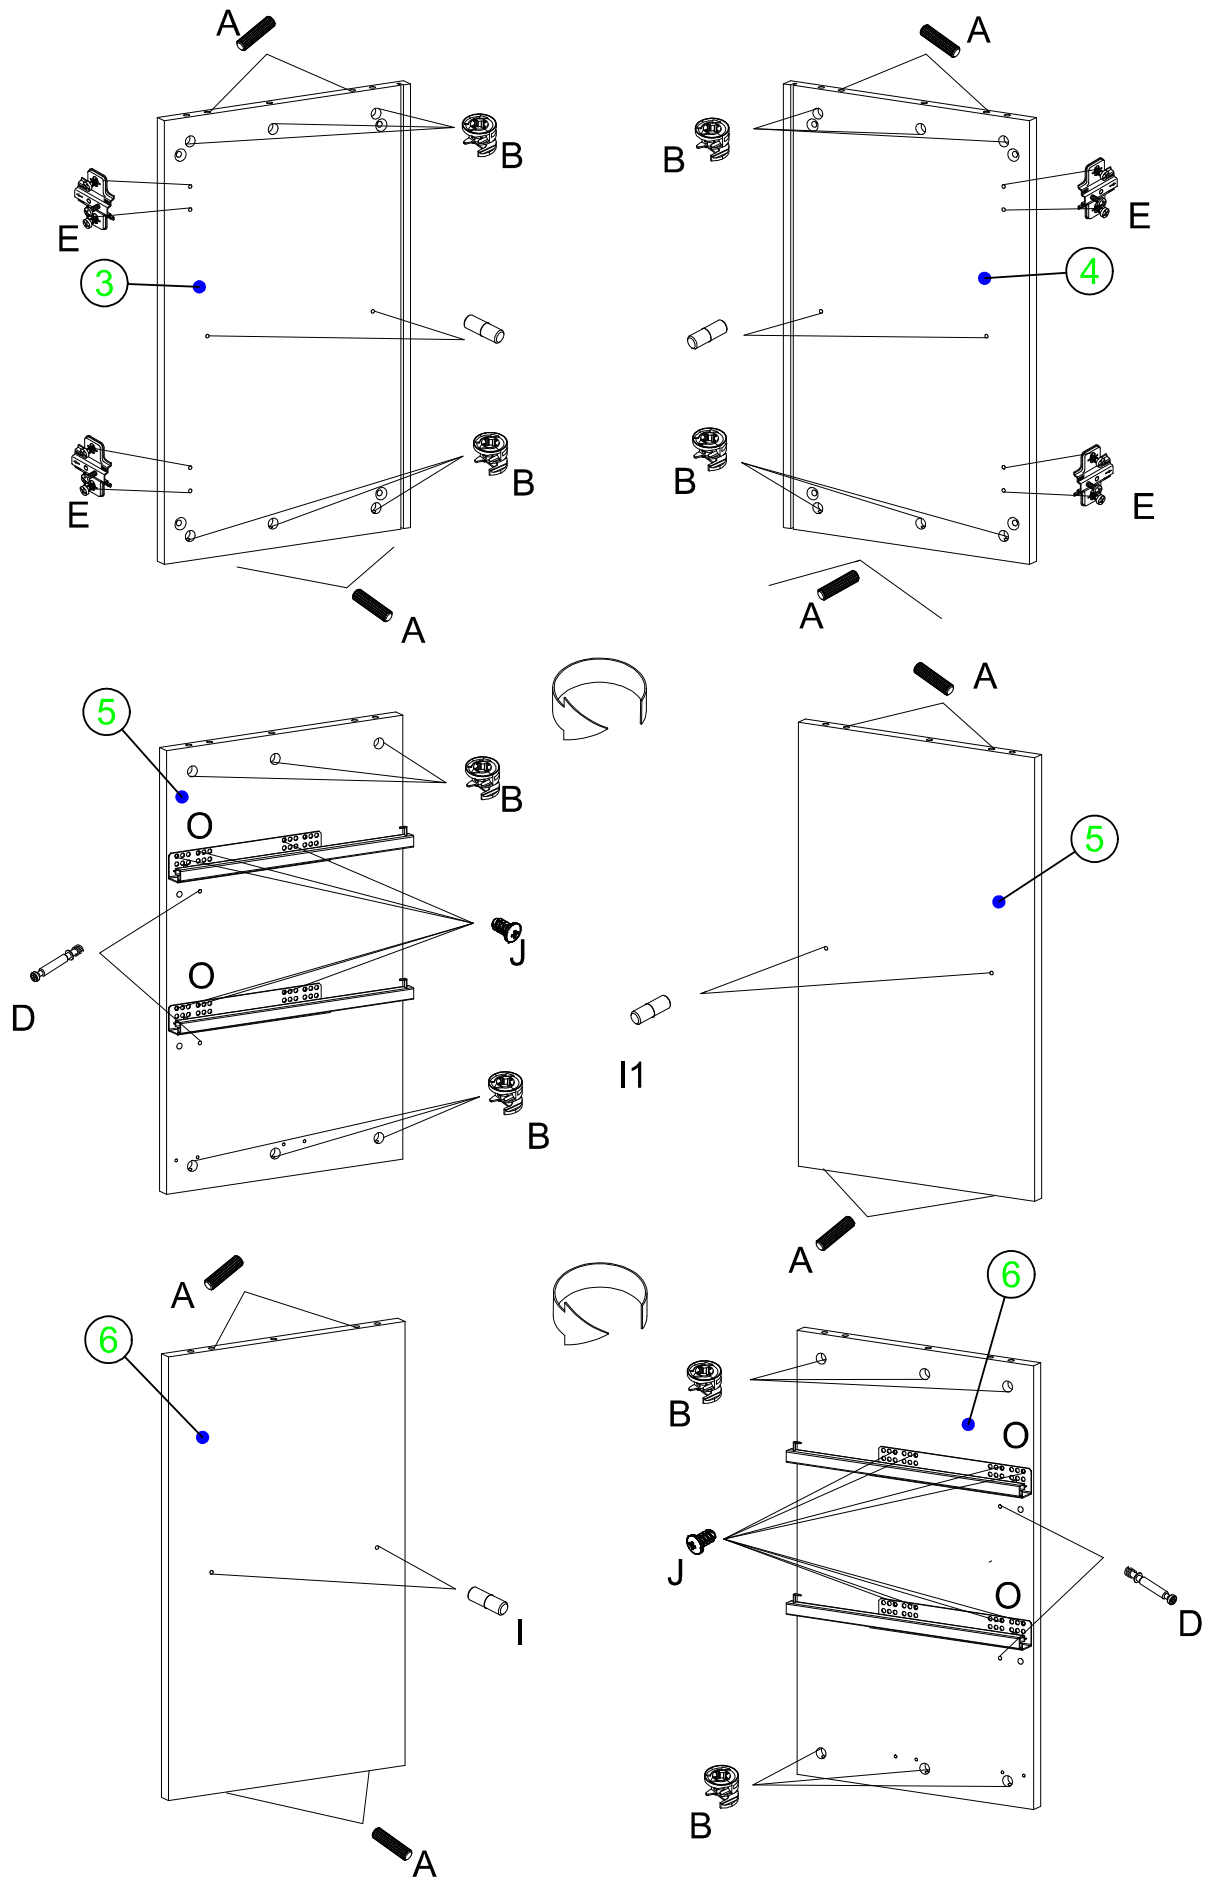
A Ø 8x30 20	B 40	D 40	E Ø 6.3x13 4	F 4	H 22	I 8	J Ø 5x13 40	T Ø 3x16 6
L Ø 7x50 12	M 5	N 2	O 3 SET	P 10	Q 18	R M4x25 10	S W8x30 8	U 2

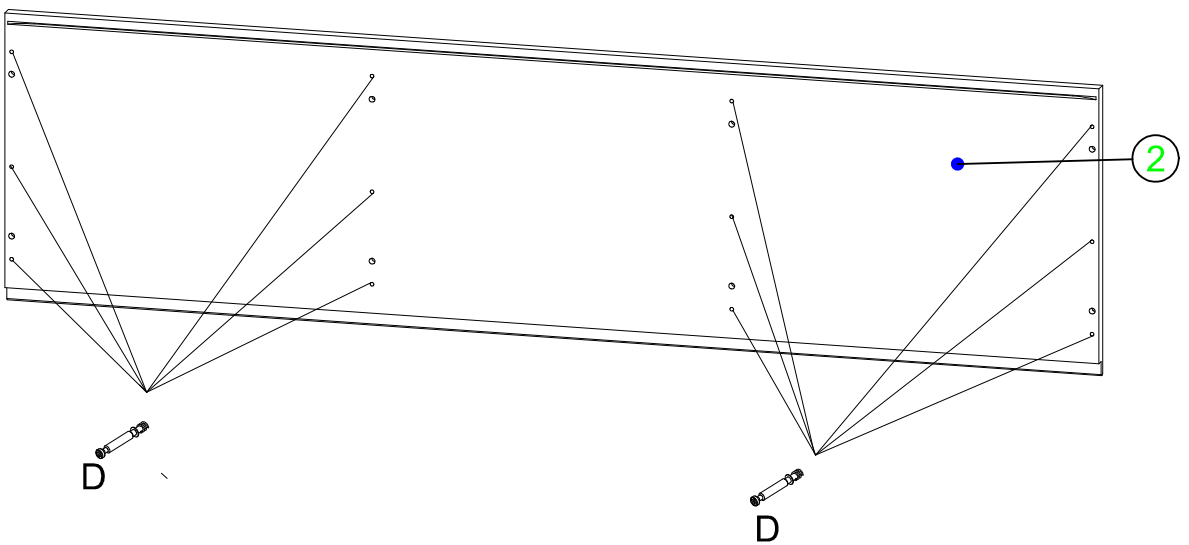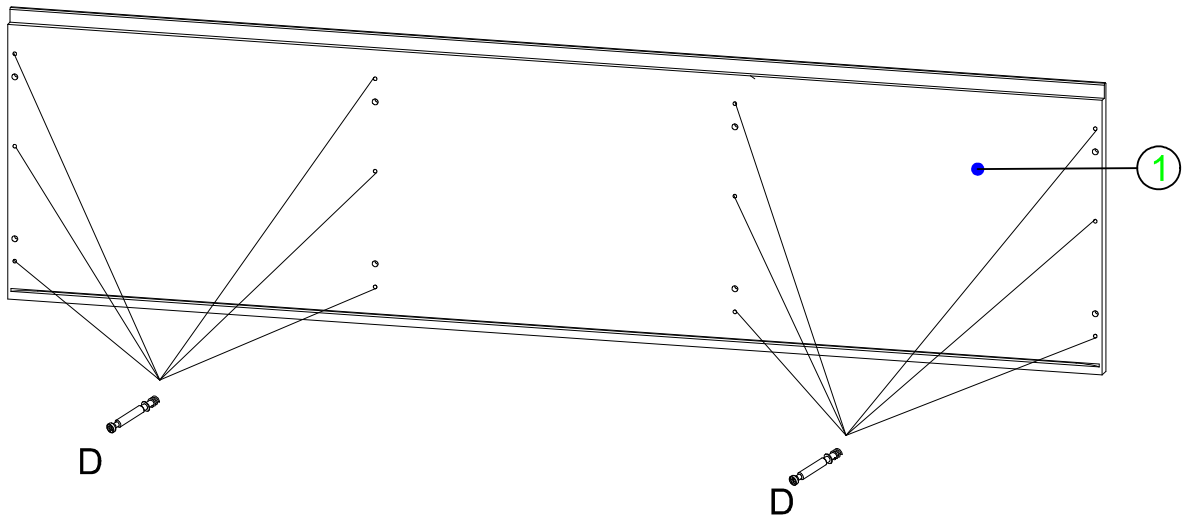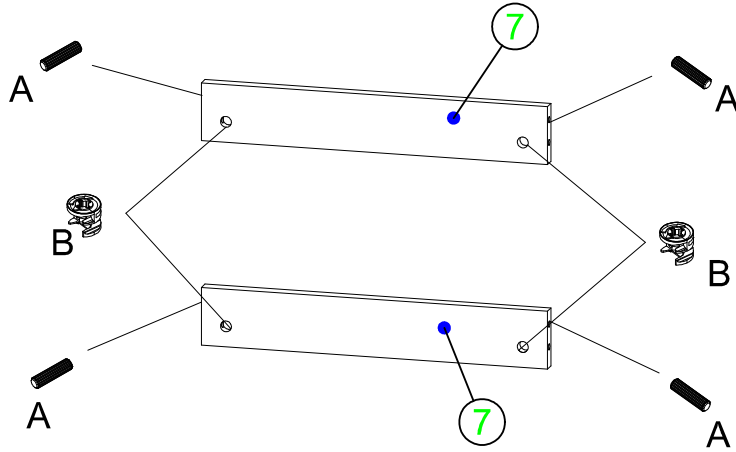







II

<p>A</p>  <p>Ø 8x30 4</p>	<p>B</p>  <p>4</p>	<p>D</p>  <p>24</p>
--	---	--

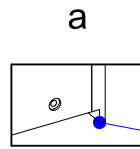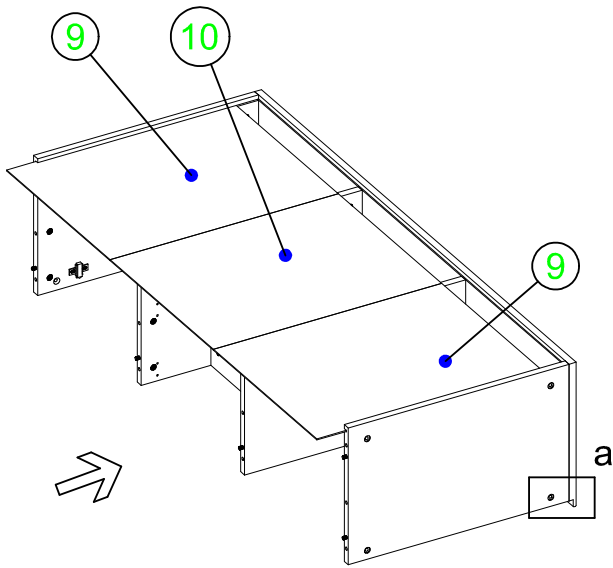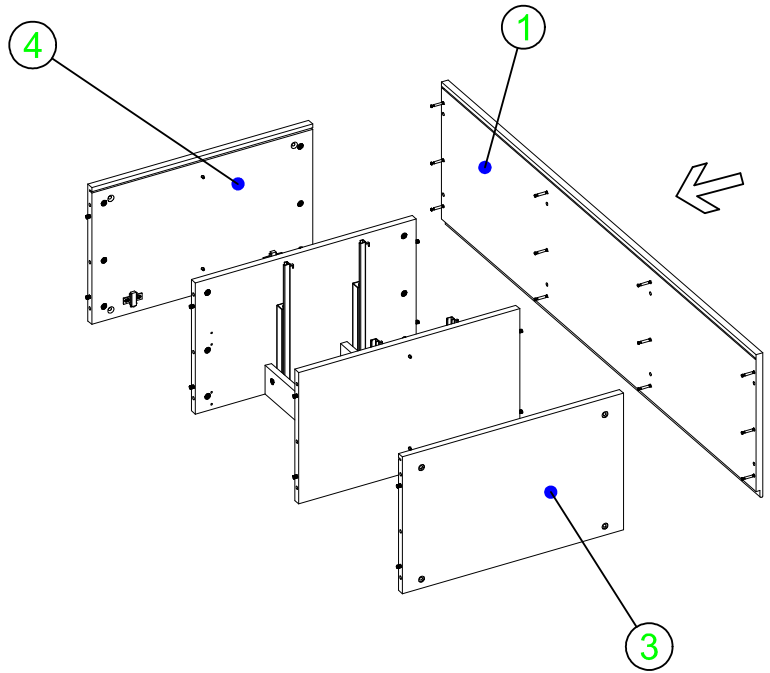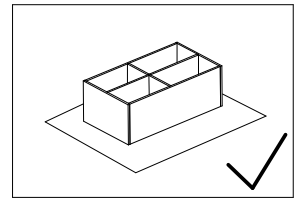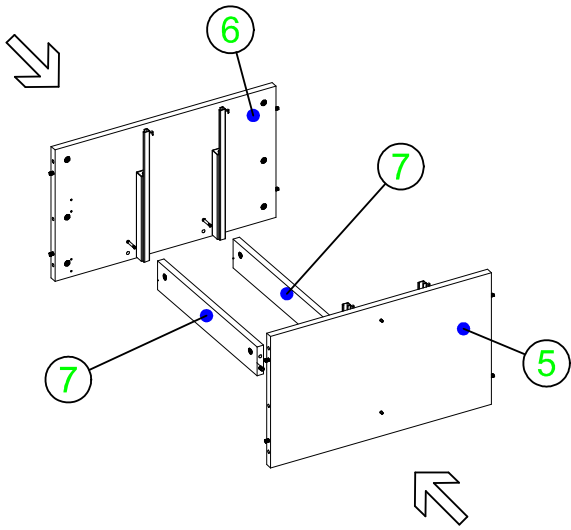




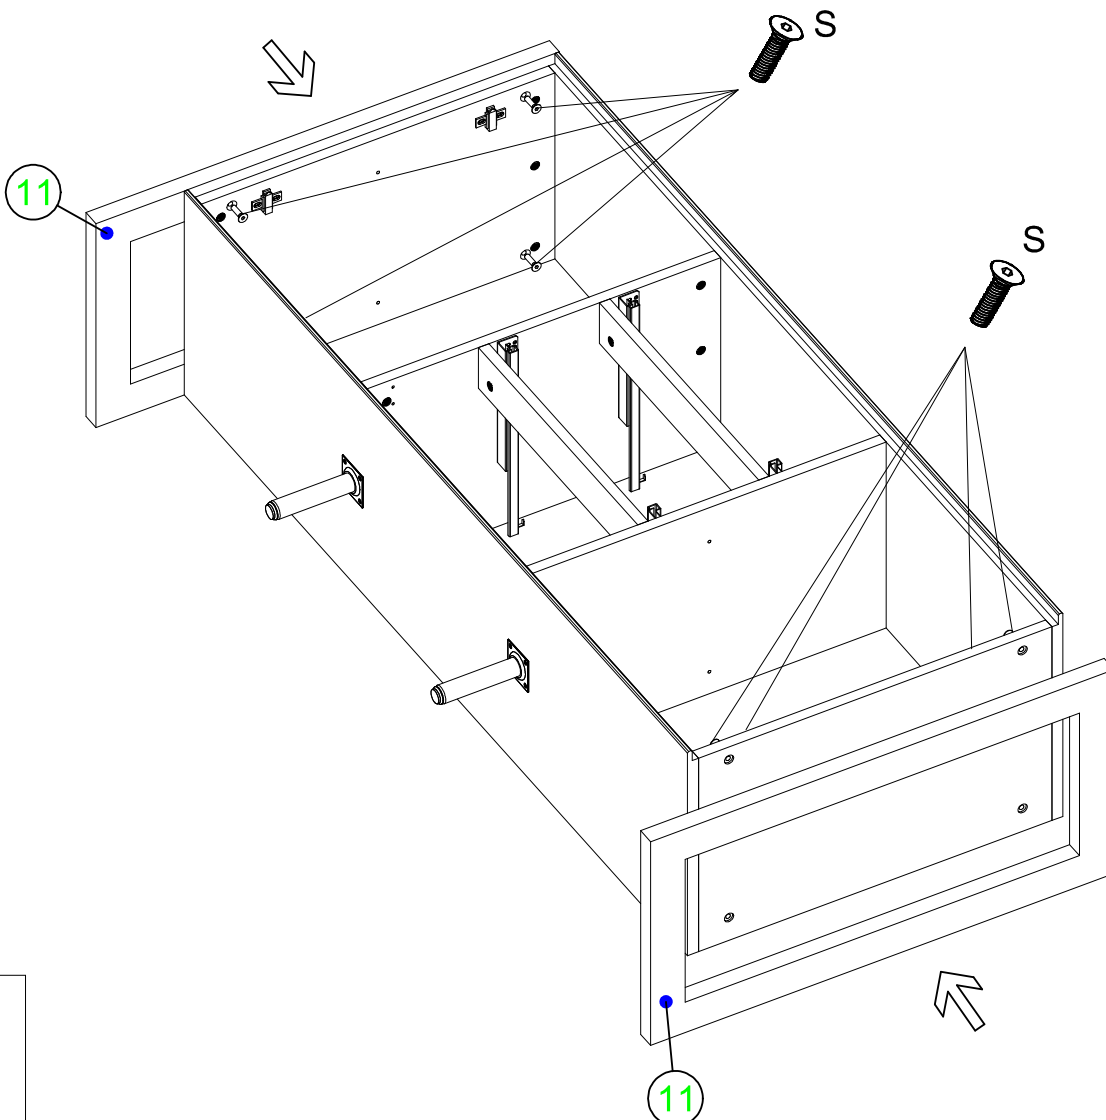
Achtung! Bewegen Sie die Möbel nicht auf dem Boden.

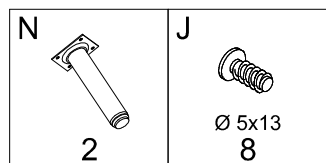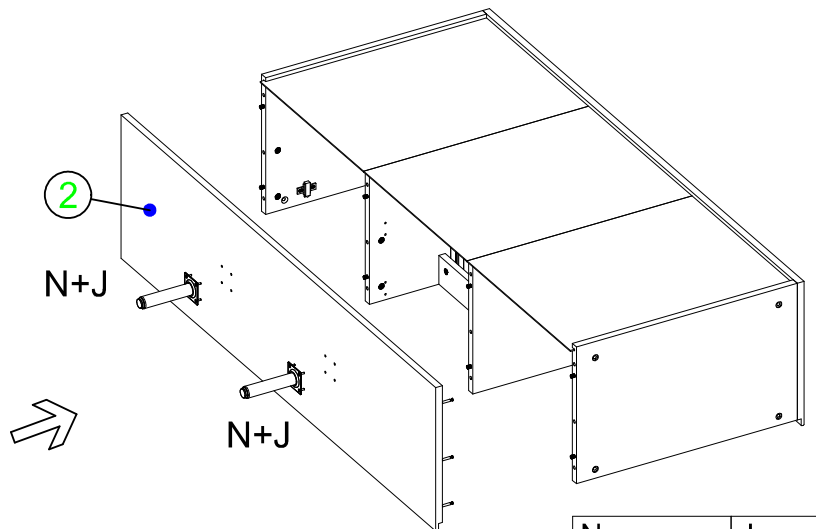

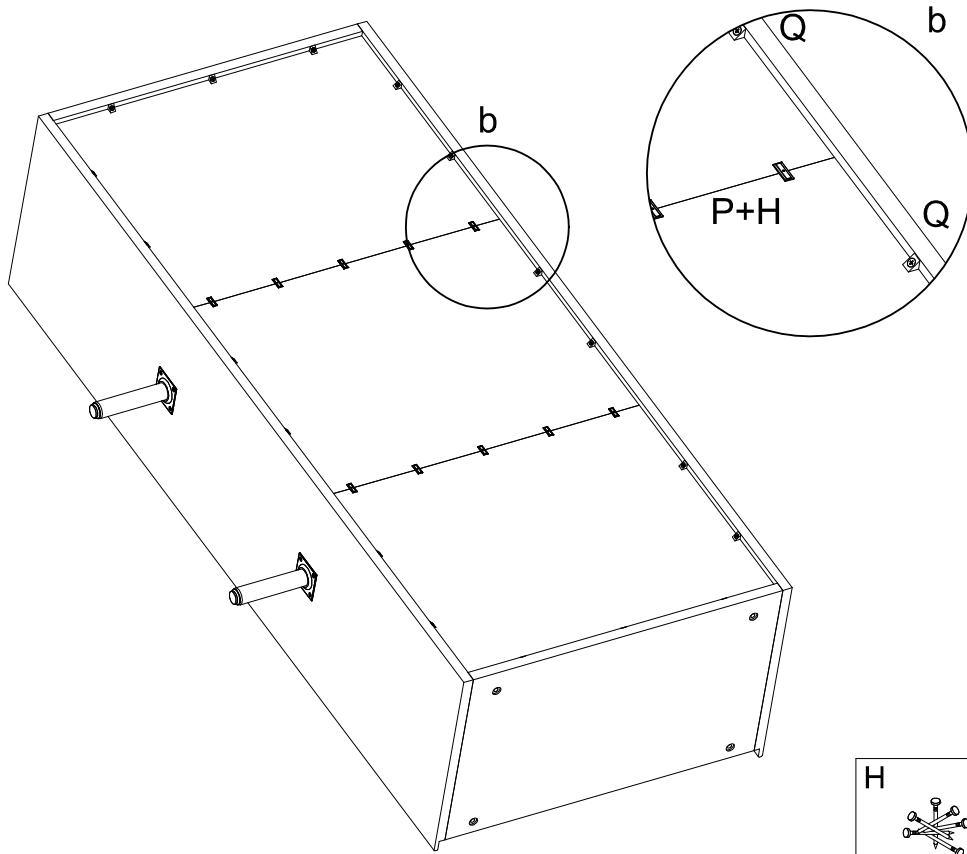


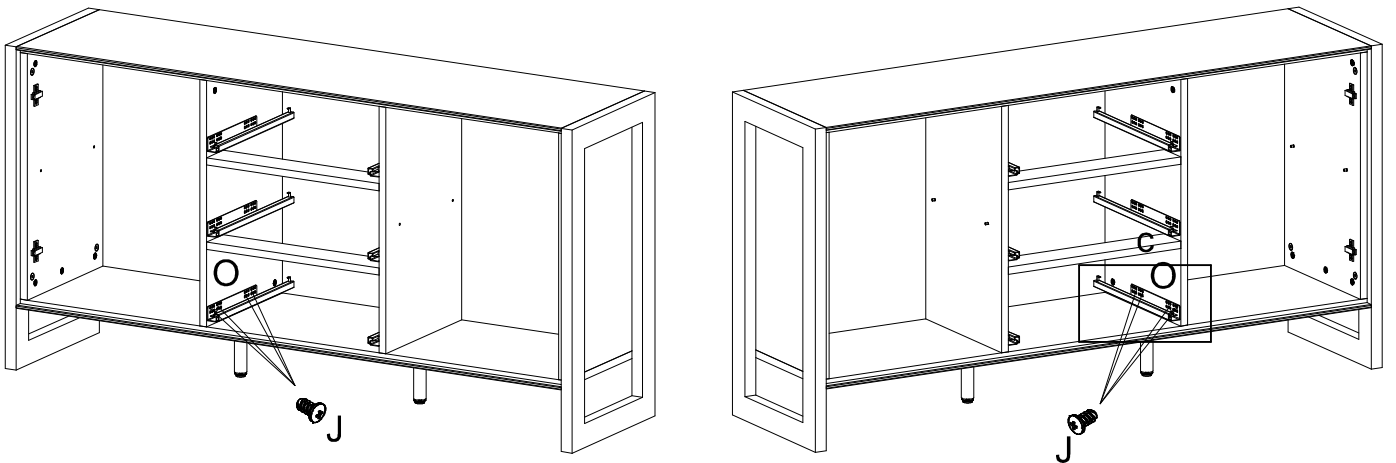
IV

H	P	Q
		
10	10	18




V



S

W8x30
8


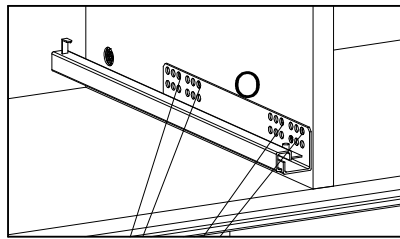


C









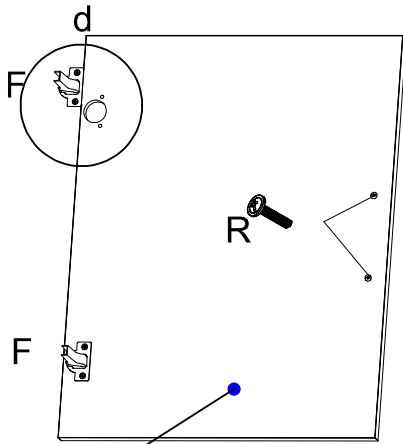
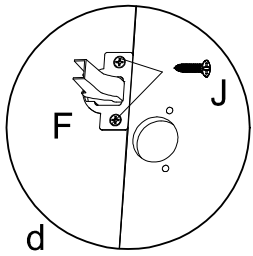
VI

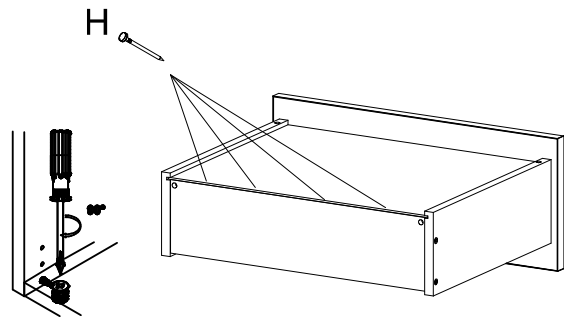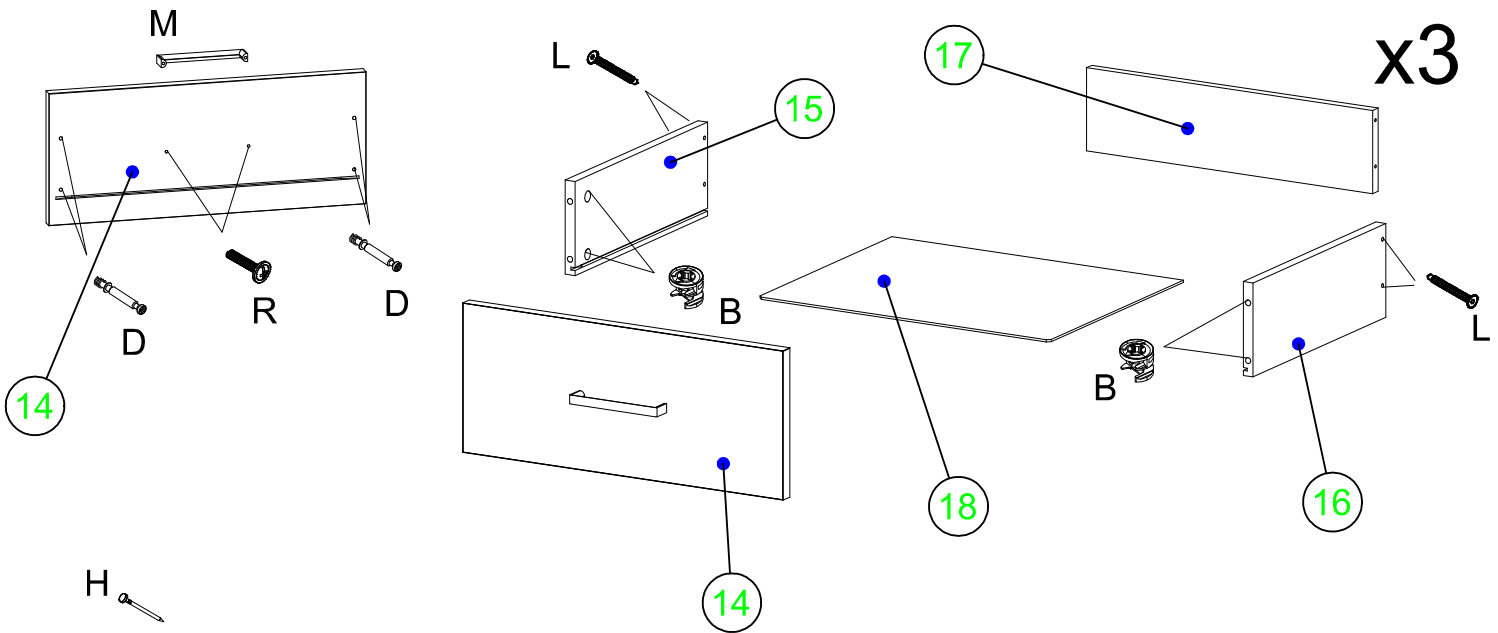J	O
	
Ø 5x13 8	1 SET



VII


B	D	H	L	M	R
					
12	12	12	fi8x30 12	3	M4x22 6



13

M

M

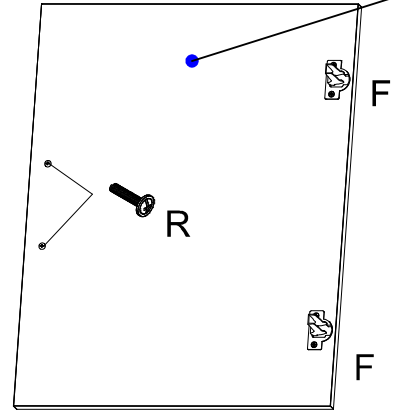


12

VIII

F	J	M	R
4	Ø 5x13 8	2	M4x25 4

12



8

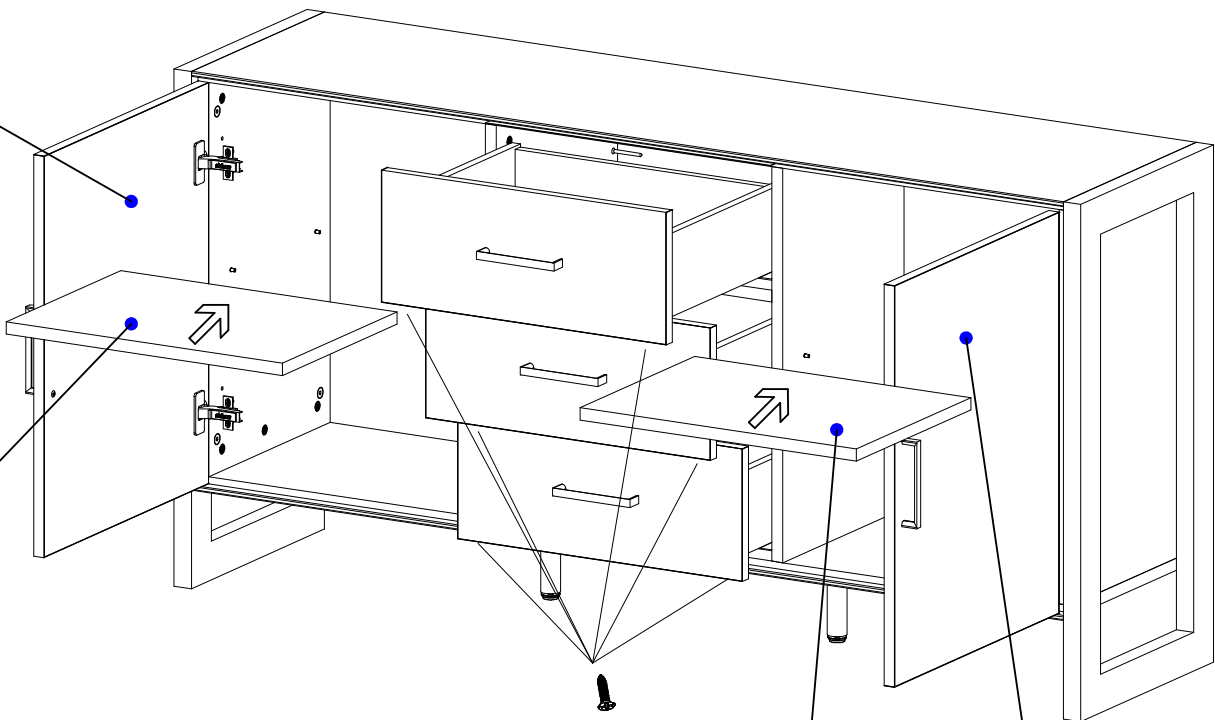

T

8



13

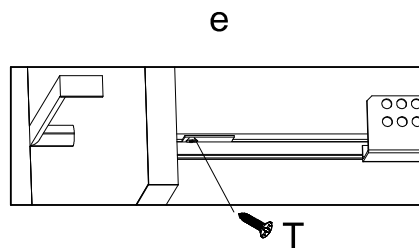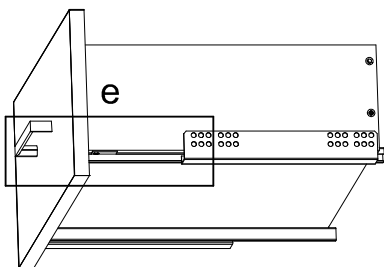


IX

T
Ø 3x16 6

f

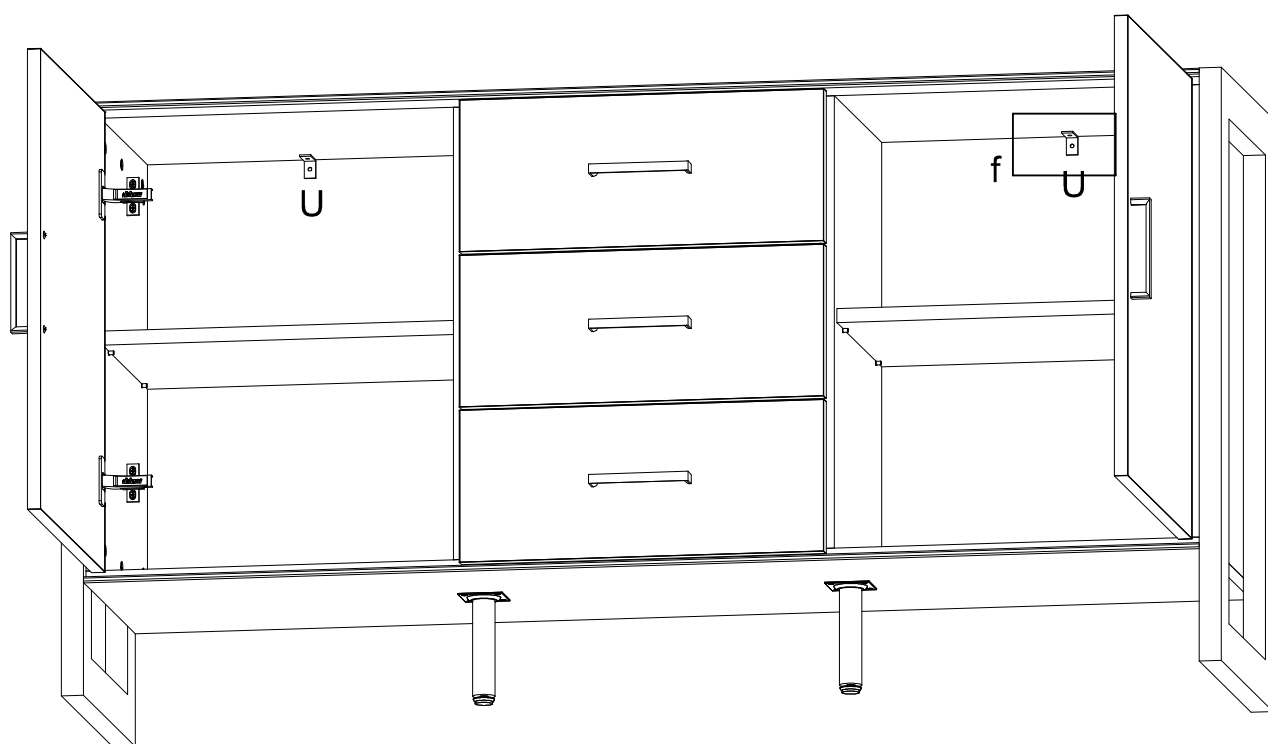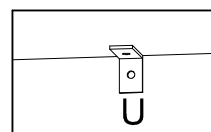

X

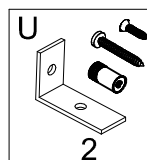

2

