
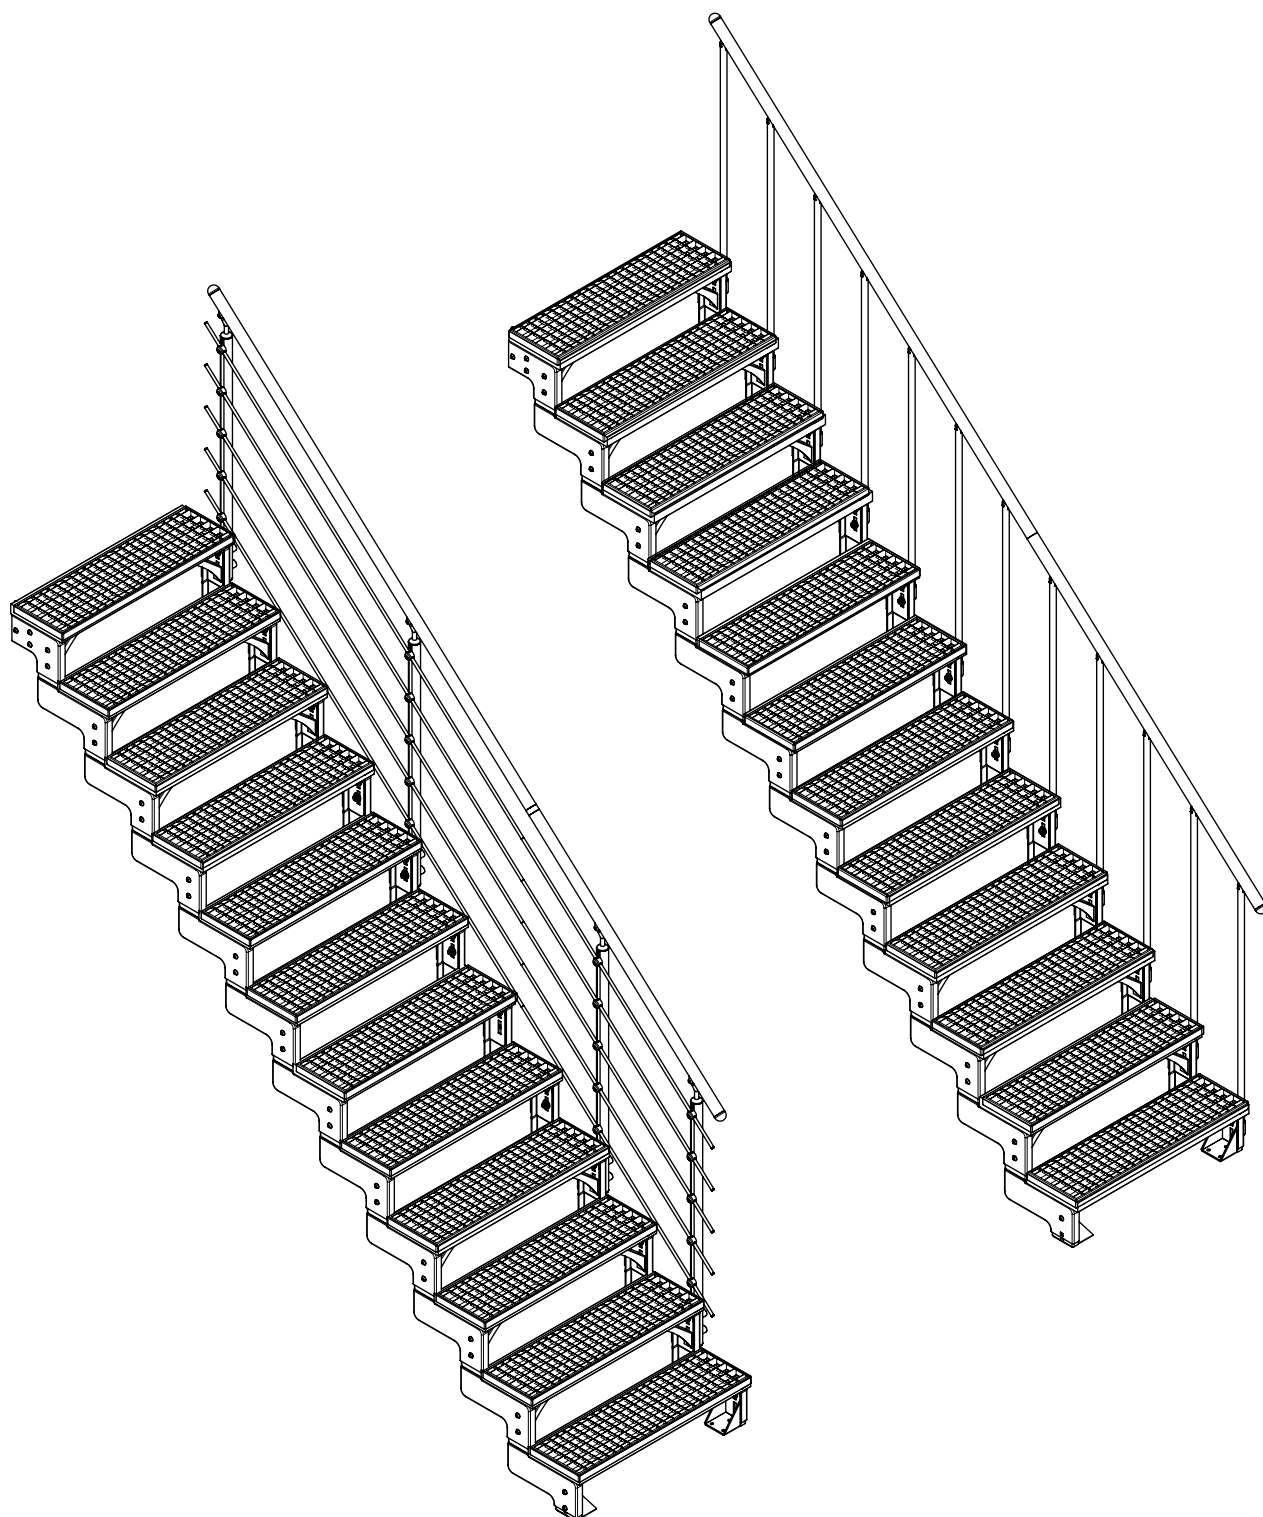
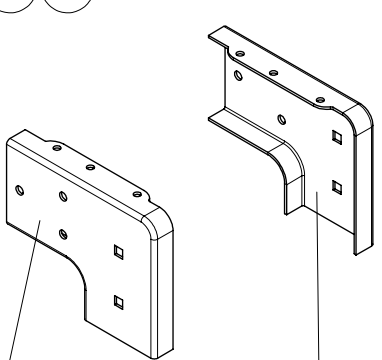
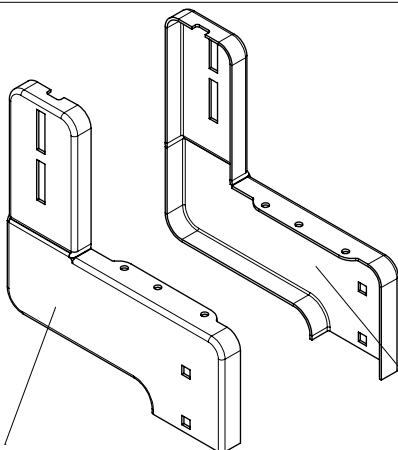
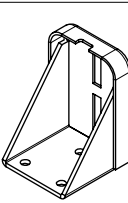






GARDENTOP

Gitterrost



Montageanleitung
Installation instruction











68015			Starter-Set Start kit		
1 2  × 1 K1-41931 × 1 K1-41930			7 8  × 1 K1-41911 × 1 K1-41910		5  × 2 K2-41900
40  × 14 K3-02045 M10×25	41  × 2 K3-04110 Ø10	42  × 8 K3-04198 Ø10	43  × 14 K3-03051 M10	44  × 12 K3-08001 Ø12 x 60	45  × 12 K3-06070 Ø10 x 60
59  × 12 K3-06269 Ø6 x 35	63  × 4 K3-05022 M8 x 20	64  × 12 K3-04010 Ø10,5			





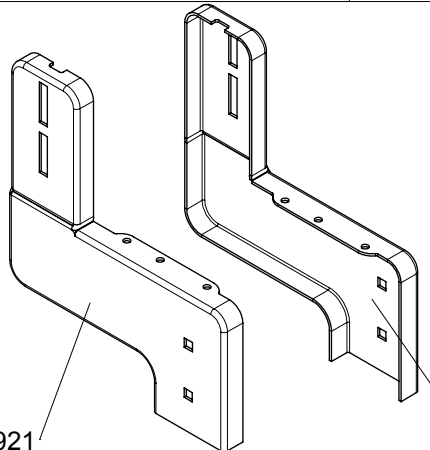
68016			Ergänzungs-Set 1 step kit		
3 4  × 1 K1-41921 × 1 K1-41920			40  × 4 K3-02045 M10 x 25	42  × 4 K3-04198 Ø10	43  × 4 K3-03051 M10
			59  × 6 K3-06269 Ø6 x 35		


68020		Stufen-Winkel Step support 1 step	
9 10 x 1 K1-41060 x 1 K1-41061		If more than 6 steps: Add 9 + 10 Wenn mehr als 6 Stufen: 9 + 10 hinzufügen	59 x 1 K3-06269 Ø6 x 35
		Max. 6 Satz sets	

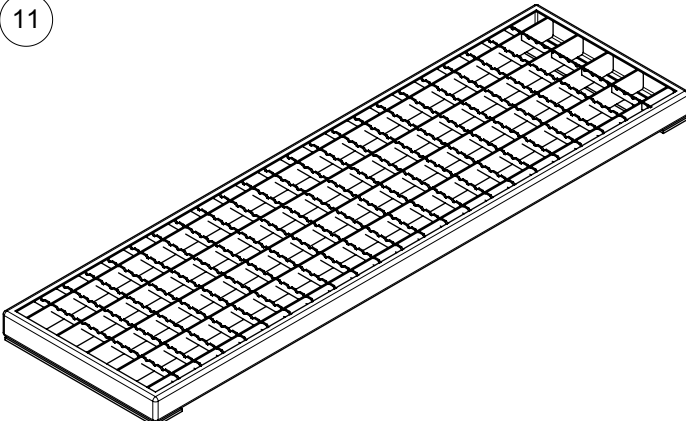		Gitterrost-Stufe Grating step		80 cm / 100 cm	
11 		23  × 2	55   × 4 K3-04016 Ø6	56   × 4 K3-03046 M6	
		57   × 2 K3-02386 M8×40	58   × 4 K3-02220 M6×20	61   × 2 K3-03047 M8	

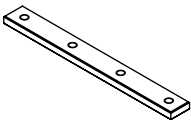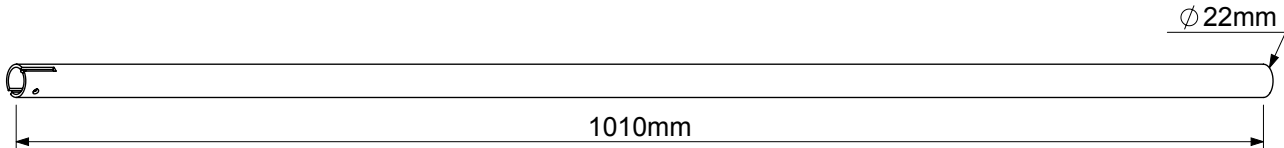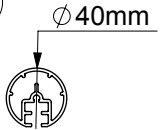
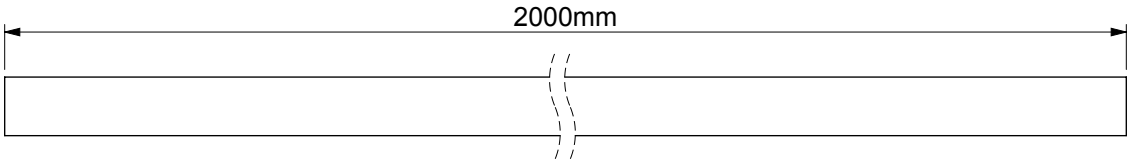
68030		Steiggeländer für 6 Stufen Standard banister for 6 steps		
14  × 6 K2-41050	15  × 1 K1-01221	16  × 6 K1-02130	17  × 2 K2-04040	
18  × 6 K1-41055				
19  × 1 K1-01100				
46  × 6 K3-01004 M4×25	47  × 6 K3-03004 M4	48  × 12 K3-05006 M6×8	53  × 4 K3-05050 M5×12	

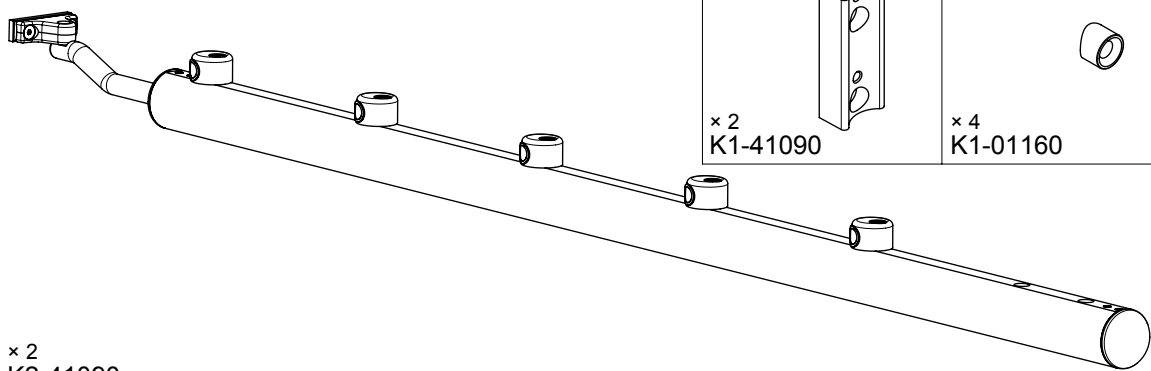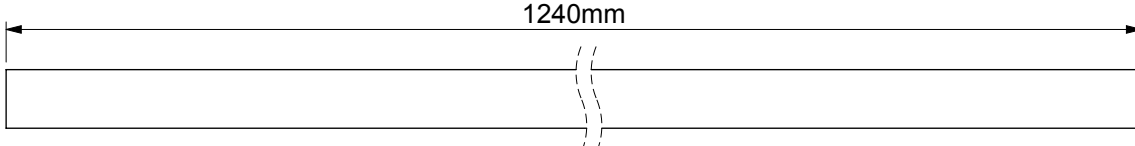
68040		Steiggeländer PROVA Starter-Set für 4 Stufen PROVA banister start for 4 steps		
17  × 2 K2-04040	20  × 2 K2-41090		21  × 2 K1-41090	22  × 4 K1-01160
26  × 1 K1-01107				
27  × 5 K1-18060				
28  × 10 K1-01010	29  × 1 K2-14930	51  × 4 K3-02010 M10×70		

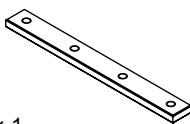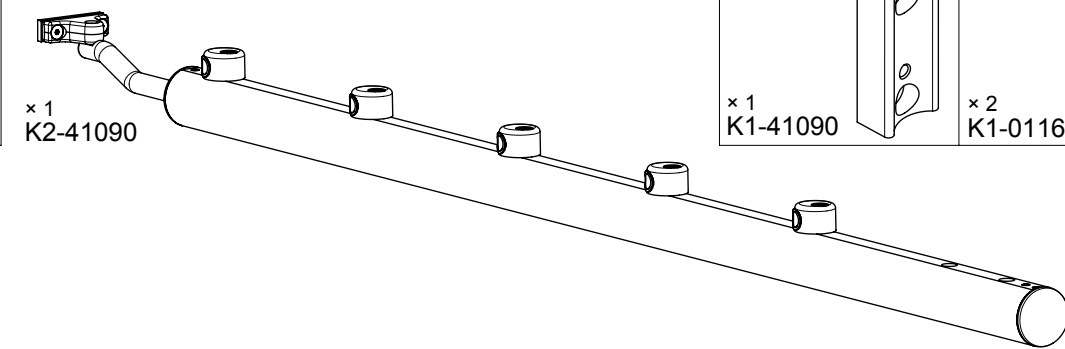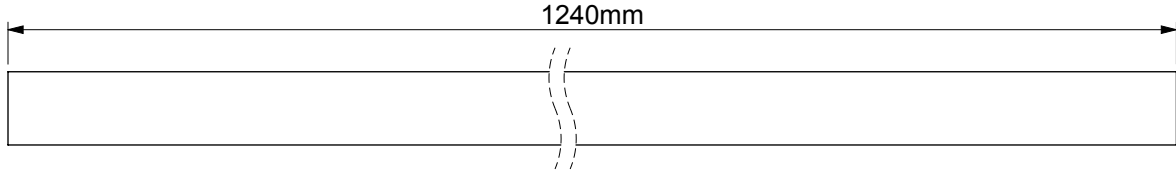68041		Steiggeländer PROVA Ergänzungs-Set für 4 Stufen PROVA banister extension for 4 steps	
15  × 1 K1-01221	20  × 1 K2-41090	21  × 1 K1-41090	22  × 2 K1-01160
			
26  × 1 K1-01107			
27  × 5 K1-18060			
29  × 1 K2-14930	51  × 2 K3-02010 M10×70	53  × 5 K3-05050 M5 x 12	54  × 5 K3-08023 Ø8


68098		Unterstützung Support		OPTION	
24 	26  × 1 K1-41955	27  × 1 K1-41956	41  × 1 K3-04110 Ø10	43  × 1 K3-03051 M10	52  × 1 K3-02375 M10 x 75
	53  × 2 K3-05007 M5 x 5	54  × 1 K3-08002 Ø8 x 40	55  × 1 K3-06032 Ø6 x 60		

× 1
K1-41950


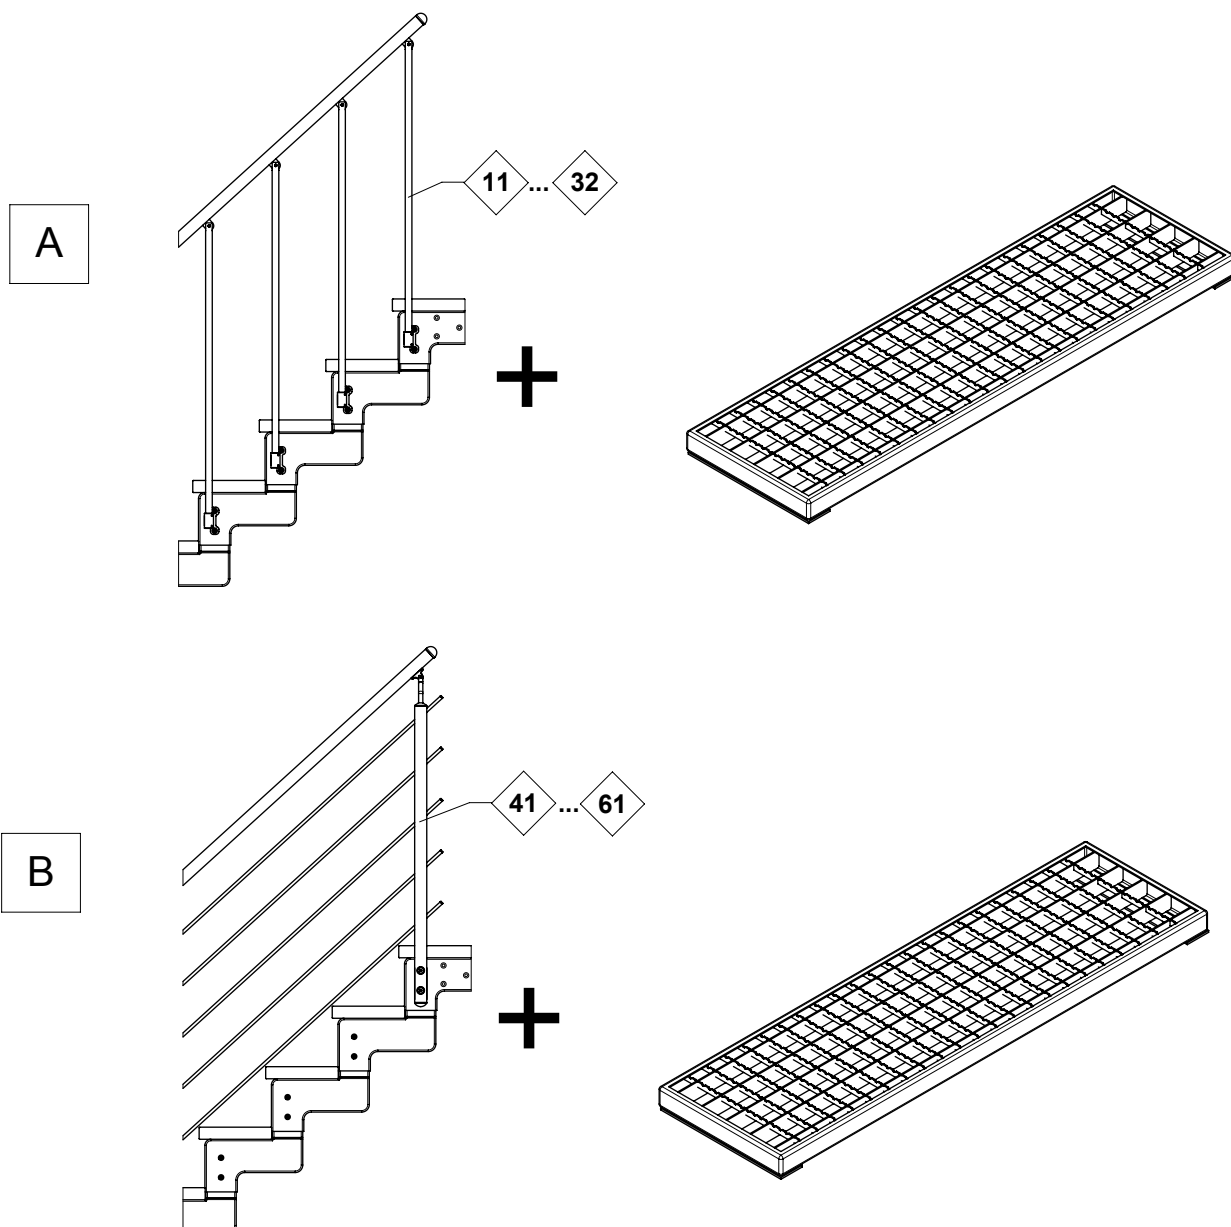
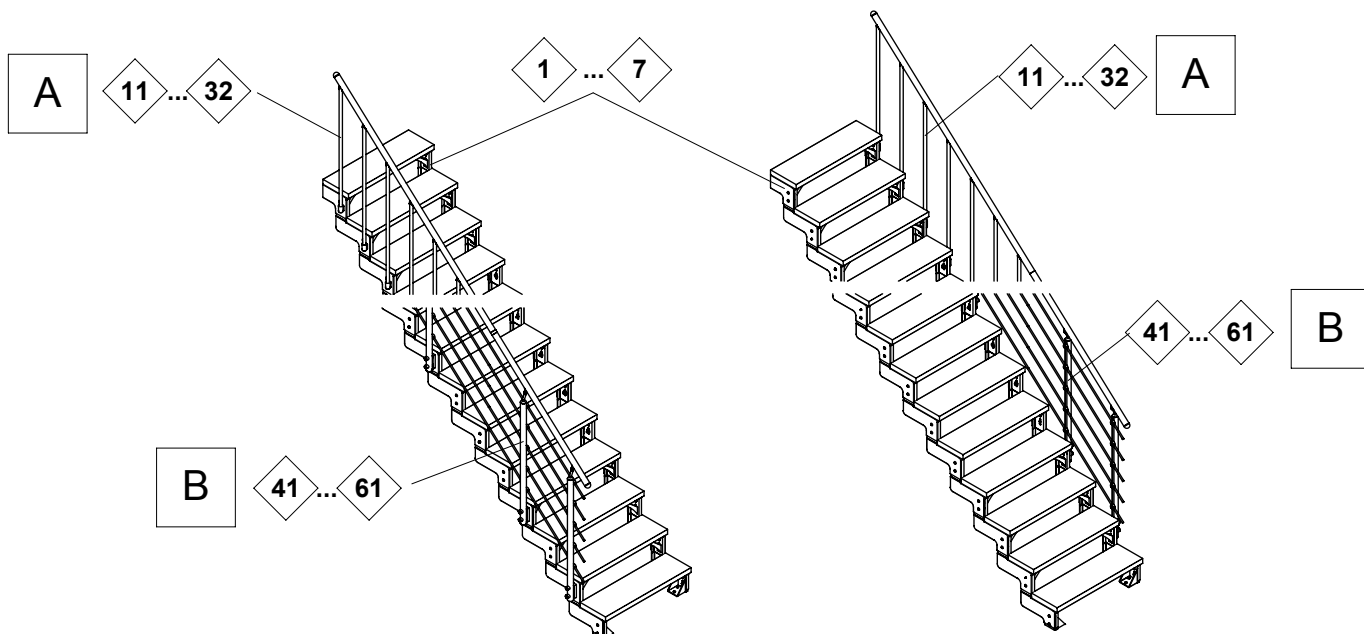




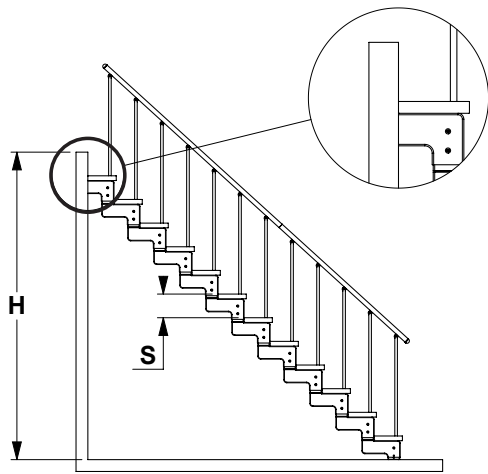




H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	540	570	600	630	660
3	720	760	800	840	880
4	900	950	1000	1050	1100
5	1080	1140	1200	1260	1320
6	1260	1330	1400	1470	1540
7	1440	1520	1600	1680	1760
8	1620	1710	1800	1890	1980
9	1800	1900	2000	2100	2200
10	1980	2090	2200	2310	2420
11	2160	2280	2400	2520	2640
12	2340	2470	2600	2730	2860



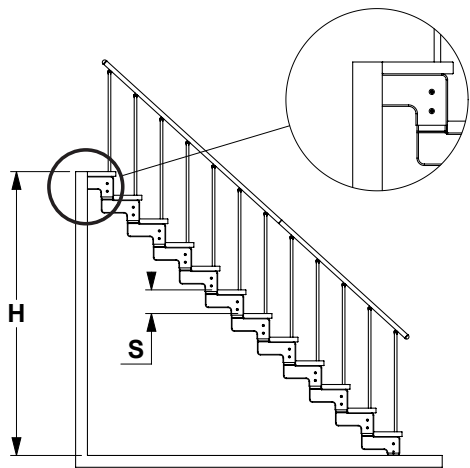





H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	360	380	400	420	440
3	540	570	600	630	660
4	720	760	800	840	880
5	900	950	1000	1050	1100
6	1080	1140	1200	1260	1320
7	1260	1330	1400	1470	1540
8	1440	1520	1600	1680	1760
9	1620	1710	1800	1890	1980
10	1800	1900	2000	2100	2200
11	1980	2090	2200	2310	2420
12	2160	2280	2400	2520	2640

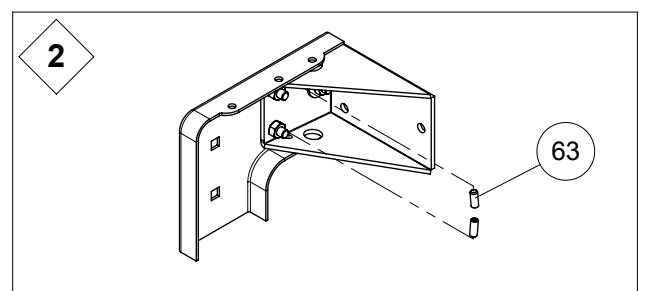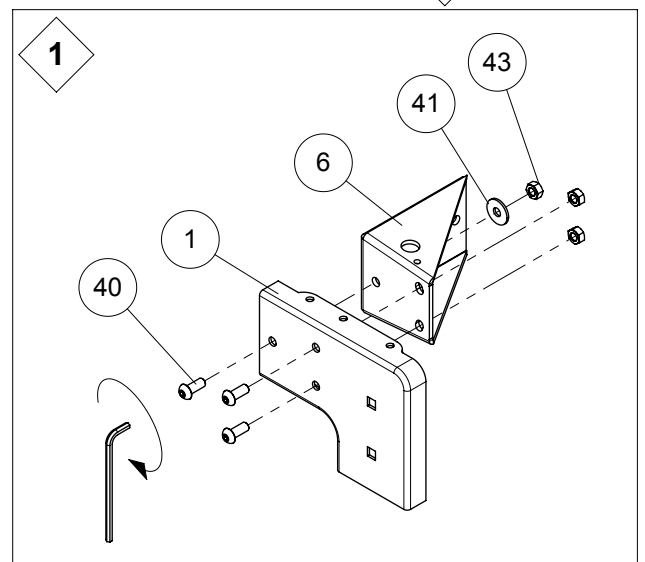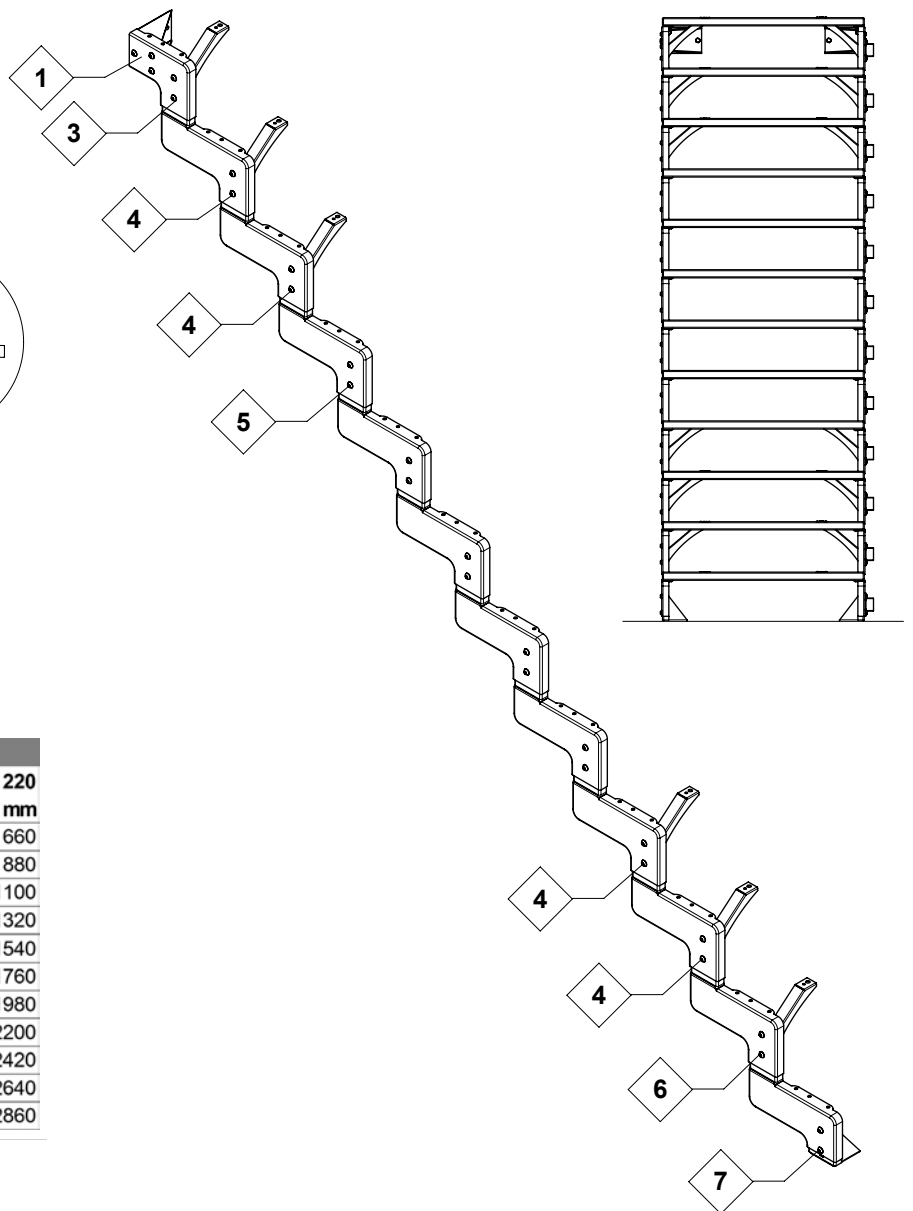

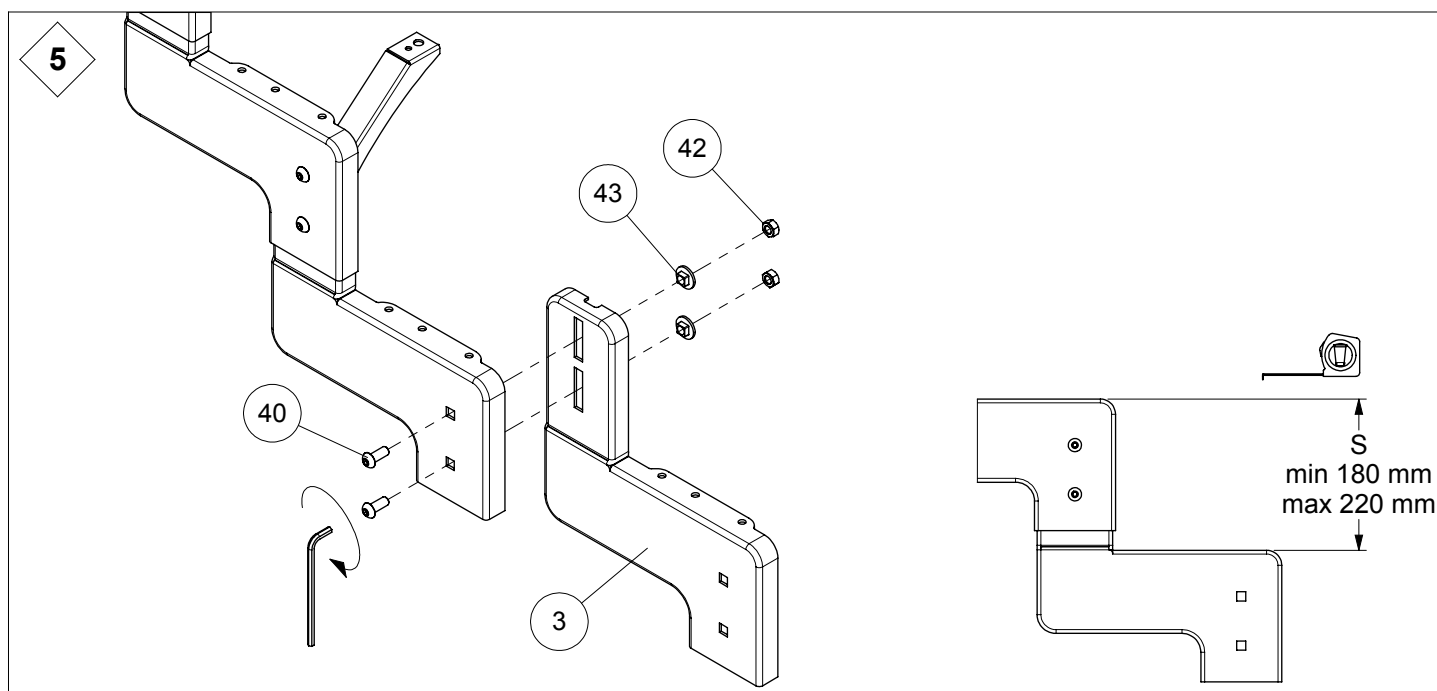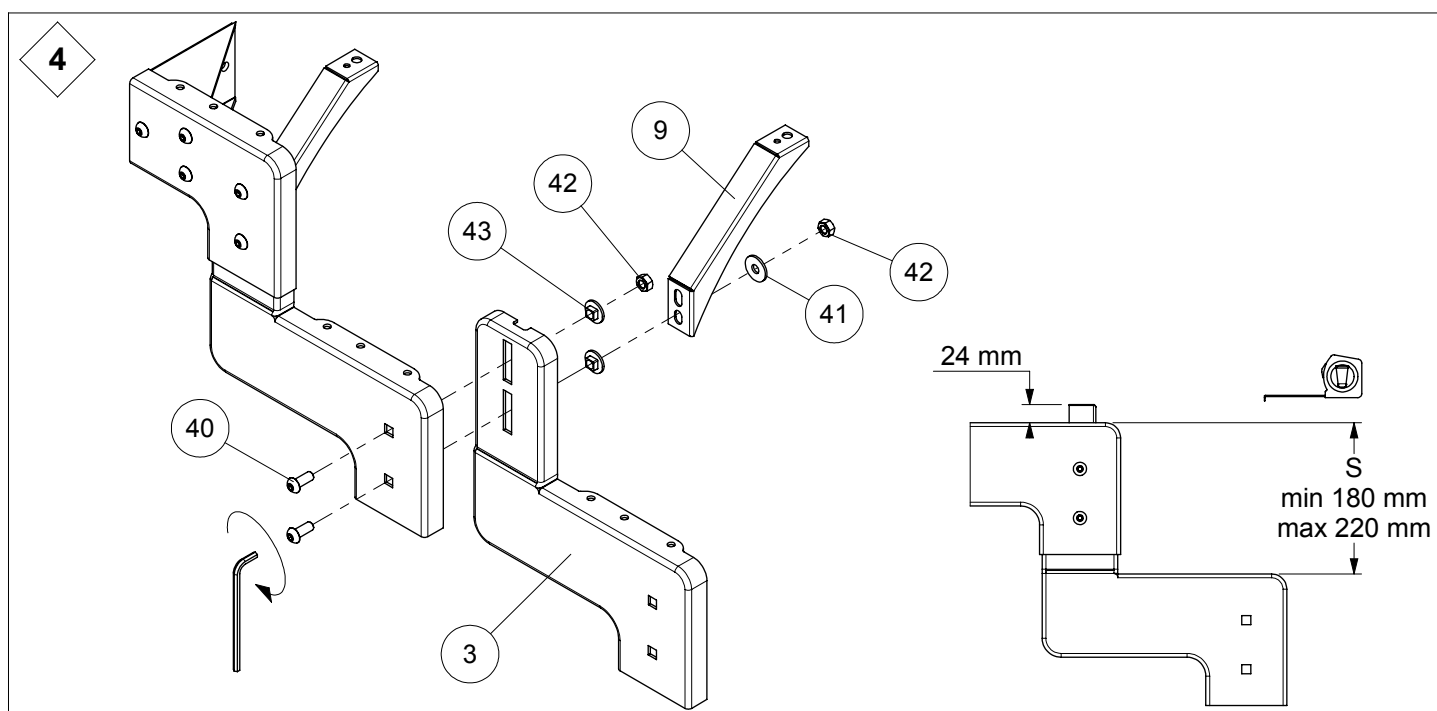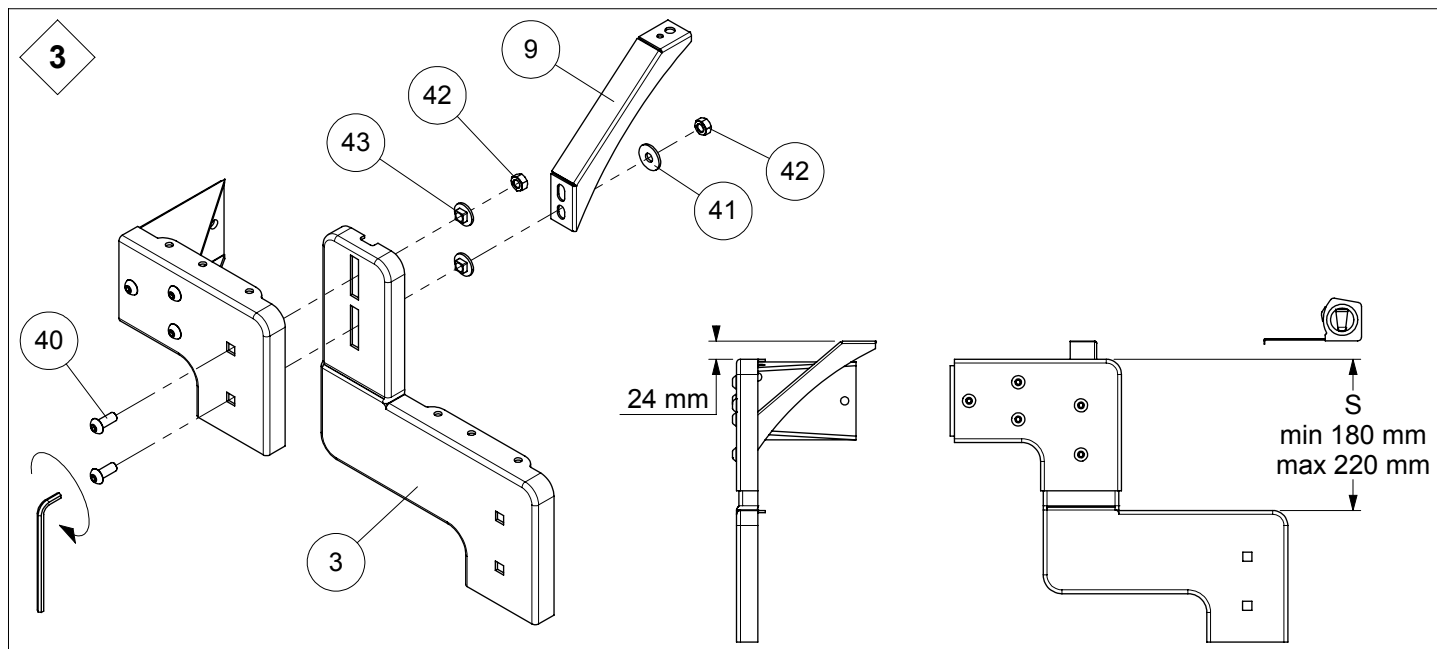

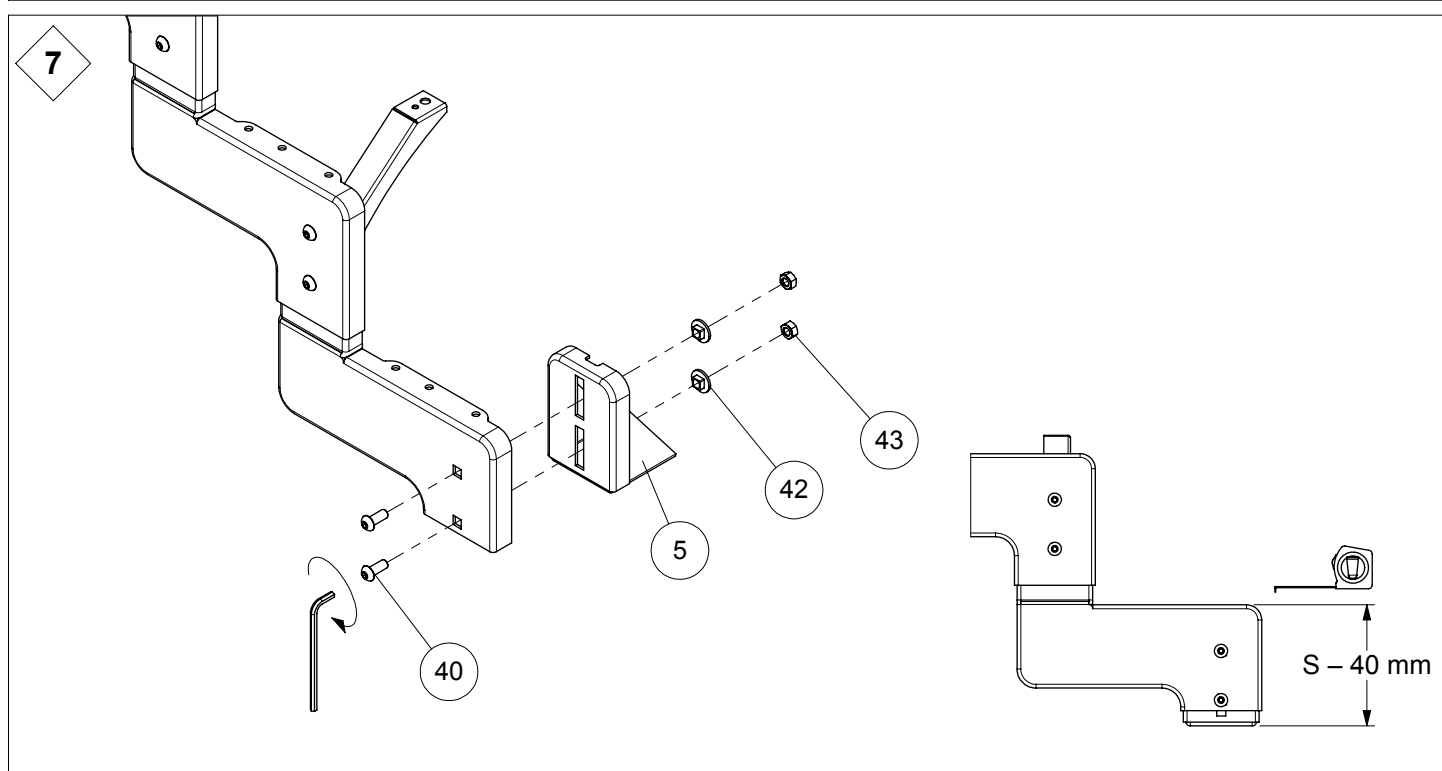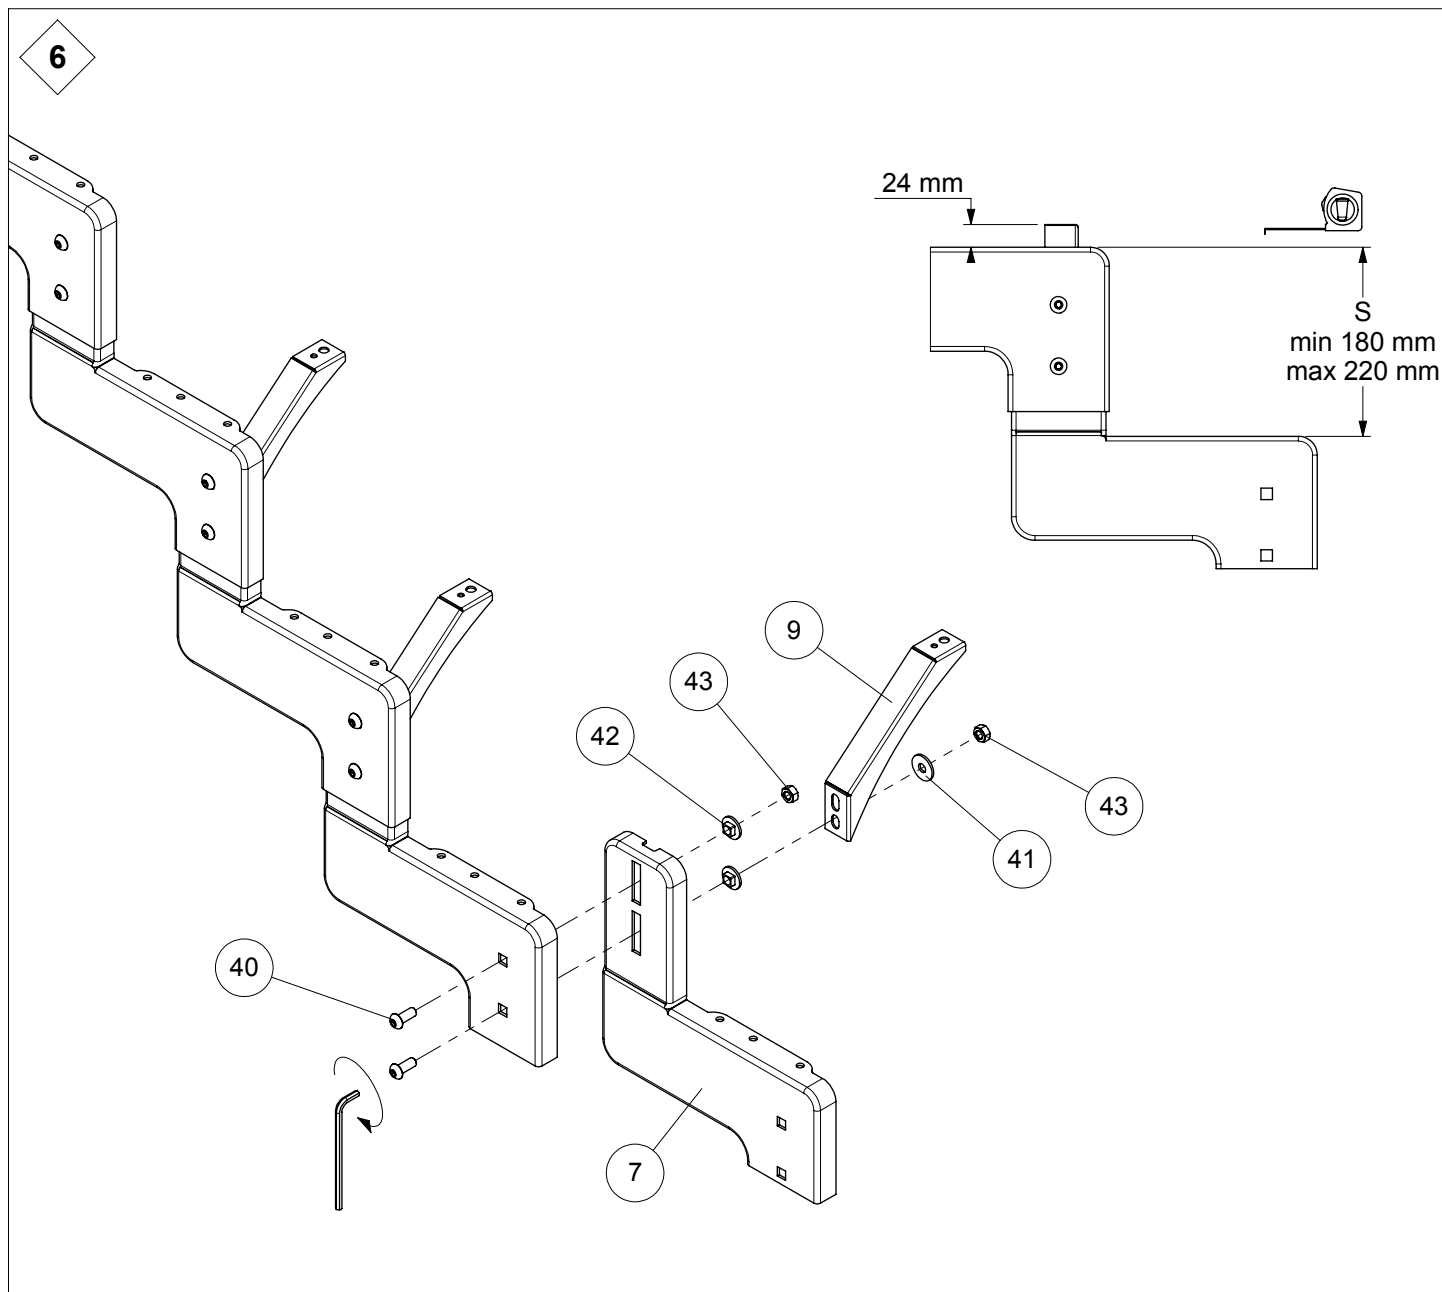


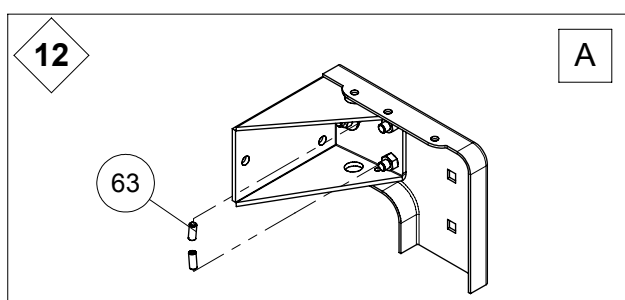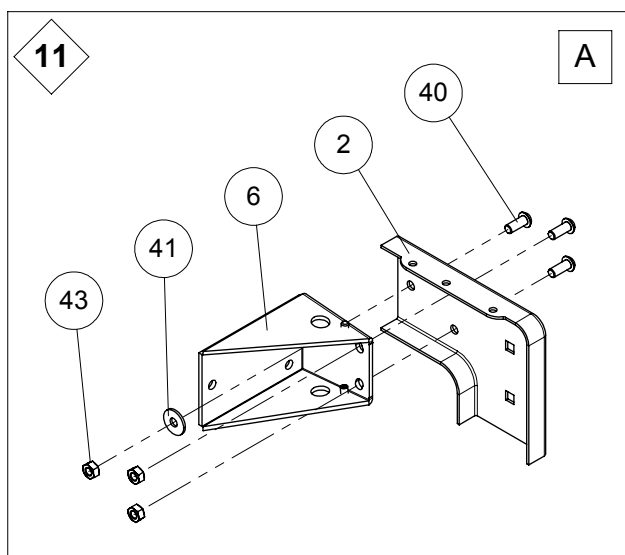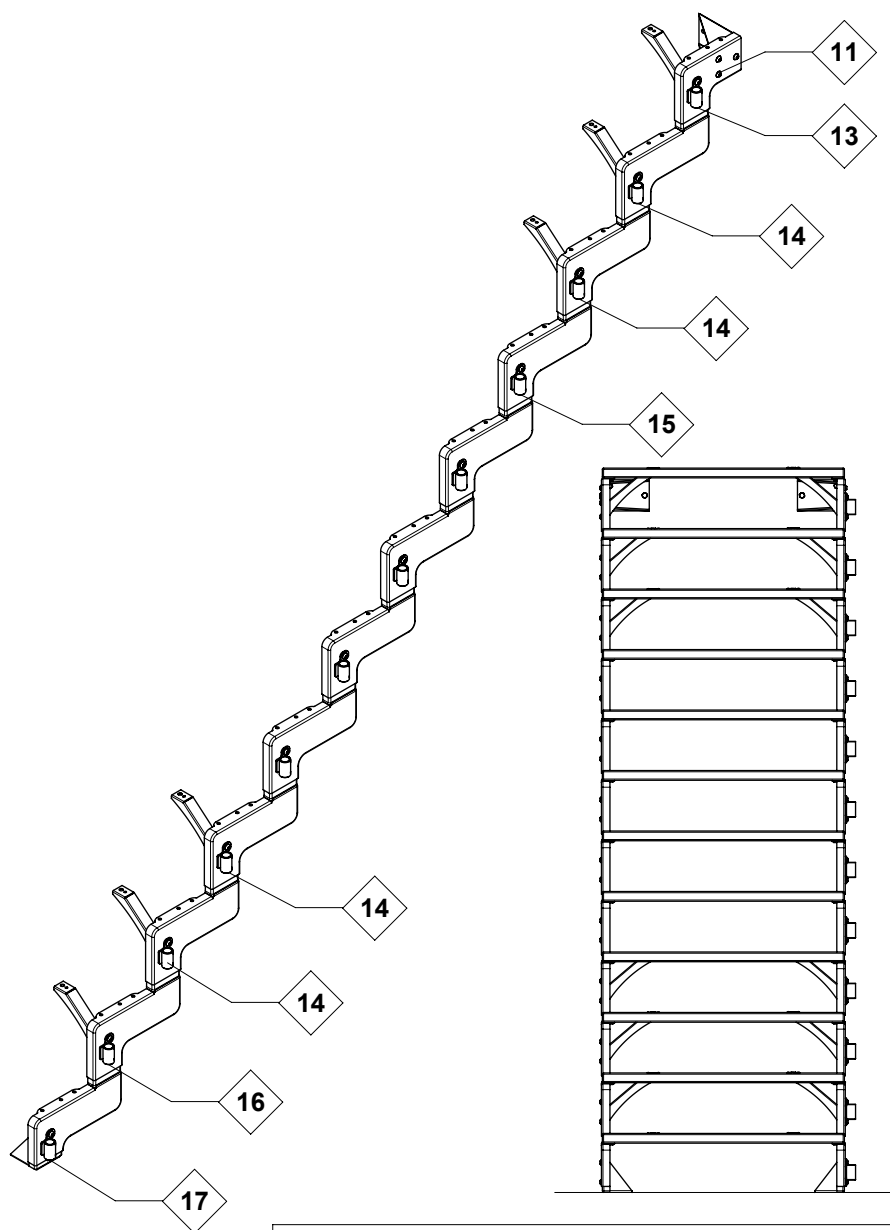

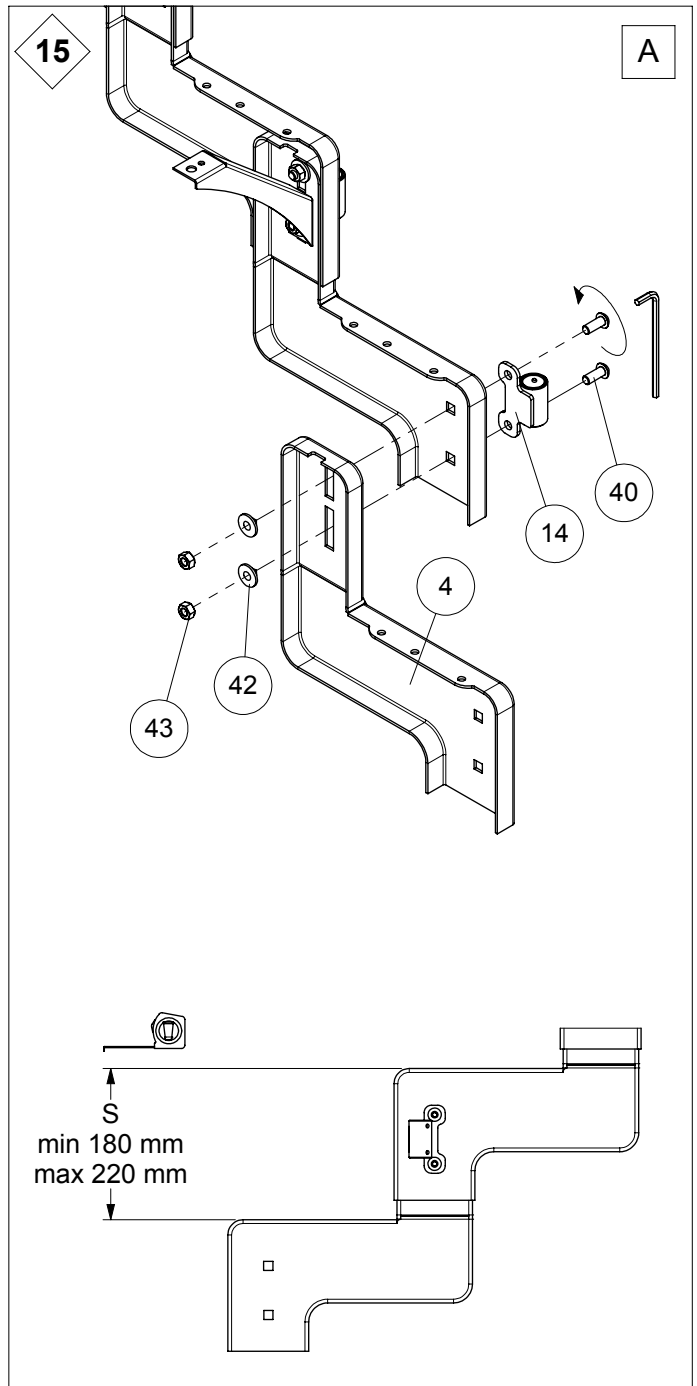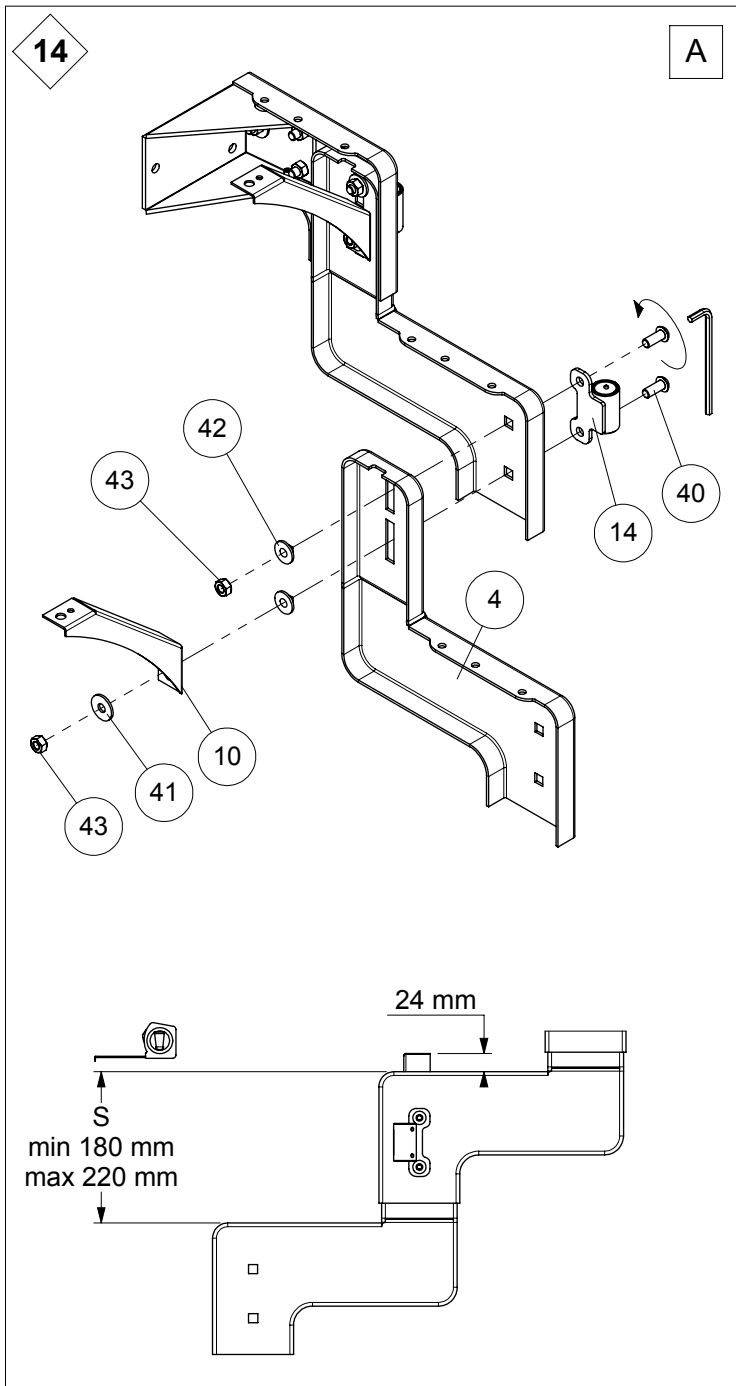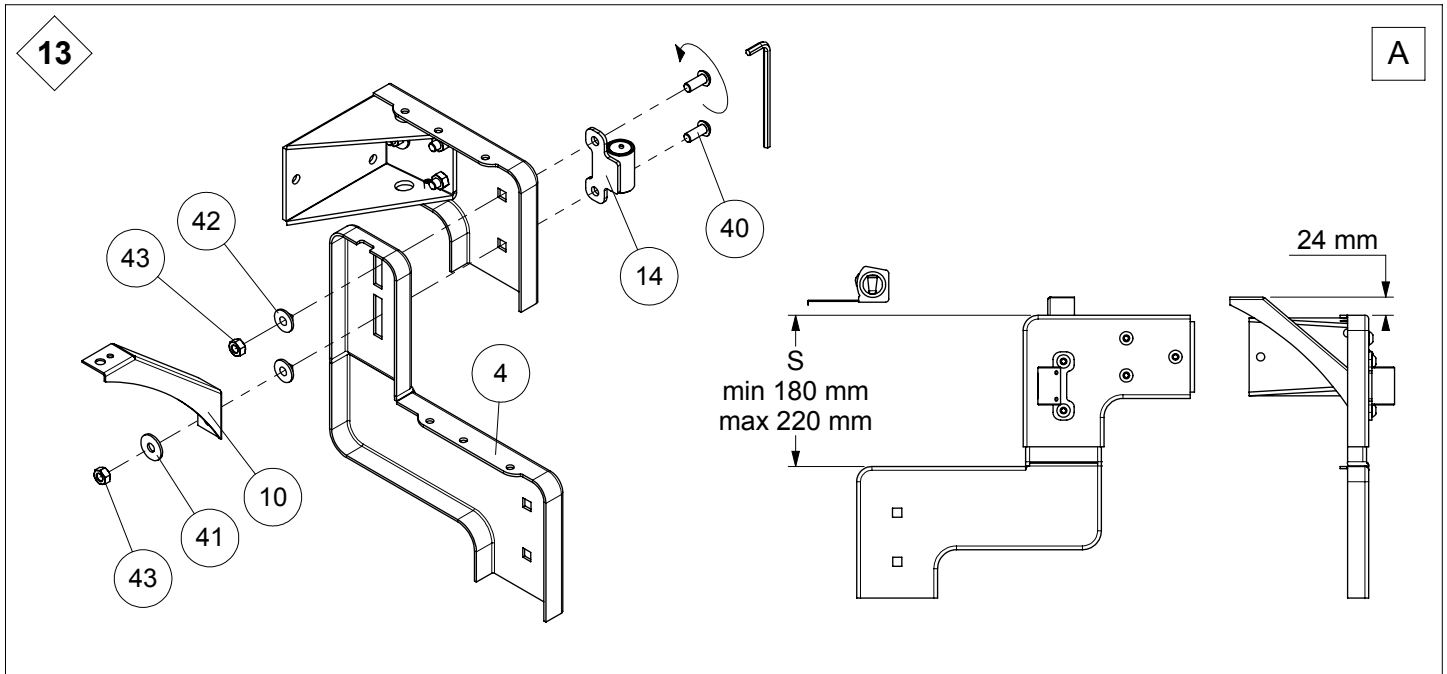


16



A

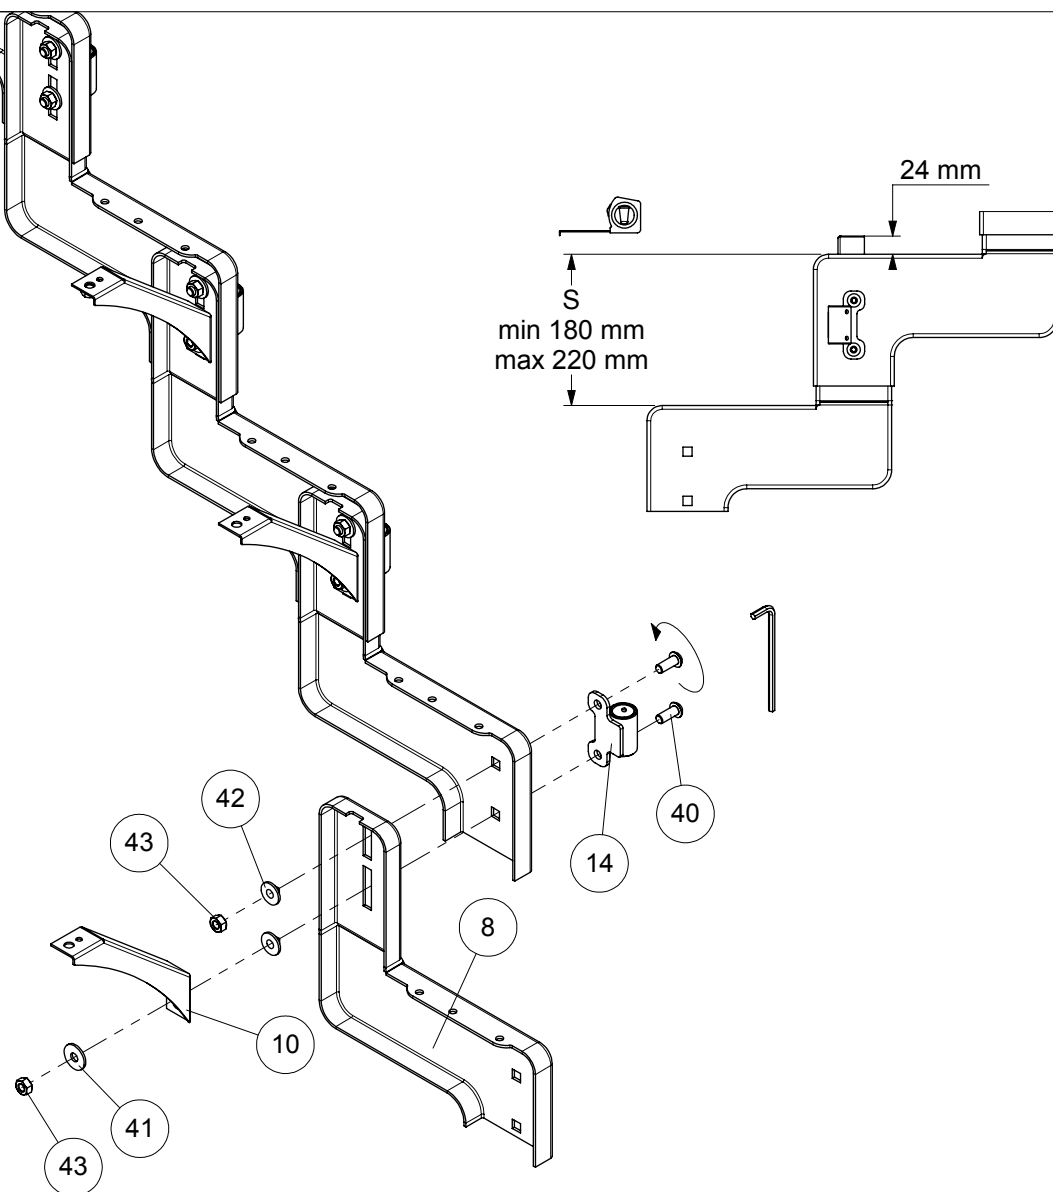

17




A

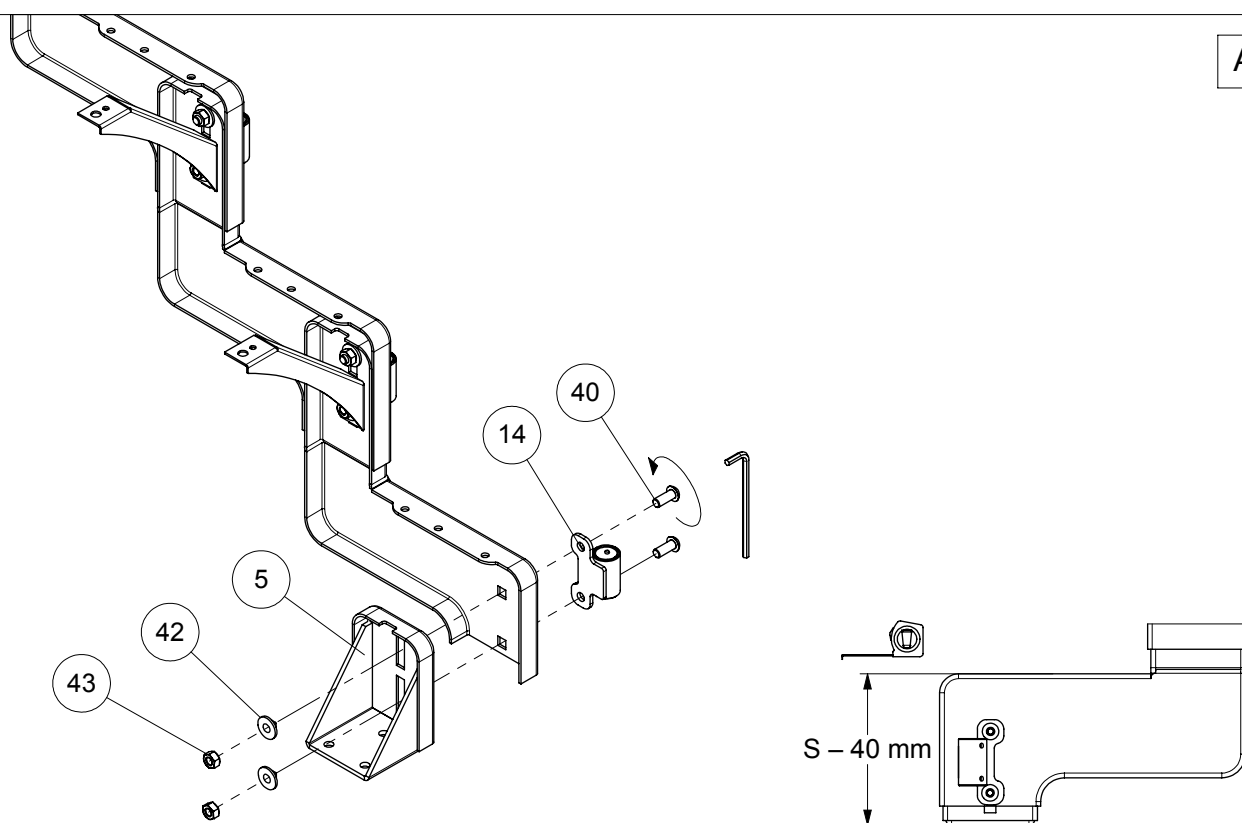

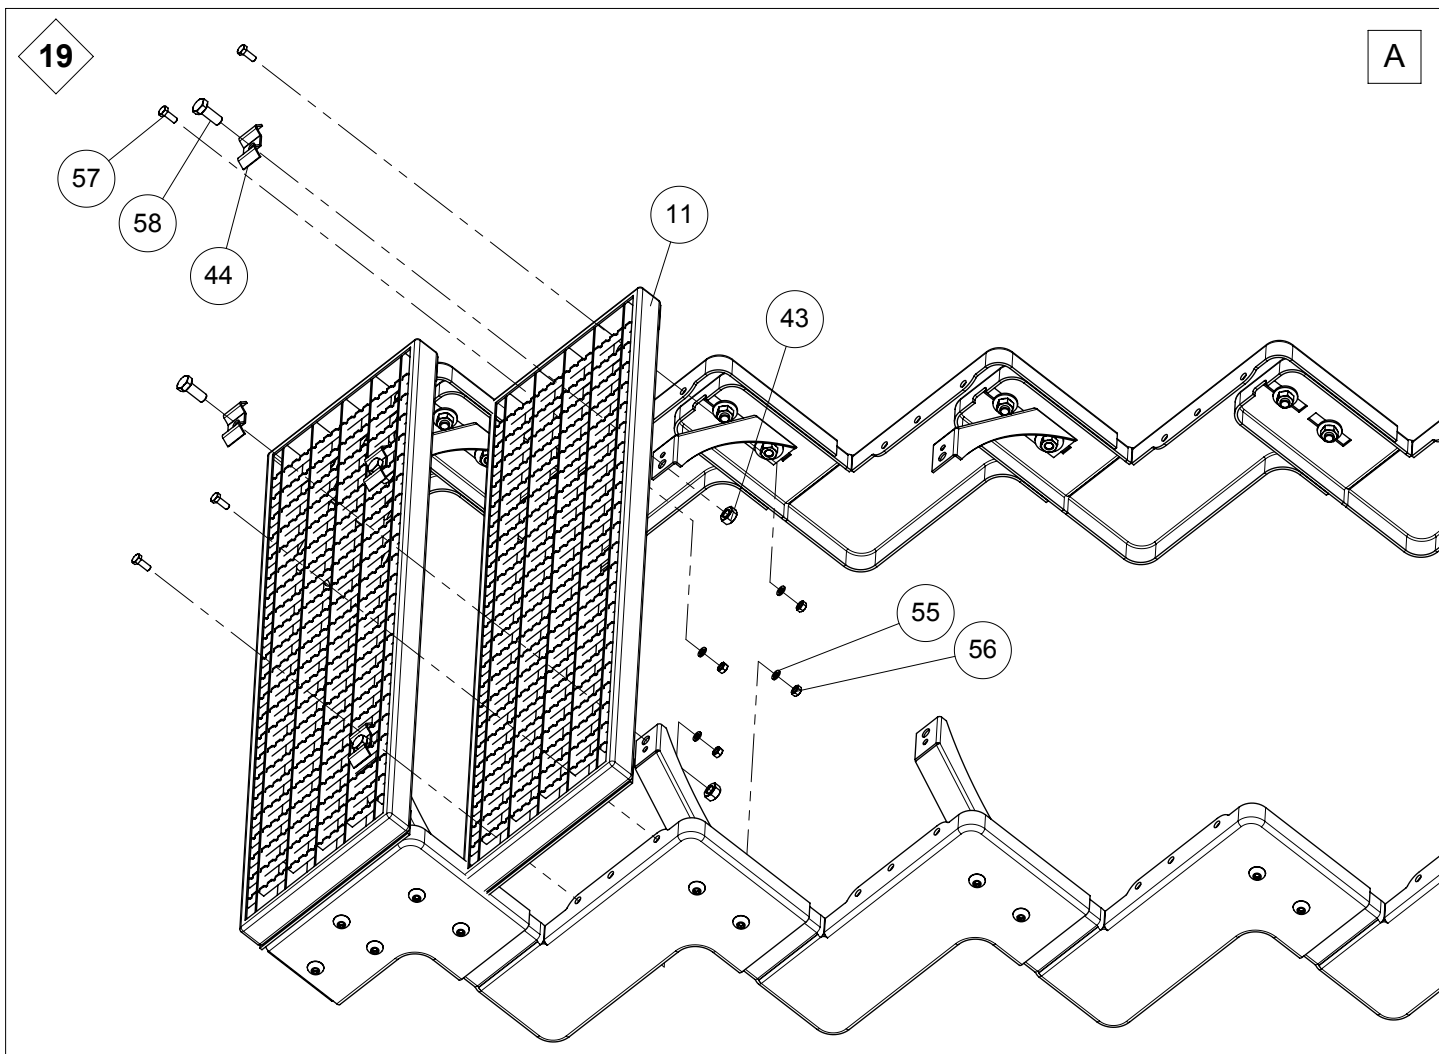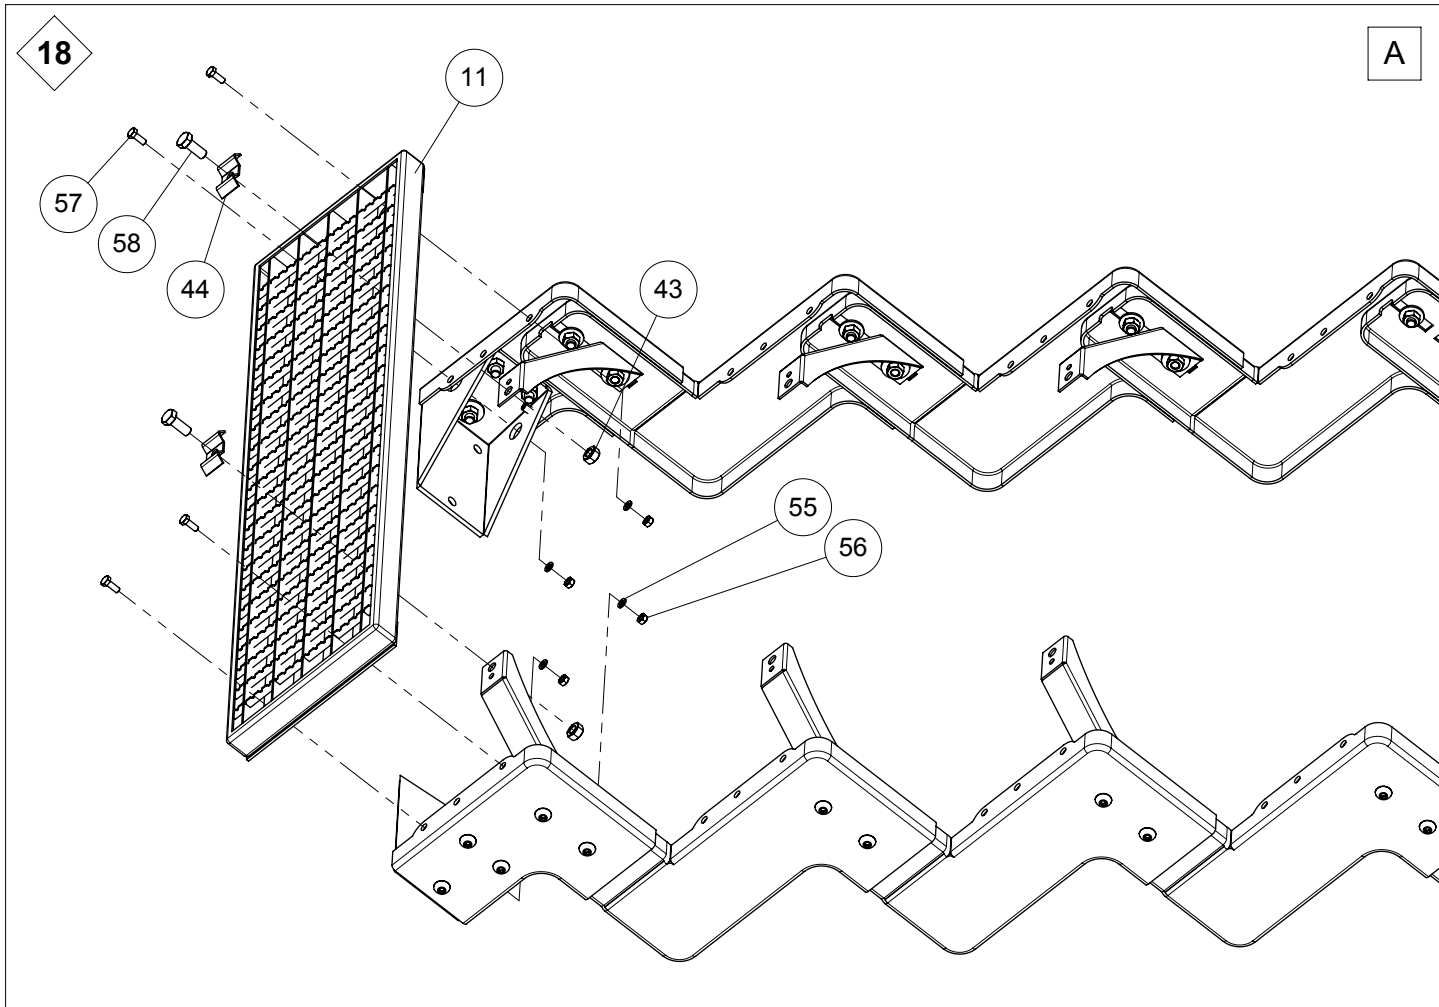

20


A

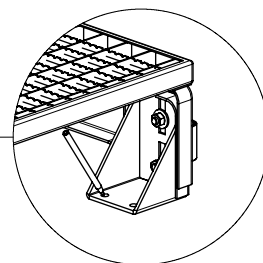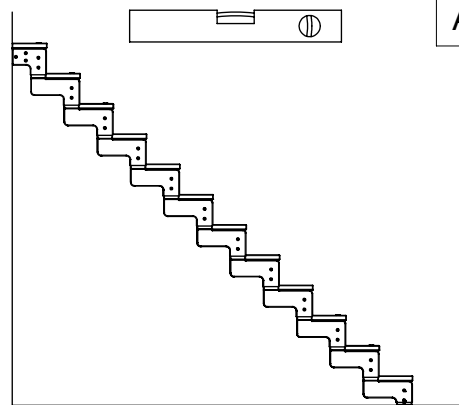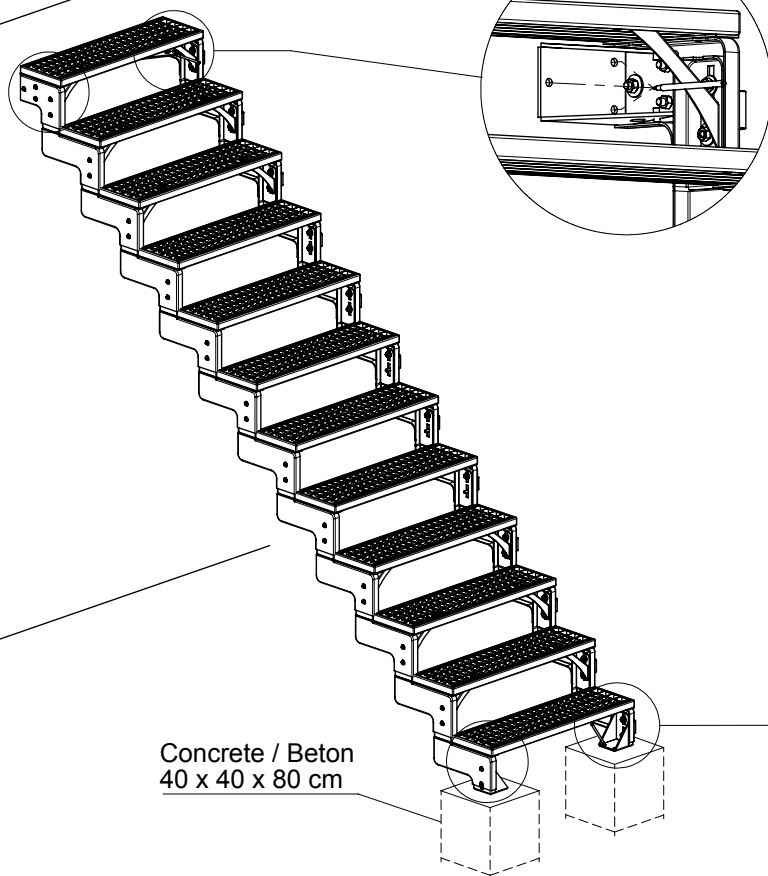

21

22

A




21

 $\varnothing 12\text{mm} \nabla 70\text{mm}$

44

45

22


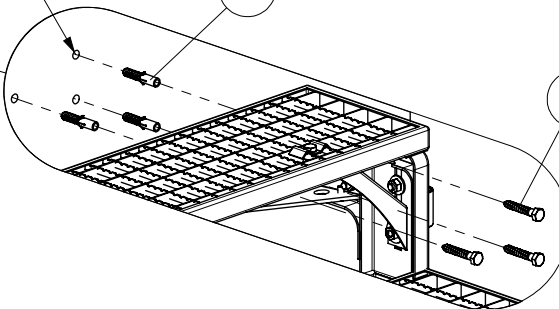





22





45




44




21

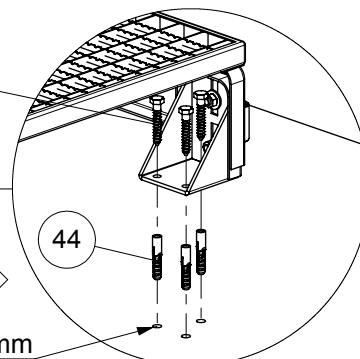
 $\varnothing 12\text{mm} \nabla 70\text{mm}$

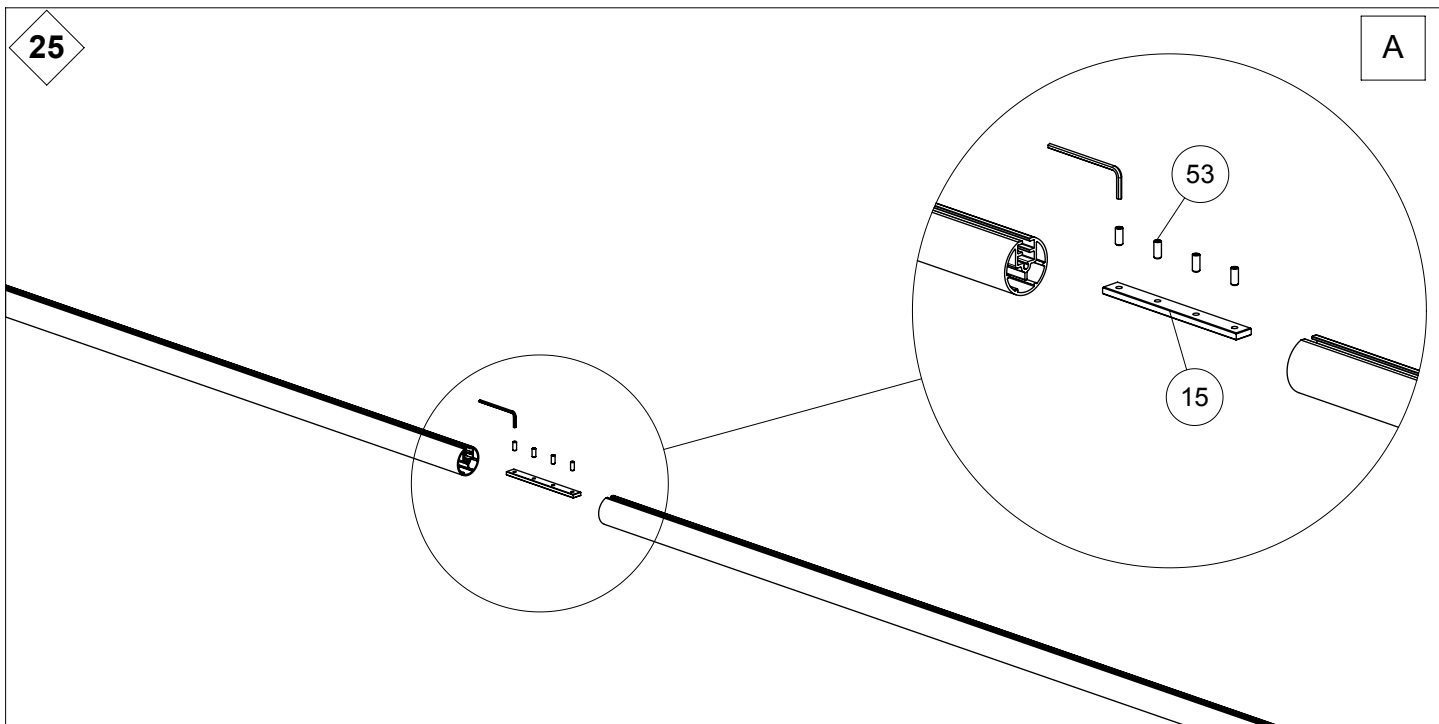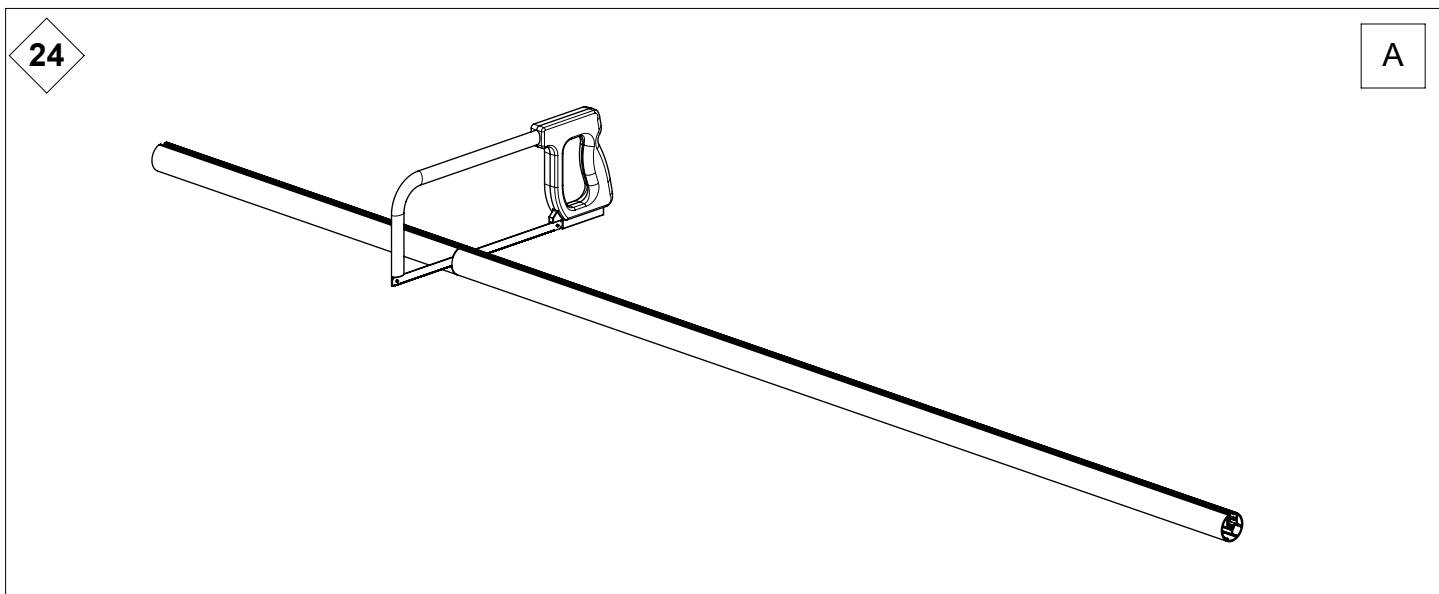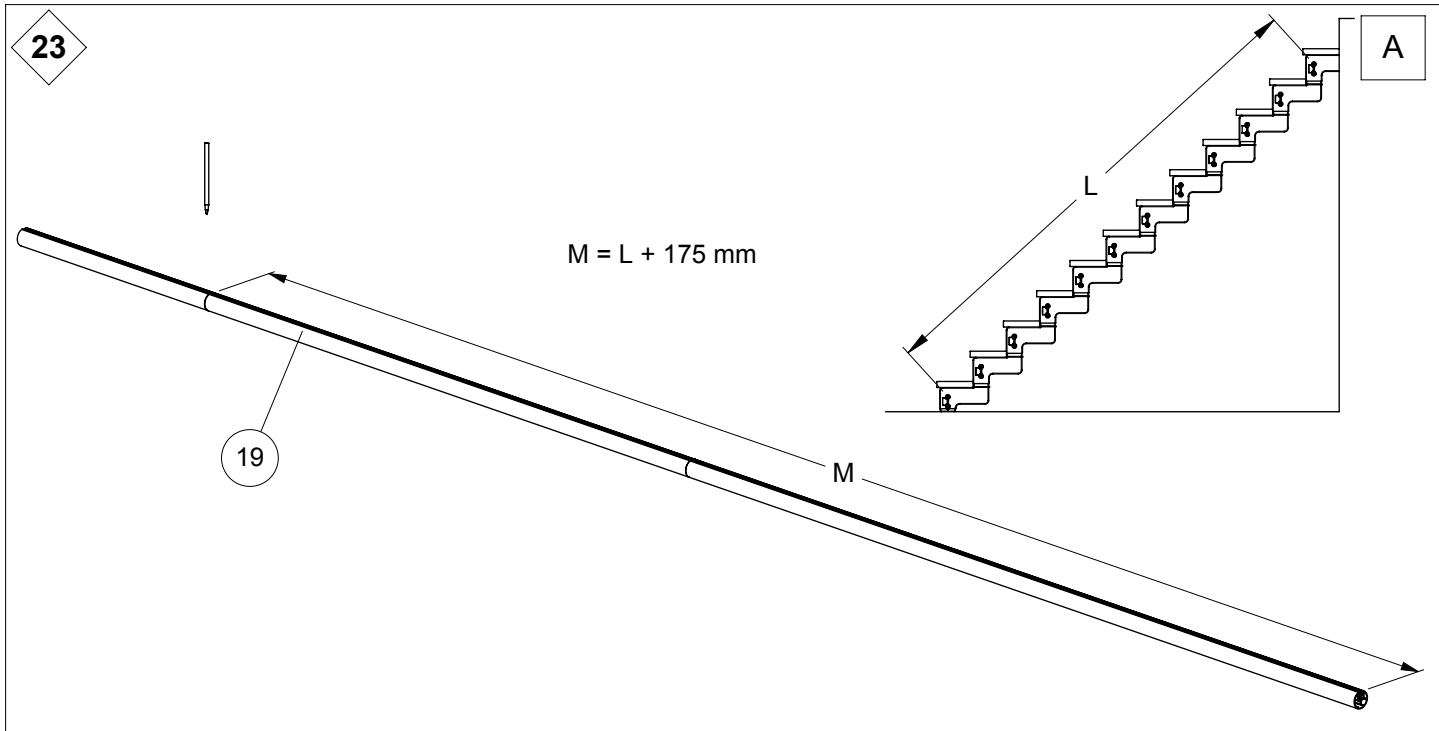

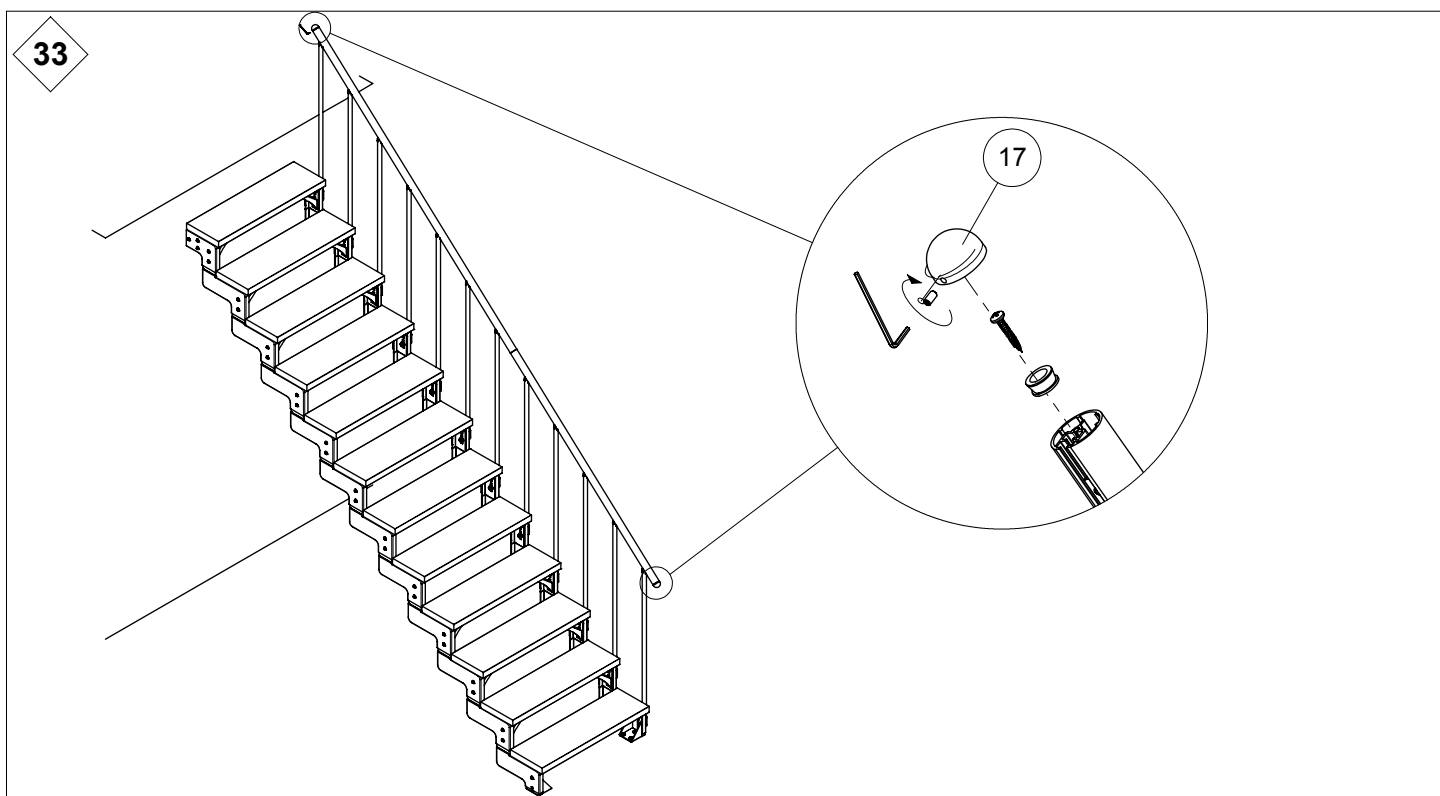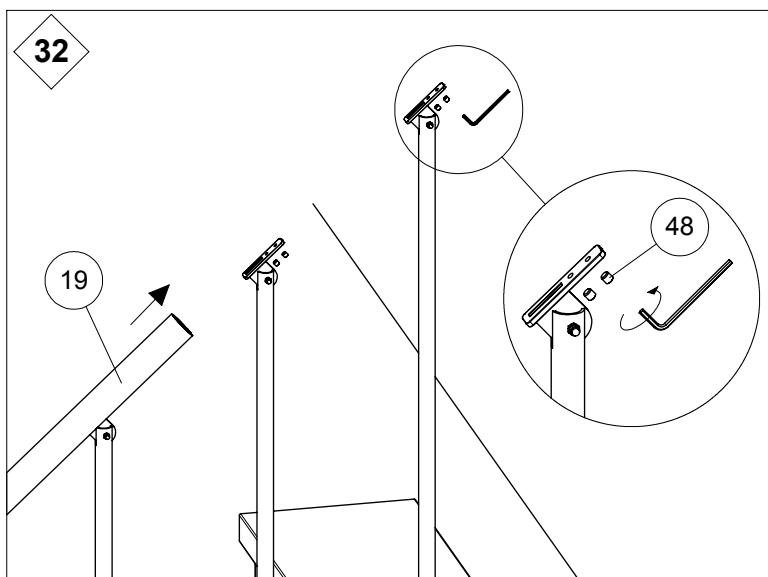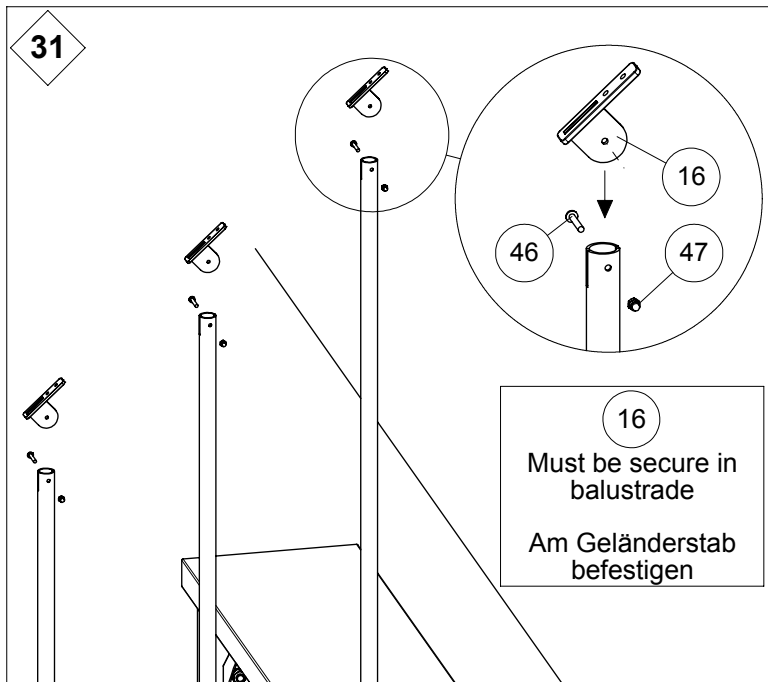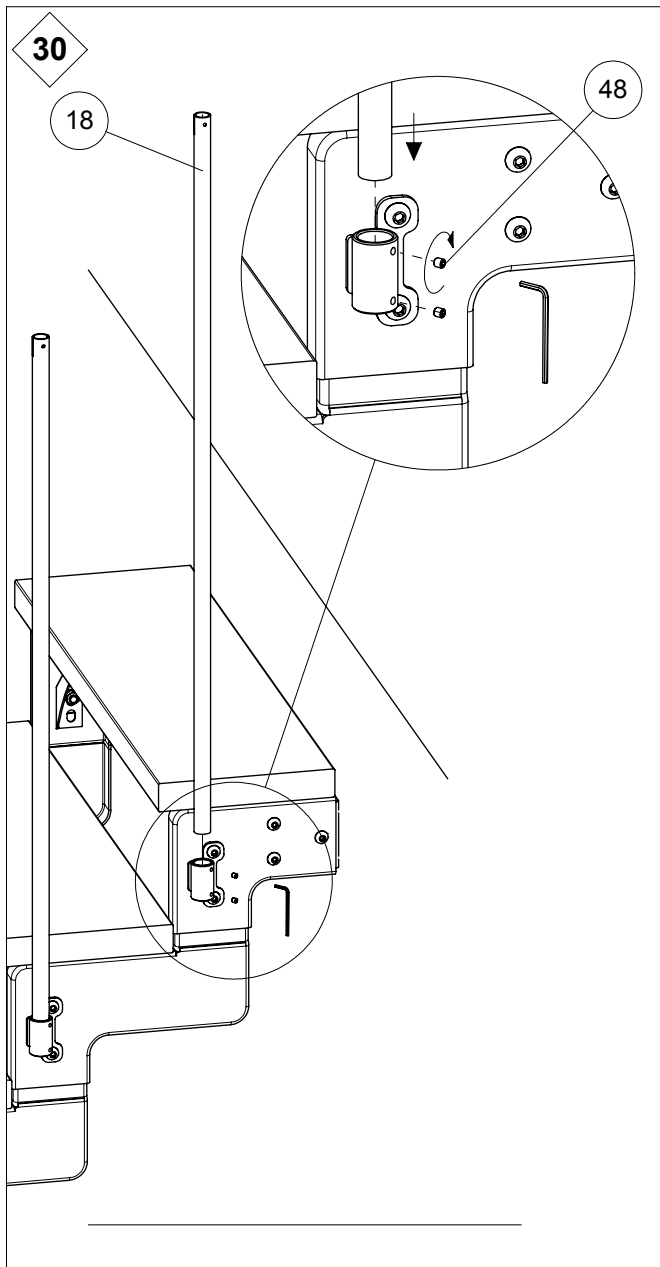
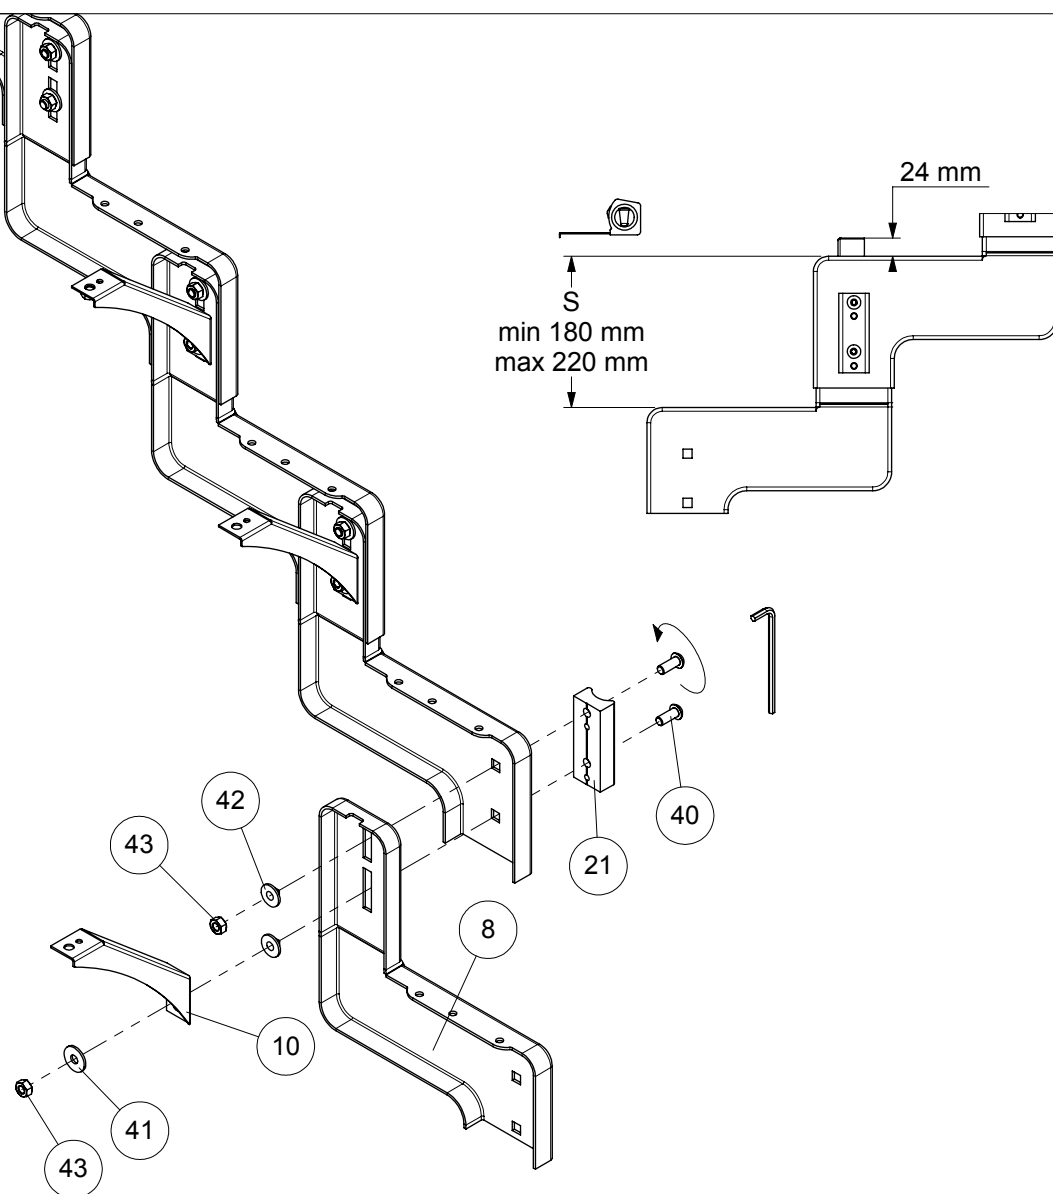


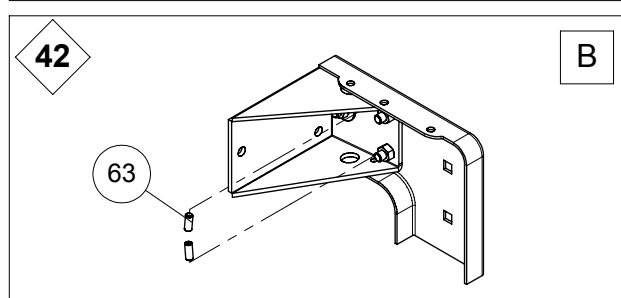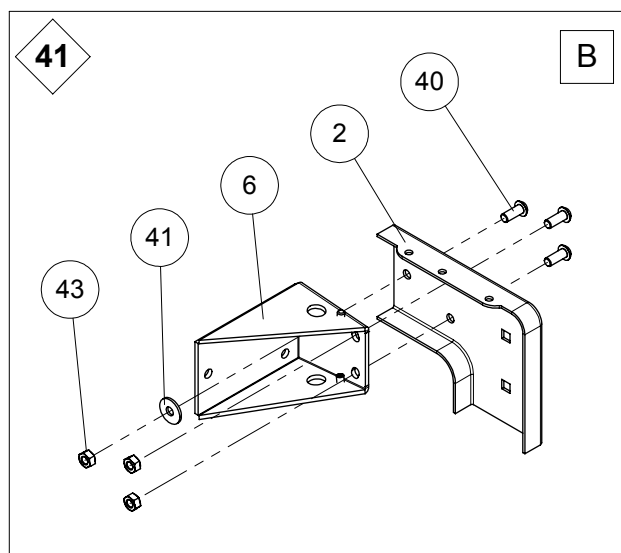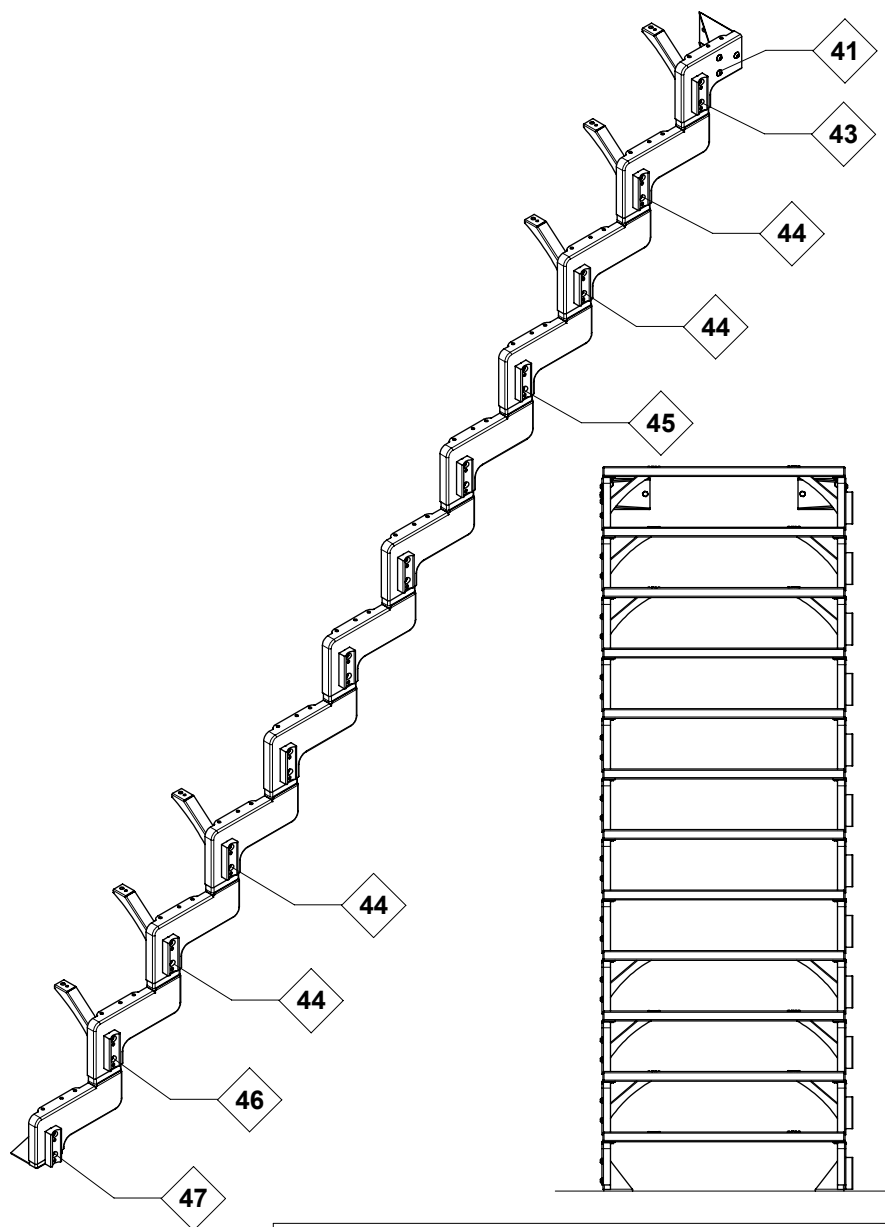

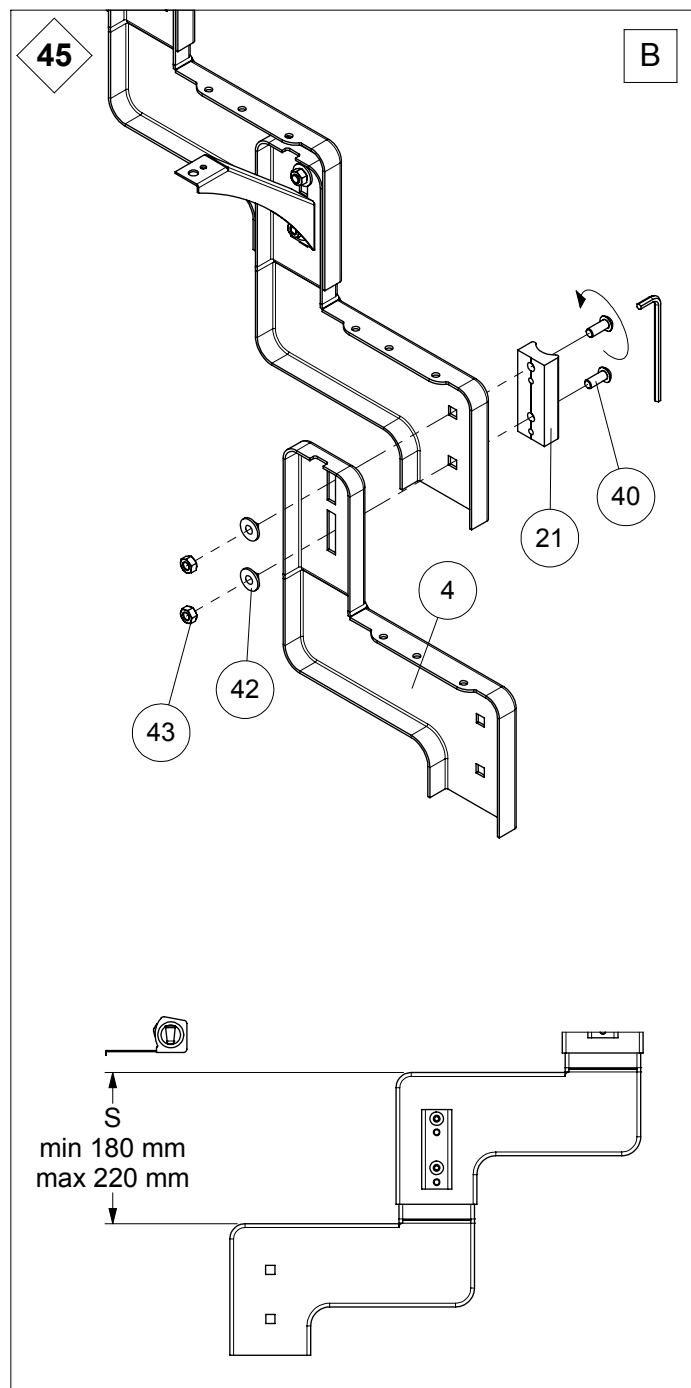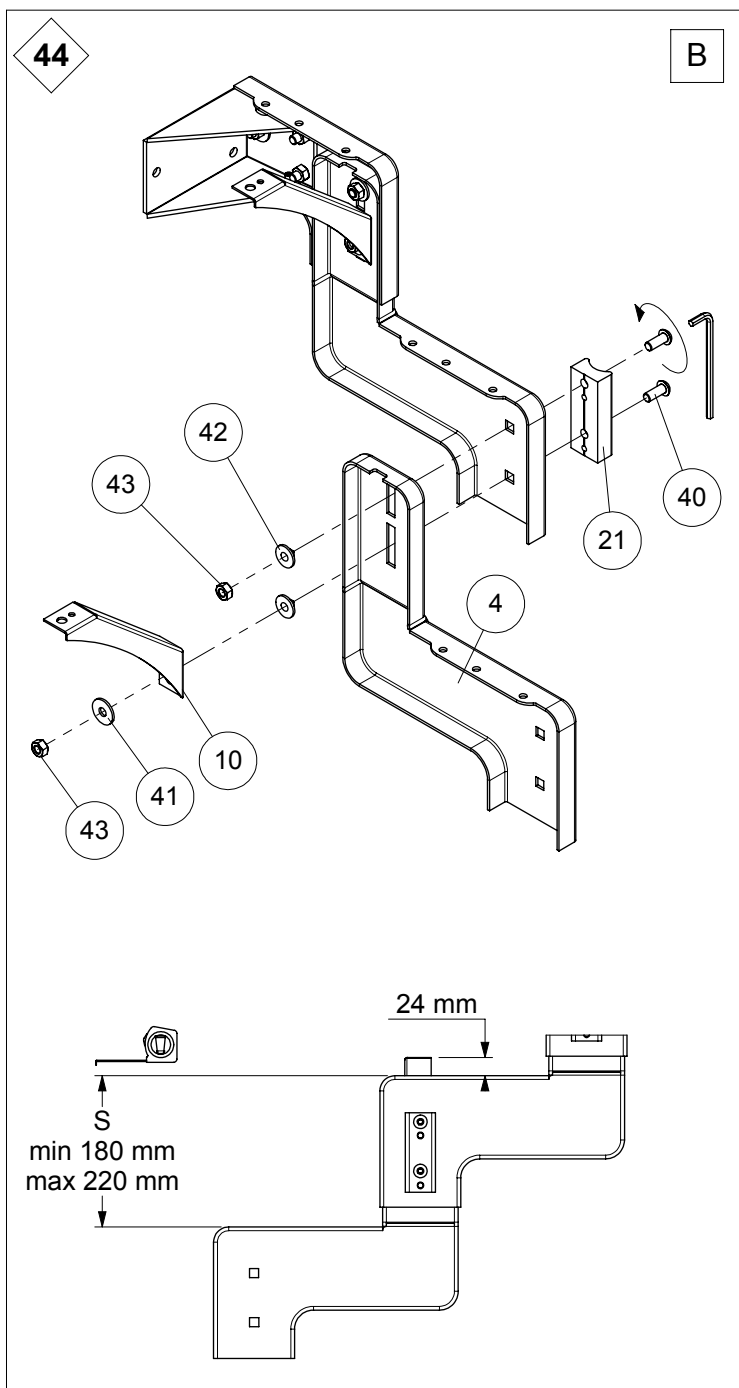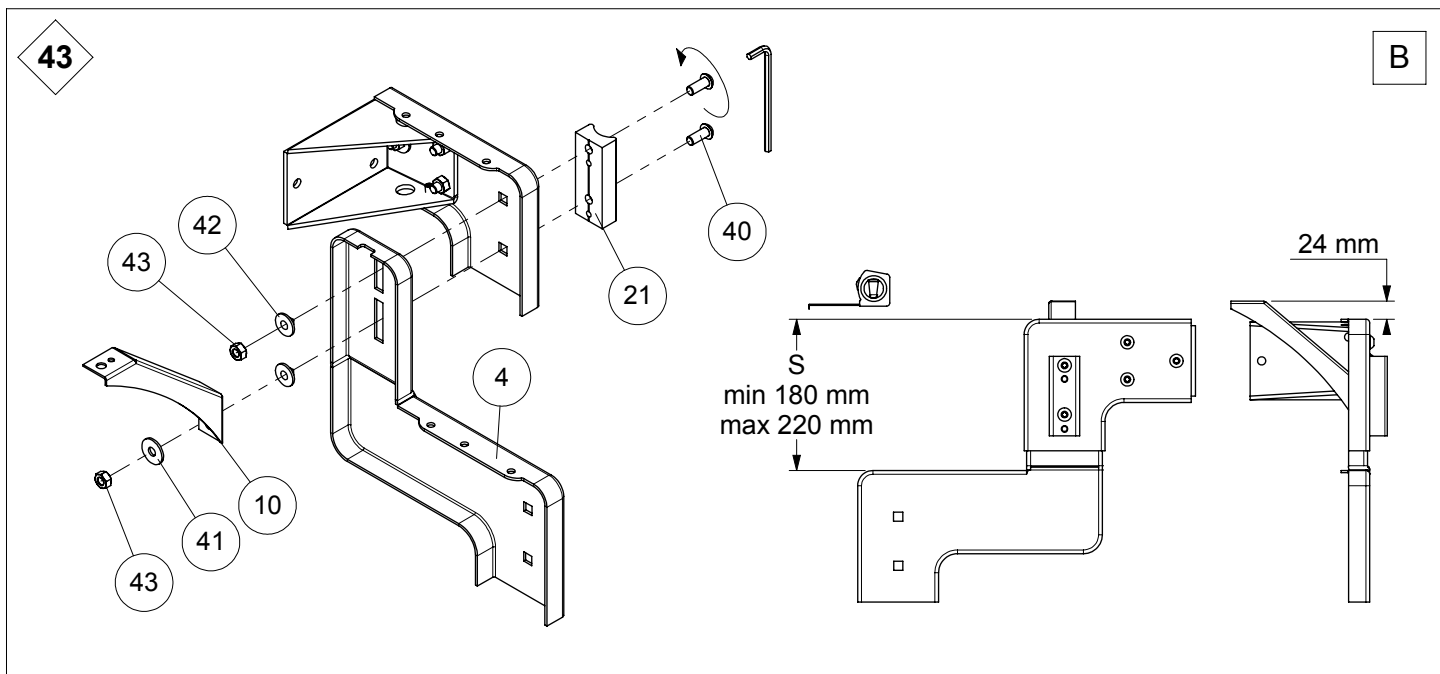


46



B



47




B

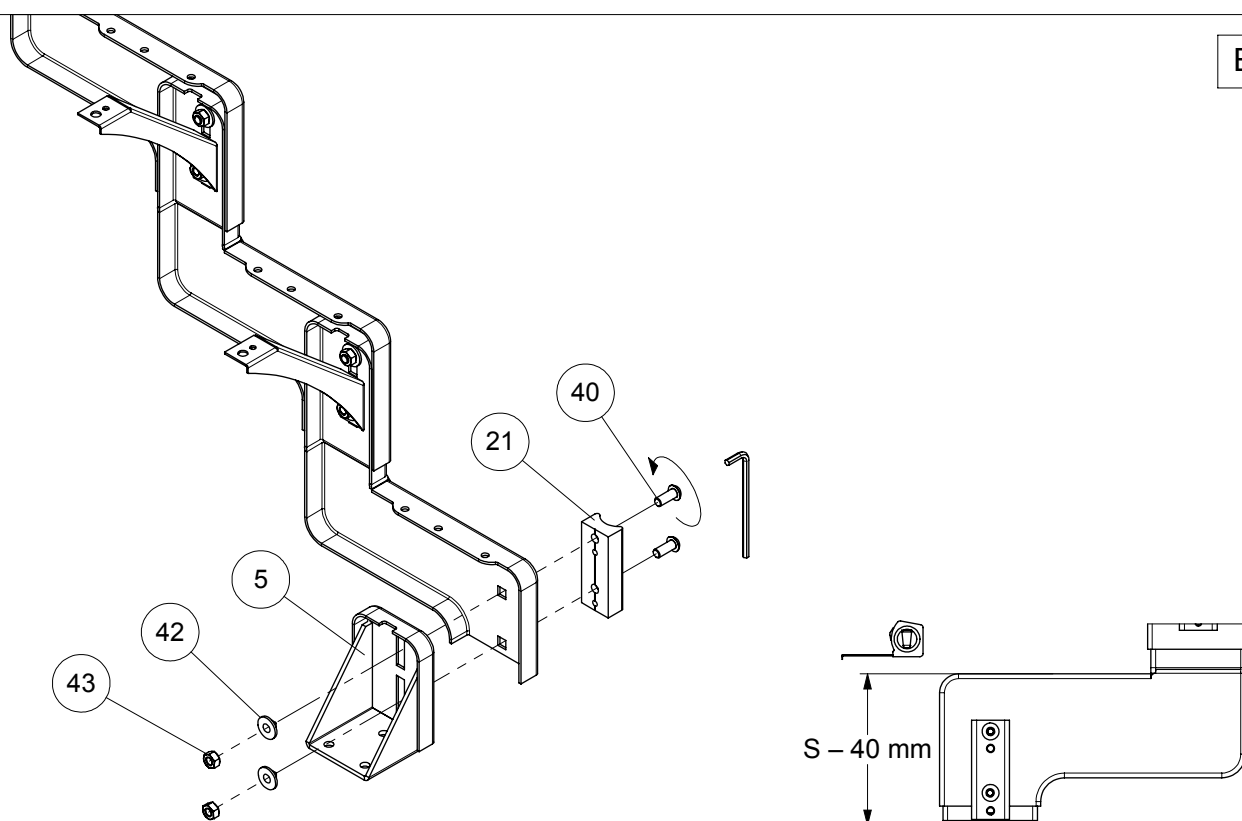

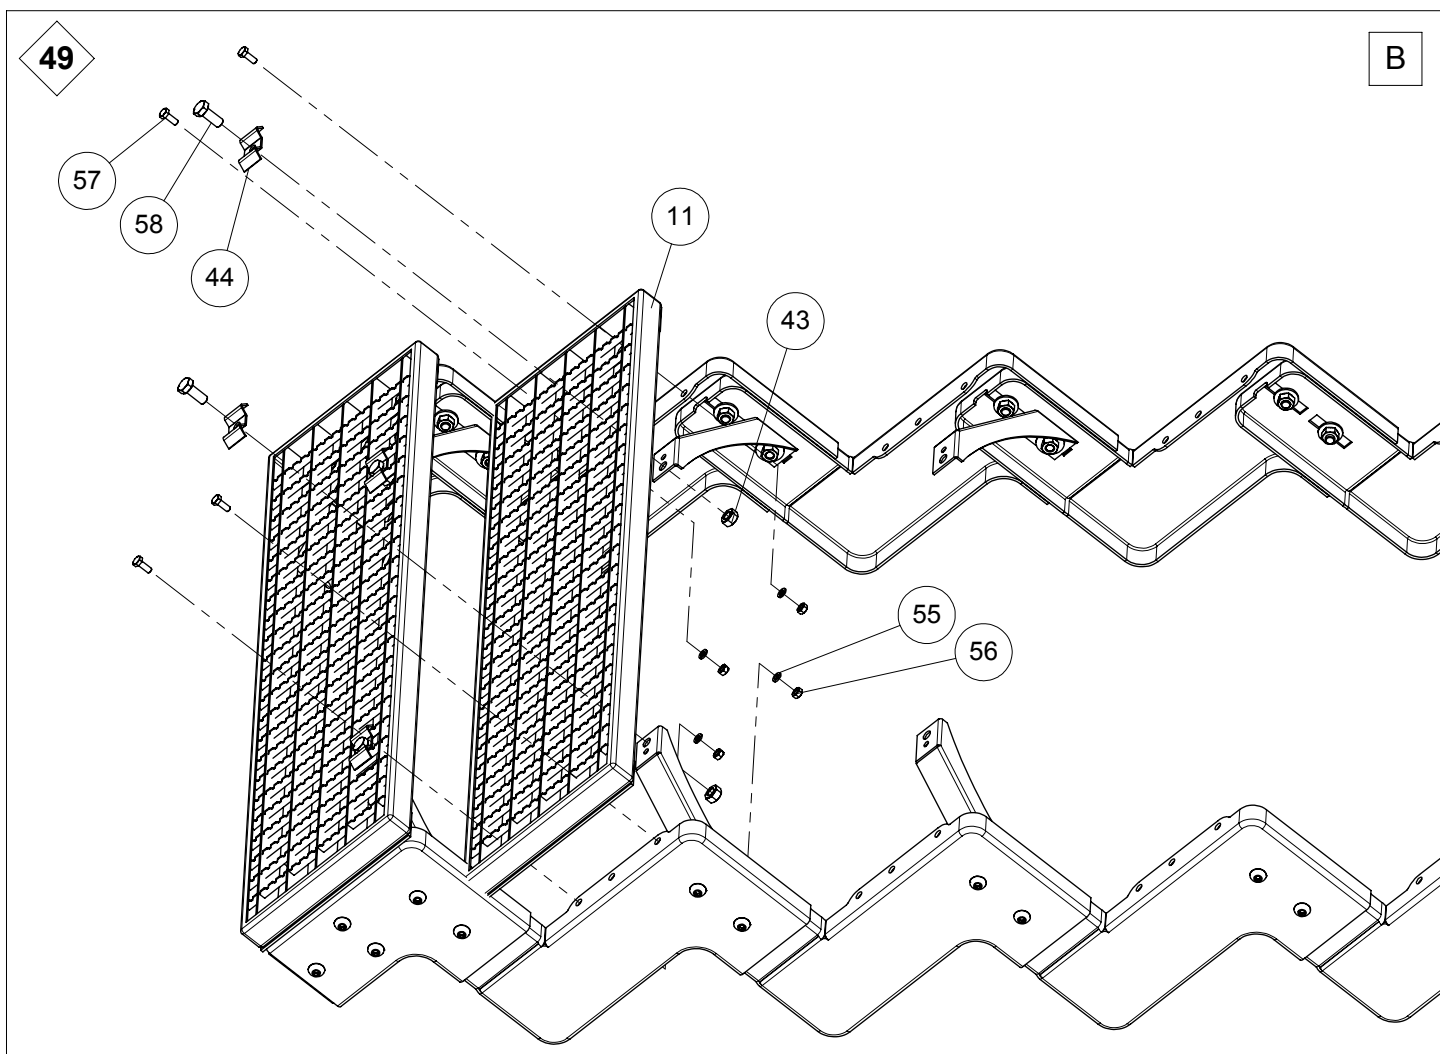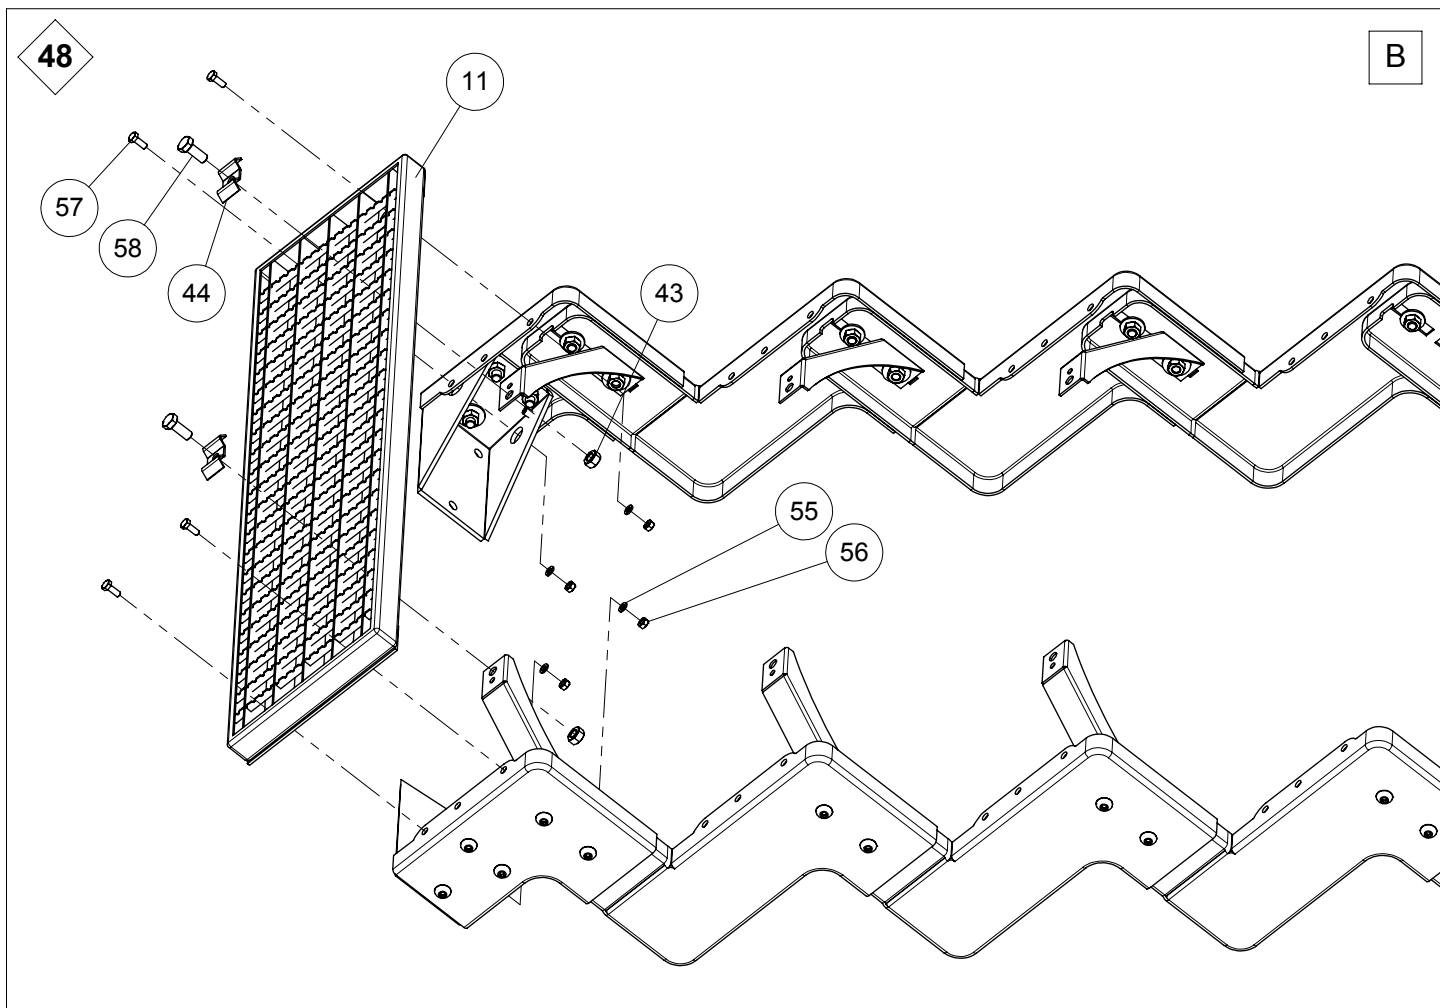

50


B

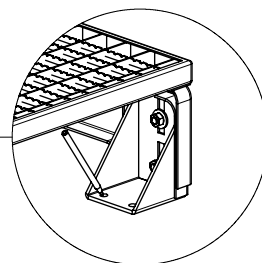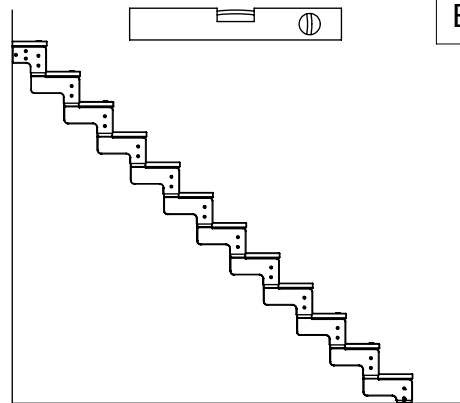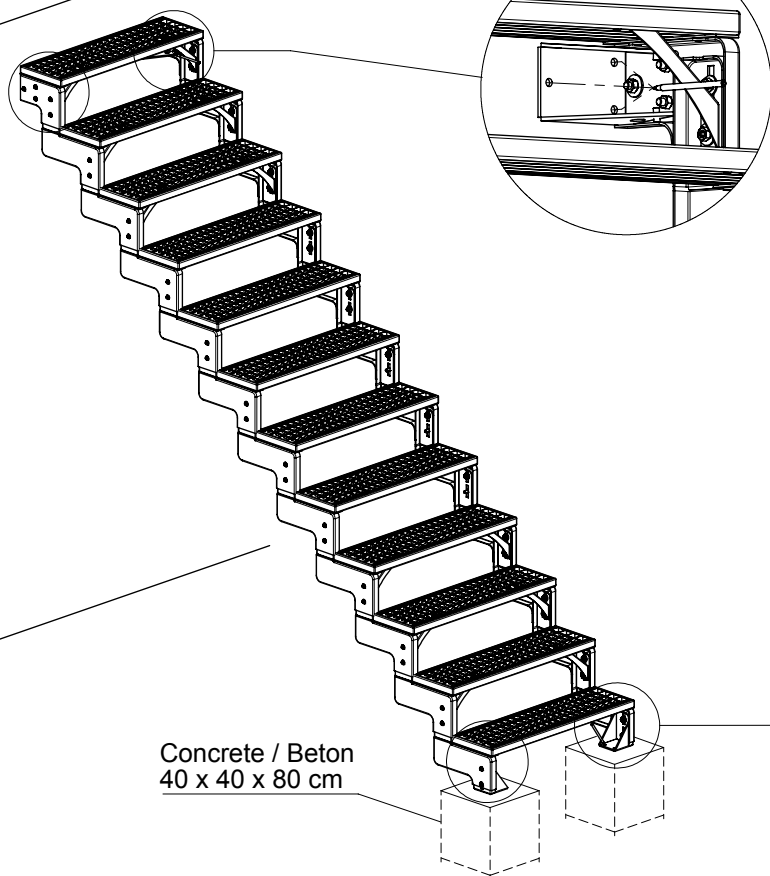

51

52

B

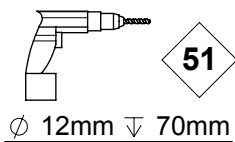


51

44

45

52

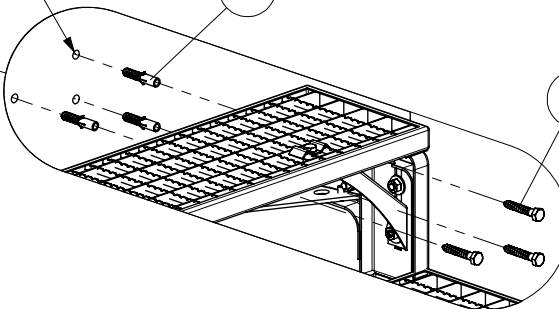


52








45






44

51

Ø 12mm 70mm

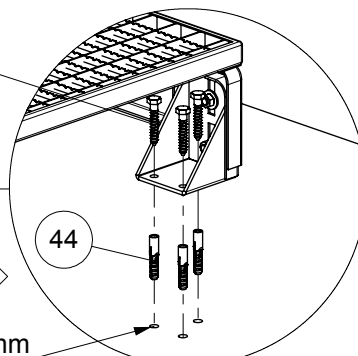

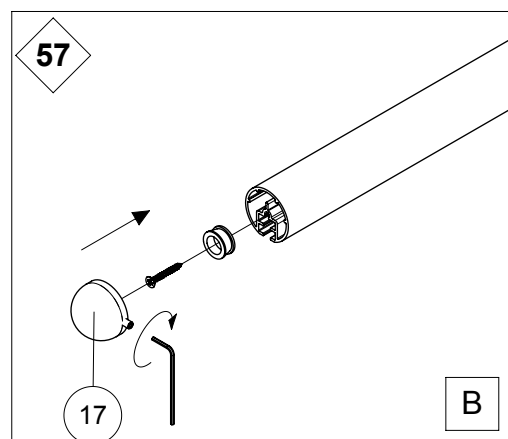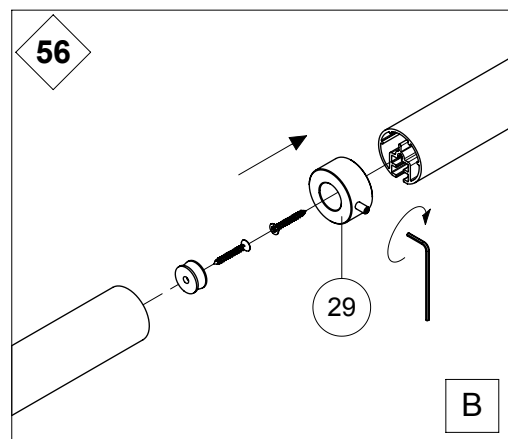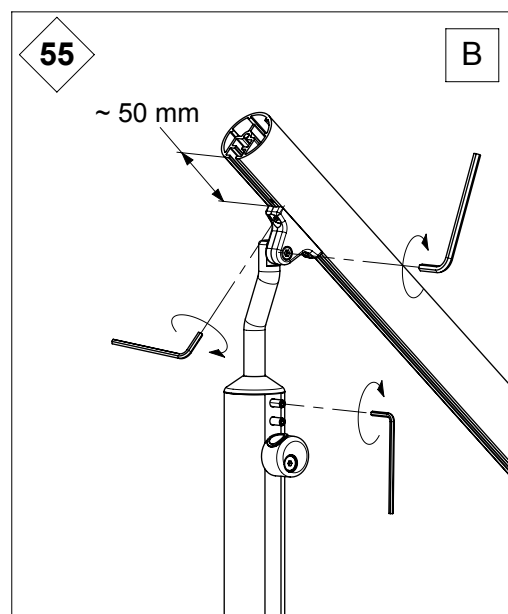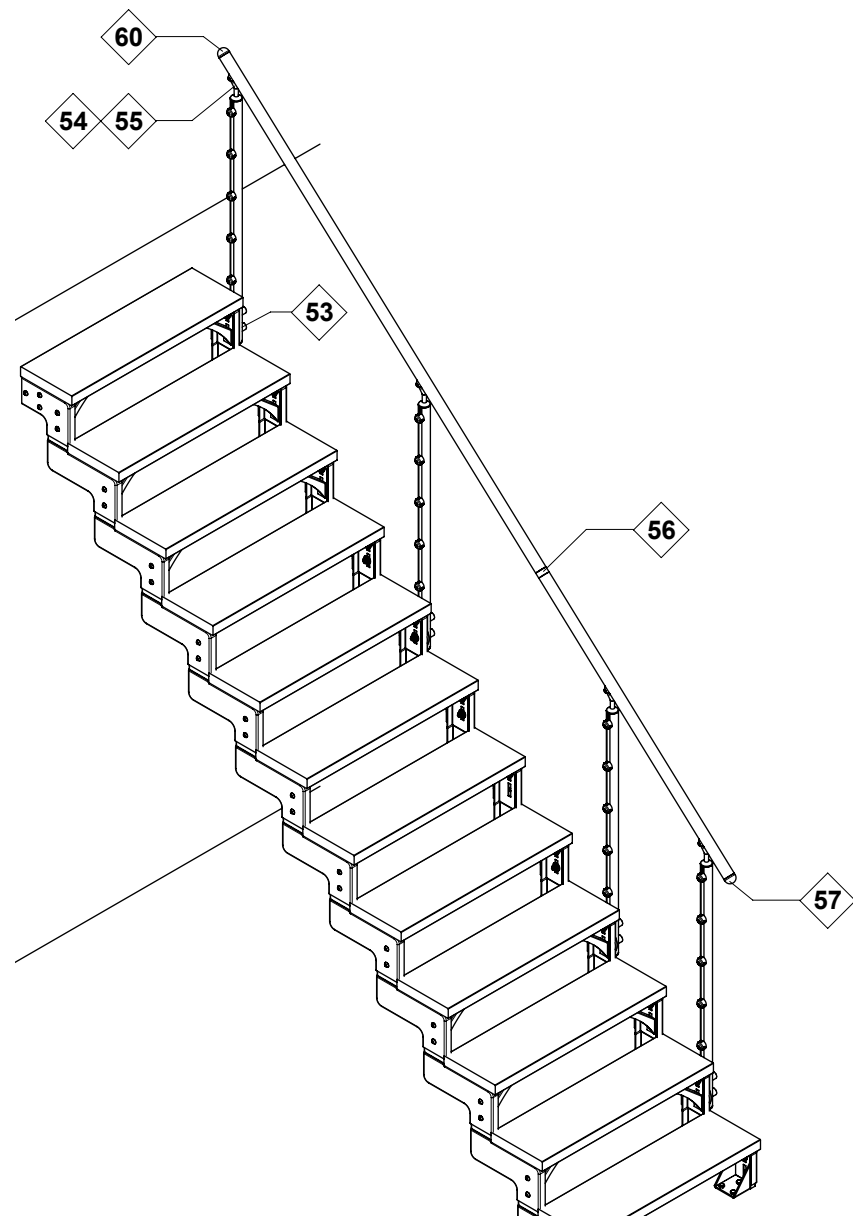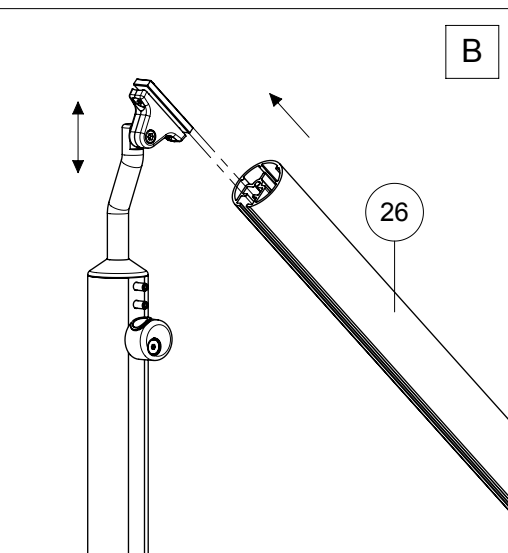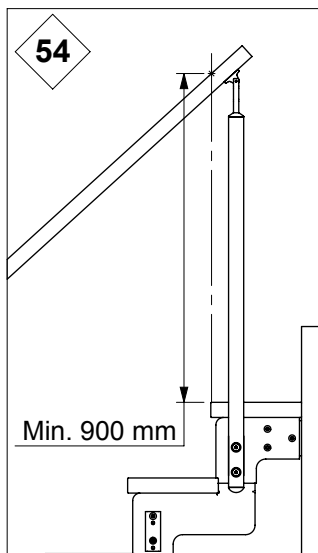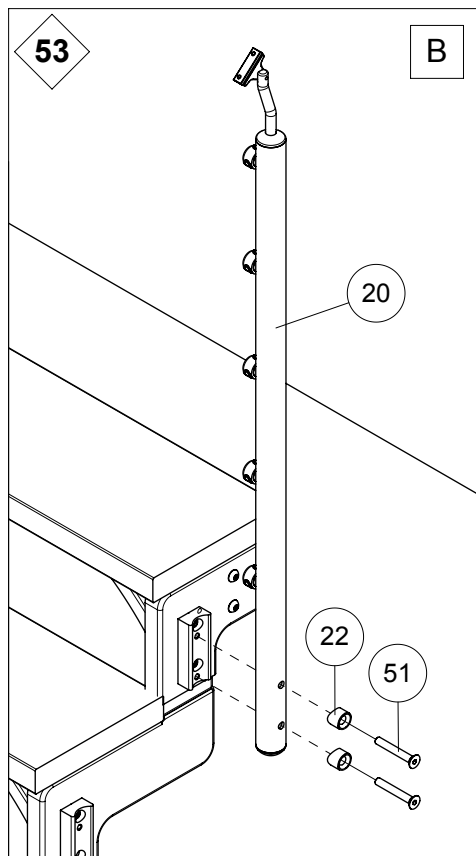


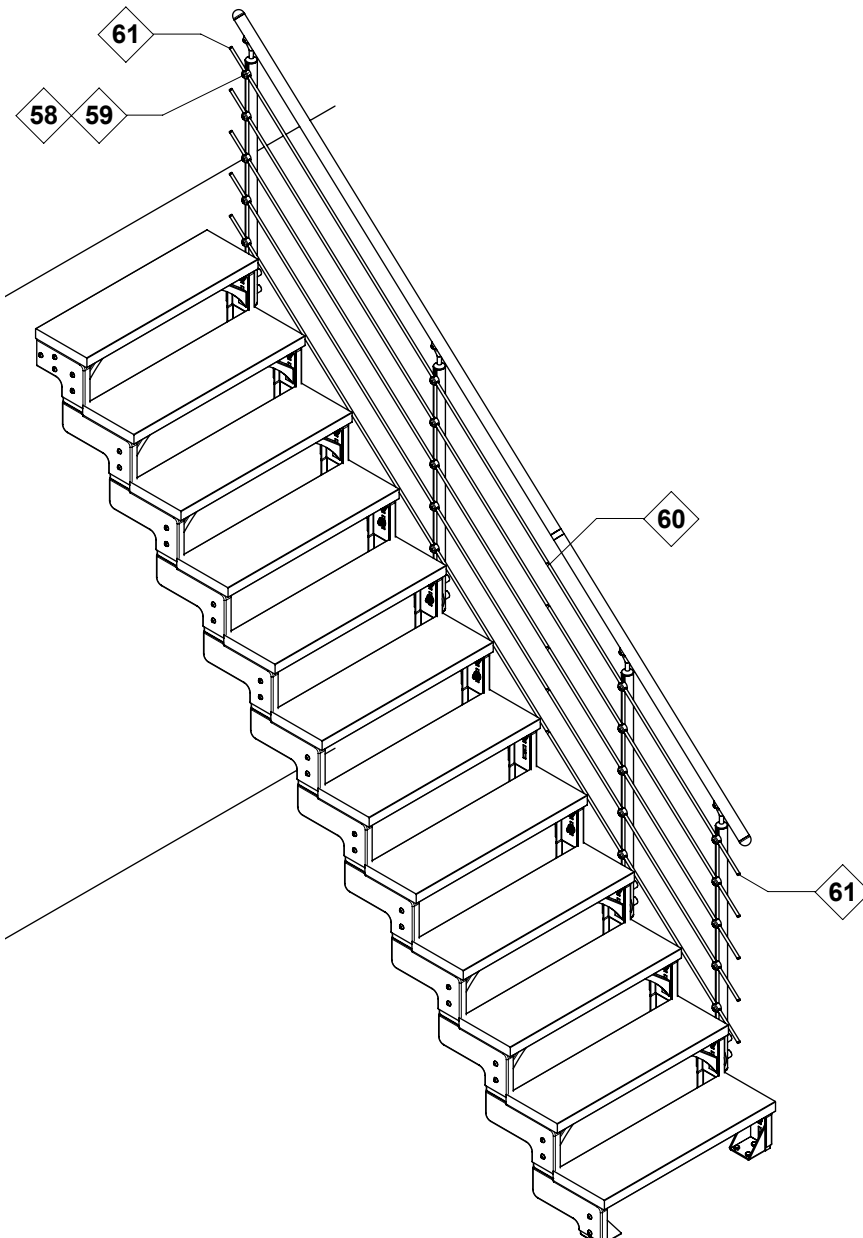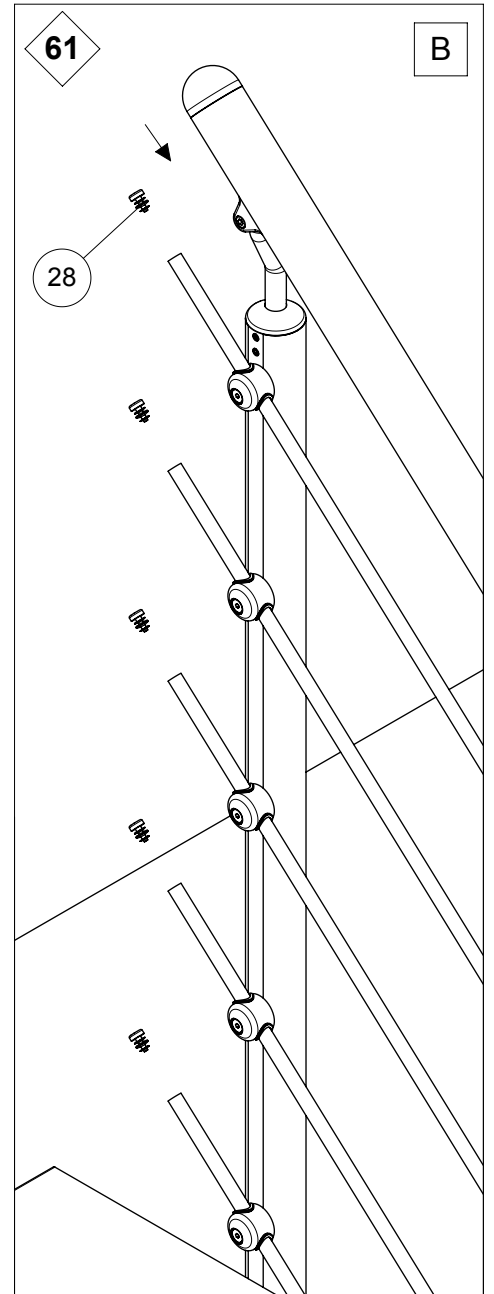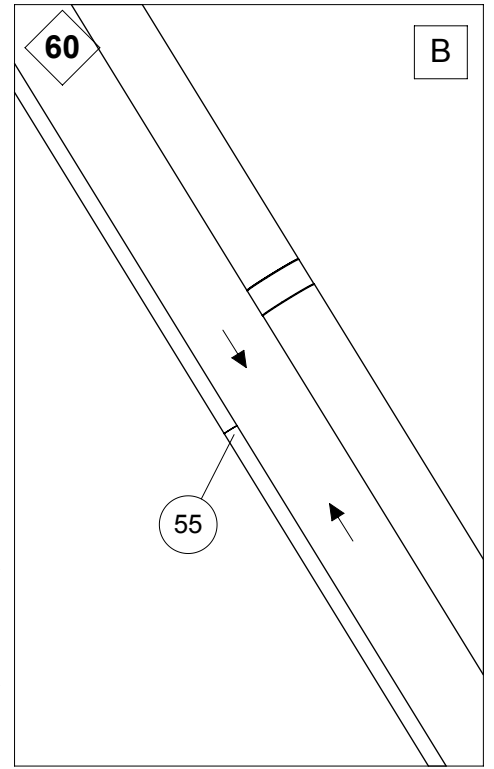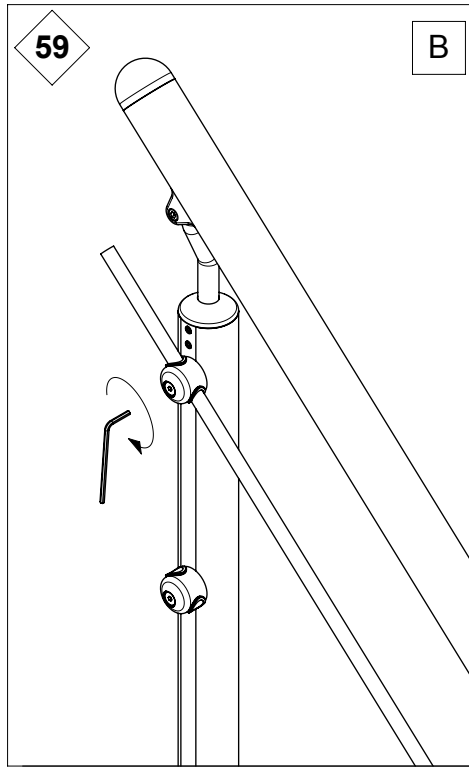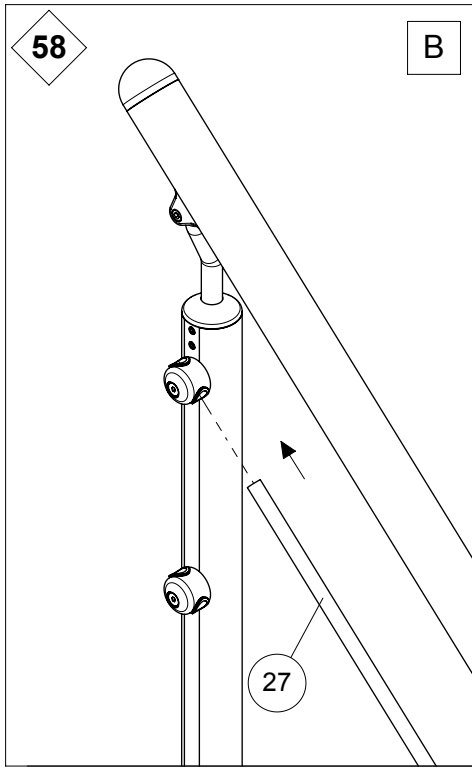



We recommend
using a support
column from 8
treads

Ab 8 Stufen
empfehlen wir eine
Abstützung der
Treppe

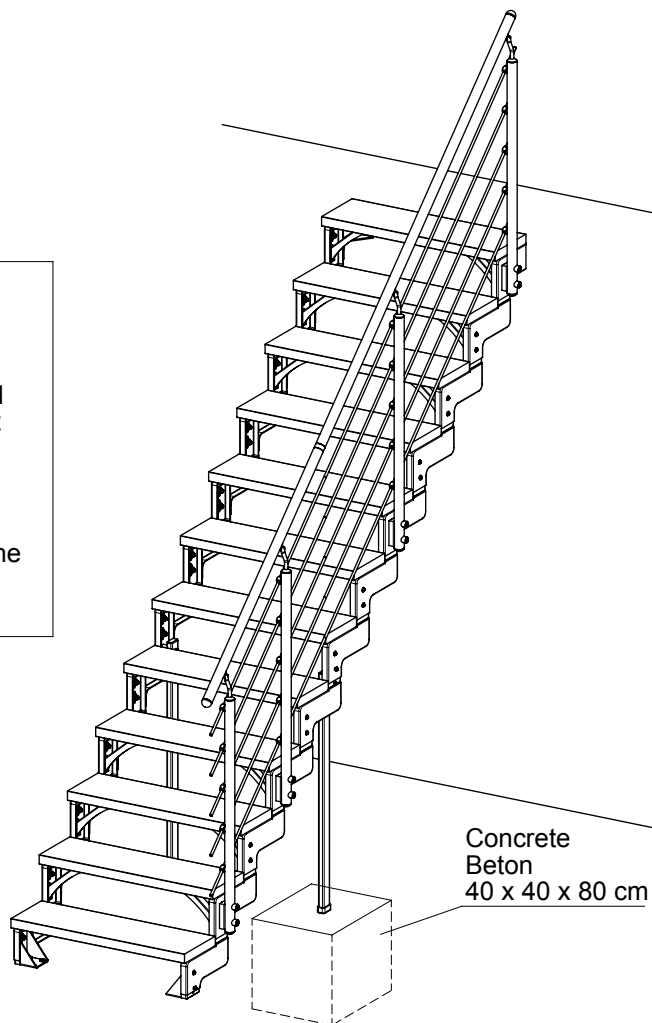









Concrete
Beton
40 x 40 x 80 cm


GARDENTOP

Trimax

Montageanleitung
Installation instruction

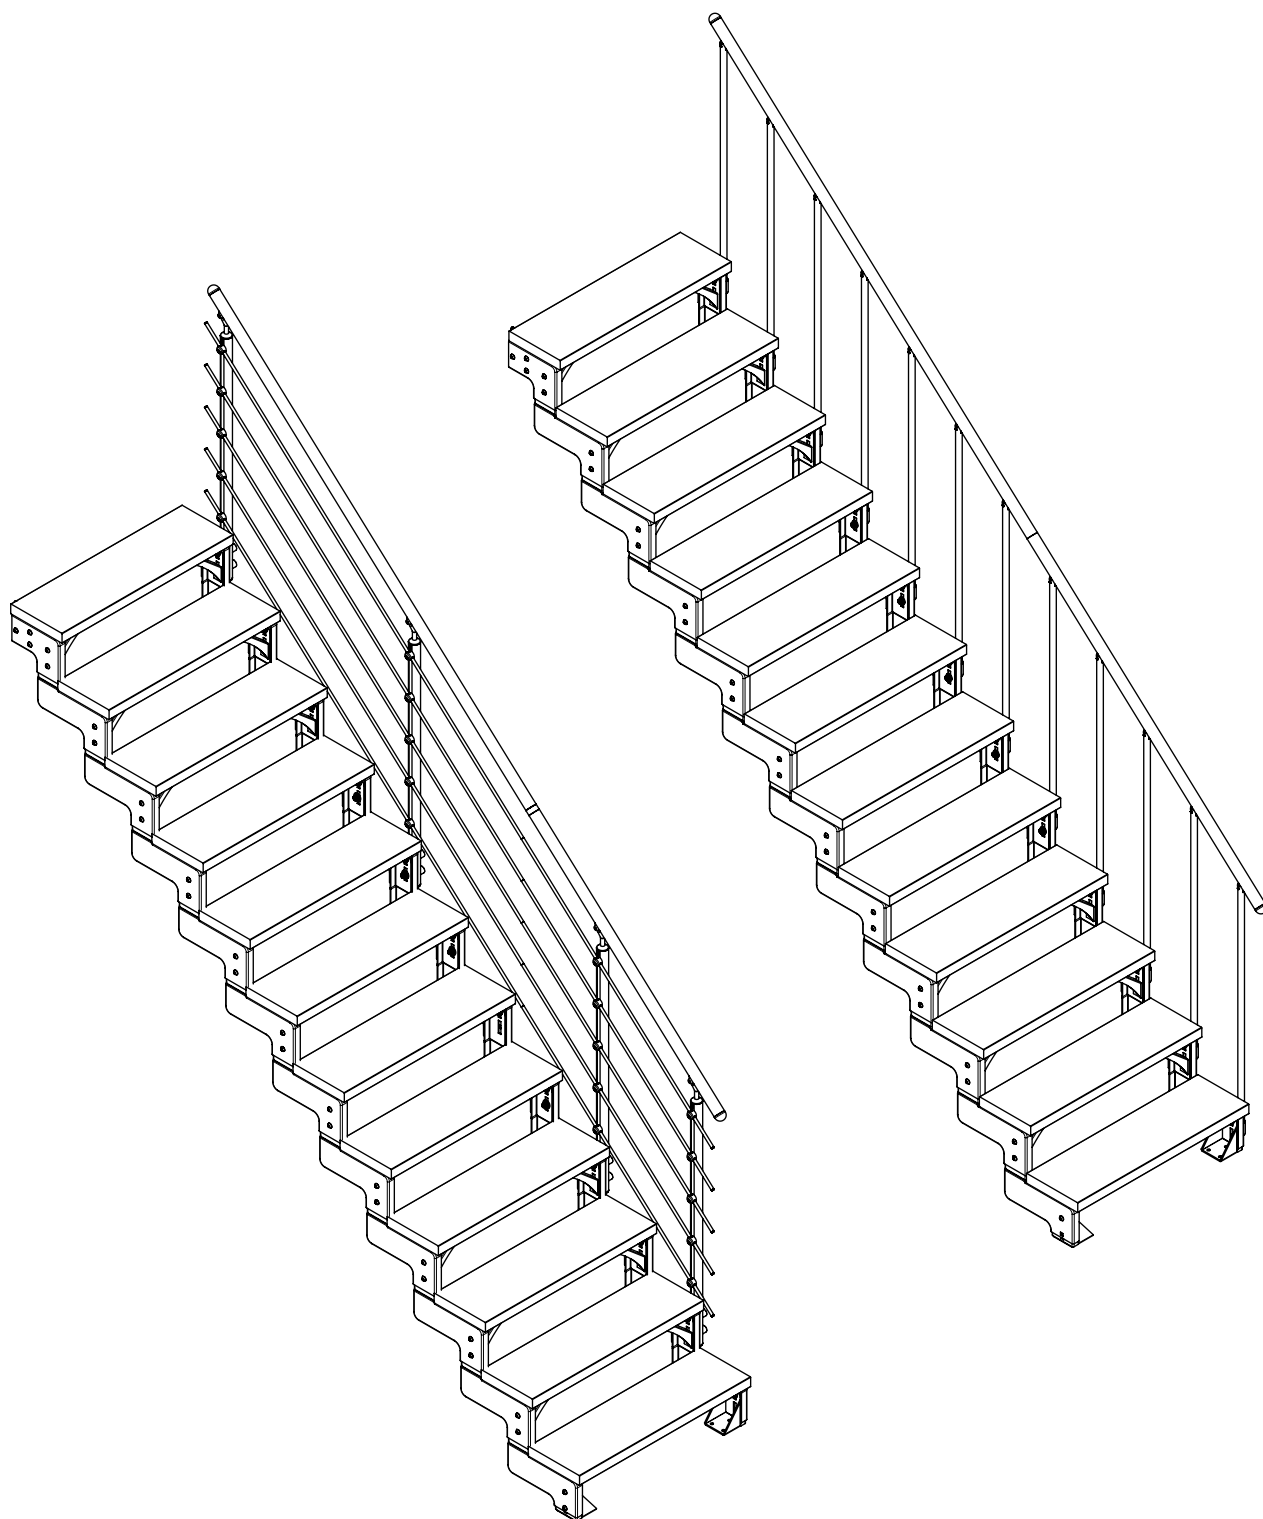

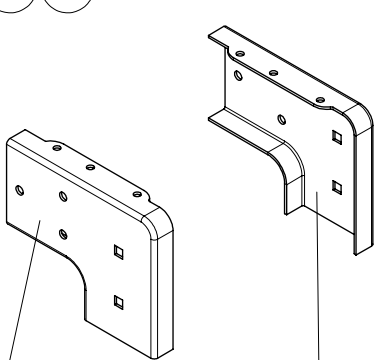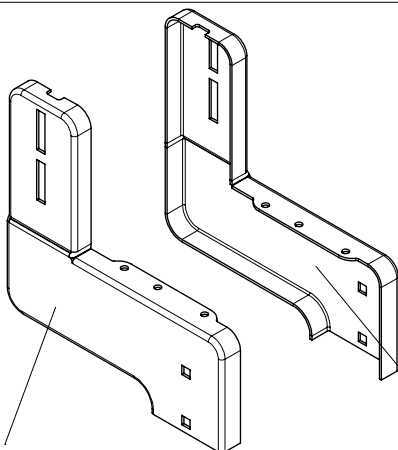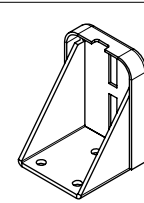68015			Starter-Set Start kit		
1 2  × 1 K1-41931 × 1 K1-41930			7 8  × 1 K1-41911 × 1 K1-41910		5  × 2 K2-41900
40  × 14 K3-02045 M10×25	41  × 2 K3-04110 Ø10	42  × 8 K3-04198 Ø10	43  × 14 K3-03051 M10	44  × 12 K3-08001 Ø12 x 60	45  × 12 K3-06070 Ø10 x 60
59  × 12 K3-06269 Ø6 x 35	63  × 4 K3-05022 M8 x 20	64  × 12 K3-04010 Ø10,5			

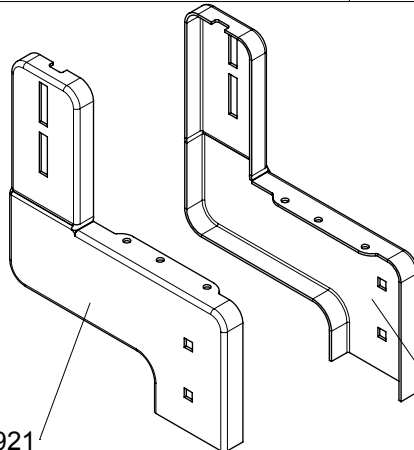68016			Ergänzungs-Set 1 step kit		
3 4  × 1 K1-41921 × 1 K1-41920			40  × 4 K3-02045 M10 x 25	42  × 4 K3-04198 Ø10	43  × 4 K3-03051 M10
			59  × 6 K3-06269 Ø6 x 35		

68020

Stufen-Winkel
Step support 1 step

9

10

x 1

K1-41060

x 1

K1-41061

If more than 6 steps:
Add

9

+

10

Wenn mehr als 6 Stufen:
hinzufügen

9

+

10

Max. 6 Satz | sets

59

x 1

K3-06269

Ø6 x 35

Trimax-Stufe

Trimax step

80 cm / 100 cm

11

59






x 6





K3-06269






Ø6x35


If / Wenn L = 100 cm
add **U** hinzufügen

3


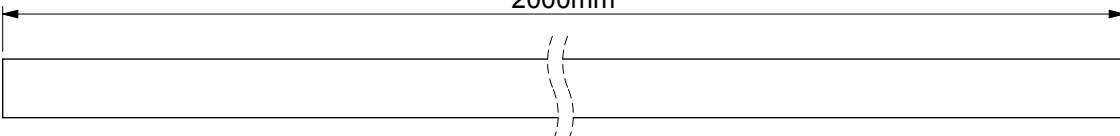
68030		Steiggeländer für 6 Stufen Standard banister for 6 steps		
14  × 6 K2-41050	15  × 1 K1-01221	16  × 6 K1-02130	17  × 2 K2-04040	
18  × 6 K1-41055				
19  × 1 K1-01100				
46  × 6 K3-01004 M4×25	47  × 6 K3-03004 M4	48  × 12 K3-05006 M6×8	53  × 4 K3-05050 M5×12	

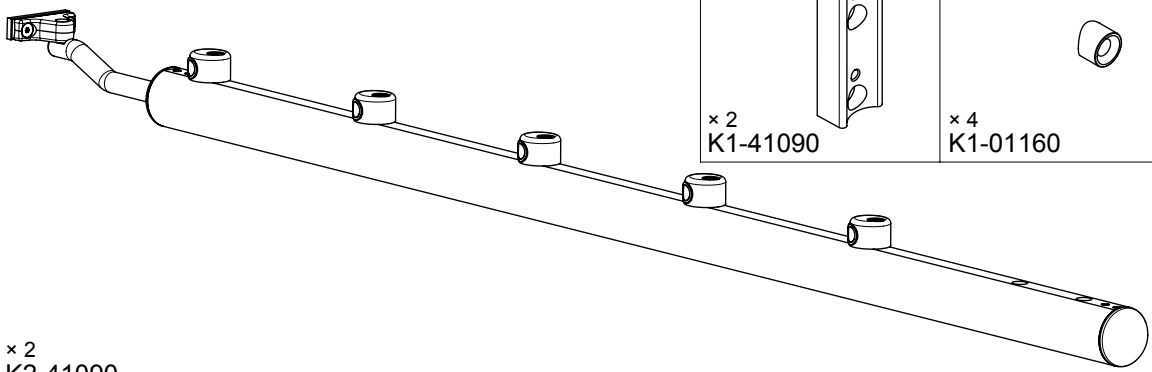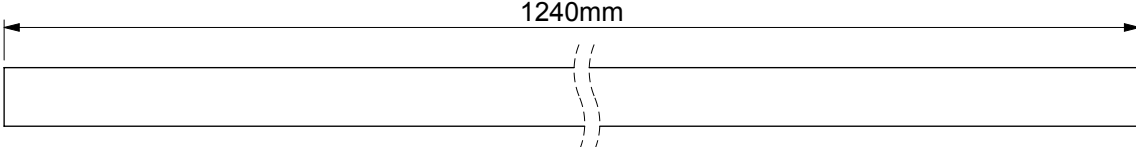
68040		Steiggeländer PROVA Starter-Set für 4 Stufen PROVA banister start for 4 steps		
17  × 2 K2-04040	20  × 2 K2-41090	21  × 2 K1-41090	22  × 4 K1-01160	
26  × 1 K1-01107				
27  × 5 K1-18060				
28  × 10 K1-01010	29  × 1 K2-14930	51  × 4 K3-02010 M10×70		

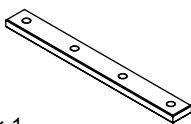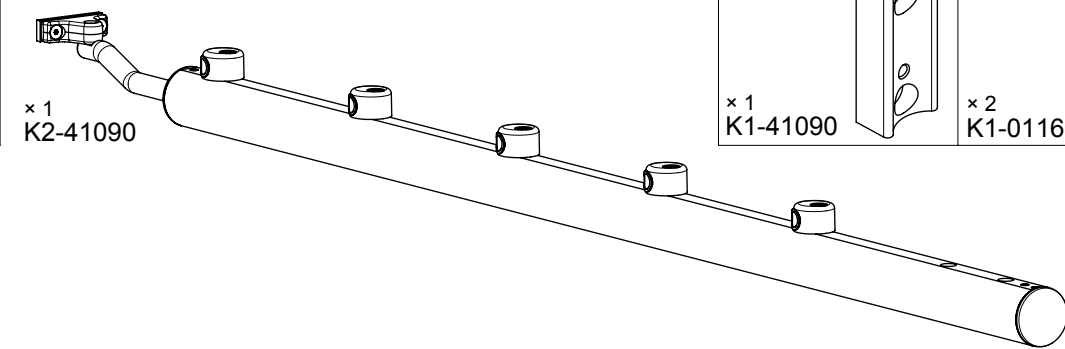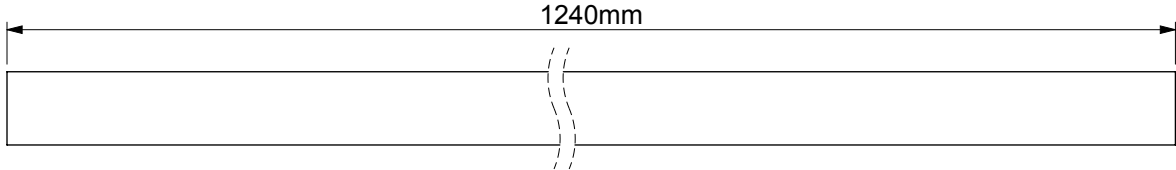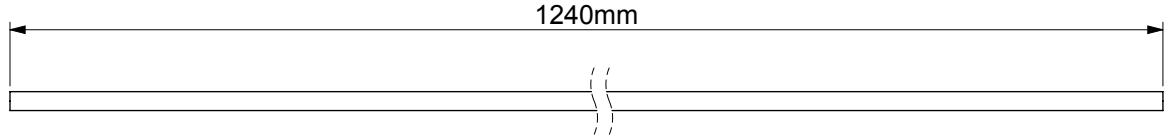68041		Steiggeländer PROVA Ergänzungs-Set für 4 Stufen PROVA banister extension for 4 steps				
15  × 1 K1-01221	20  × 1 K2-41090		21  × 1 K1-41090	22  × 2 K1-01160		
26  × 1 K1-01107						
27  × 5 K1-18060						
29  × 1 K2-14930	51  × 2 K3-02010 M10×70	53  × 5 K3-05050 M5 x 12	54  × 5 K3-08023 Ø8			


68098		Unterstützung Support		OPTION	
24 	26  × 1 K1-41955	27  × 1 K1-41956	41  × 1 K3-04110 Ø10	43  × 1 K3-03051 M10	52  × 1 K3-02375 M10 x 75
	53  × 2 K3-05007 M5 x 5	54  × 1 K3-08002 Ø8 x 40	55  × 1 K3-06032 Ø6 x 60		

× 1
K1-41950


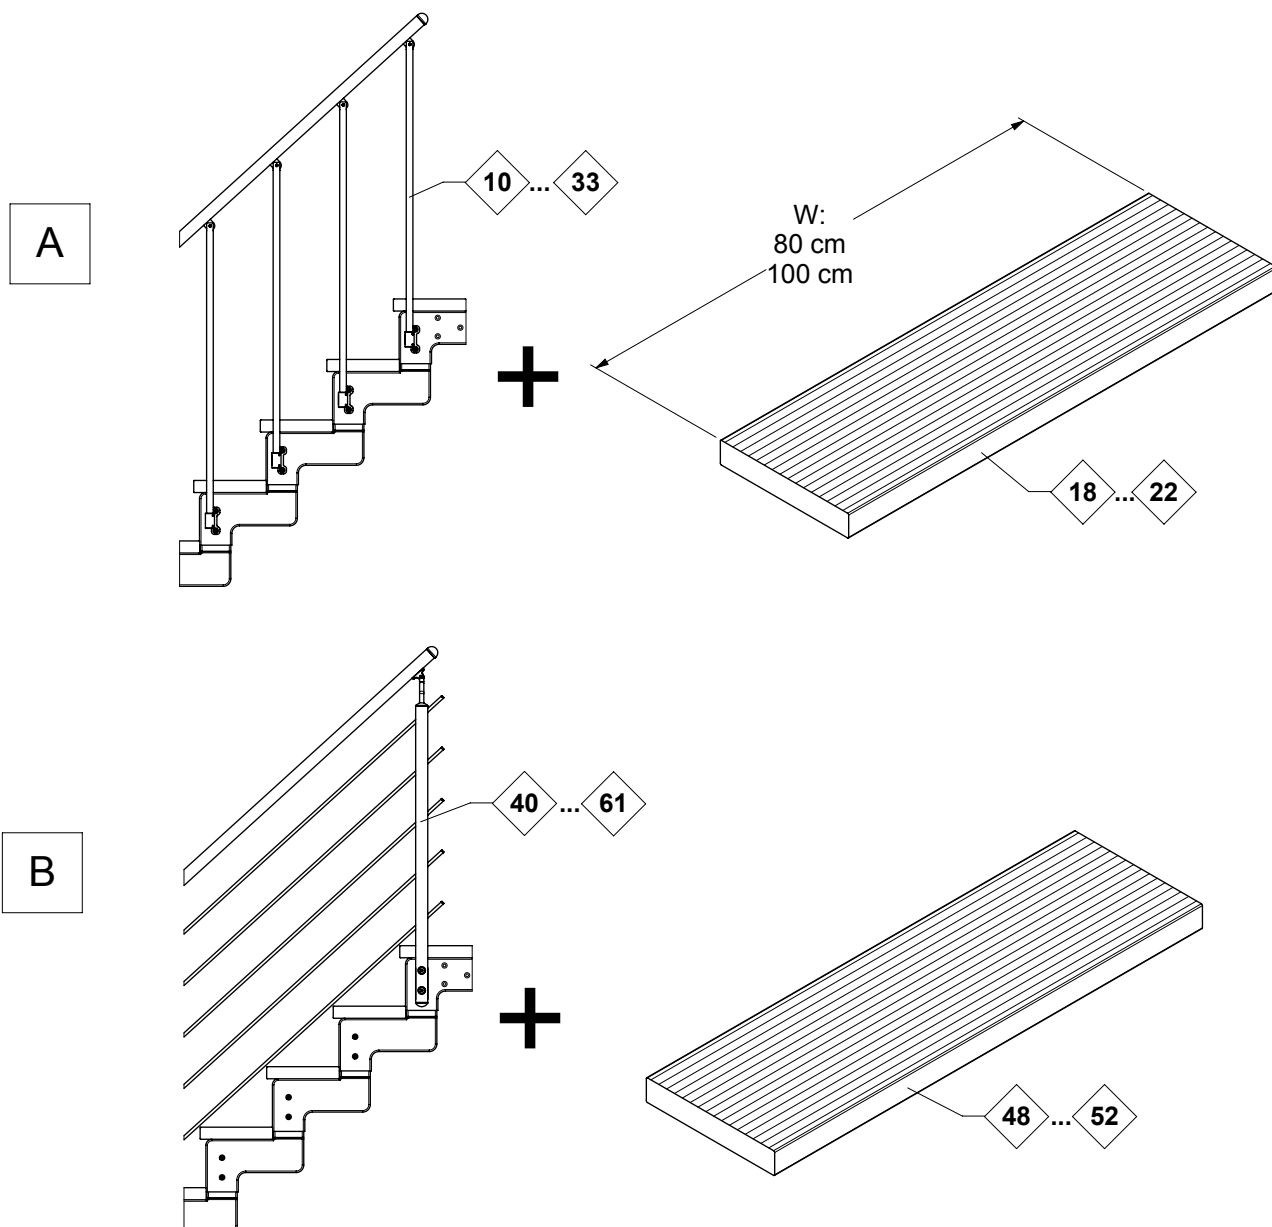
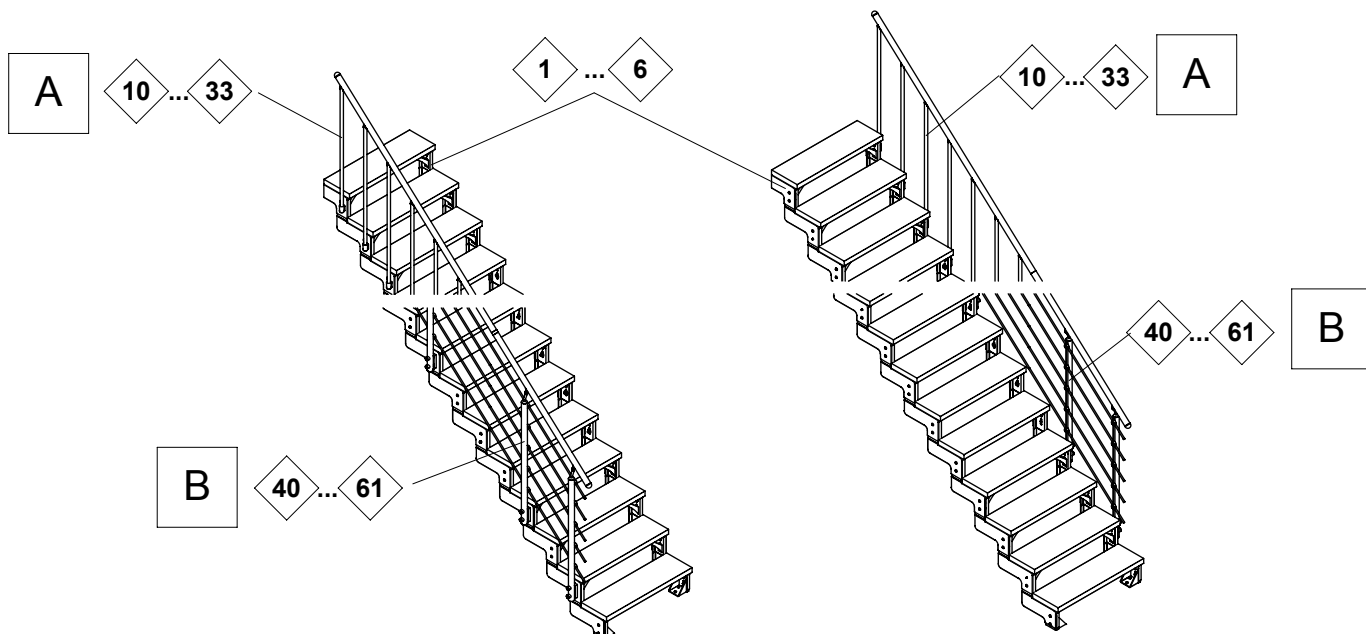




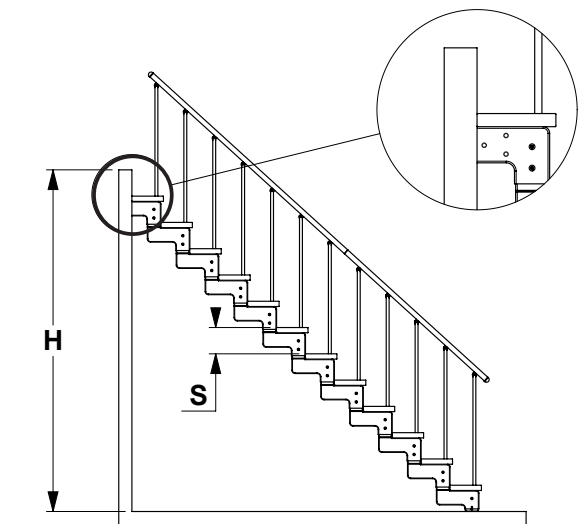






H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	540	570	600	630	660
3	720	760	800	840	880
4	900	950	1000	1050	1100
5	1080	1140	1200	1260	1320
6	1260	1330	1400	1470	1540
7	1440	1520	1600	1680	1760
8	1620	1710	1800	1890	1980
9	1800	1900	2000	2100	2200
10	1980	2090	2200	2310	2420
11	2160	2280	2400	2520	2640
12	2340	2470	2600	2730	2860

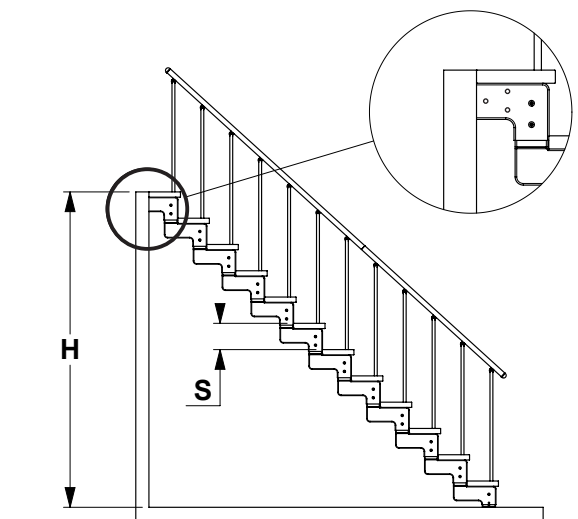

H	S				
	180	190	200	210	220
	mm	mm	mm	mm	mm
2	360	380	400	420	440
3	540	570	600	630	660
4	720	760	800	840	880
5	900	950	1000	1050	1100
6	1080	1140	1200	1260	1320
7	1260	1330	1400	1470	1540
8	1440	1520	1600	1680	1760
9	1620	1710	1800	1890	1980
10	1800	1900	2000	2100	2200
11	1980	2090	2200	2310	2420
12	2160	2280	2400	2520	2640

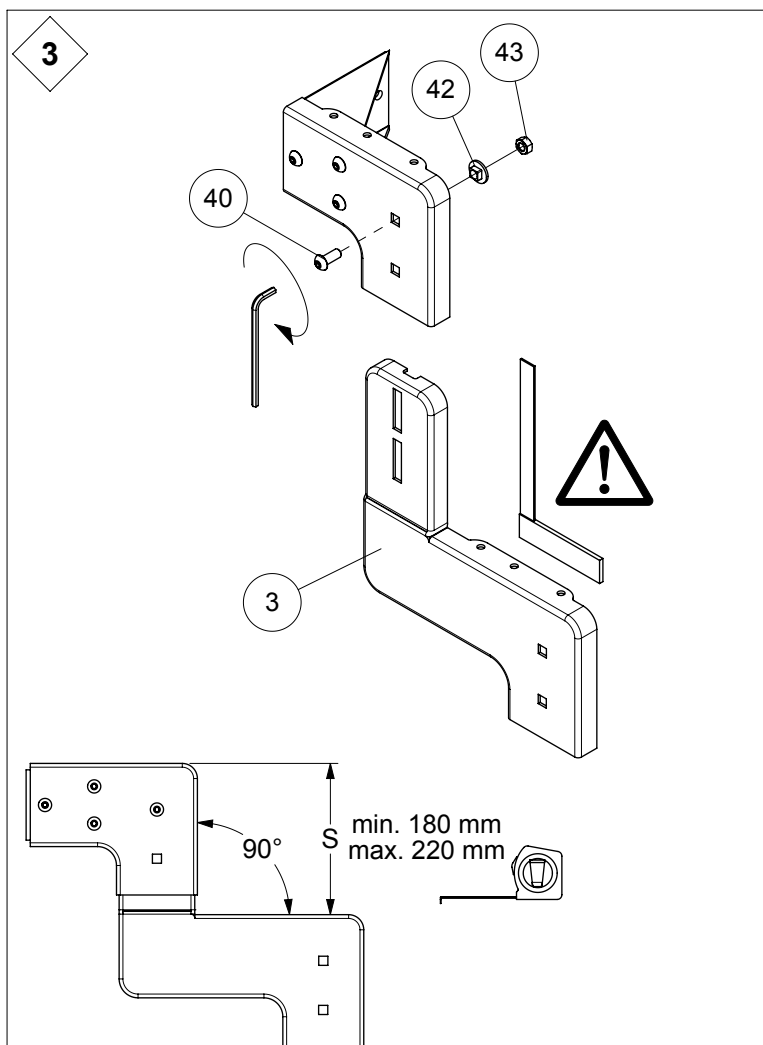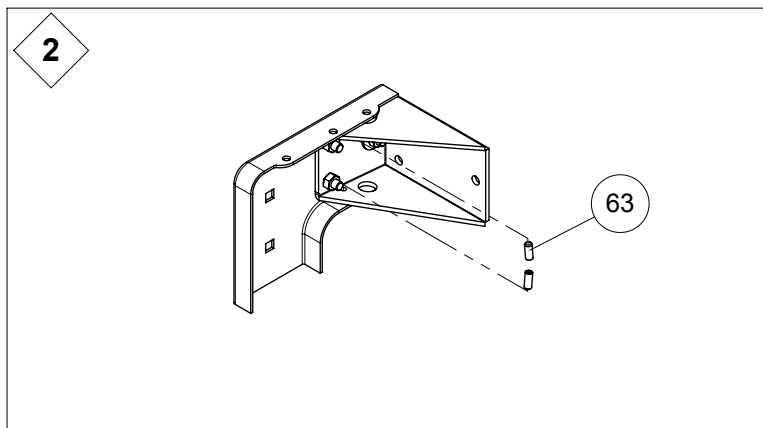
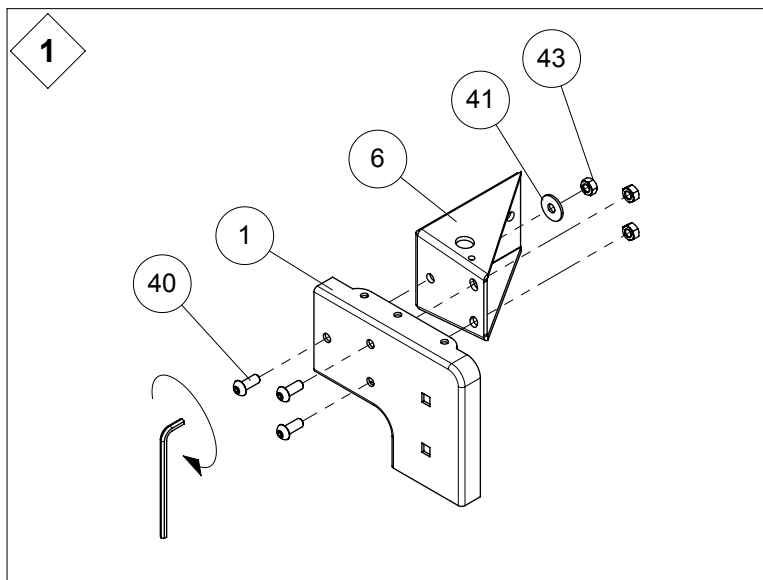


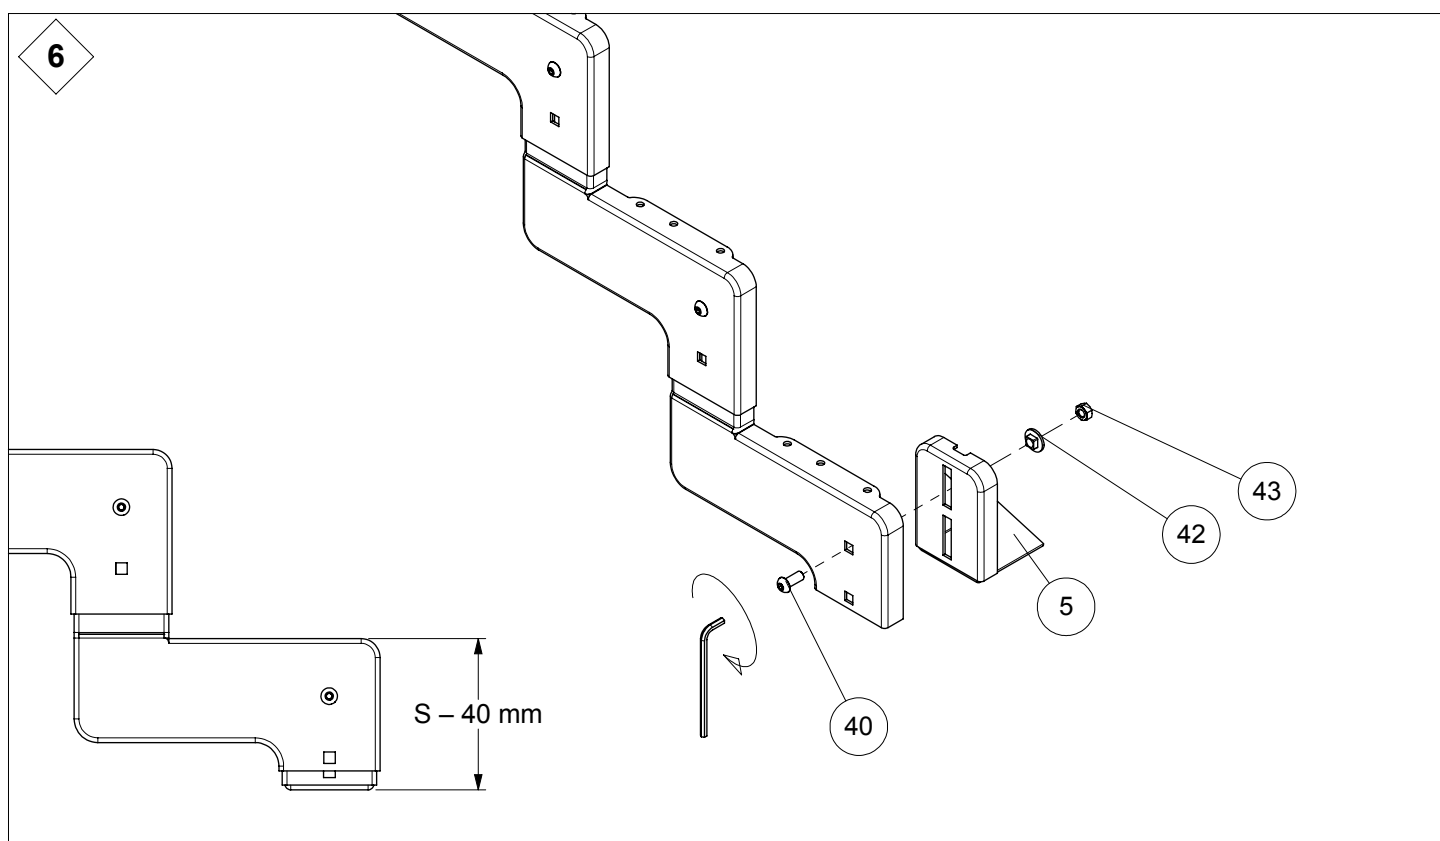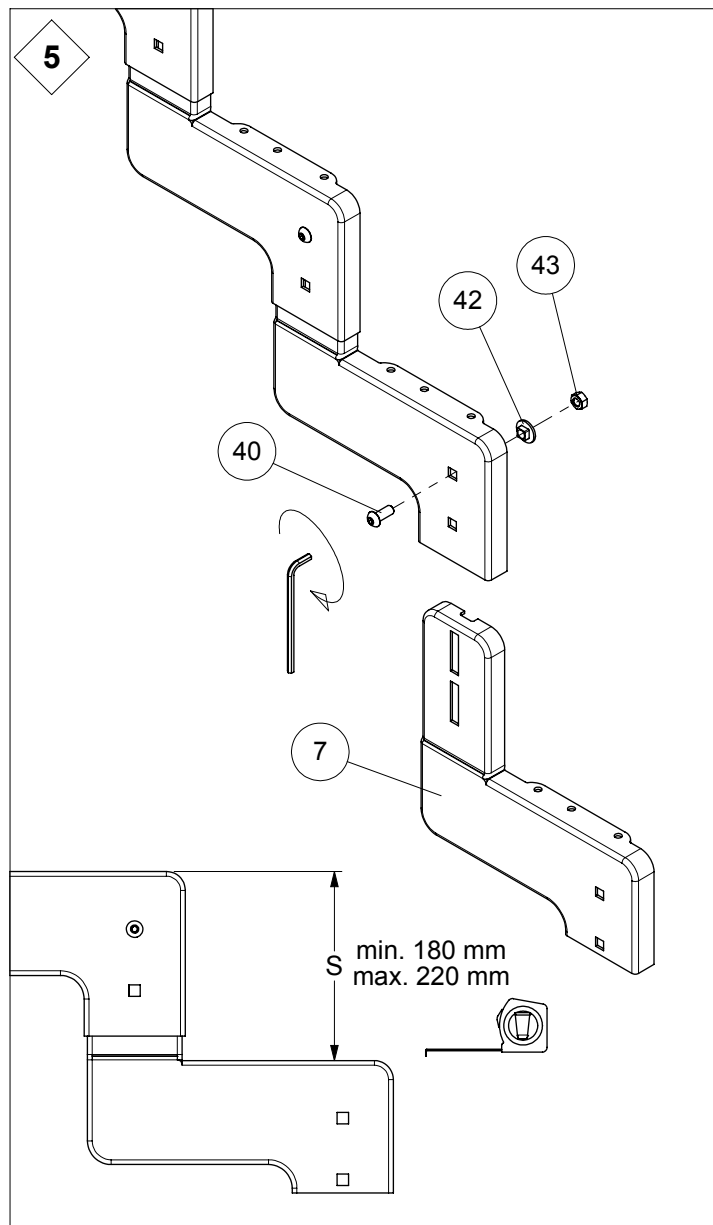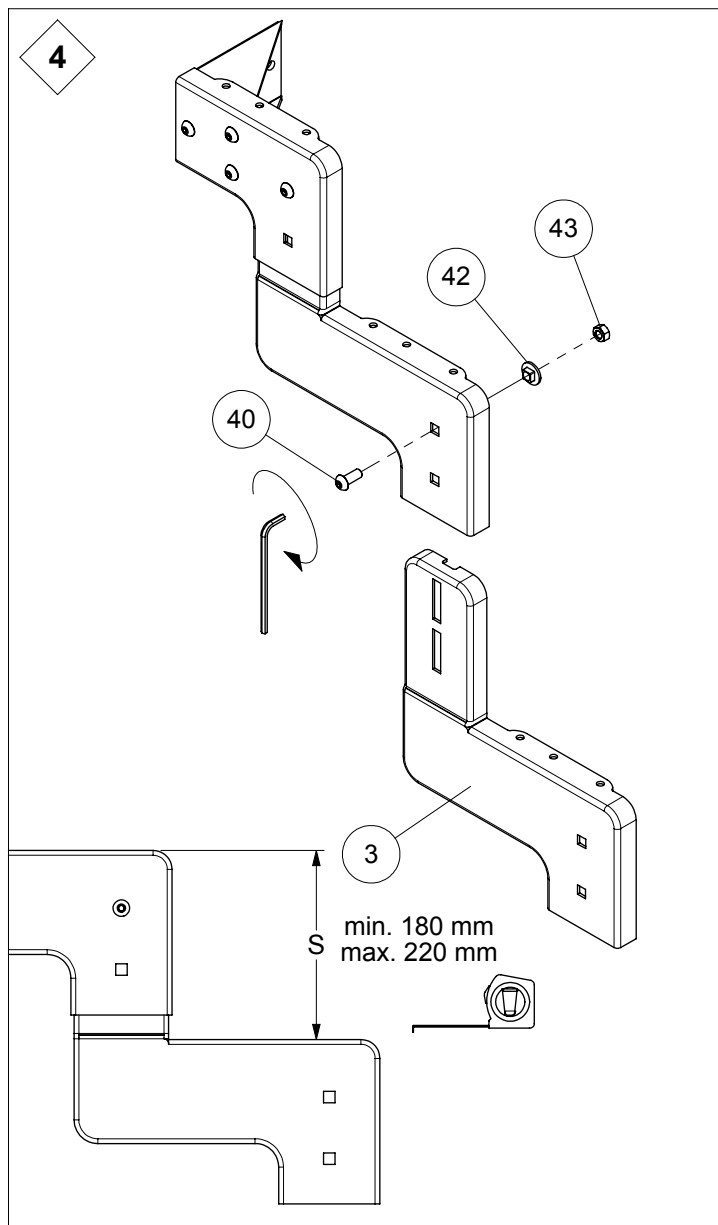

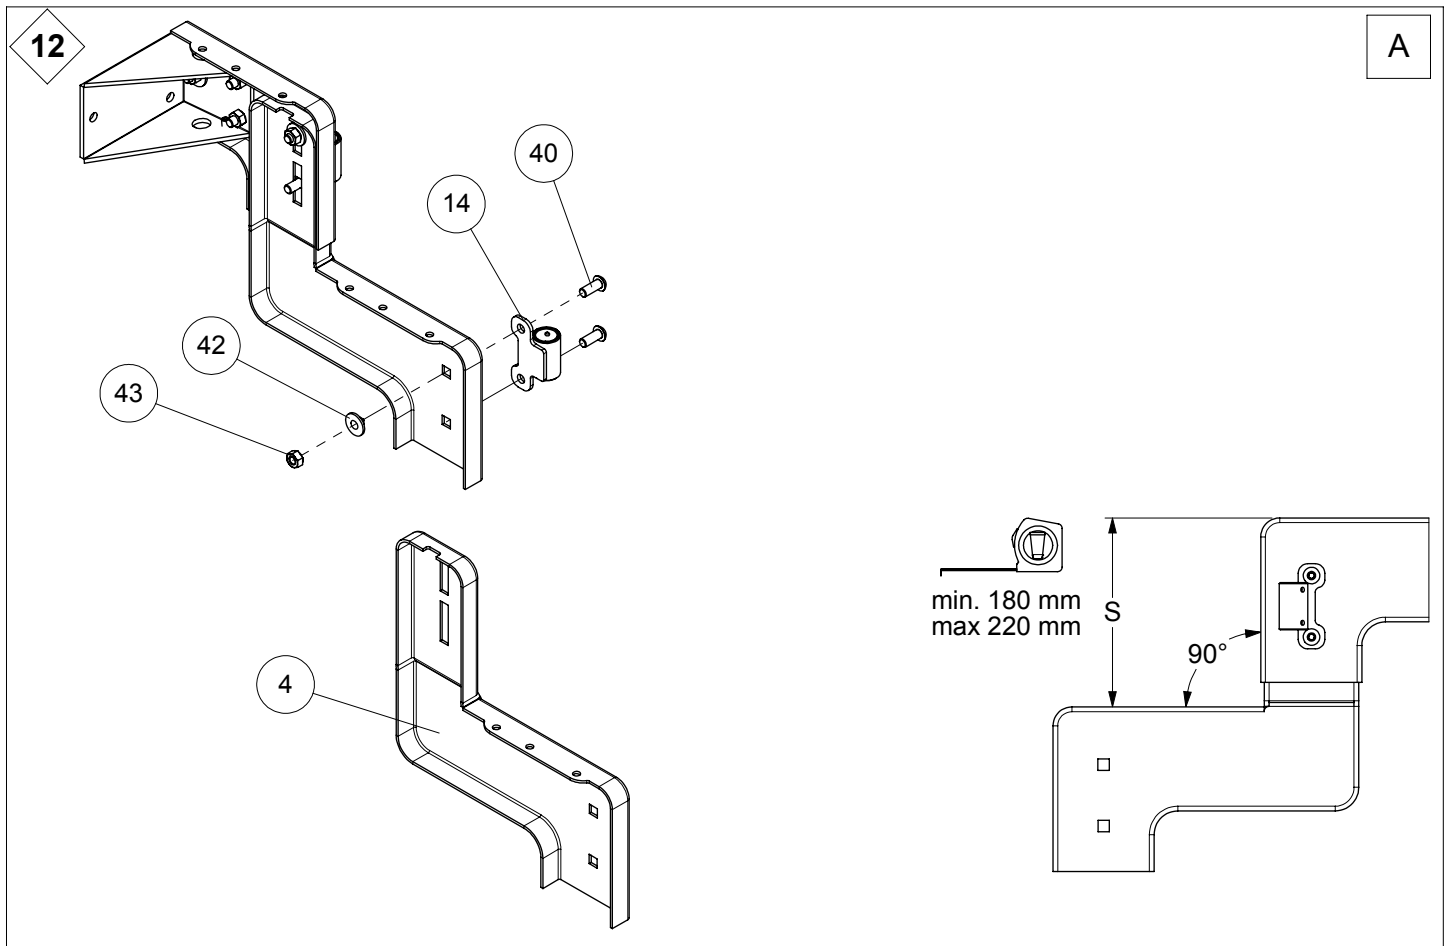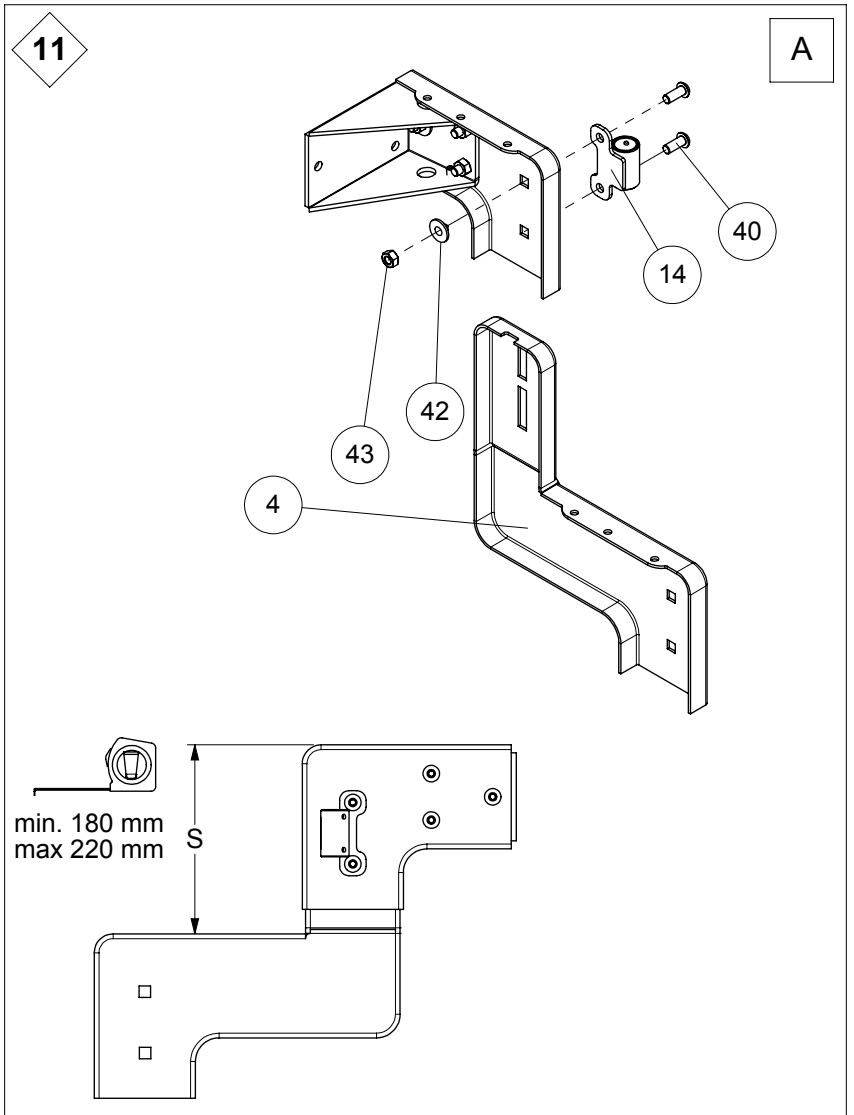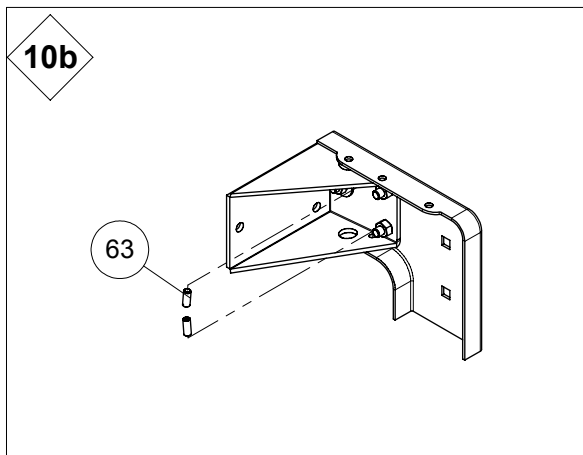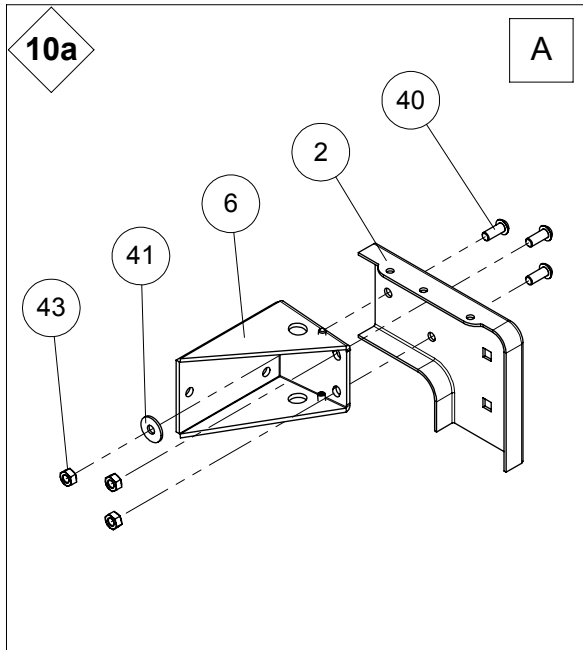



13


A

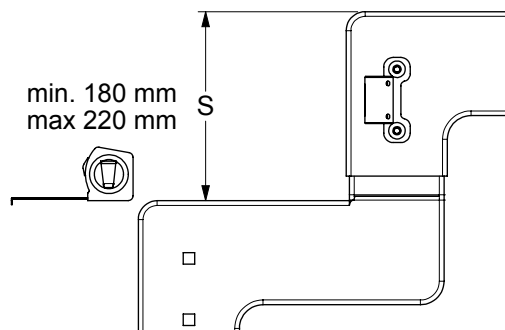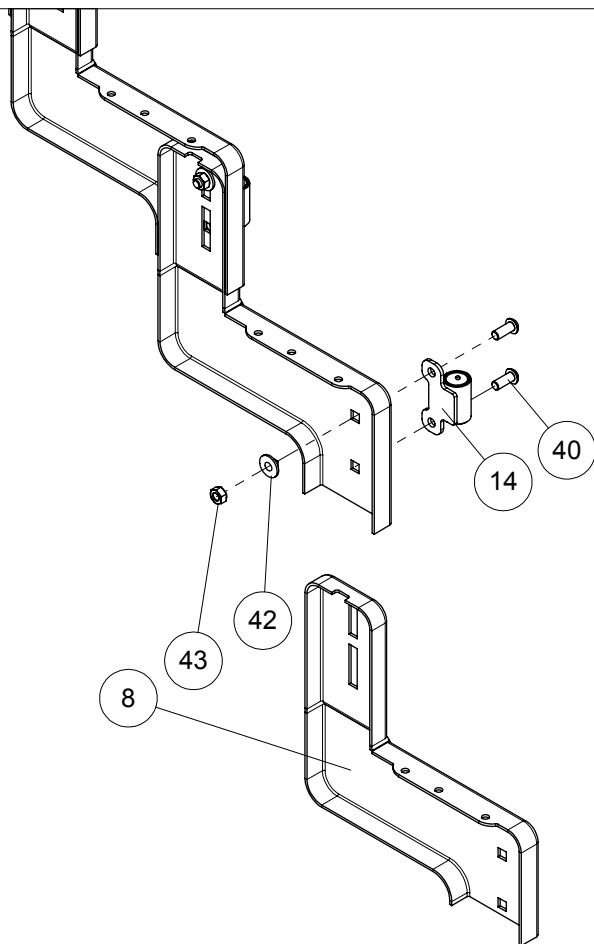



14


A

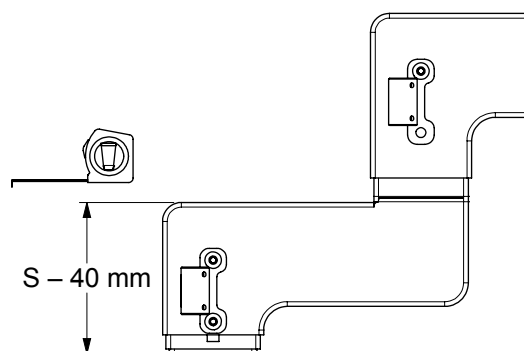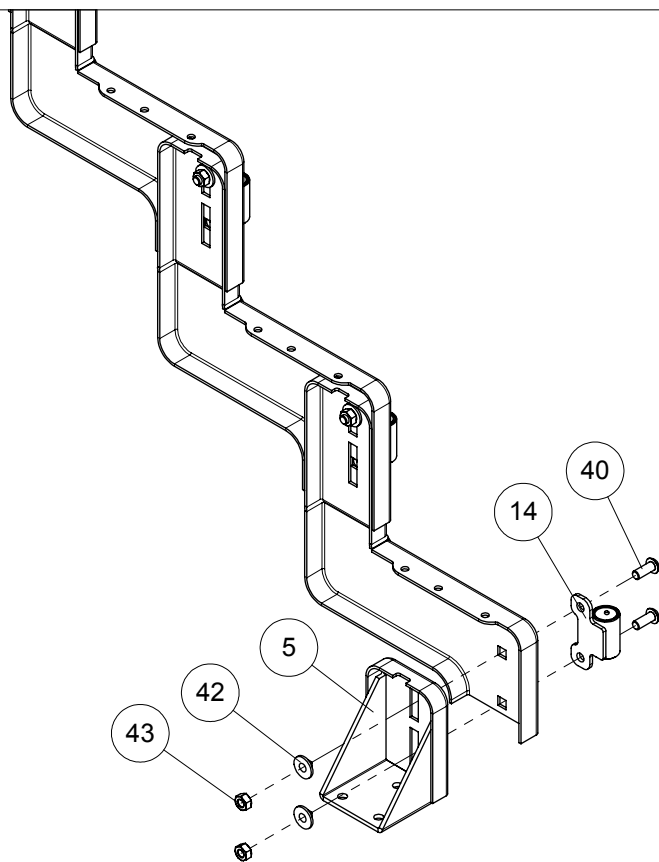



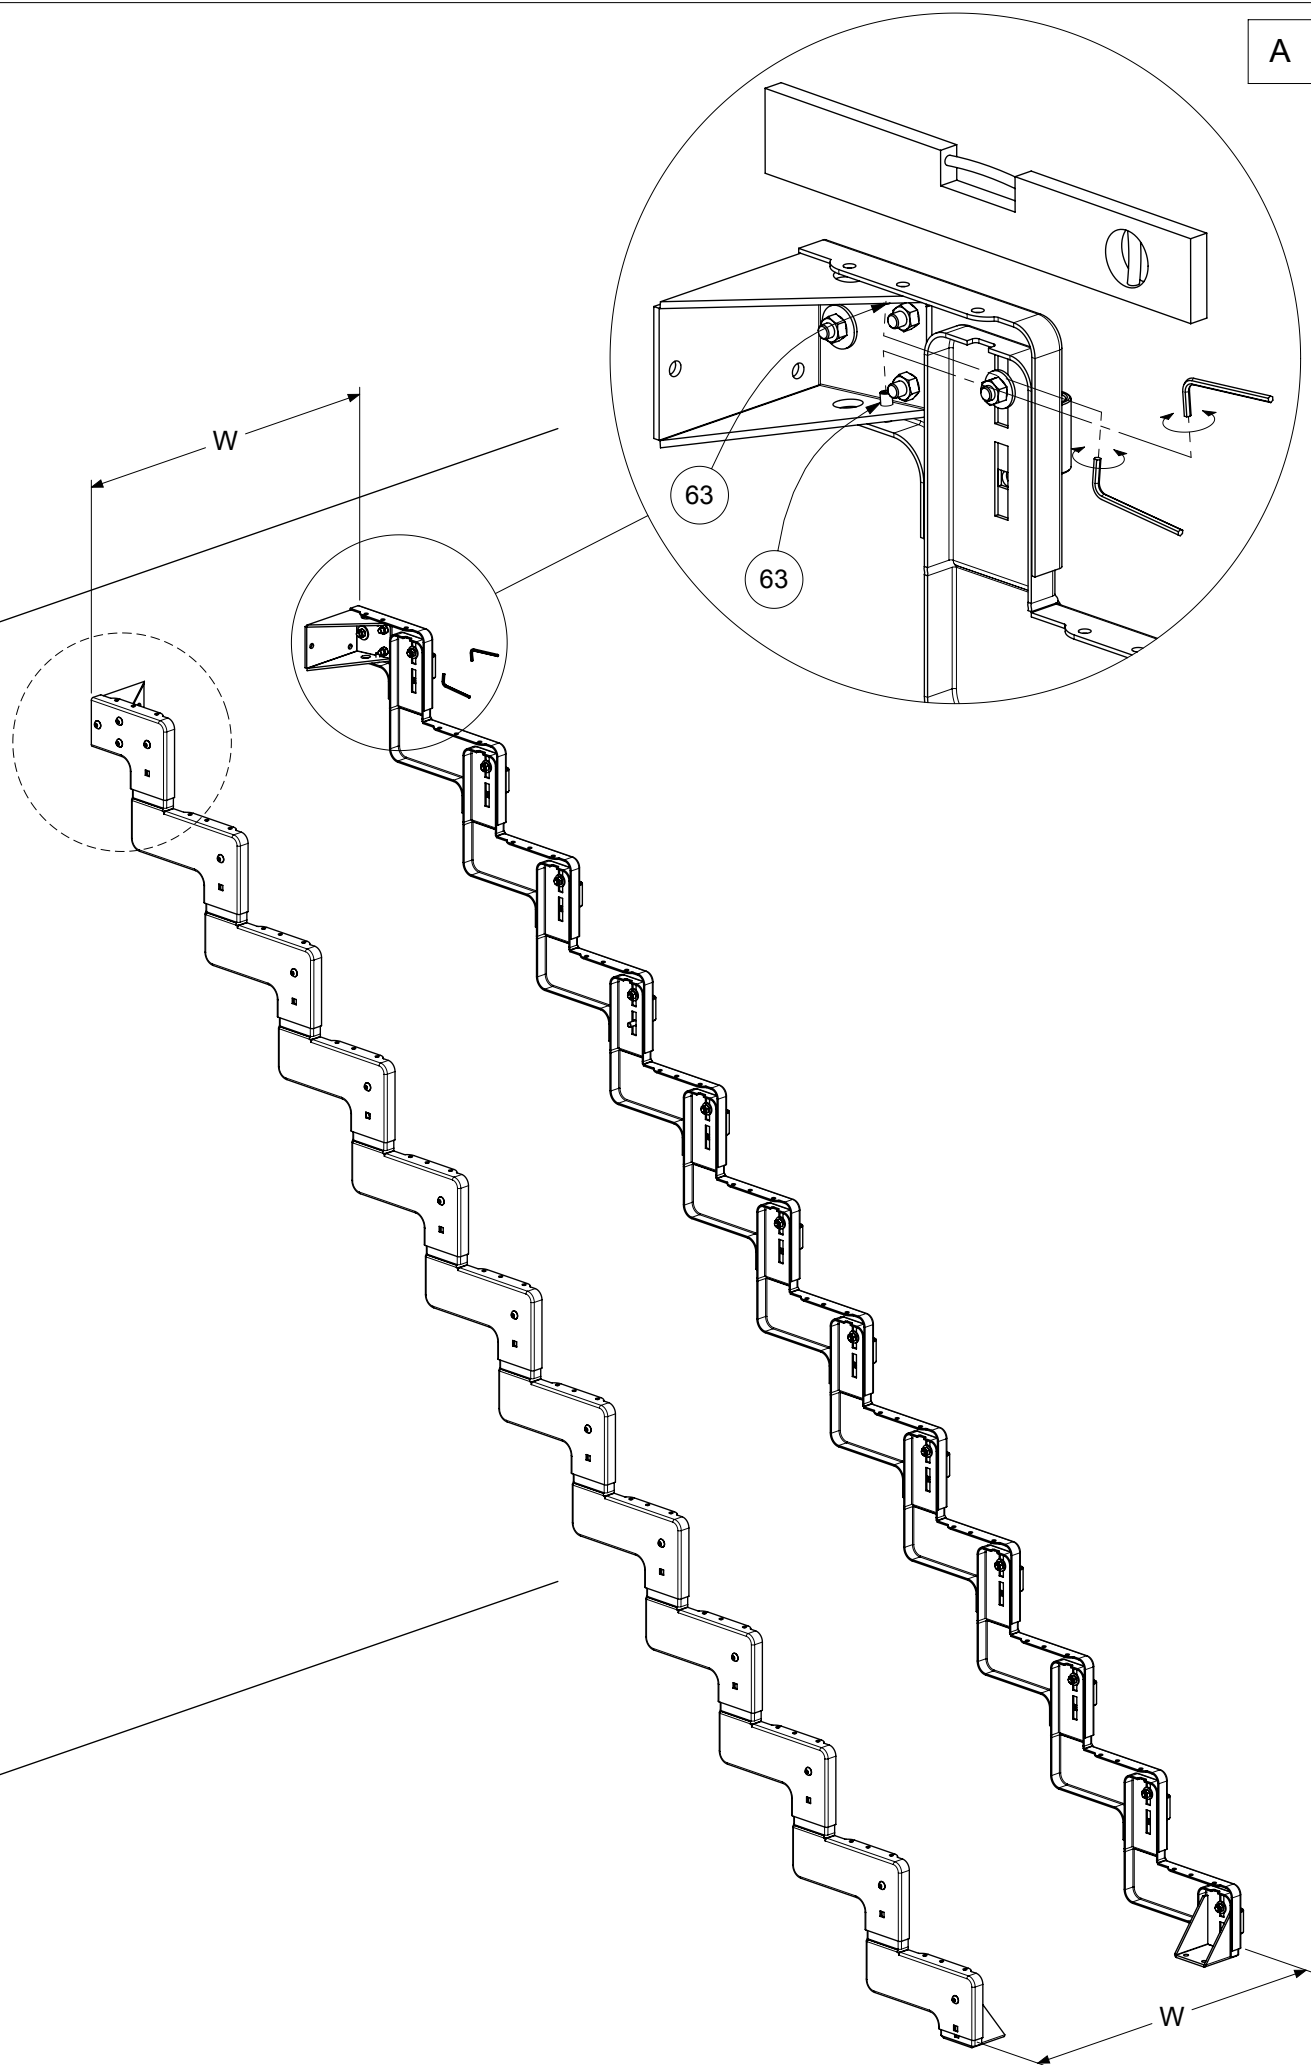


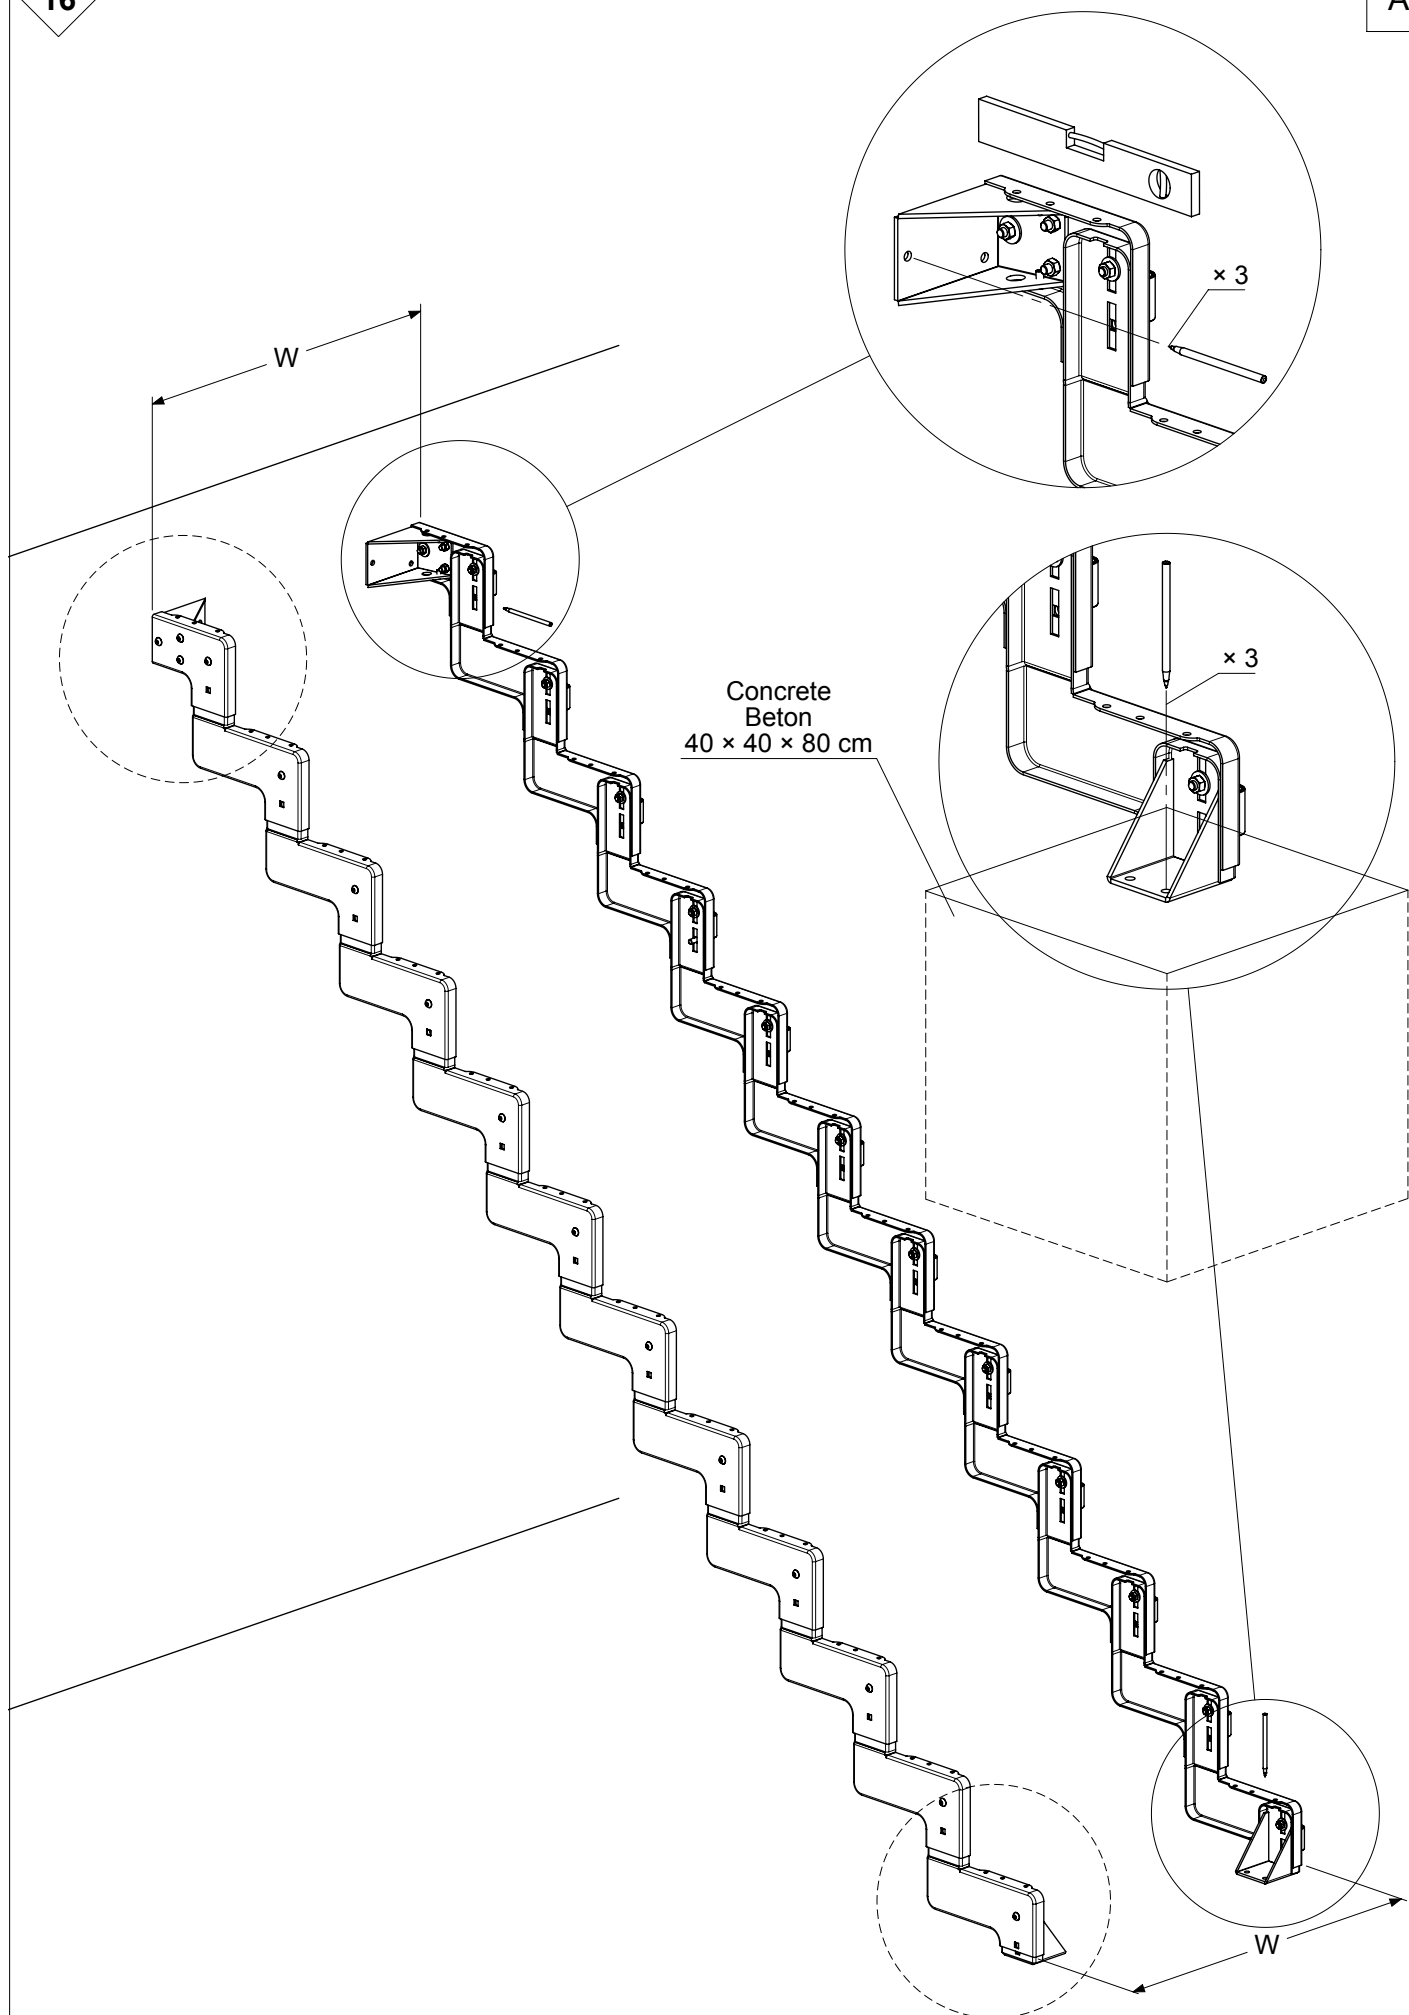

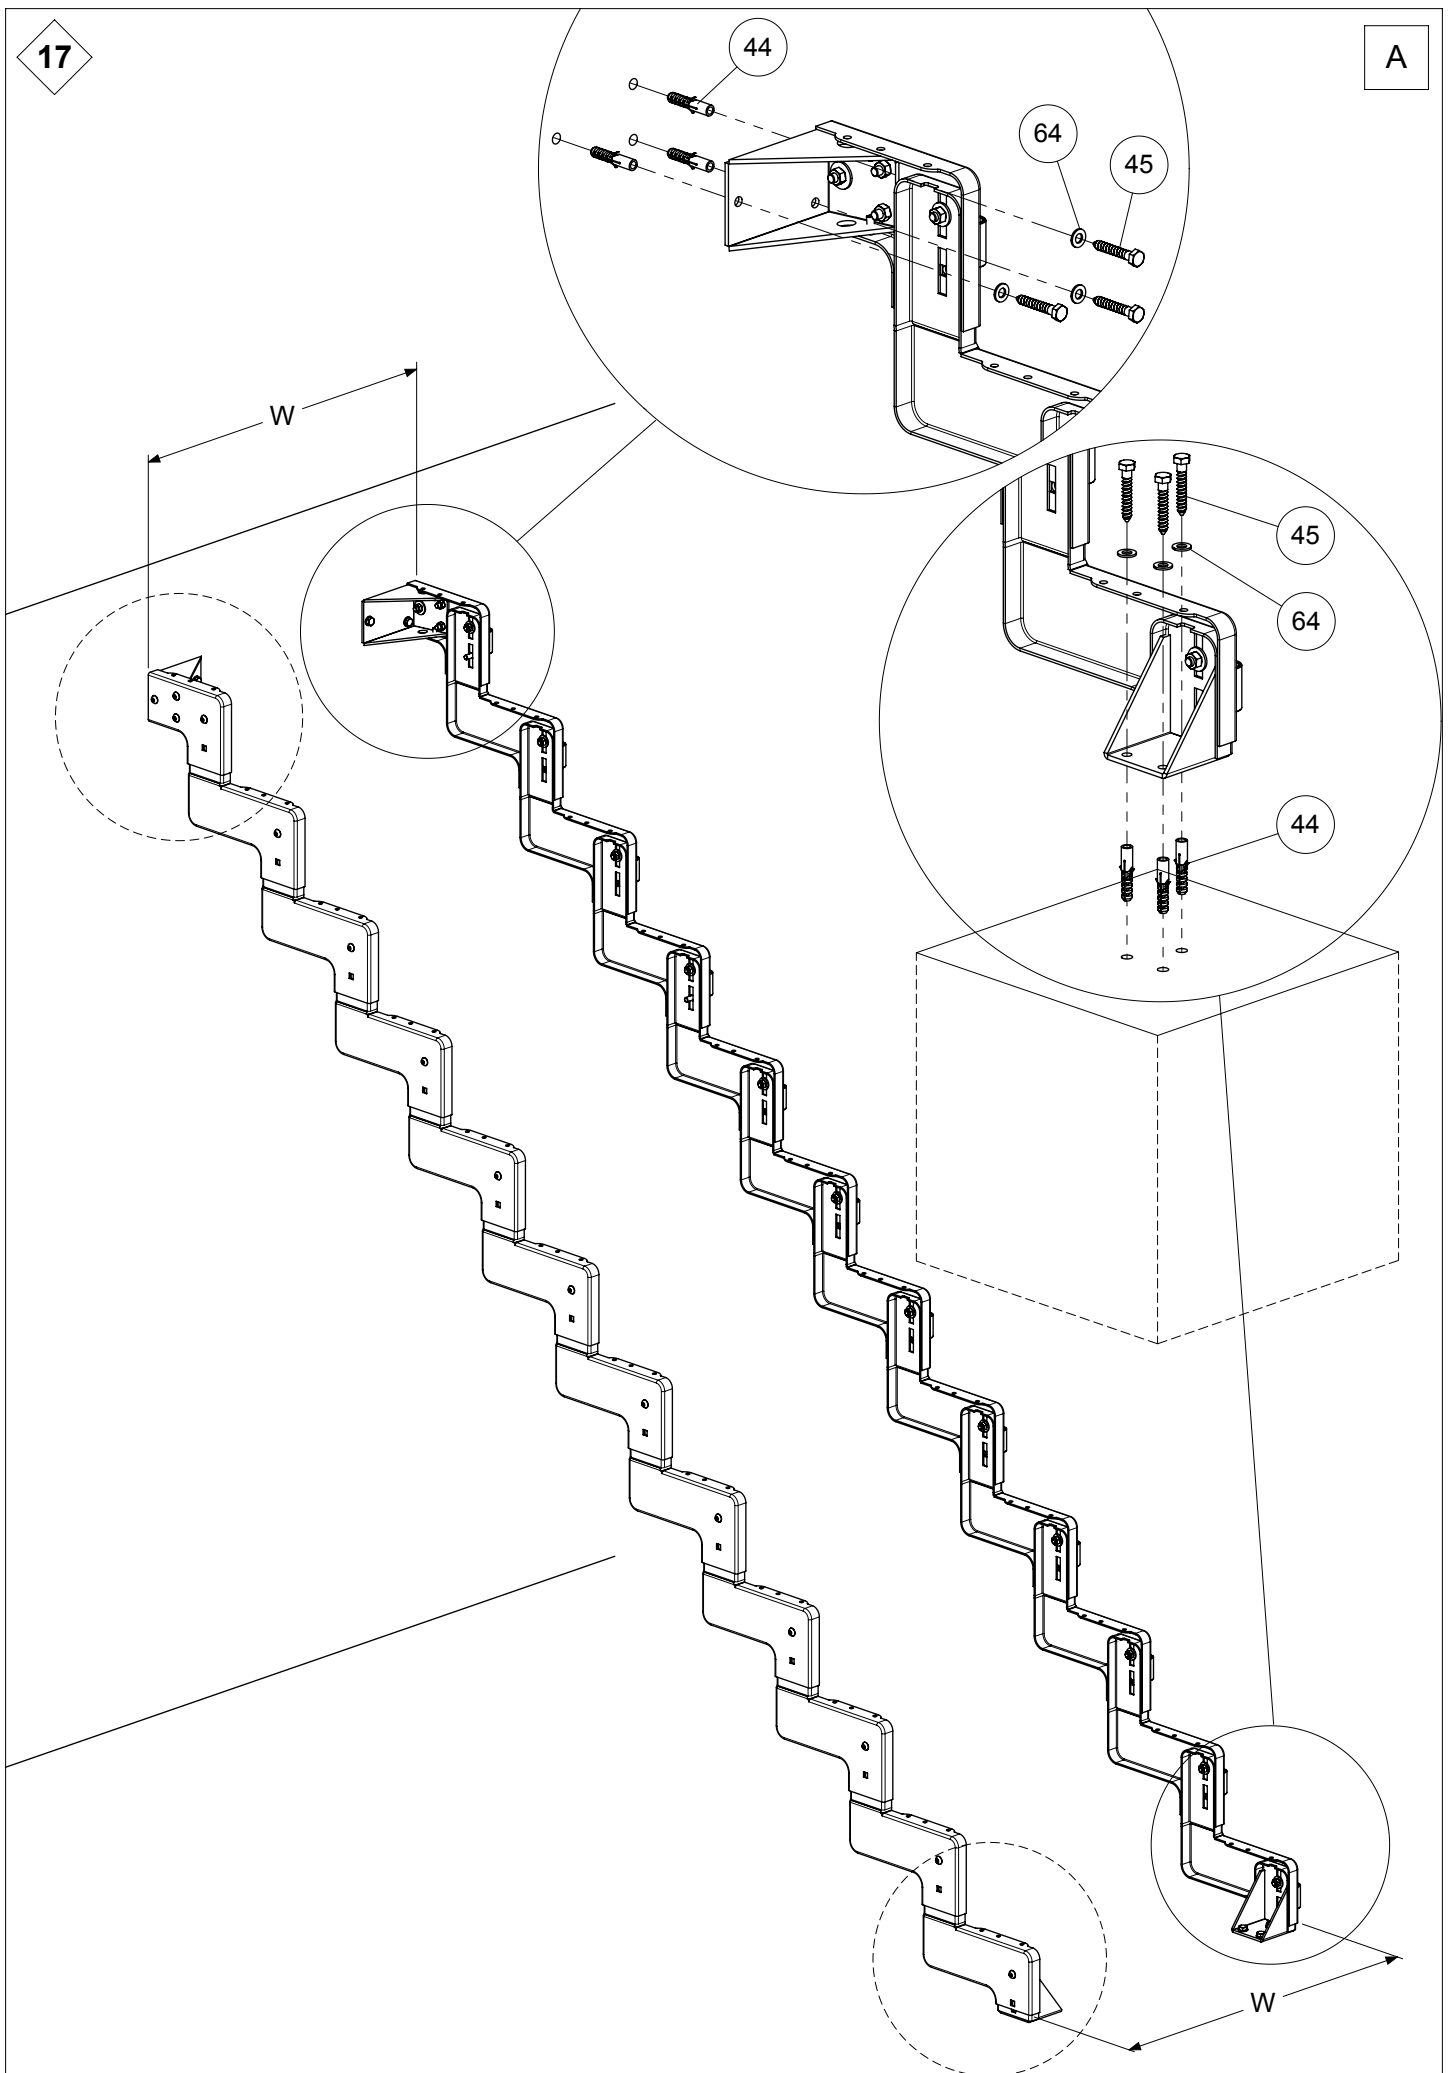

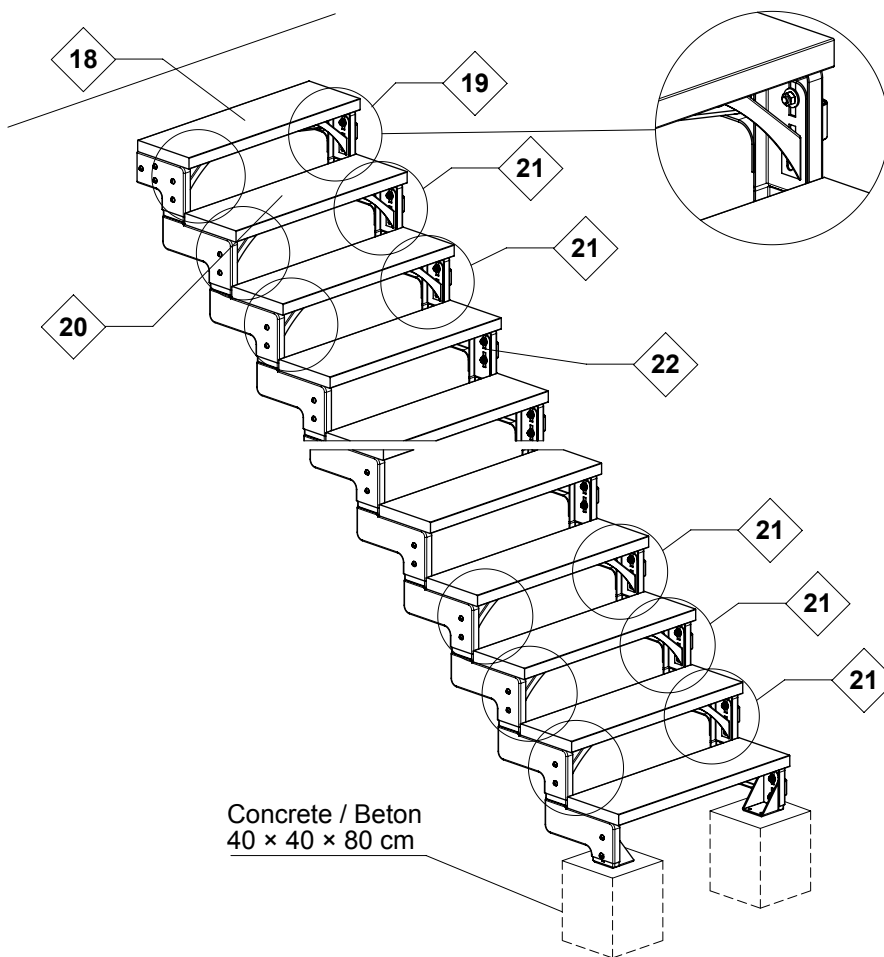


 If more than
6 steps:
Add
 9 + 10
 Wenn mehr als
6 Stufen:
 9 + 10
 hinzufügen

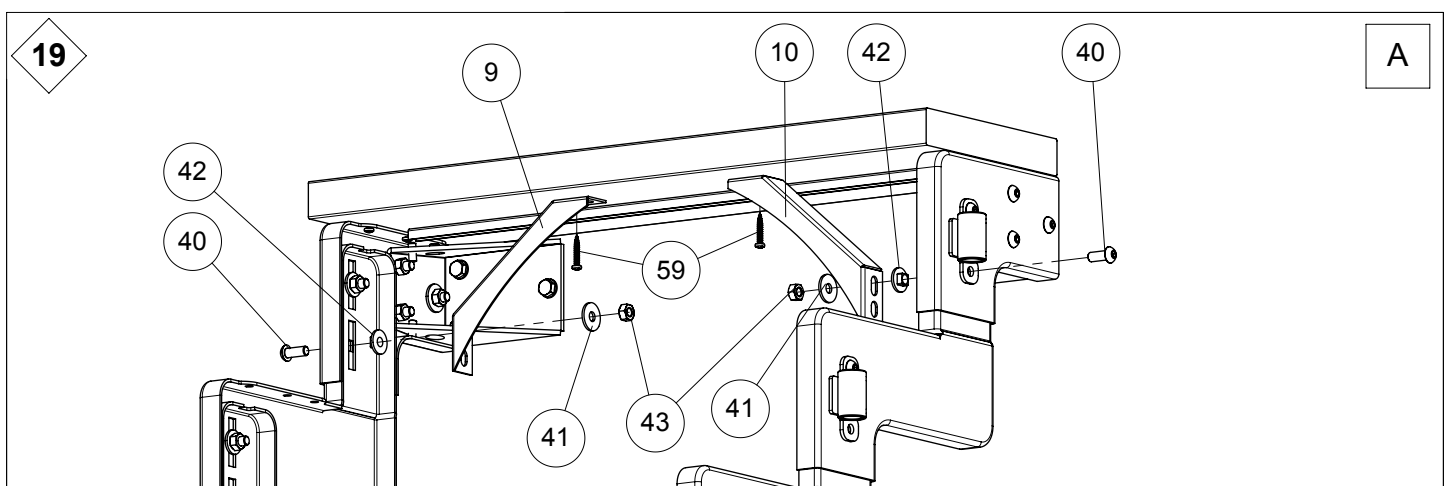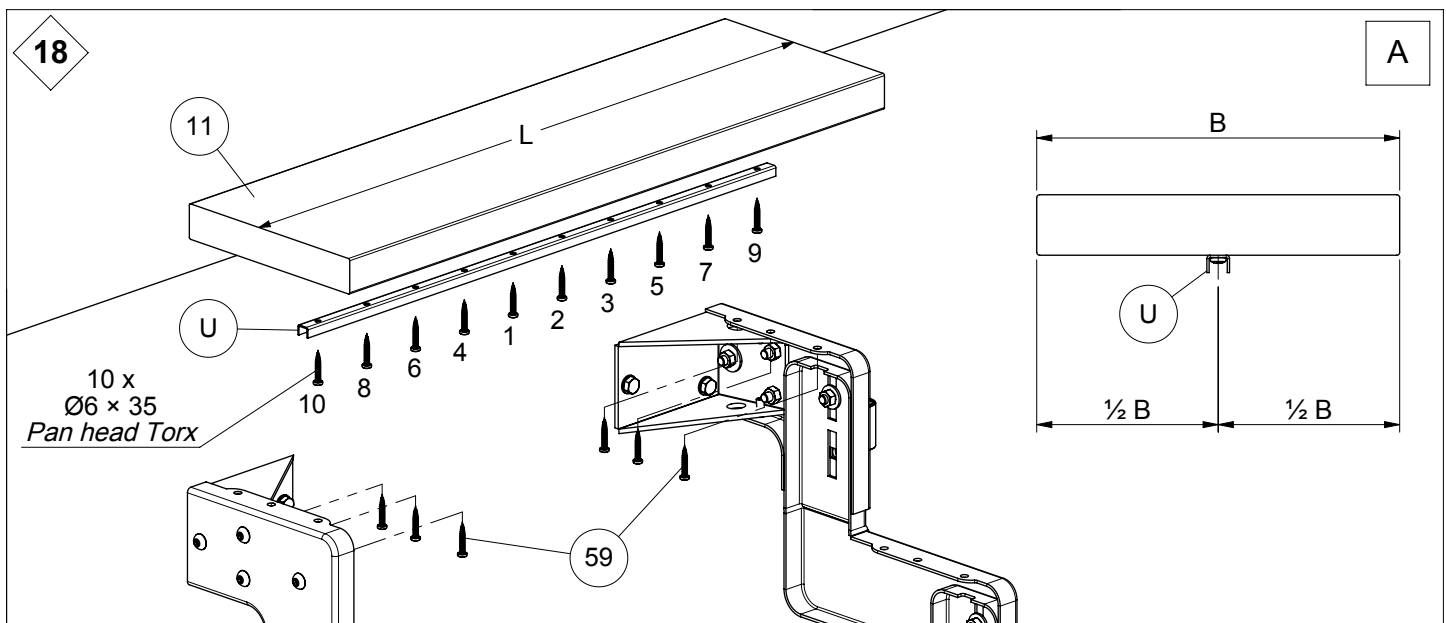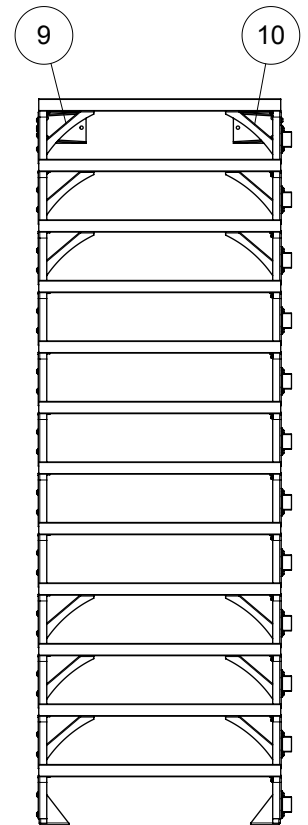

20


A

U
10 x
Ø6 x 35
Pan head Torx

59


21




A




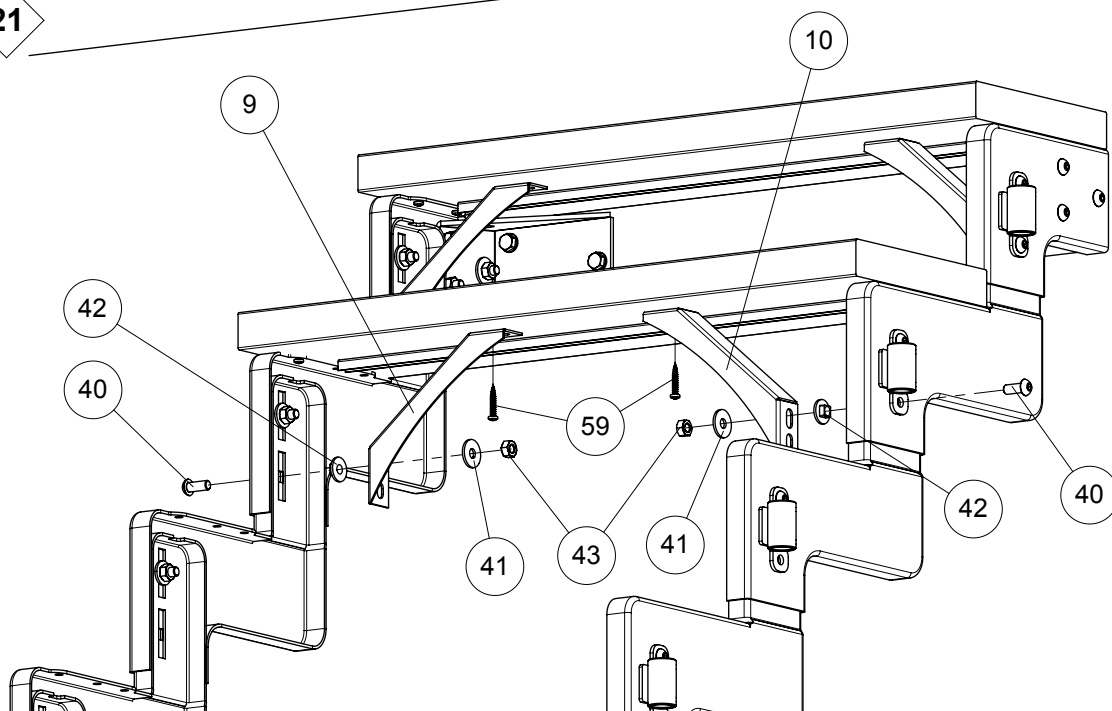






22

A

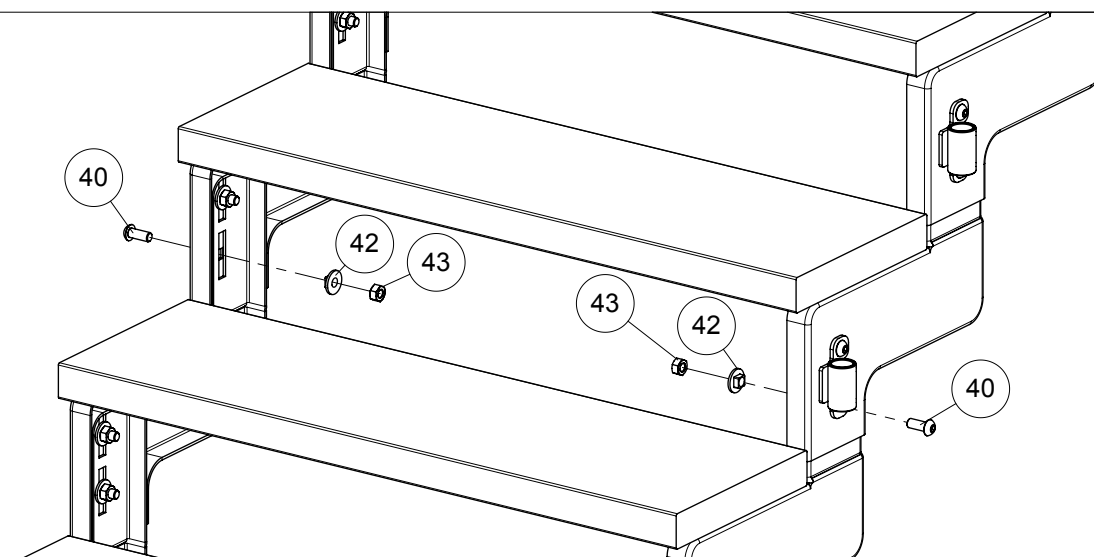

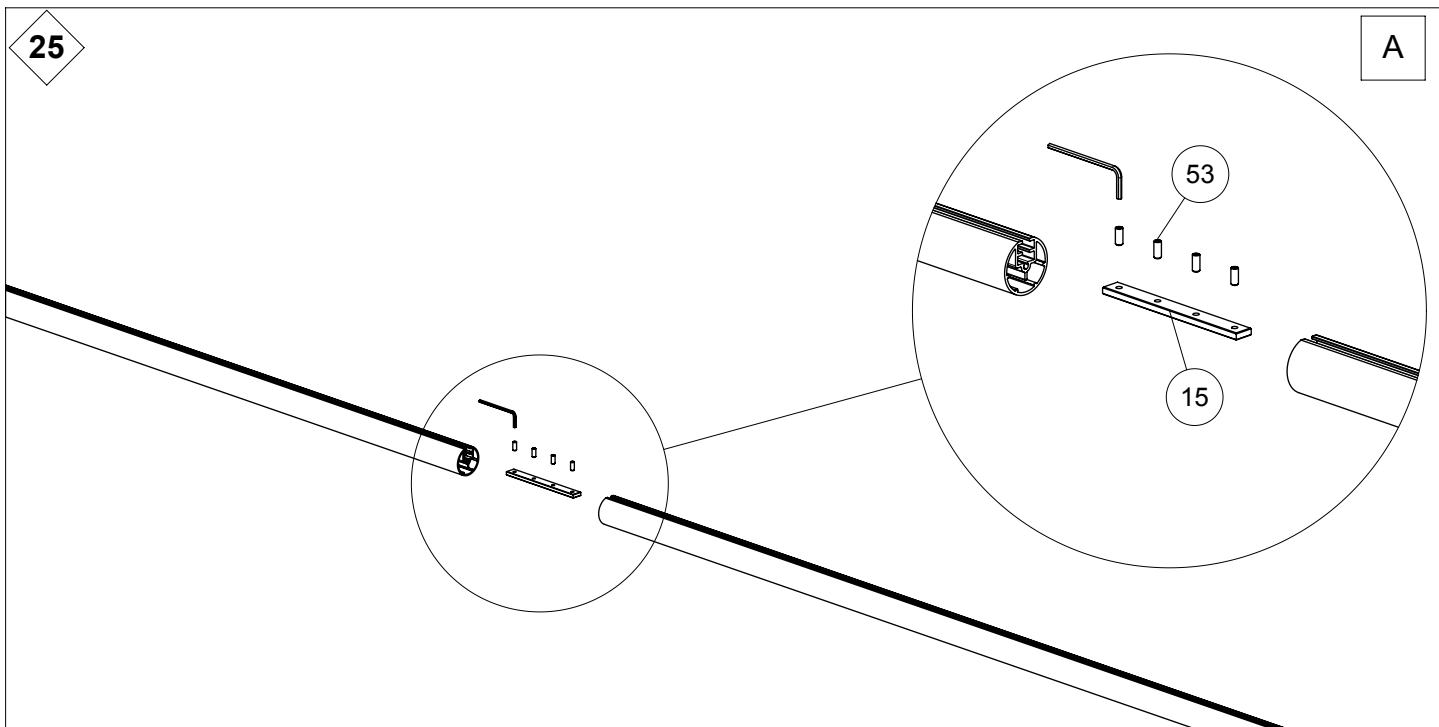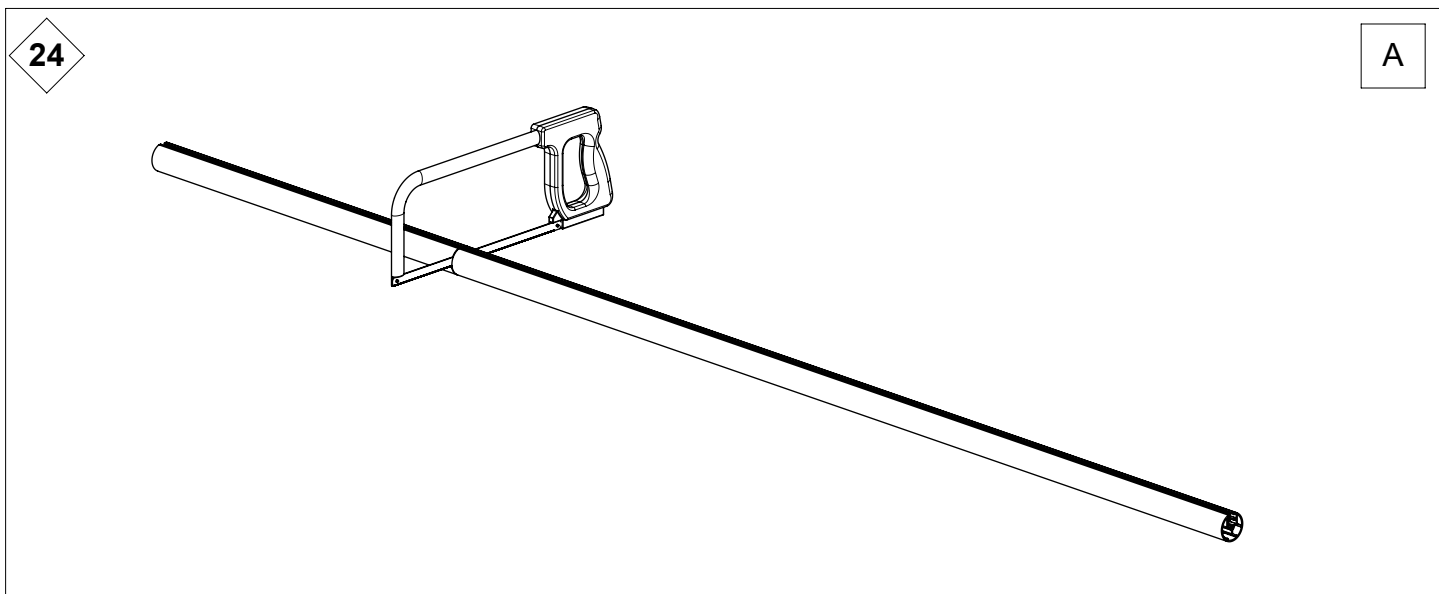
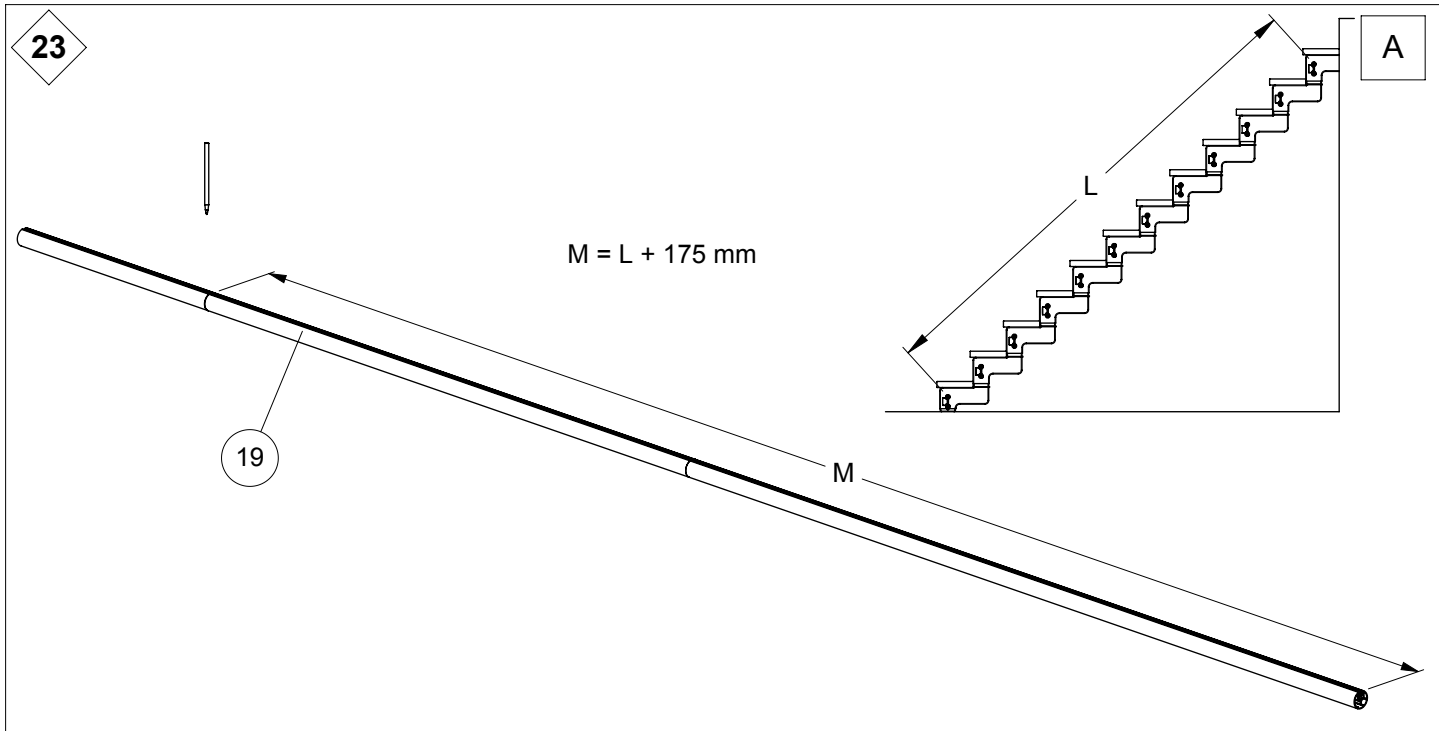


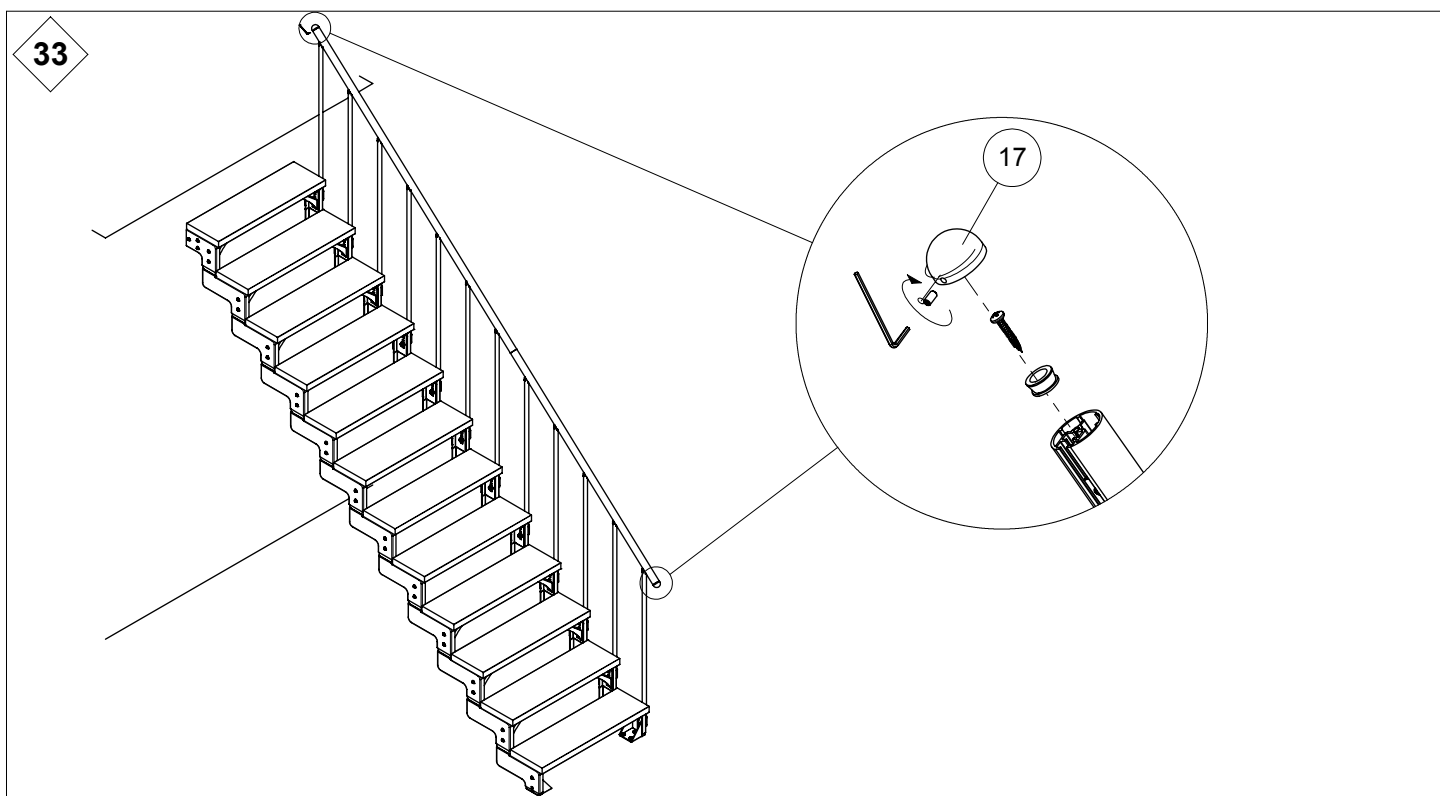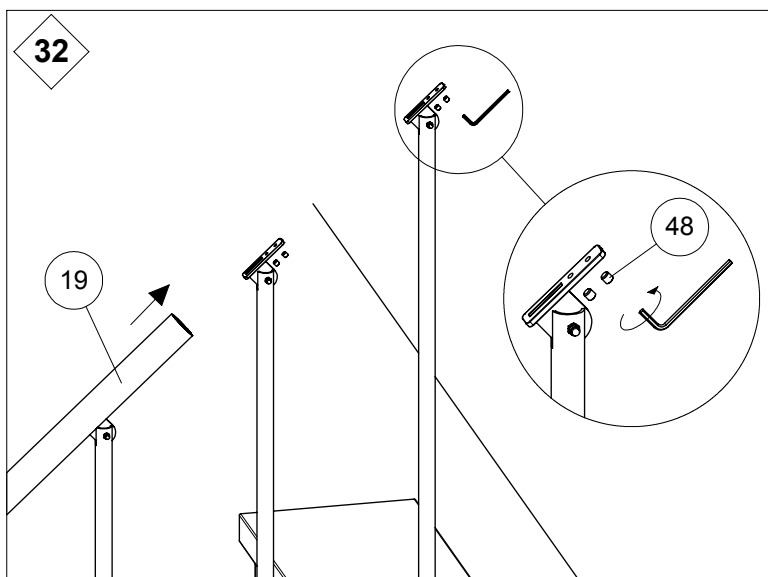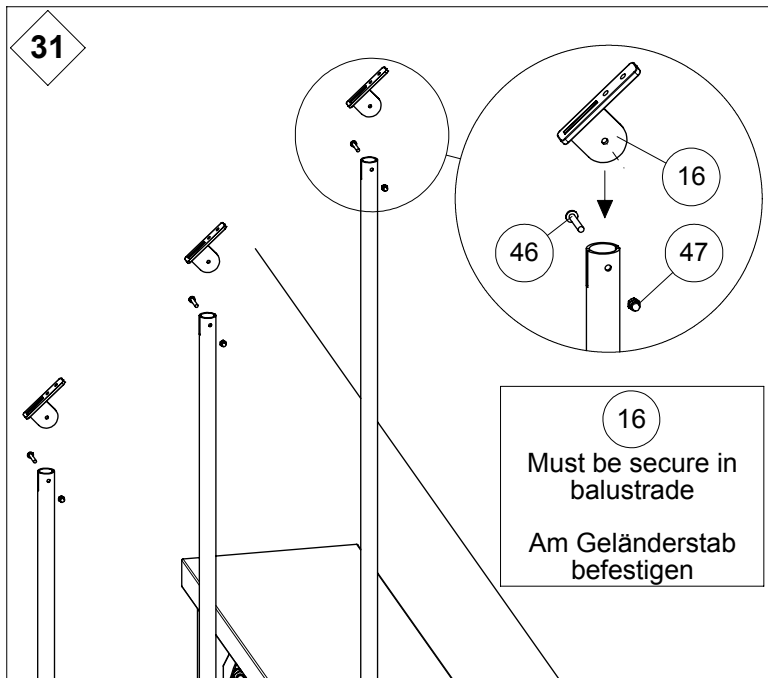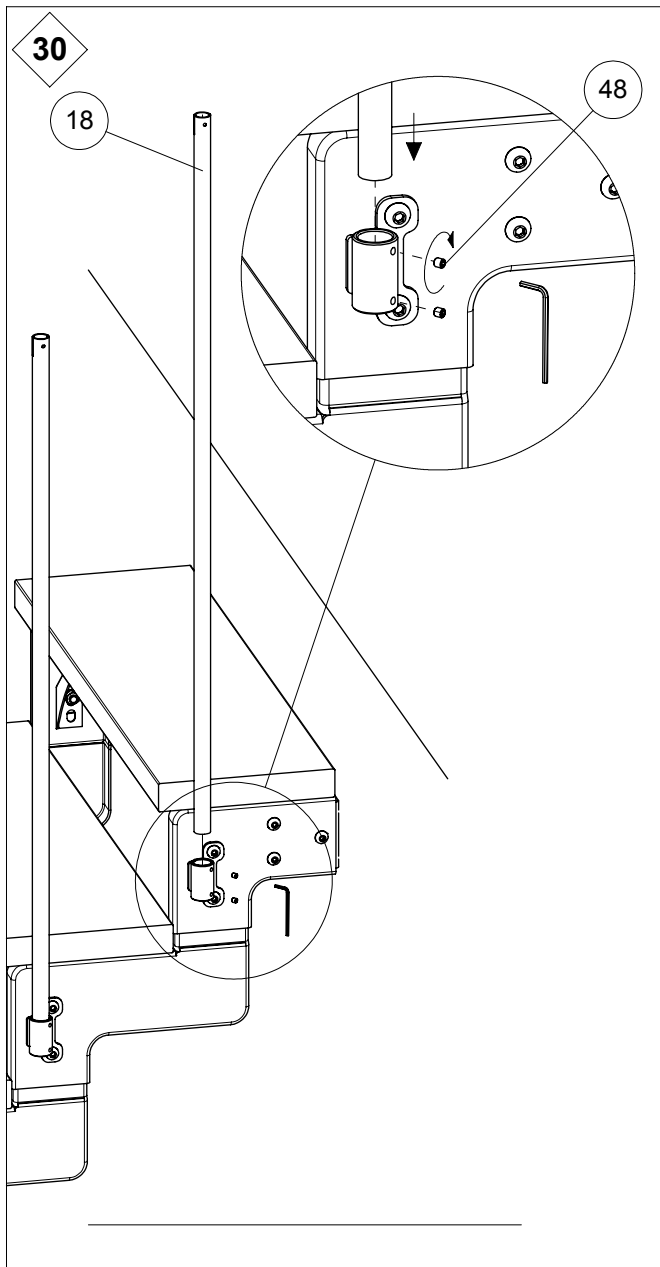

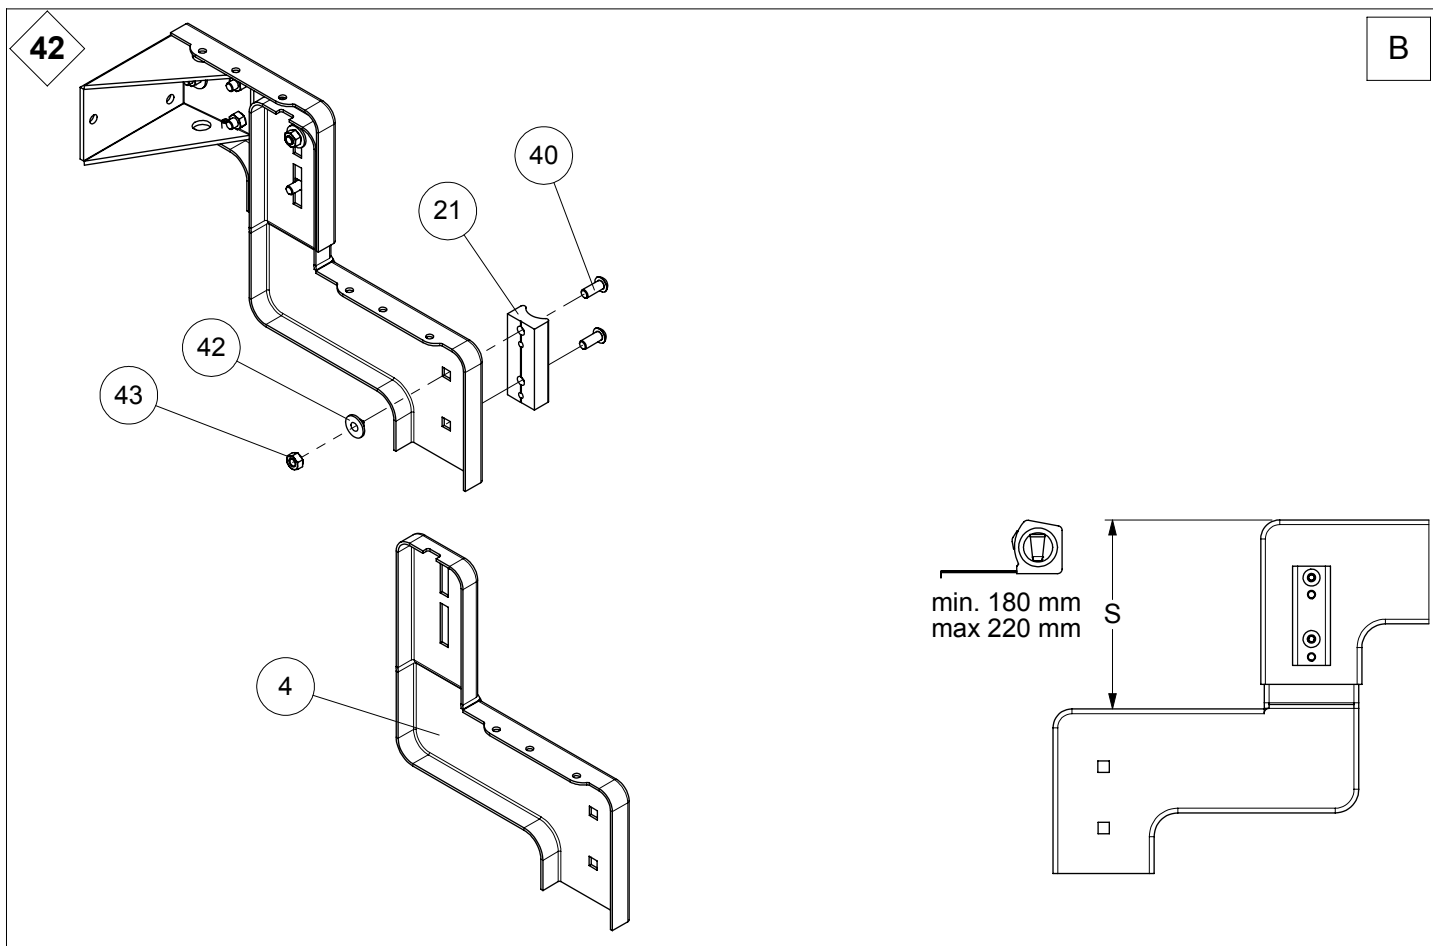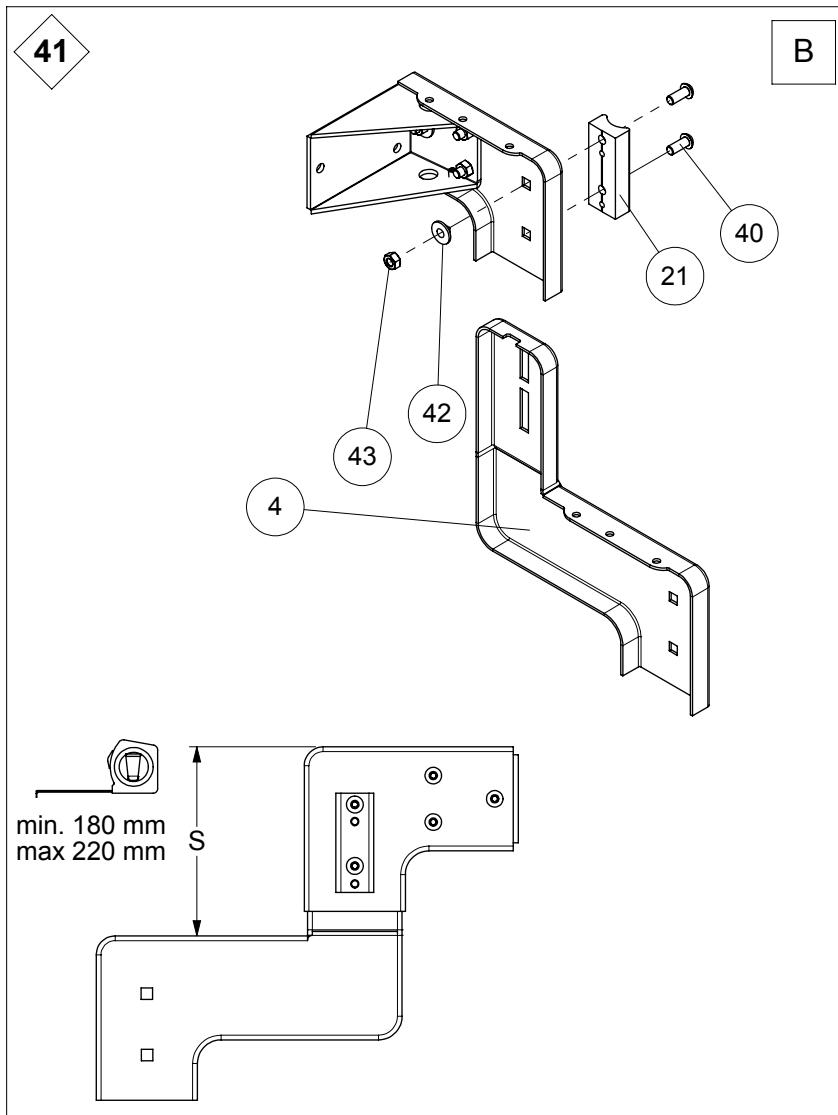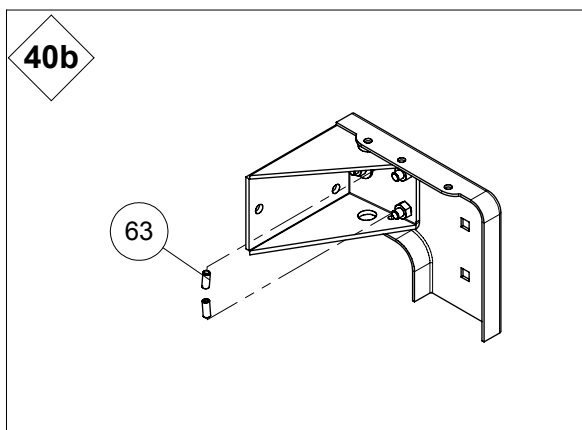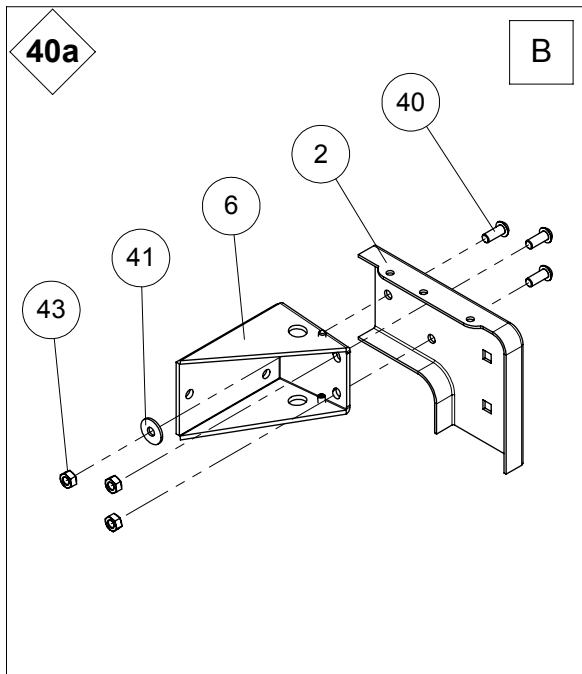



43


B

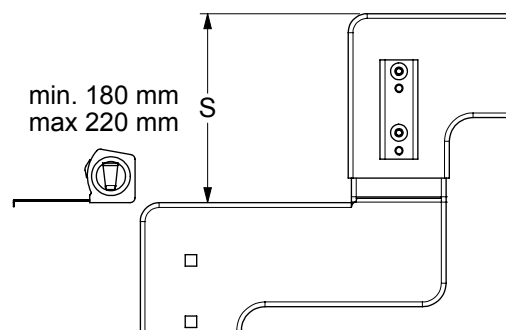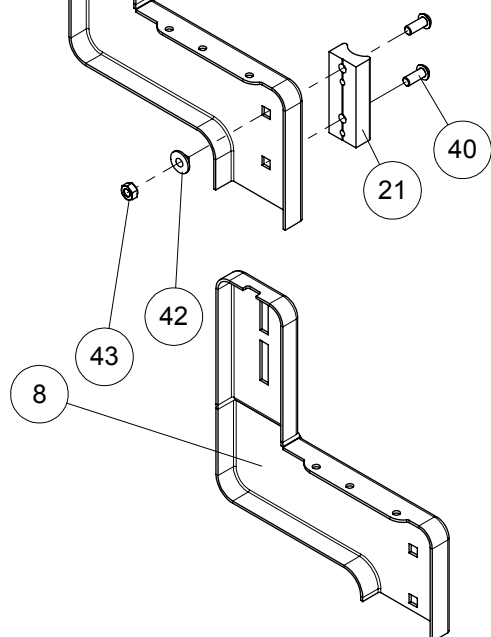


44

B

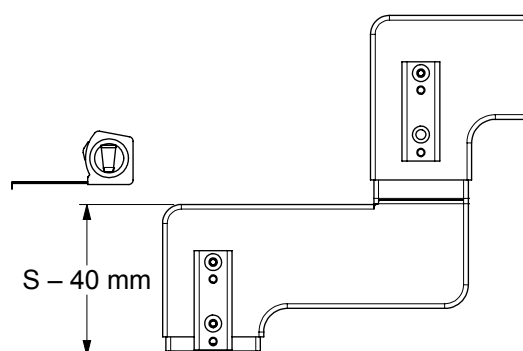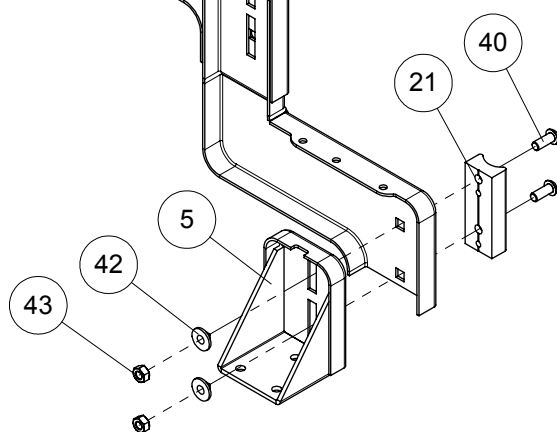






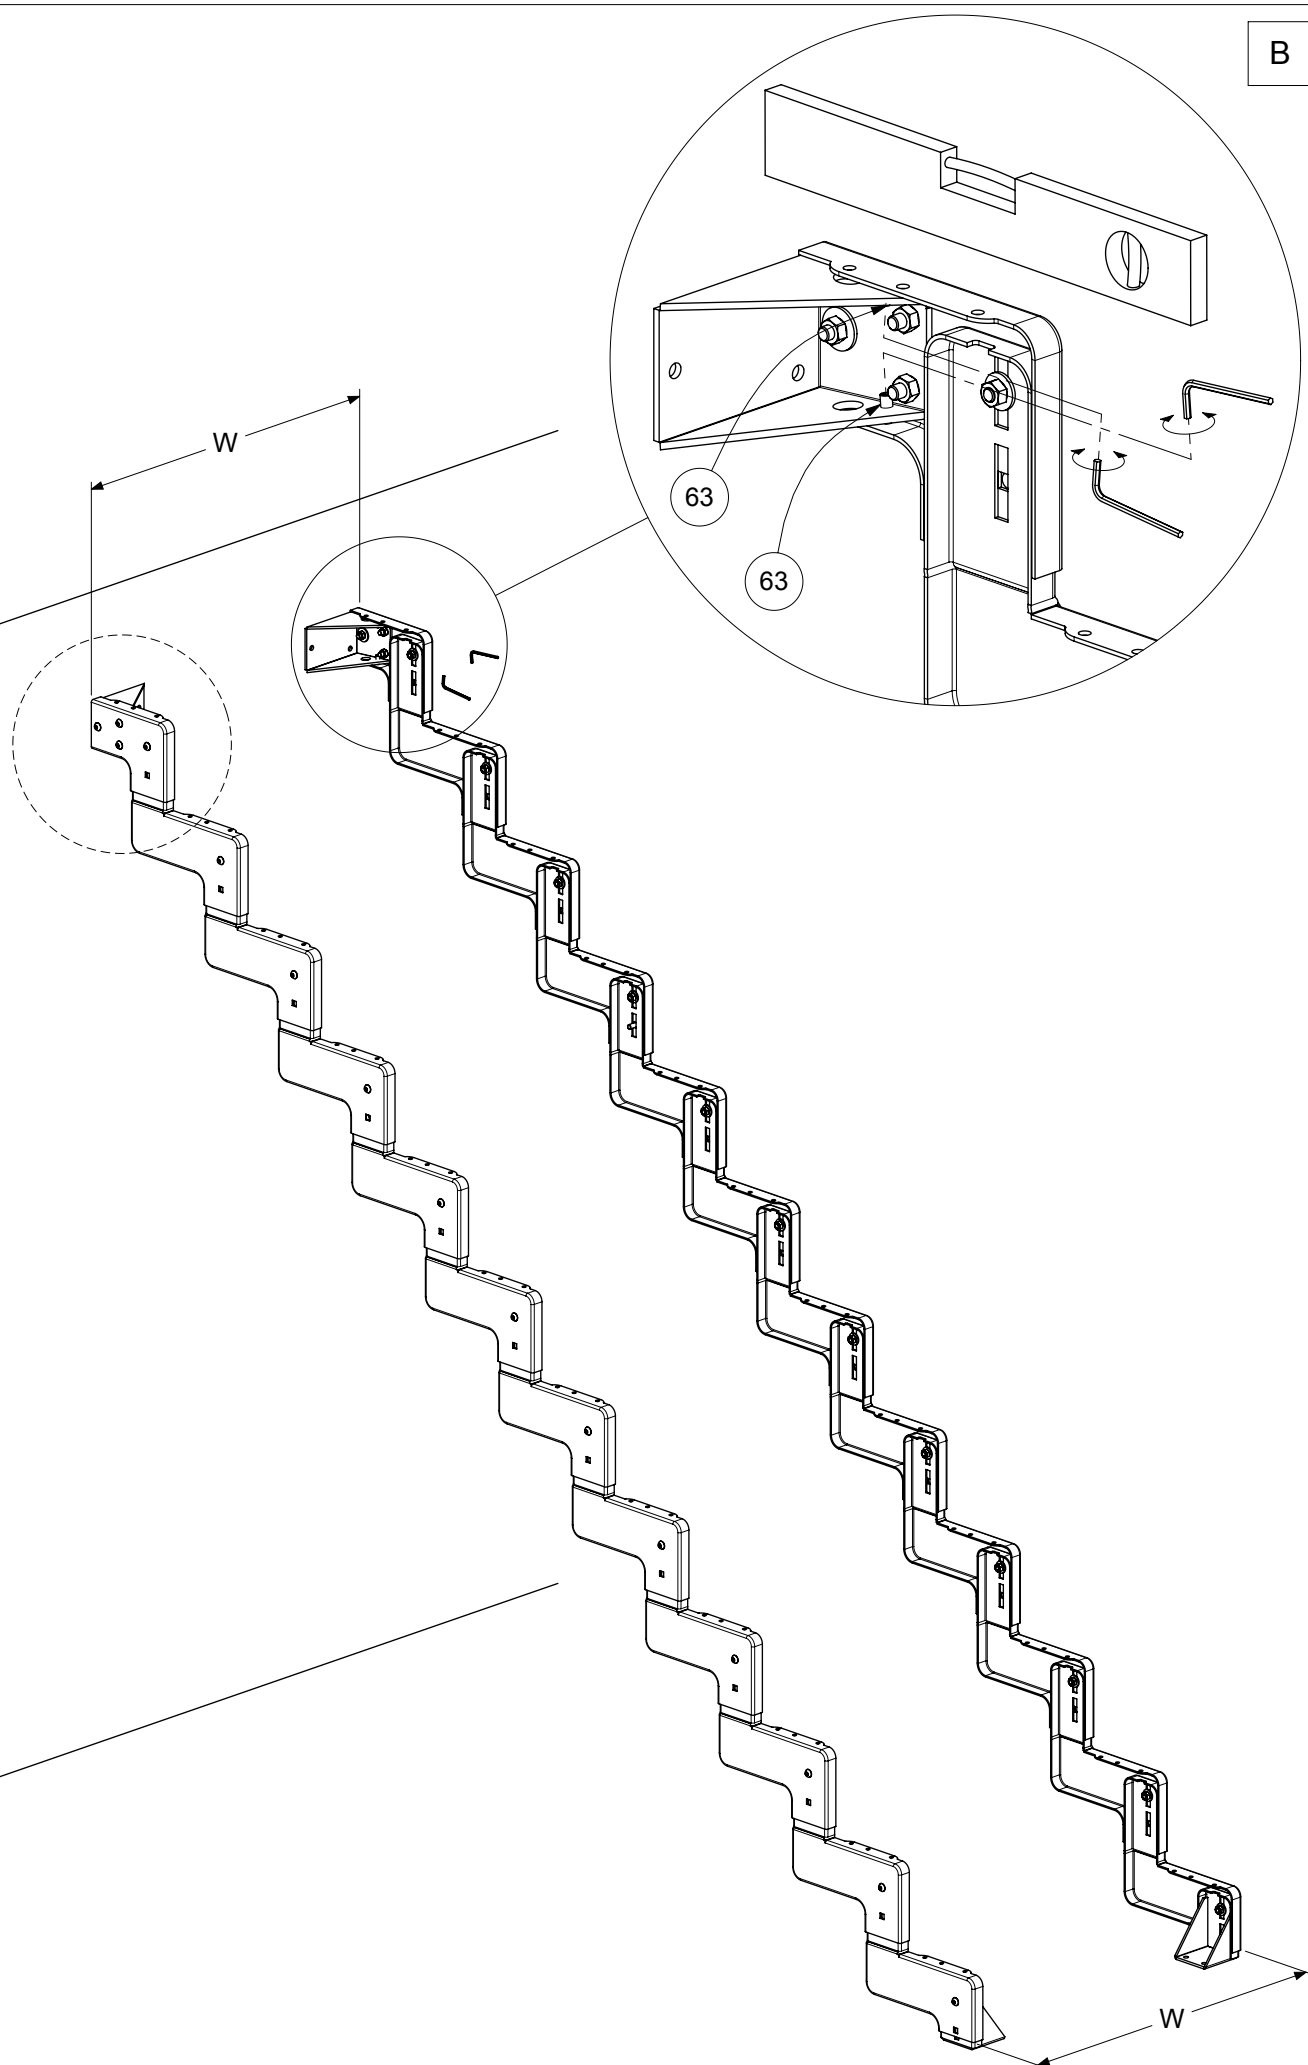


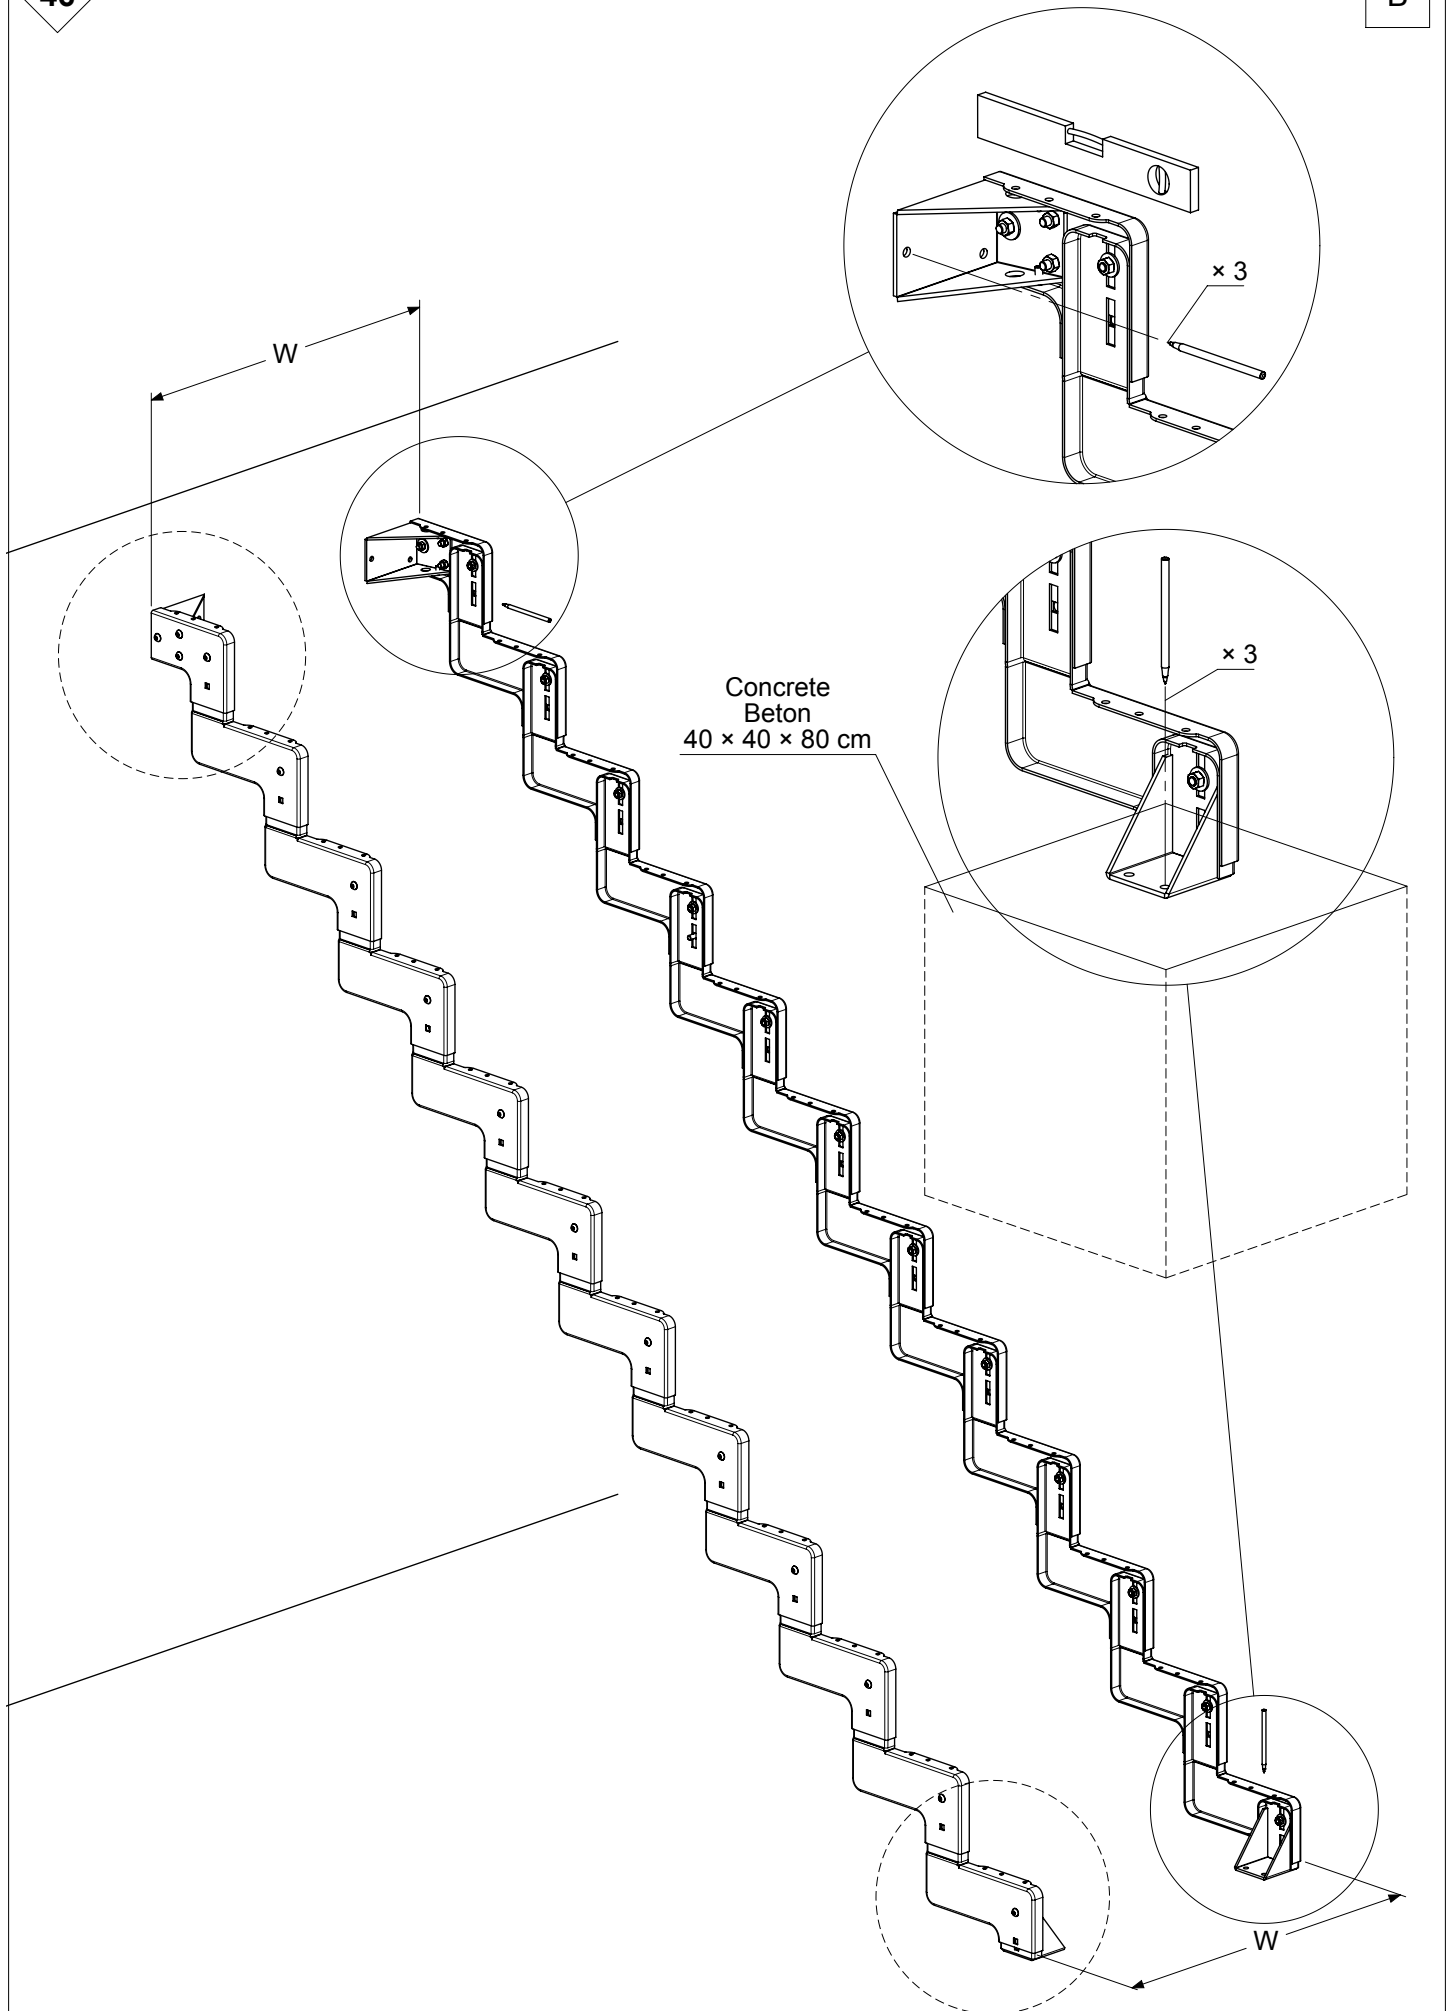

47

B

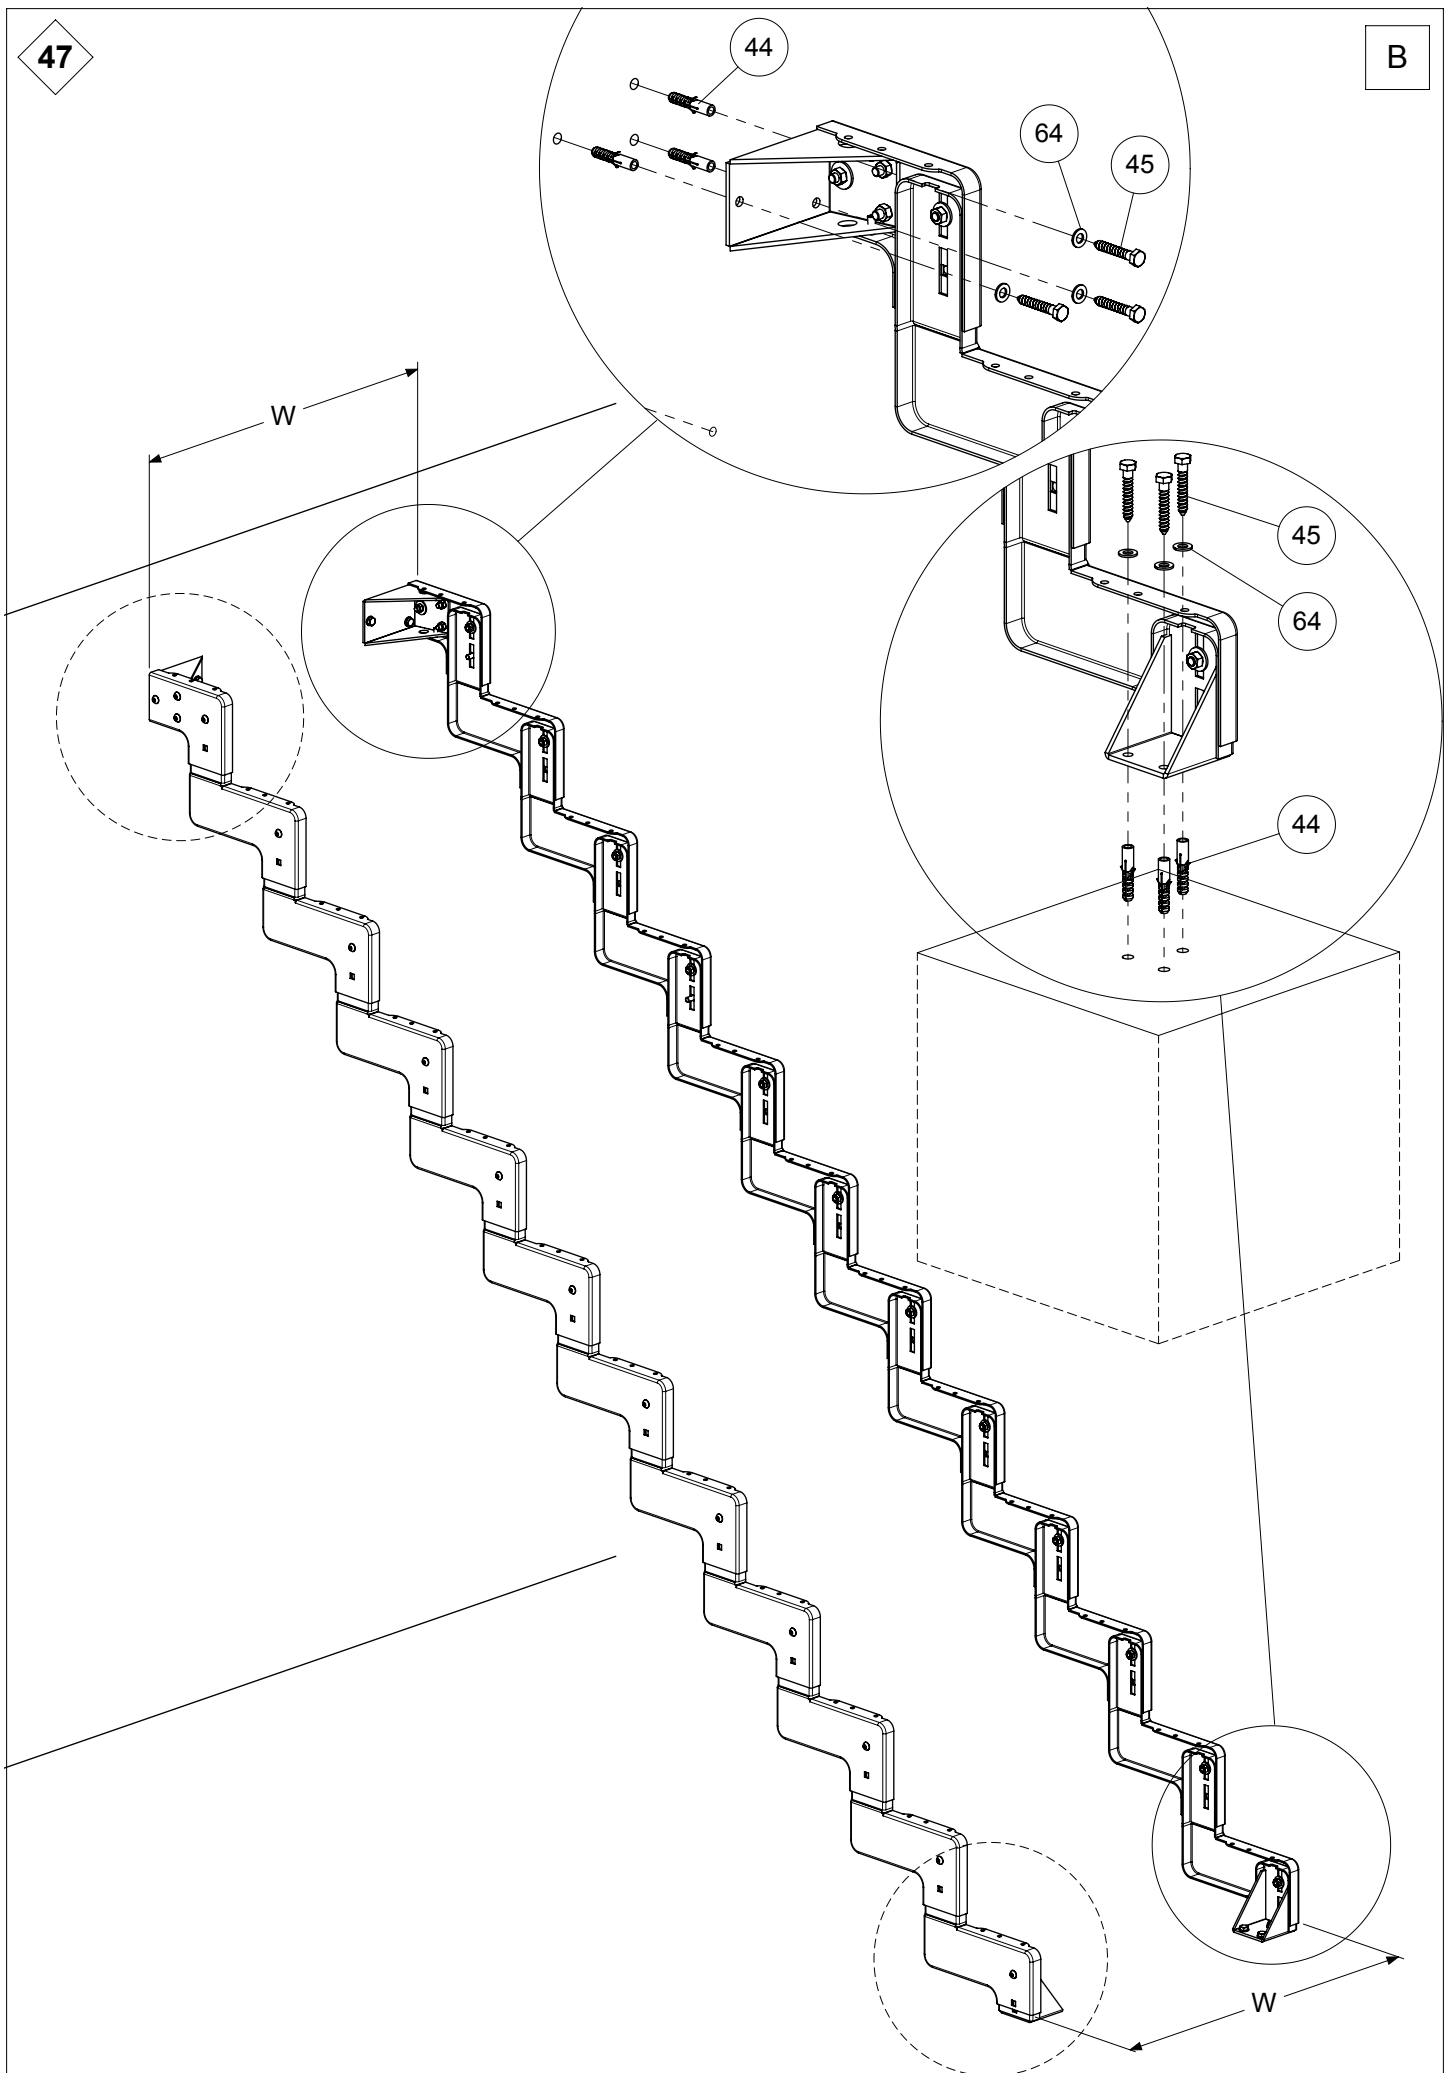

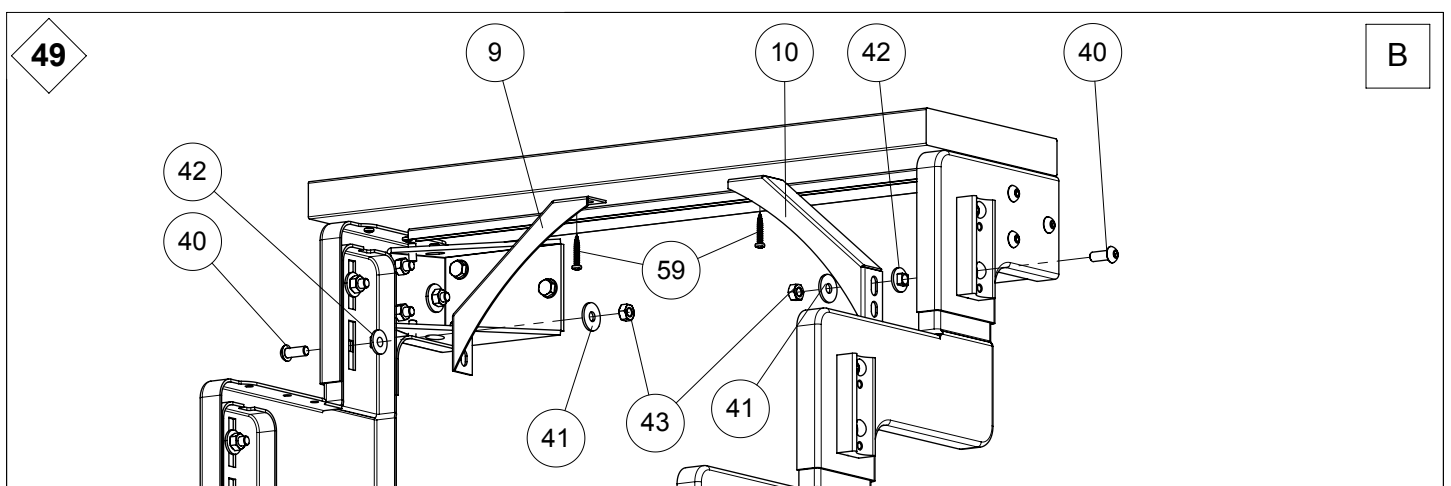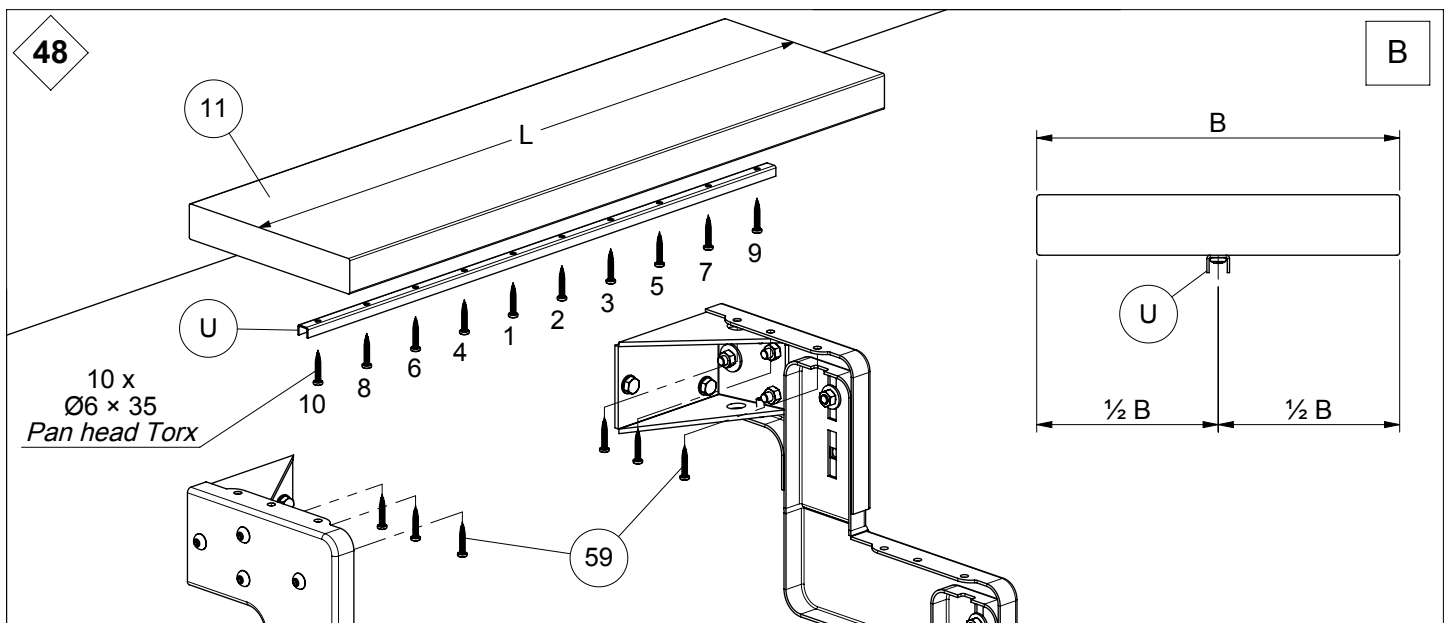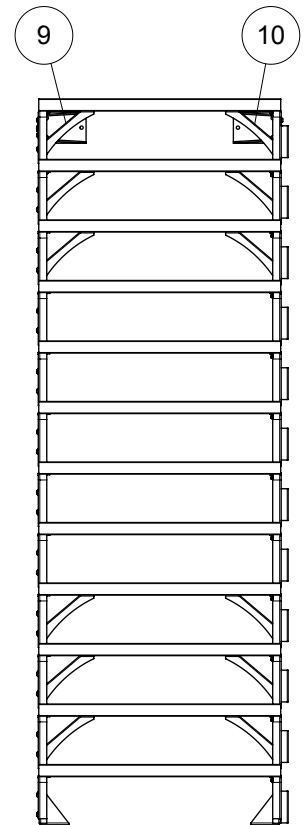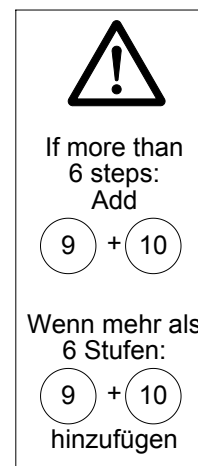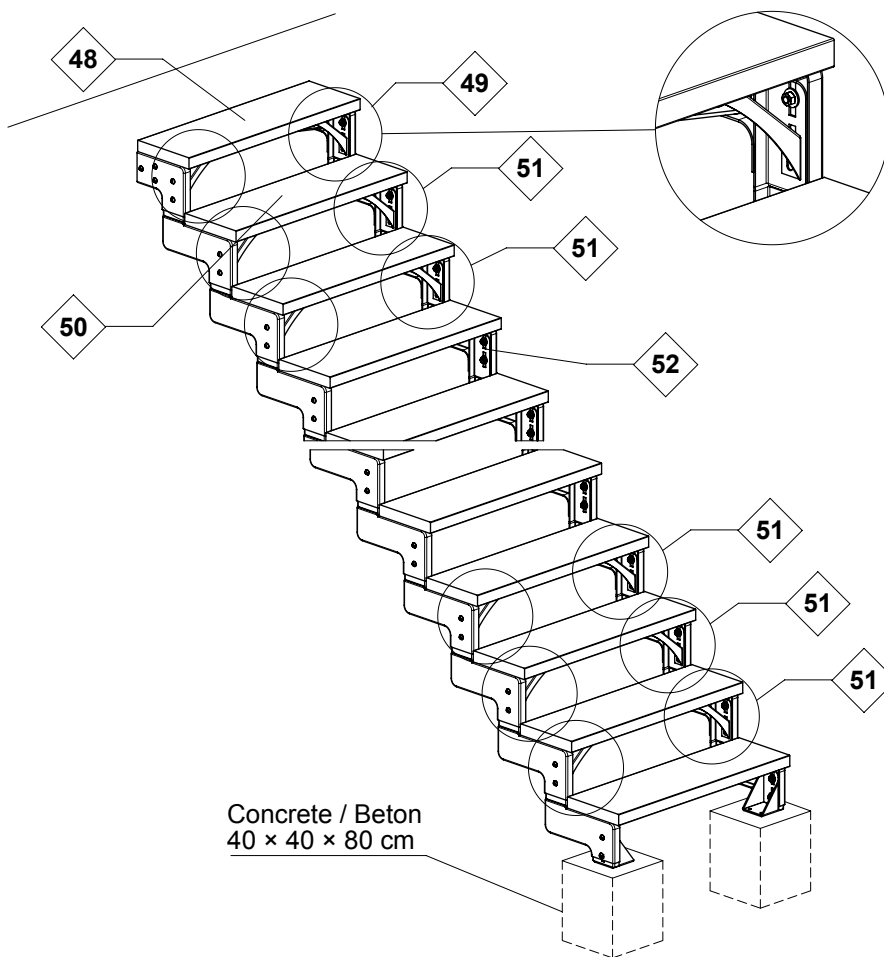

50


B

U
10 x
Ø6 x 35
Pan head Torx

59


51








B





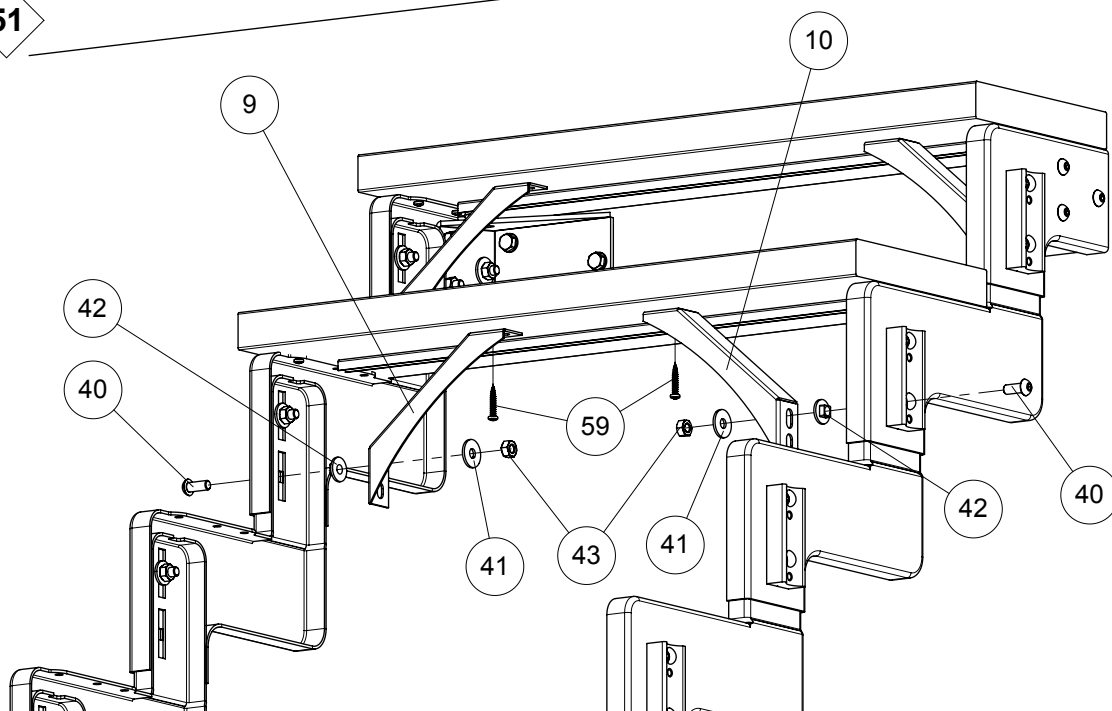


52

B

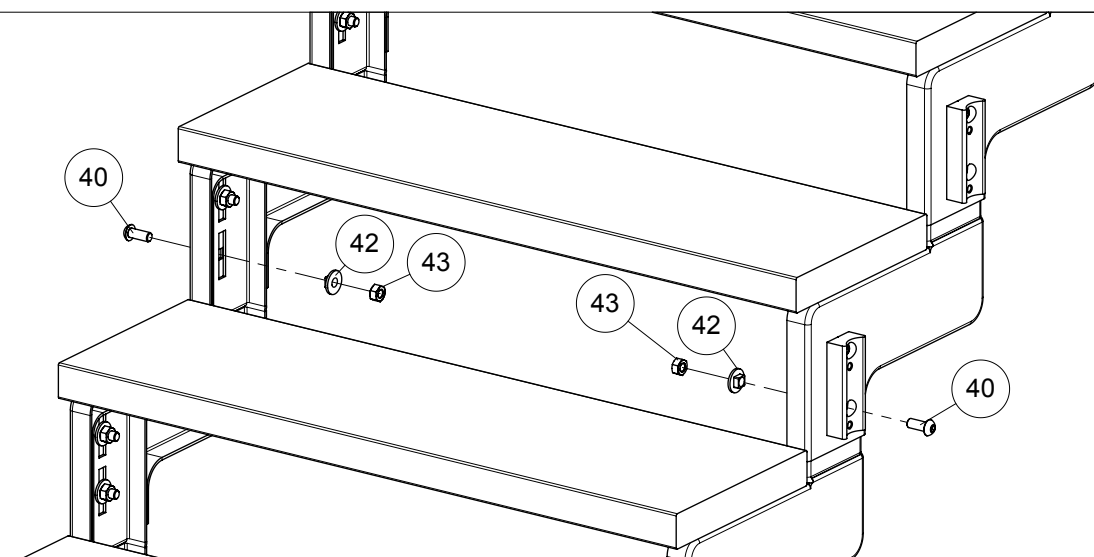

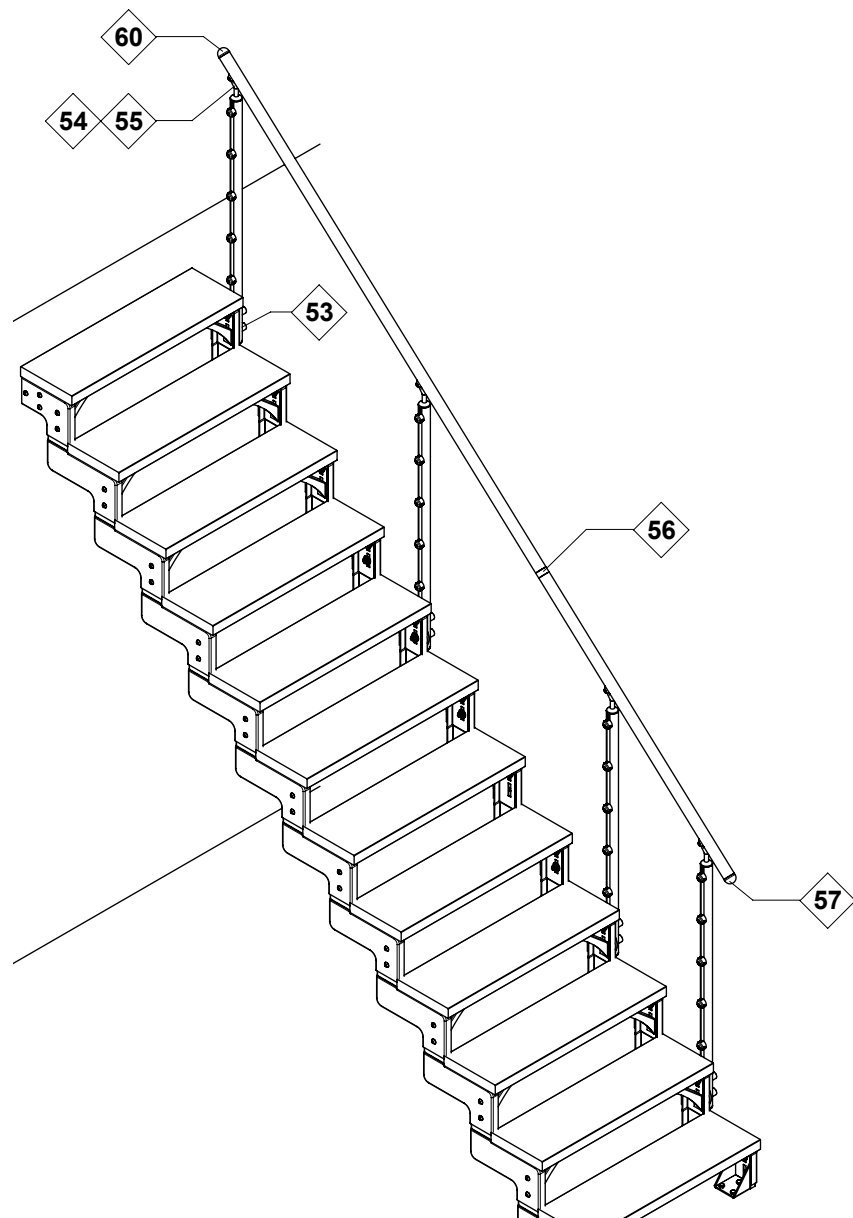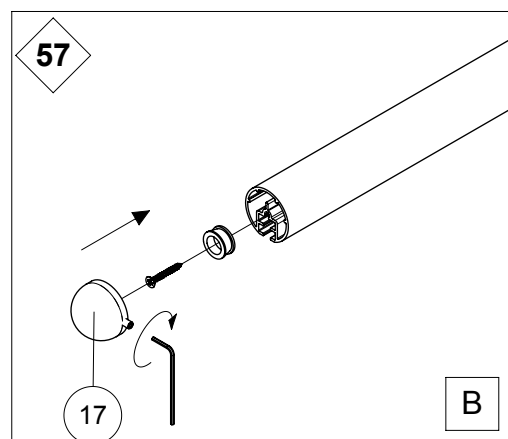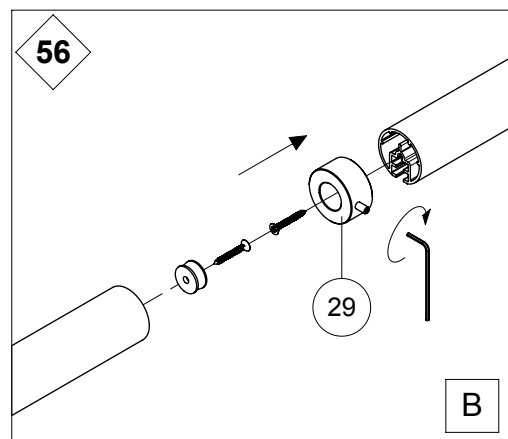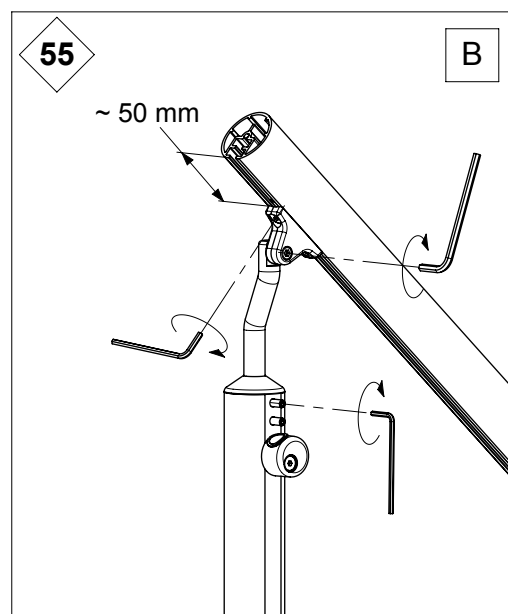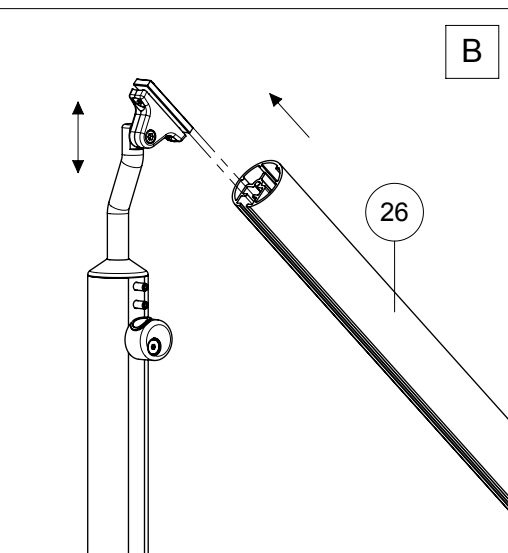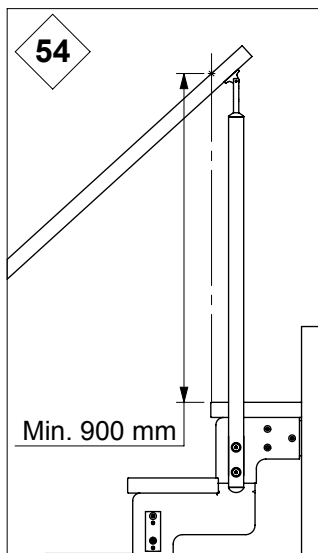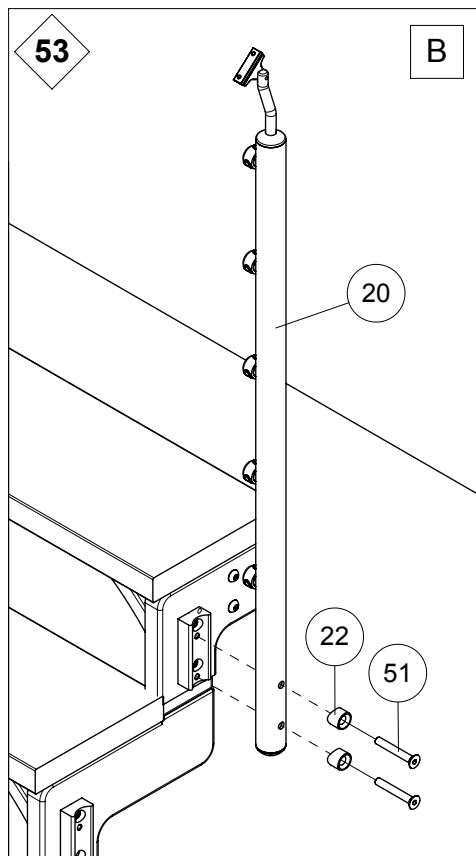


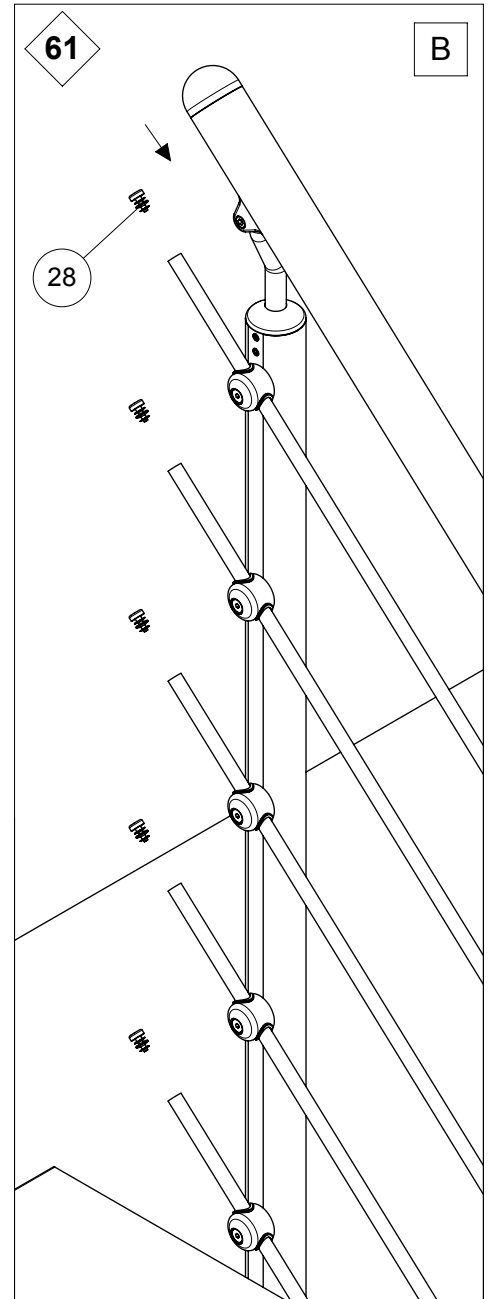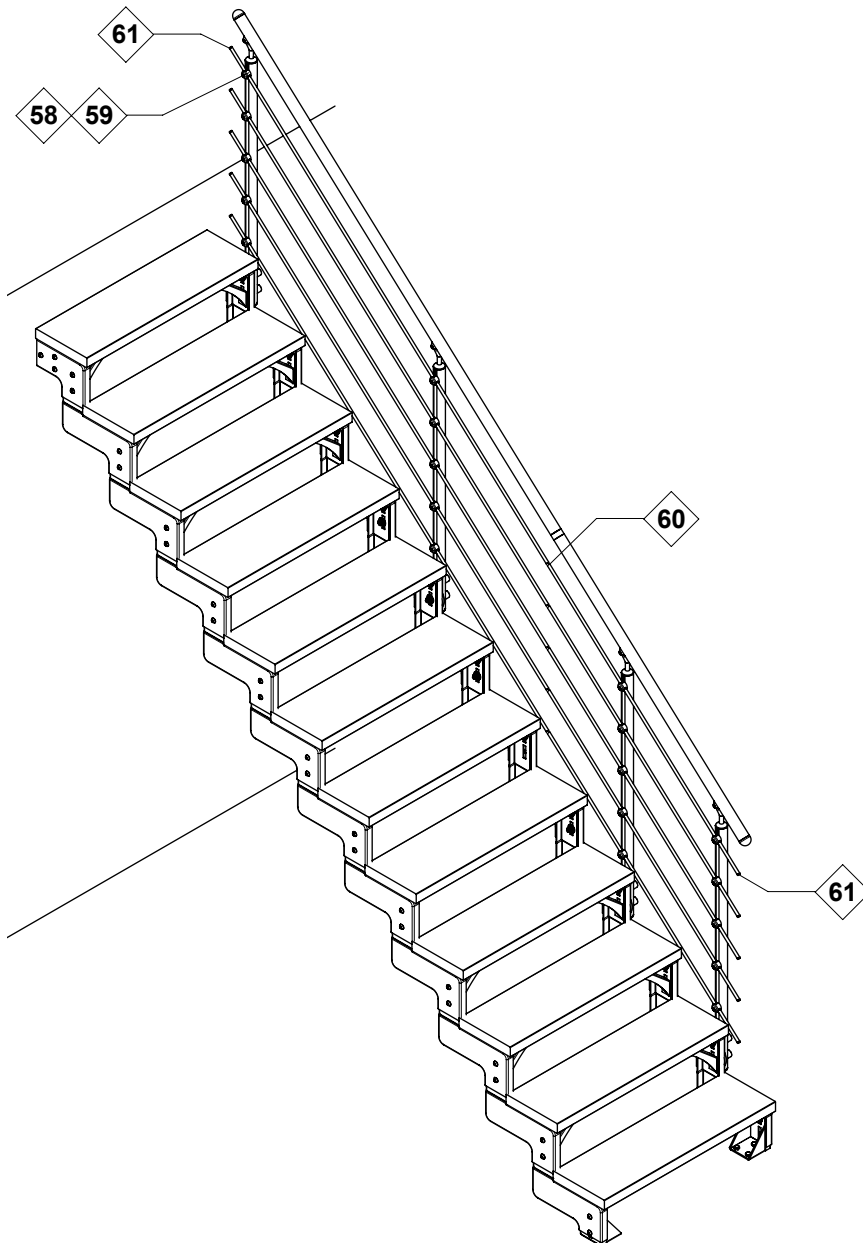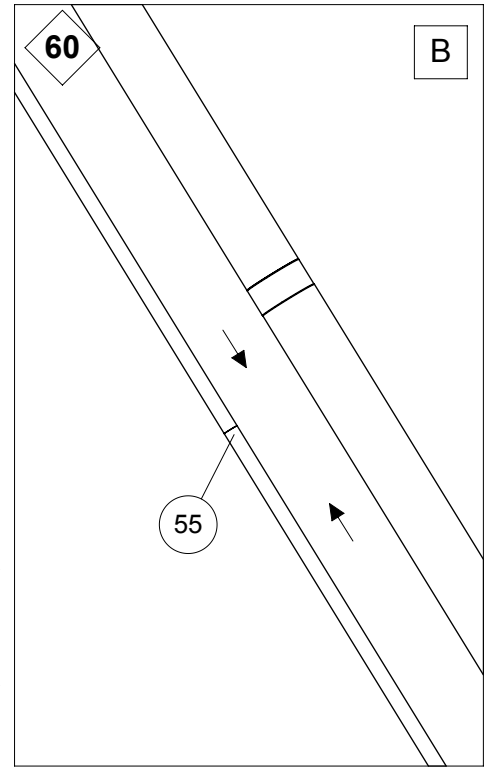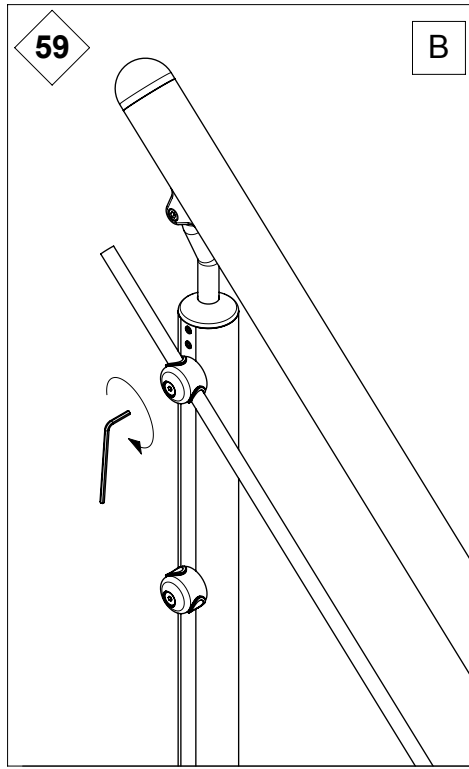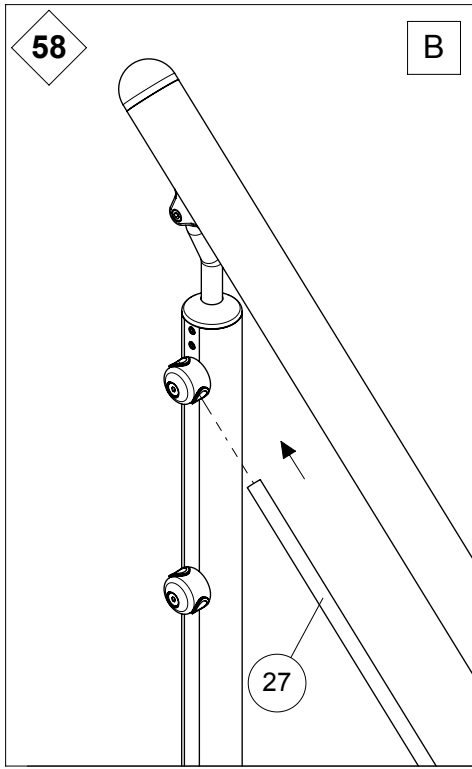



We recommend
using a support
column from 8
treads

Ab 8 Stufen
empfehlen wir eine
Abstützung der
Treppe

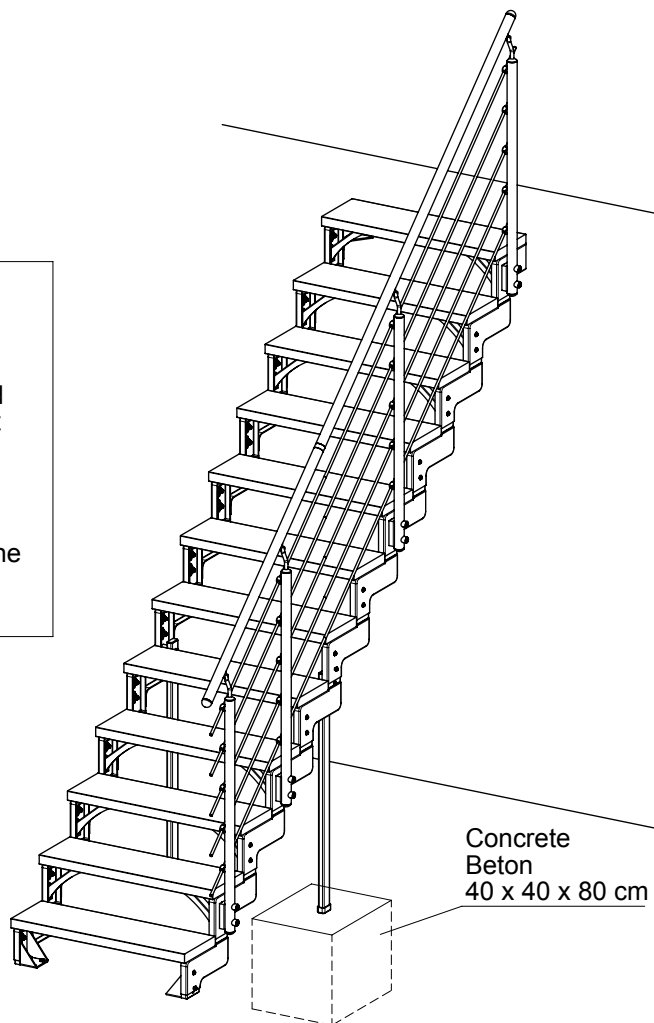

Concrete
Beton
40 x 40 x 80 cm