






600 mm      420 mm

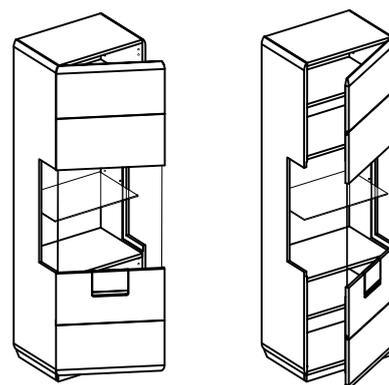

- |                                  |                              |
|----------------------------------|------------------------------|
| (D) Montageanleitung             | (GB) Assembly instructions   |
| (FR) Notice de montage           | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu      |
| (CZ) Montážní návod              | (SK) Návod na montáž         |
| (HU) Szerelési útmutató          | (RO) Instrucțiuni de montaj  |
| (TR) Montaj talimatları          | (RU) Инструкция по монтажу   |

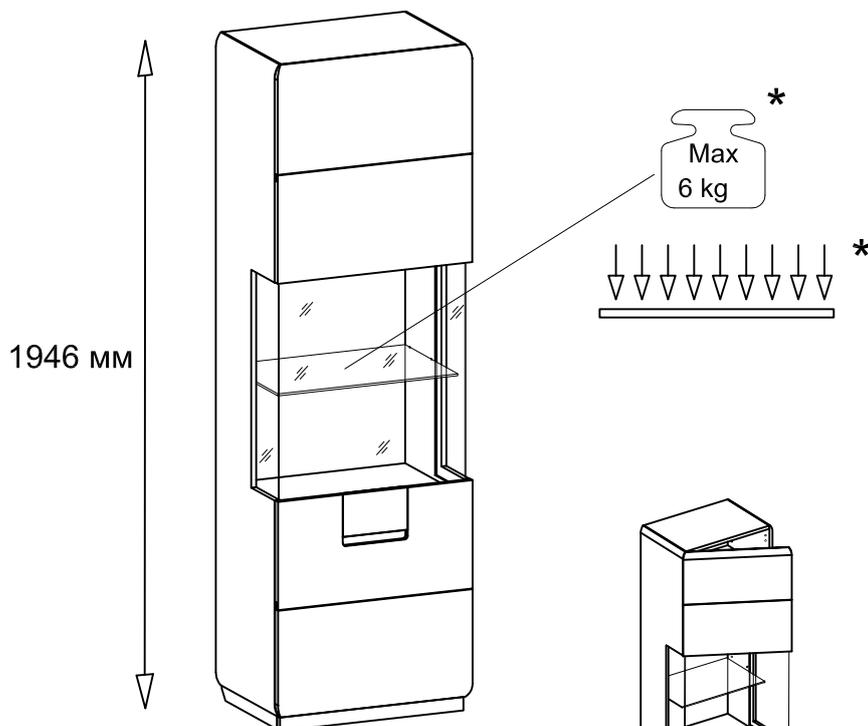





90 min

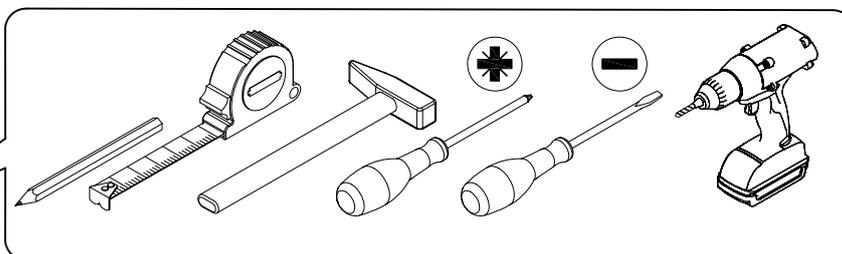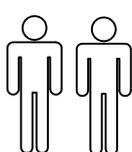

Name • Nom • Nome • Naam • Nazwa • Jaméno  
• Názov • Név • Denumire • Isim • Название







Nr. • No. • N° • Номер • Č • Sz



Тур • Type • Tip • Tipus • Тіро • Тип

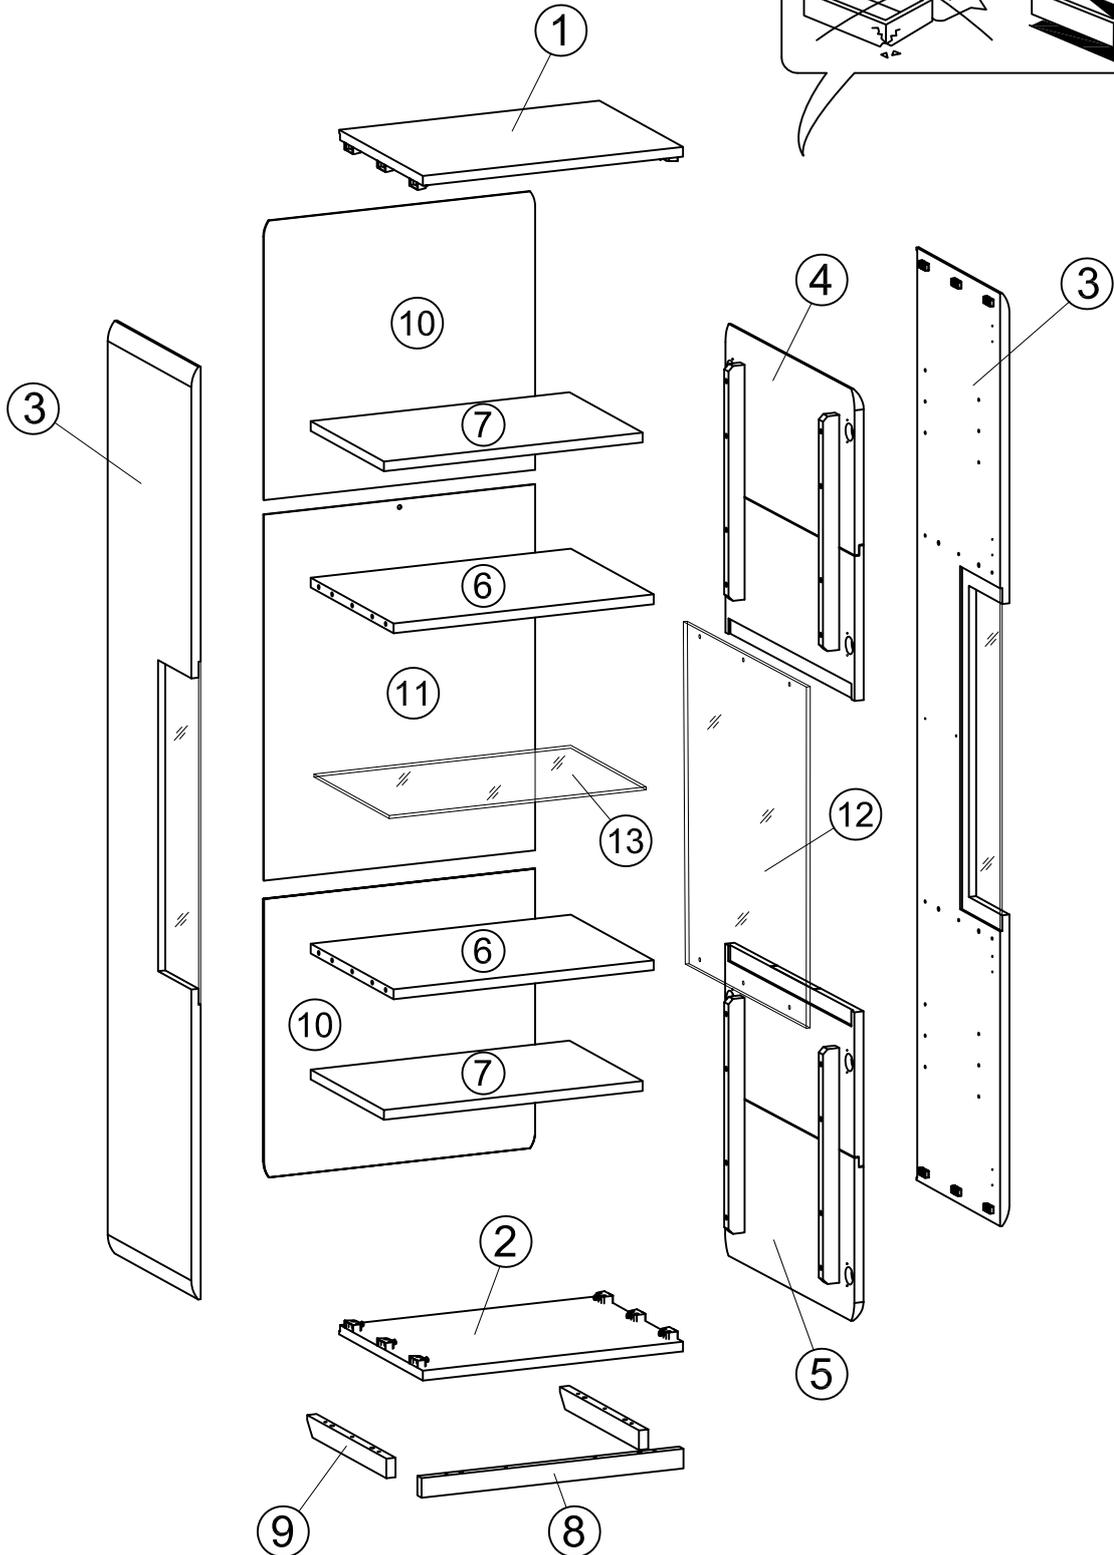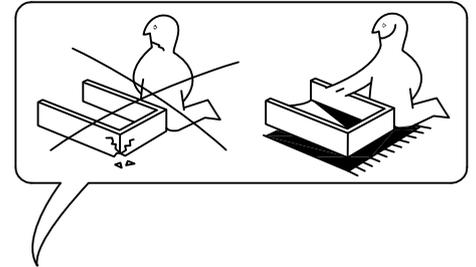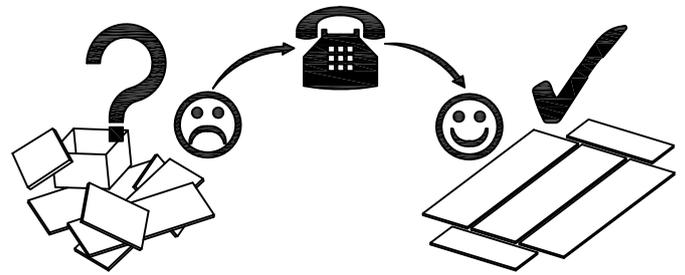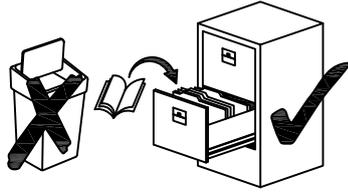


No	Size/MaB	Qty	✓
1	560x400x20	1	
2	560x400x20	1	
3	1906x400x20	2	
4	598x634x55	1	
5	598x634x55	1	
6	560x396x20	2	
7	557x350x20	2	
8	564x40x20	1	
9	378x40x20	2	
10	570x584x3.2	2	
11	748x584x3.2	1	
12	698x568x4	1	
13	553x360x6	1	

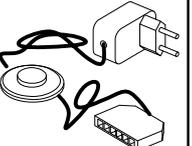


C11a x12 	C11b x12 	J14 x48 4x25 	K1 x14 Ø8x35 	J6 x10 4x50 	R1 x5 	J2 x18 4x16 
M1 x4 	L1 x4 	B1 x12 	C1 x12 Ø15 	J1 x10 3.5x16 	J8 x4 	S5 x1 
S4 x1 	P1 x1 	G1 x1 	V1 x1 	Z2 x8 	J9 x36 2x20 	W1 x8 
Q2 x6 						

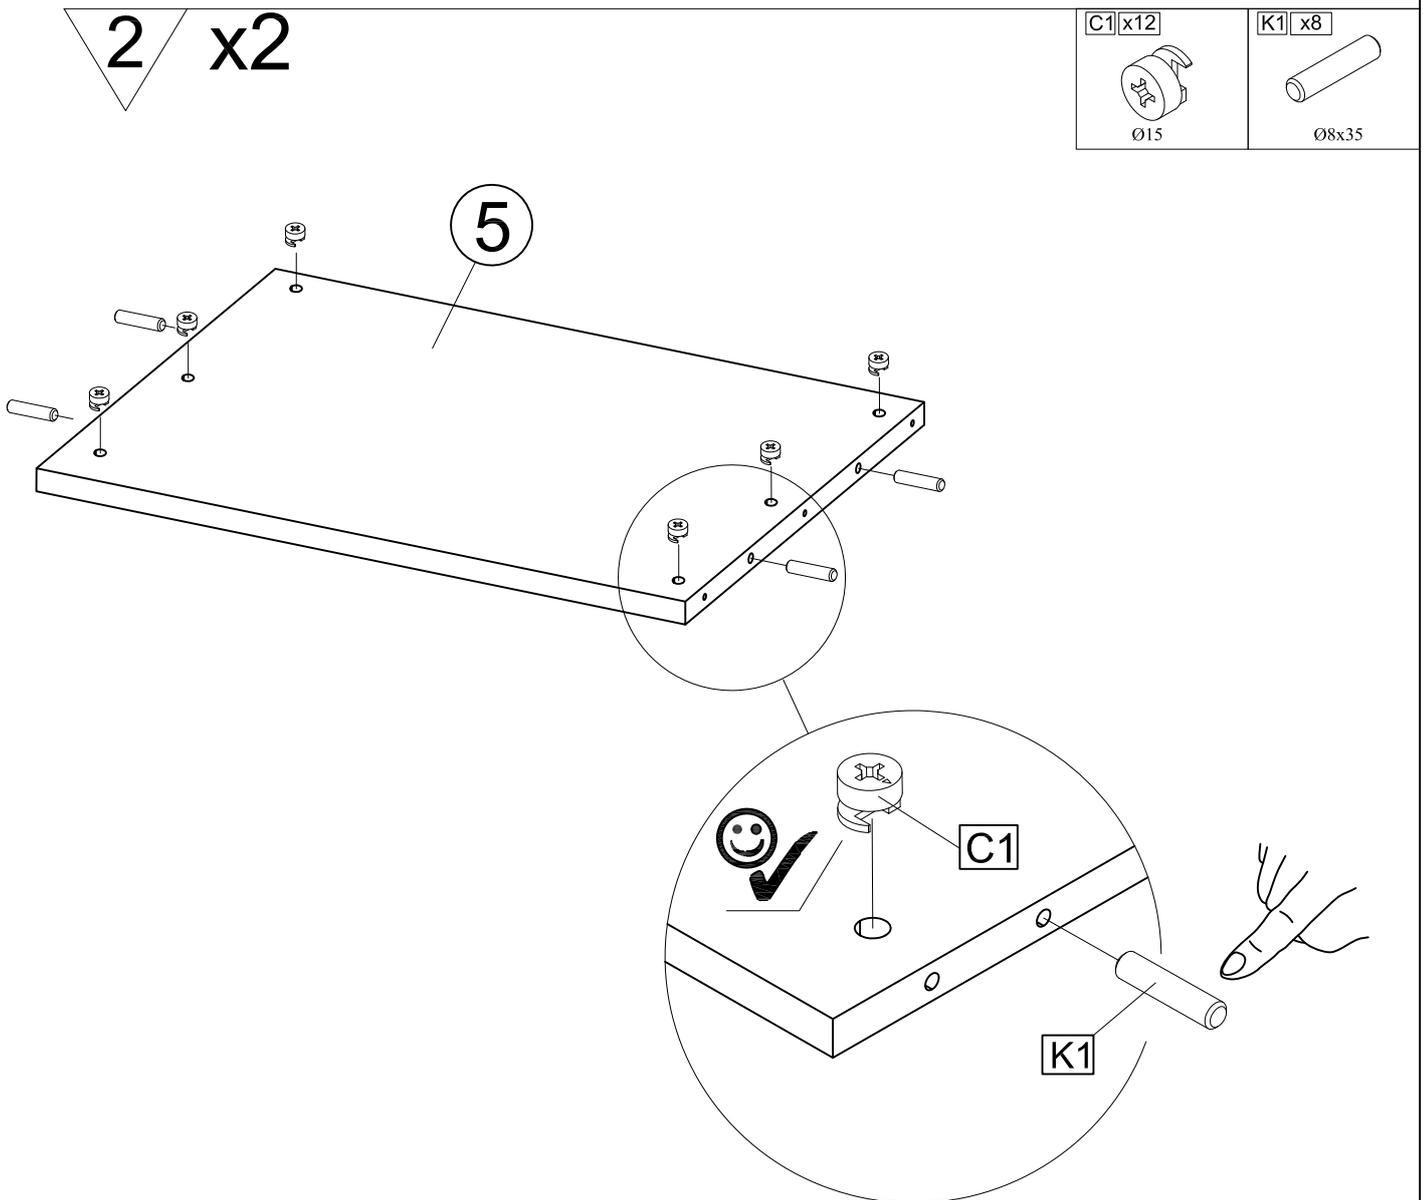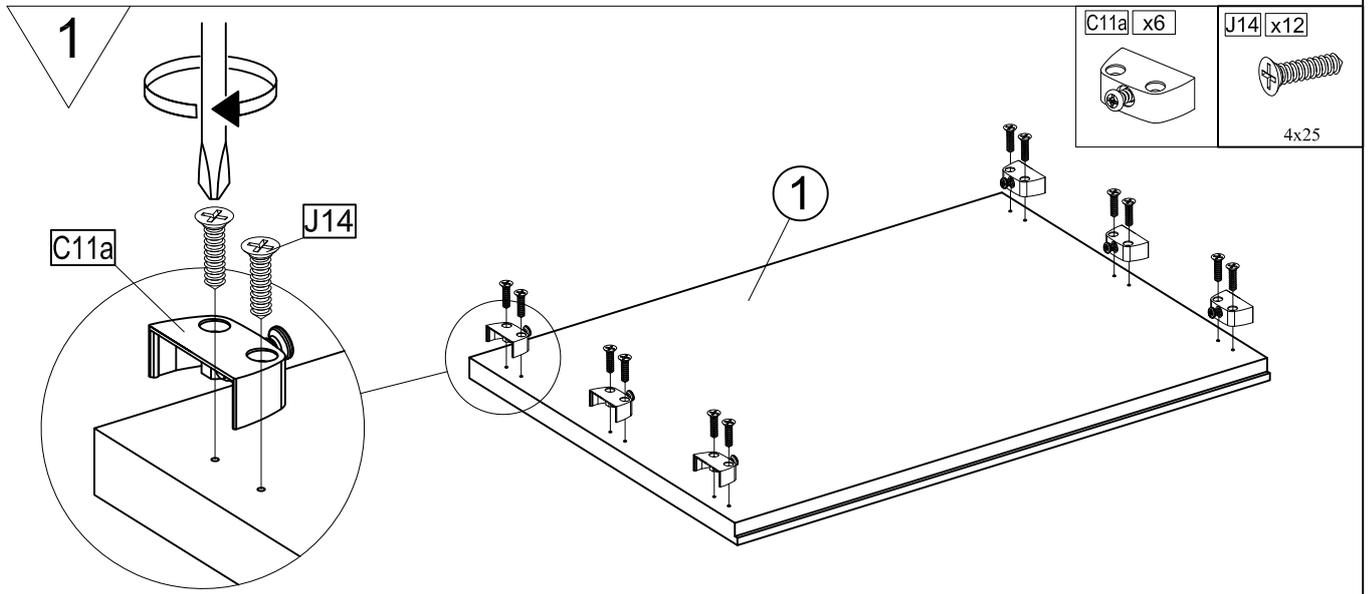

3

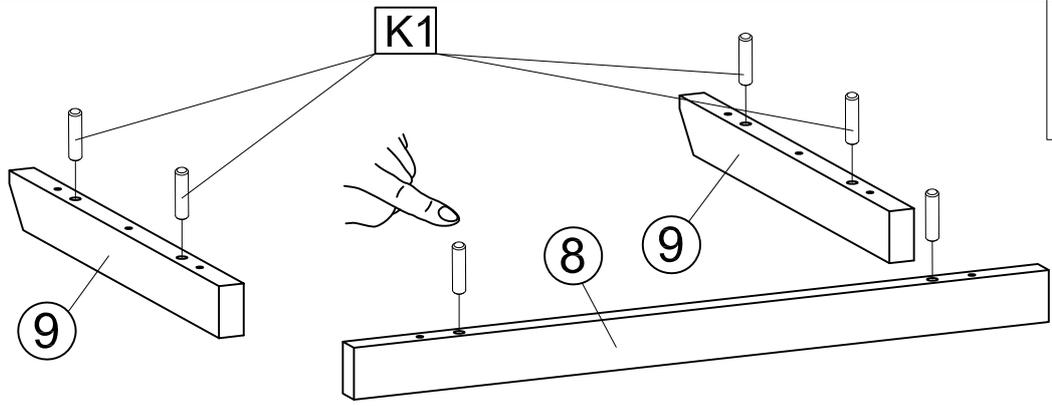


4

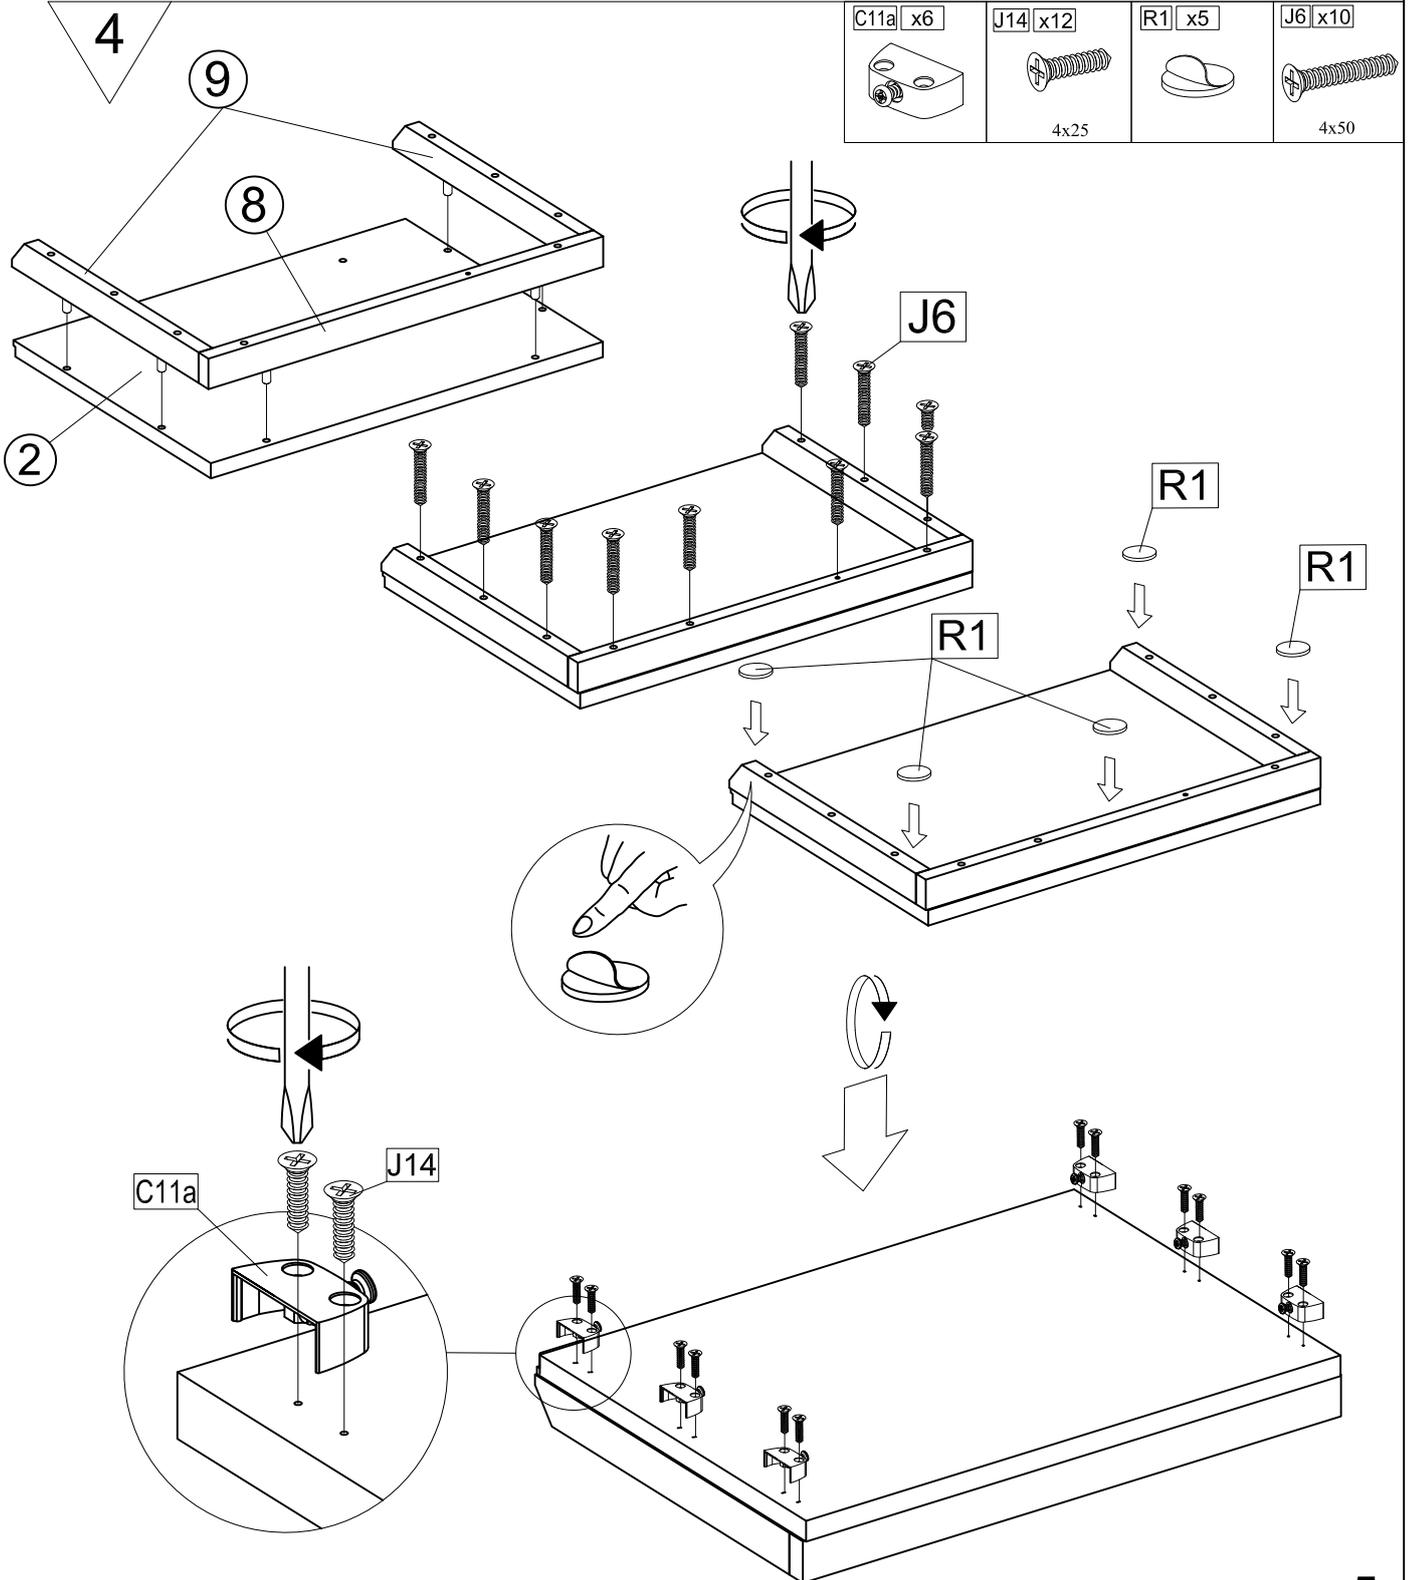

5


5

J1 x2  3.5x16	C11b x6 	J14 x12  4x25	J8 x2 	B1 x6 	L1 x4 	J2 x8  4x16
--	--	--	---	--	--	--





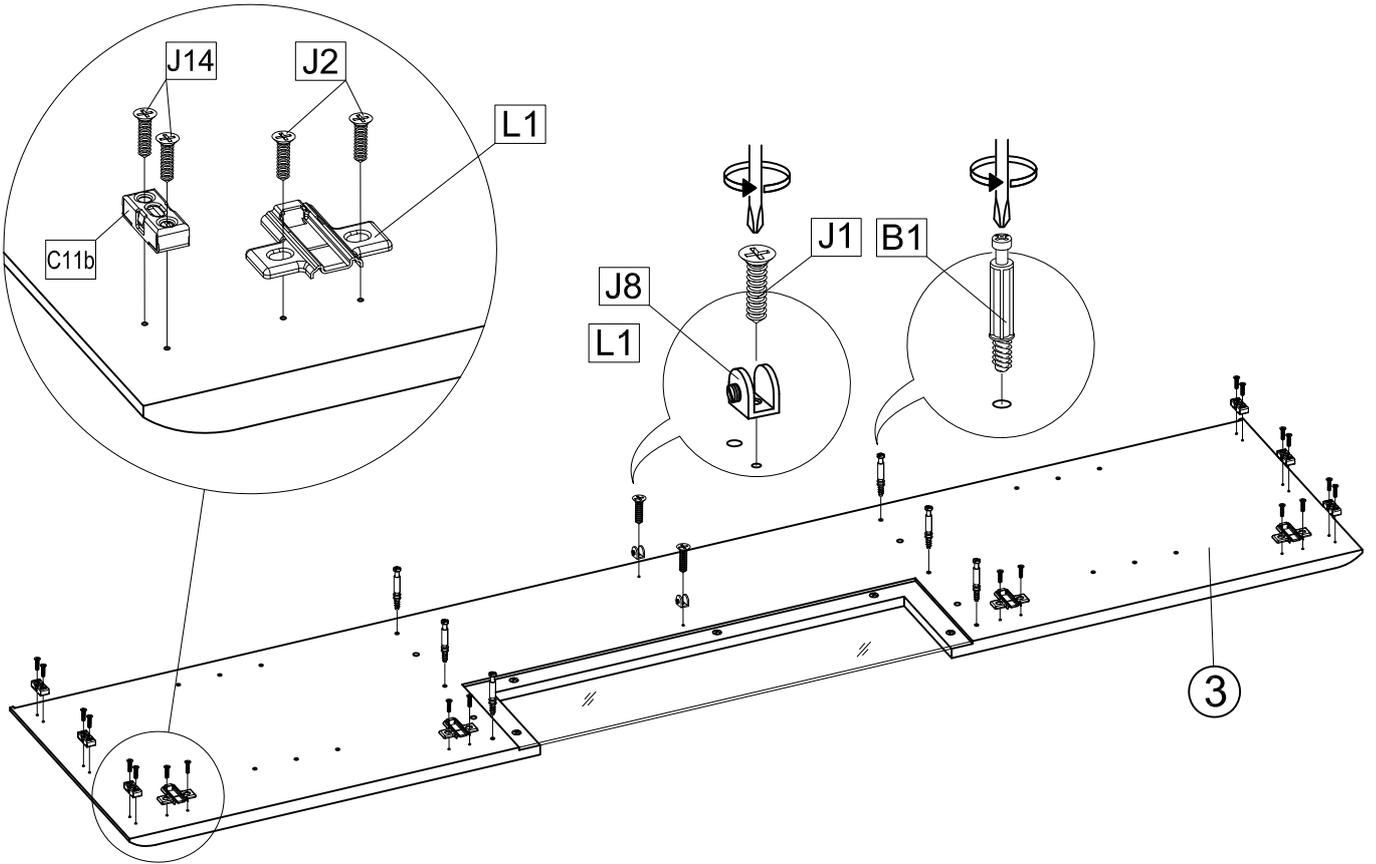


6







C11b x6 	J48 x12  4x25	J1 x2  3.5x16	J8 x2 	B1 x6 
--	--	--	--	--

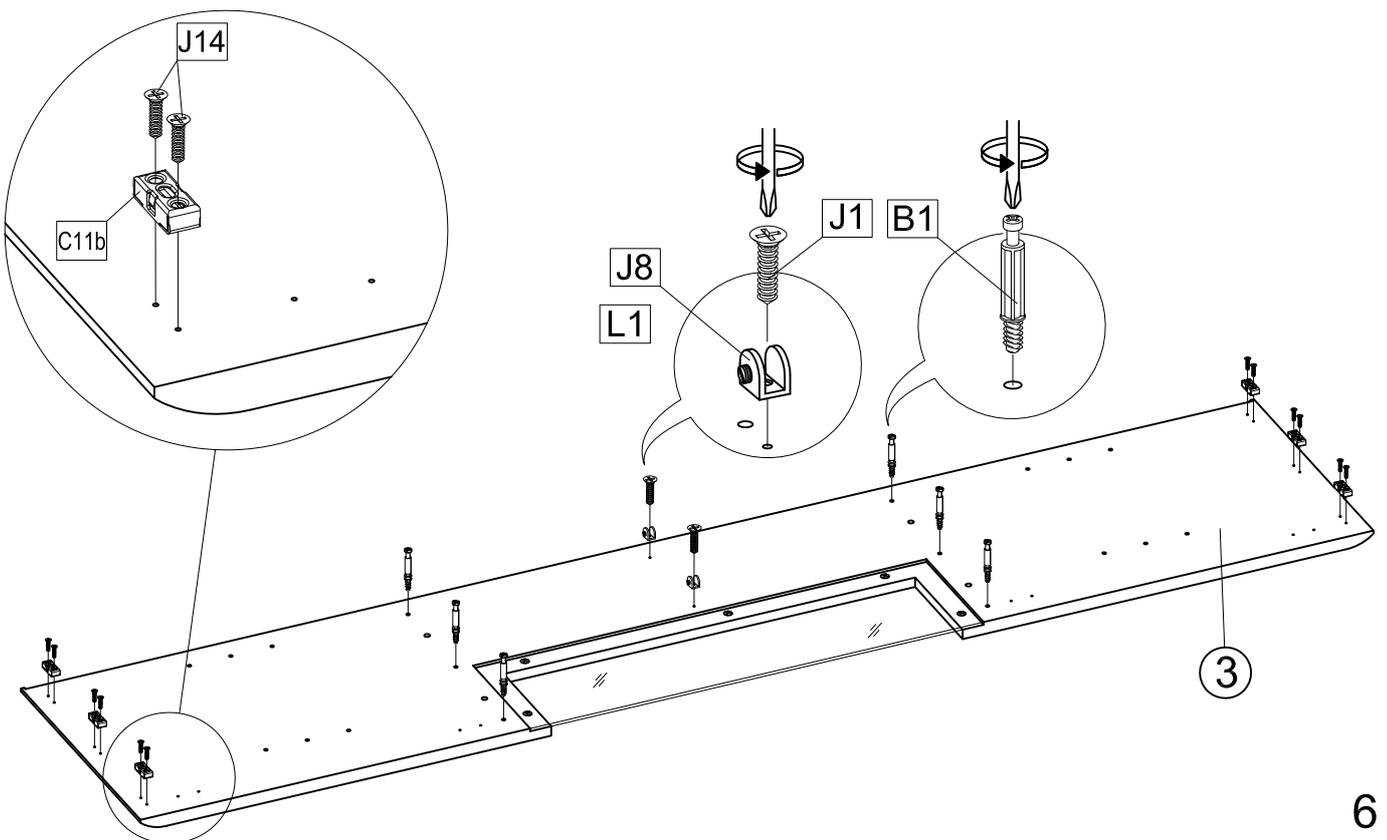





7

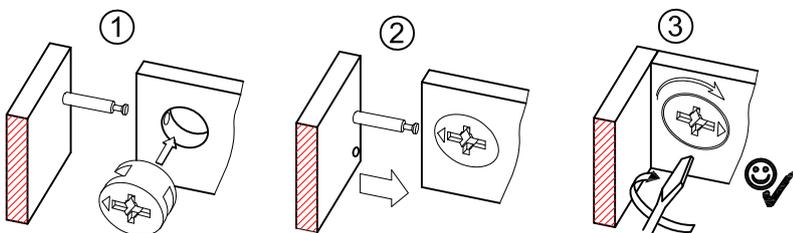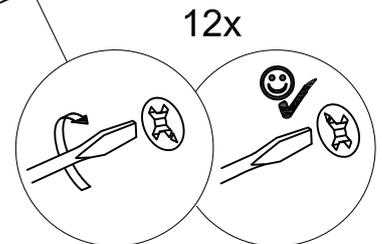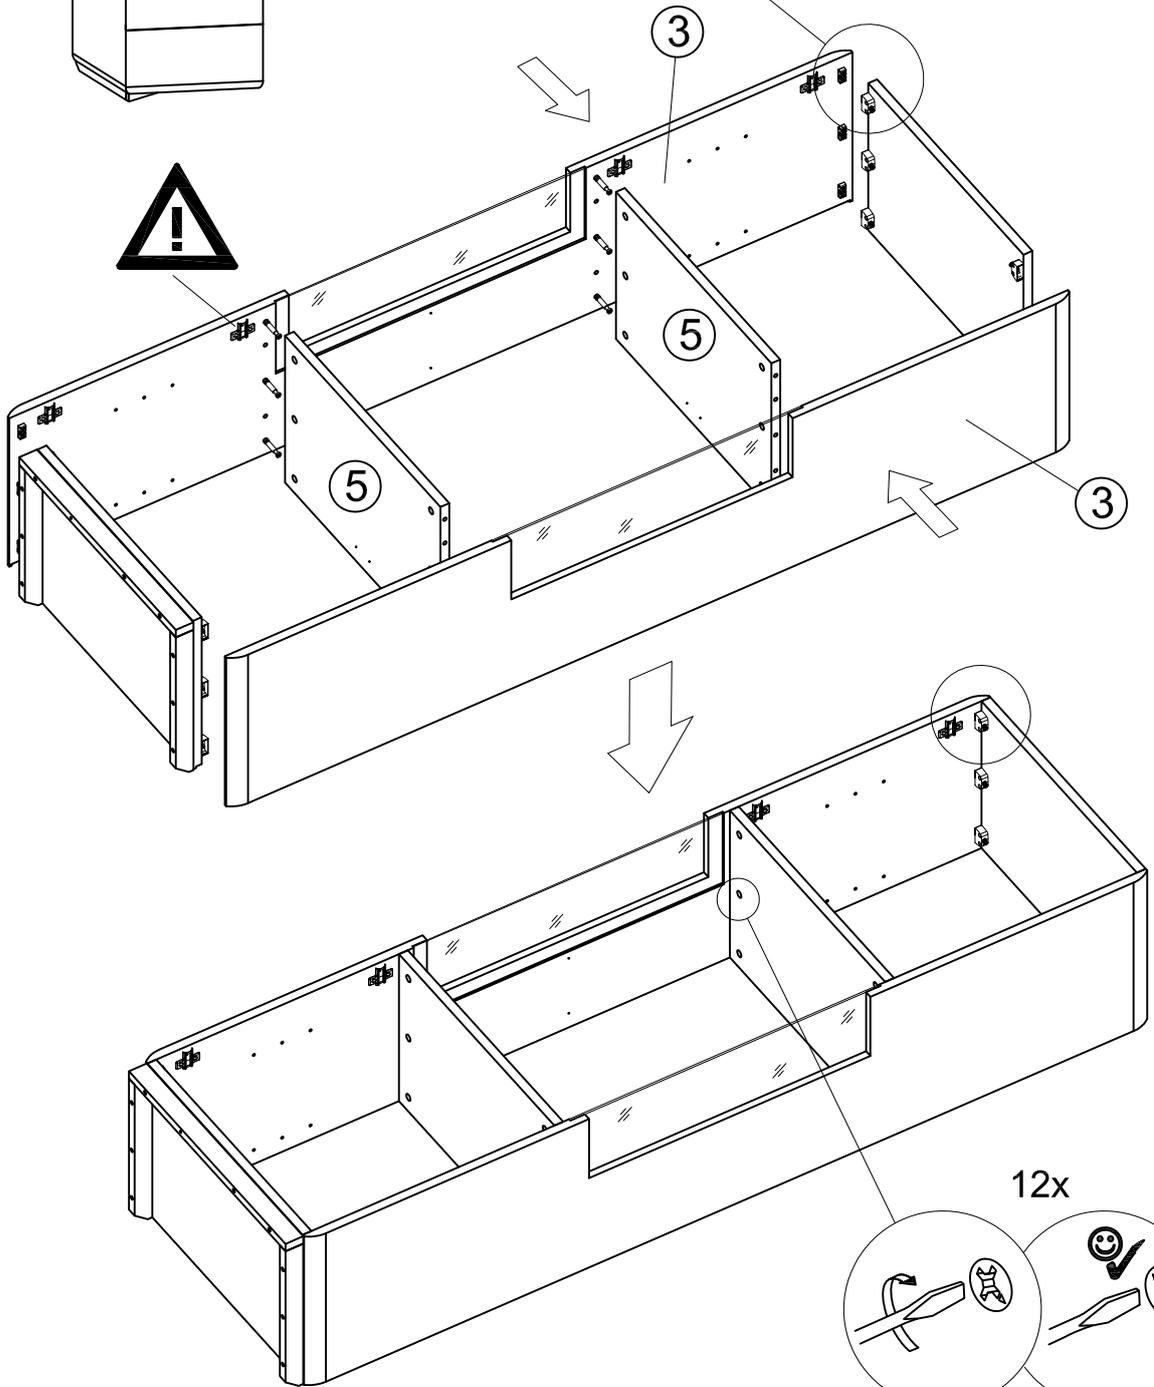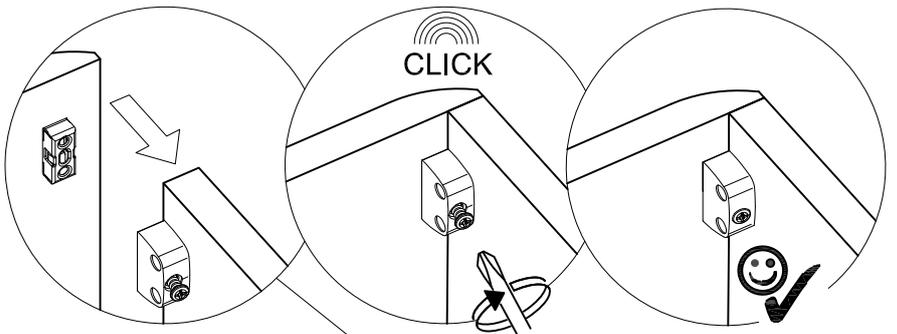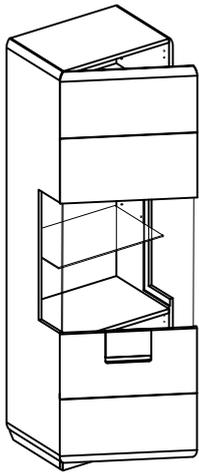


8

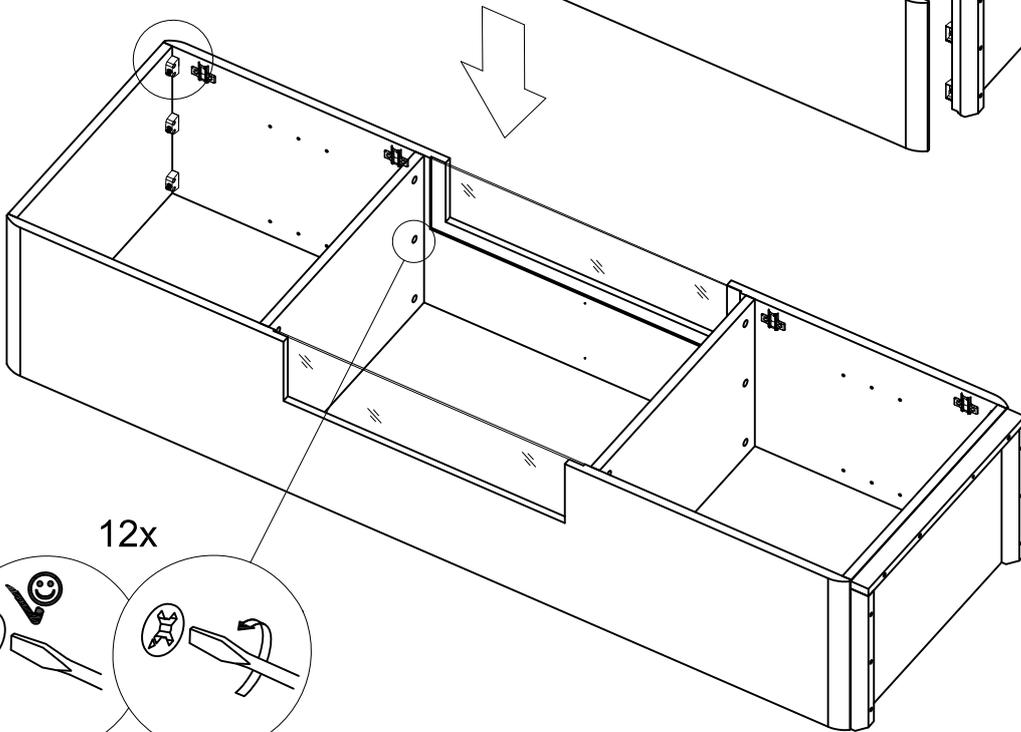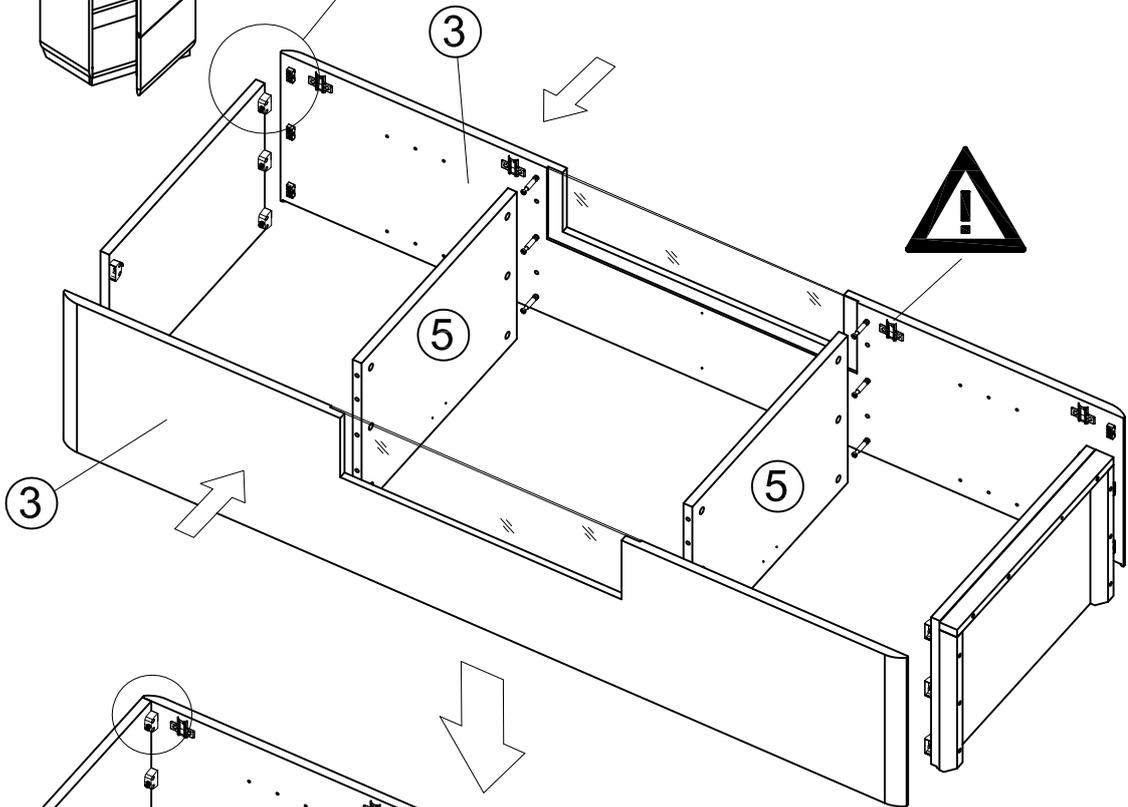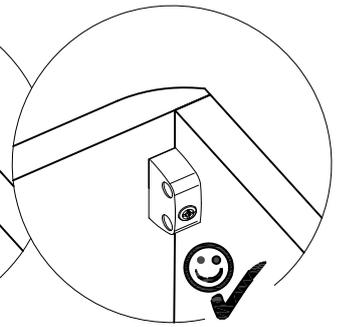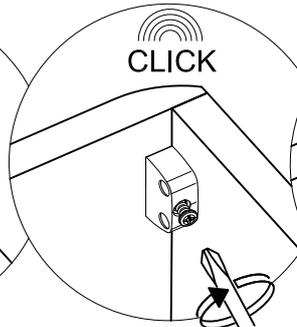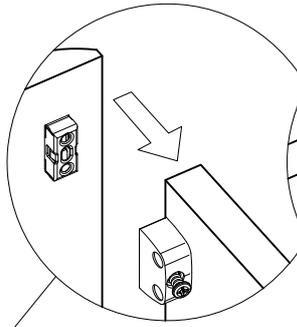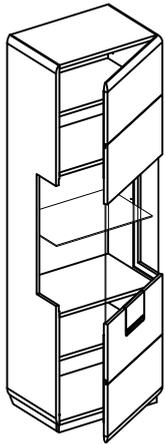

12x

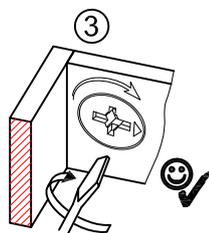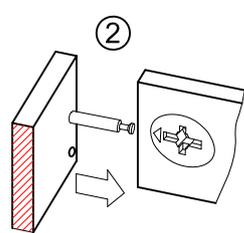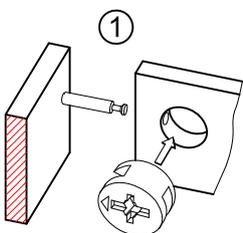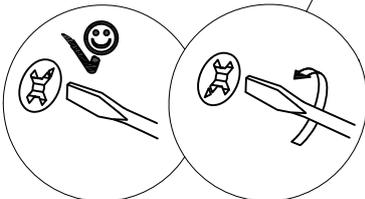

9

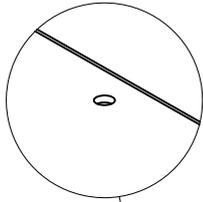


W1 x8




J9 x36



2x20

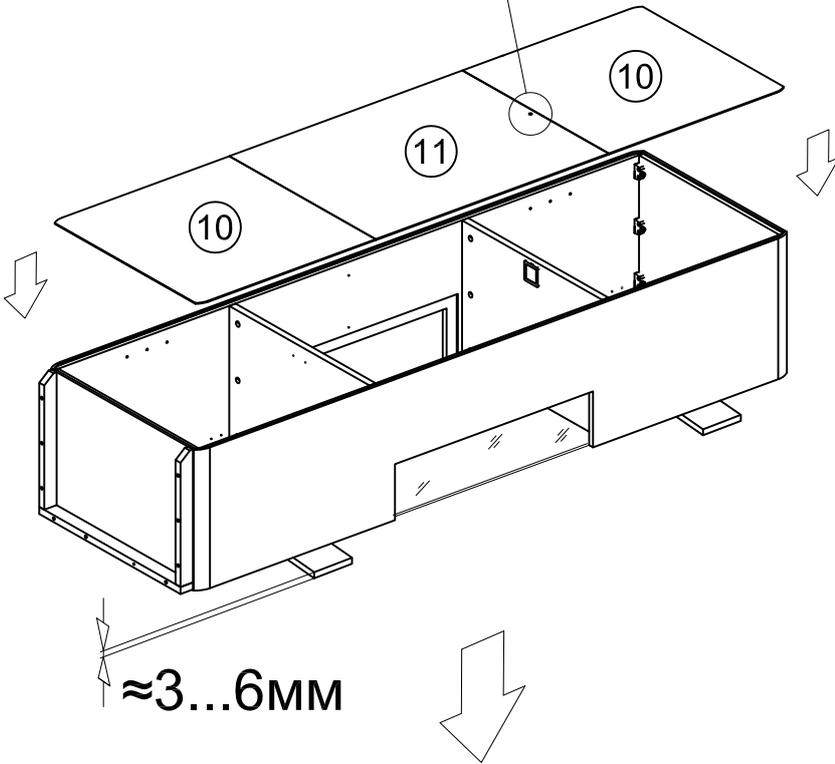

≈3...6MM


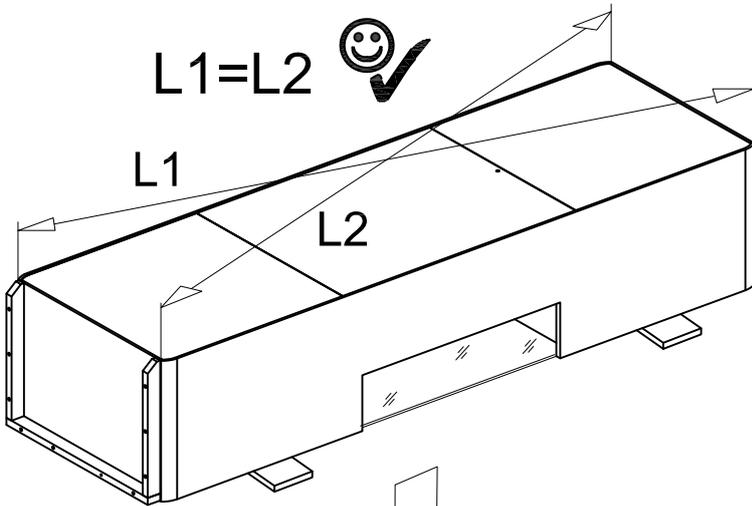


L1=L2



L1





L2

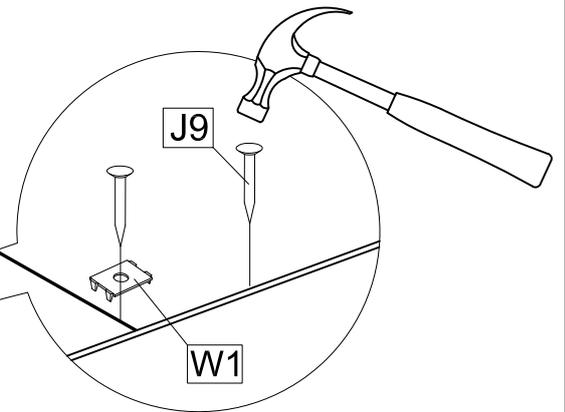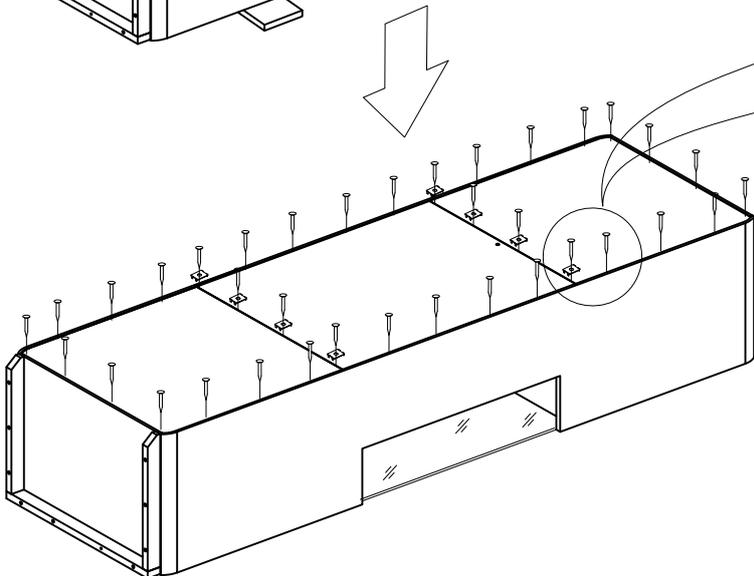



J9


W1




10

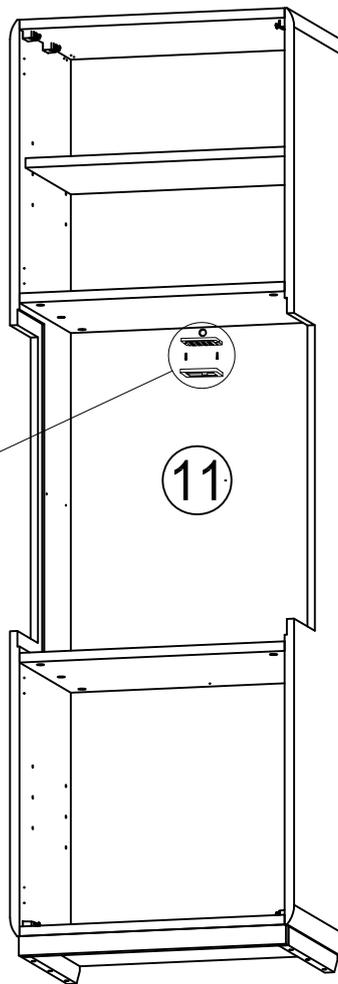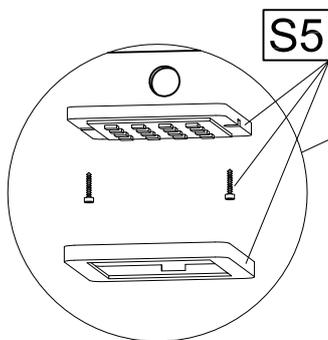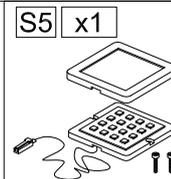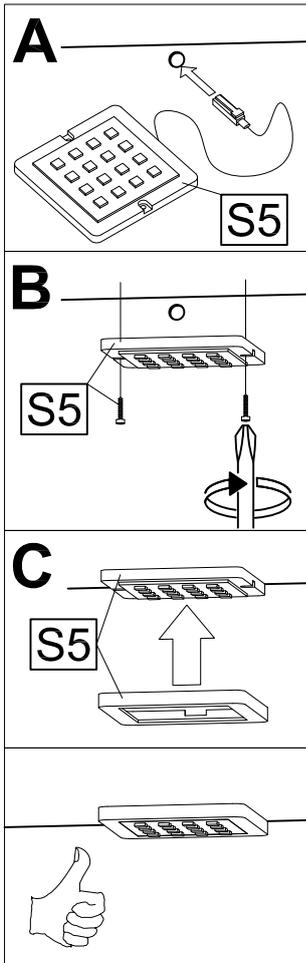

10

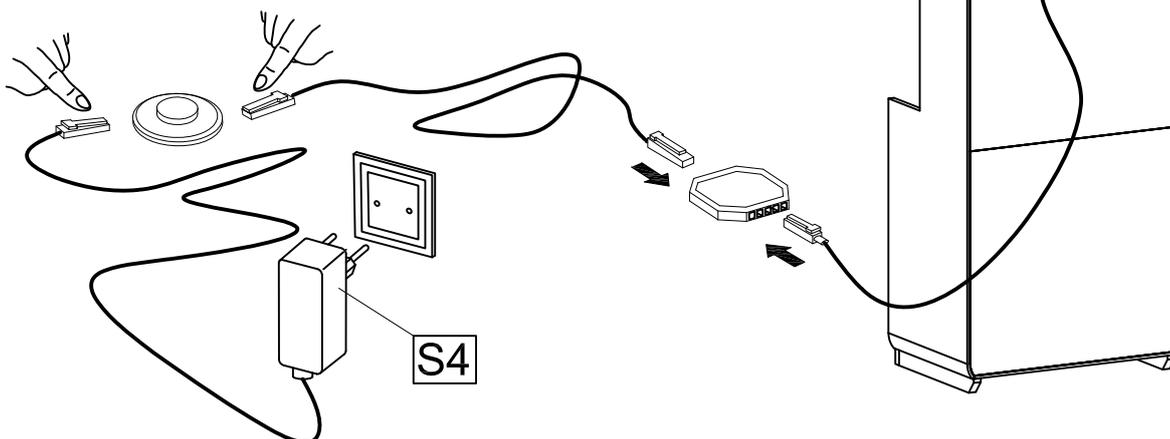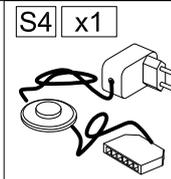


J2 x8	Q2 x6	J1 x6	M1 x4
			
4x16		3.5x16	




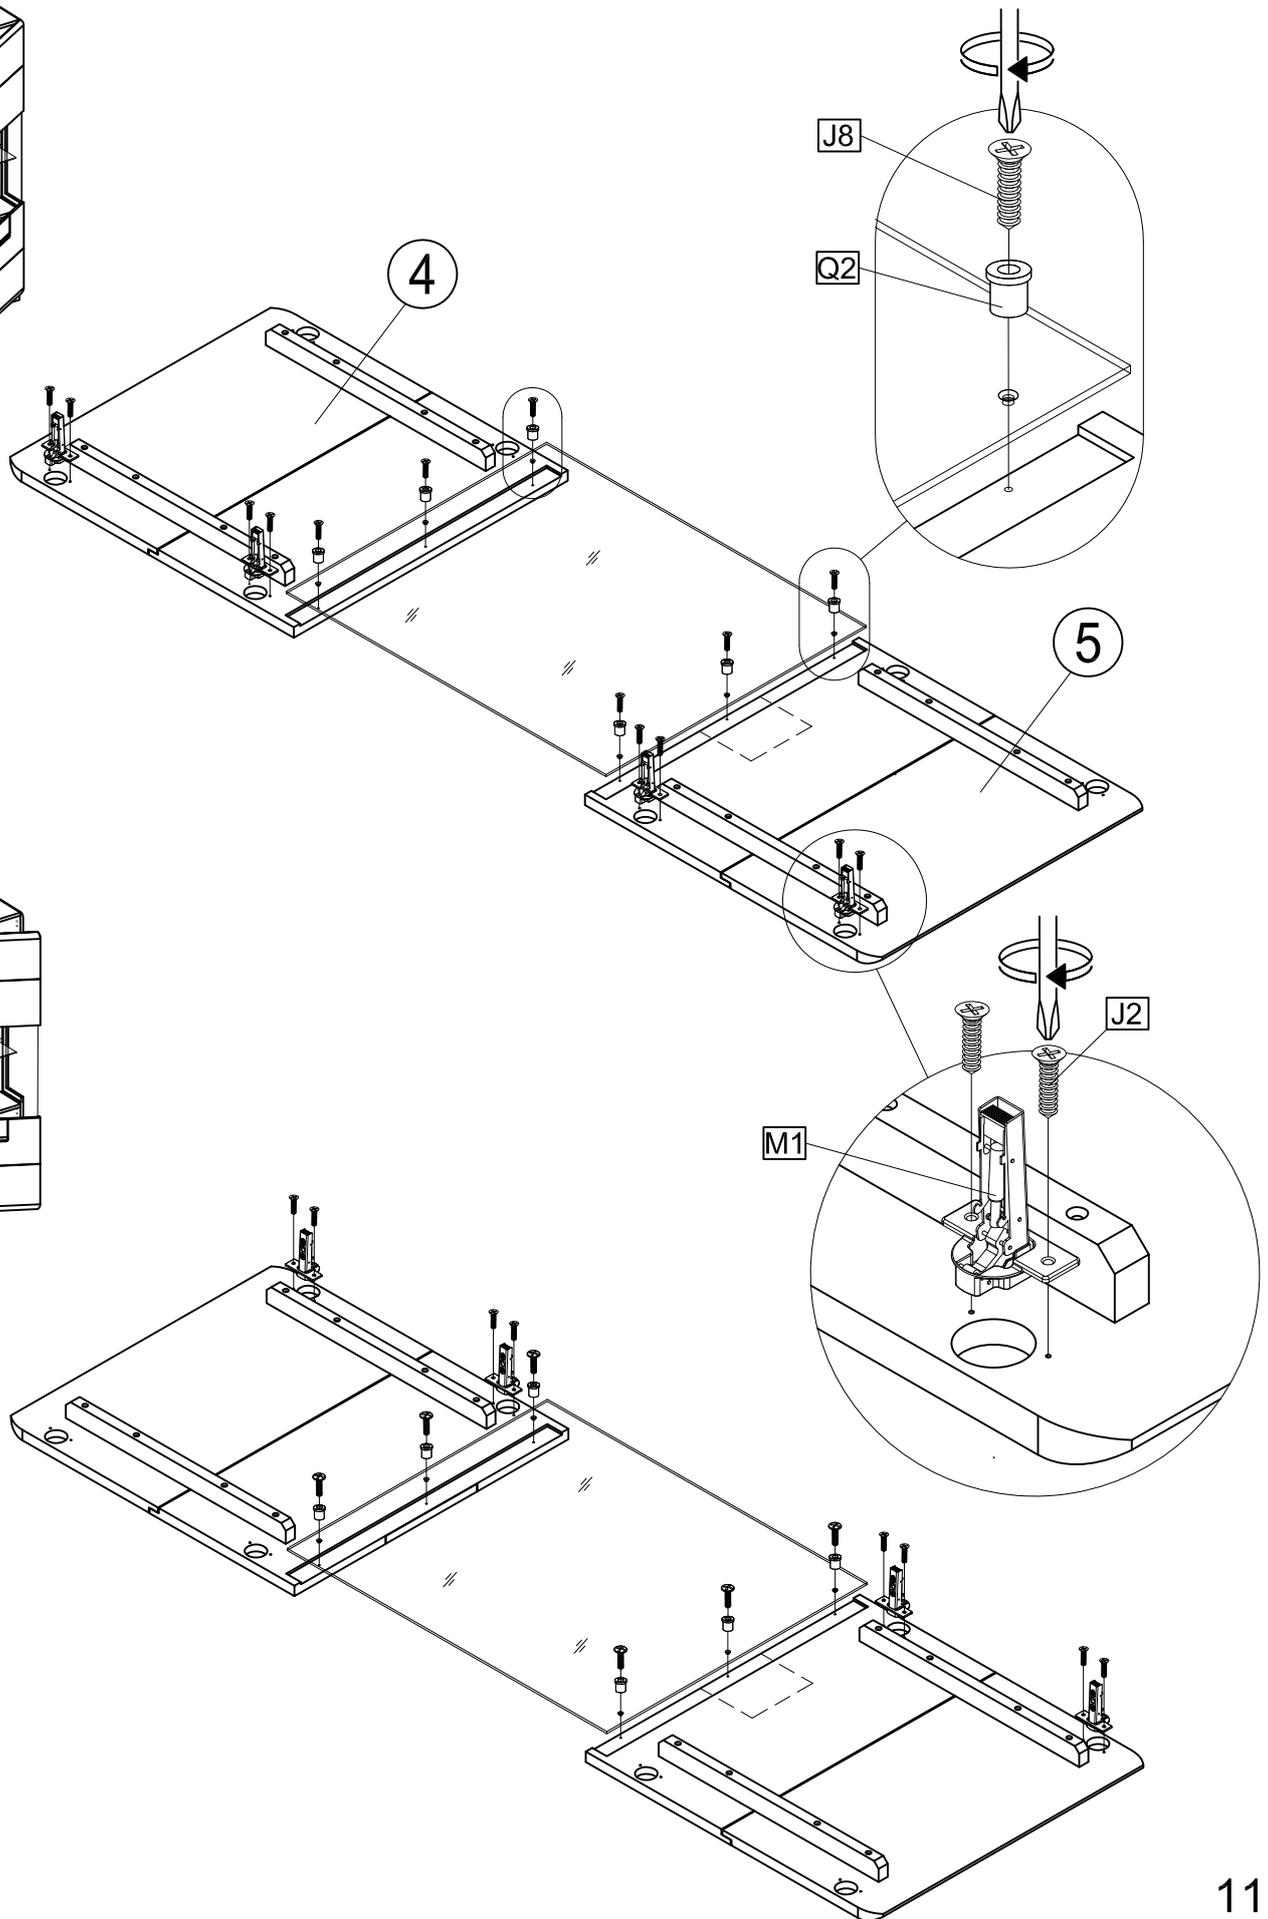
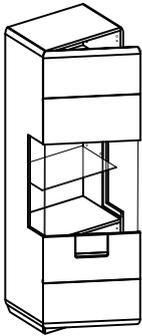
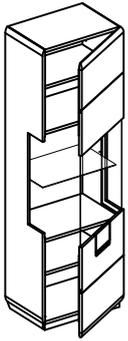


12

Z2 x8





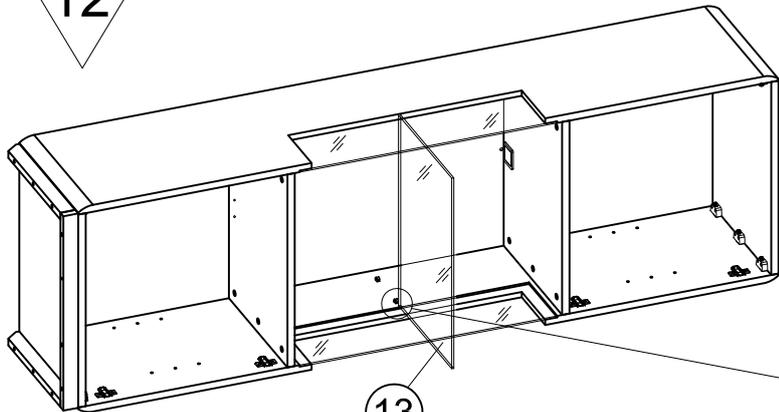


13



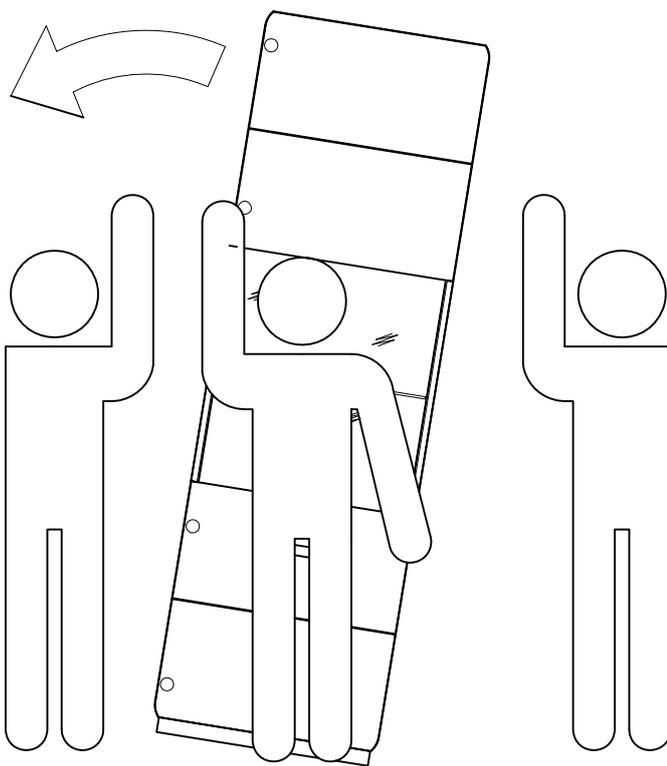
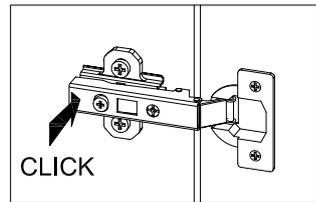
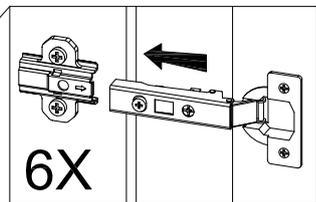
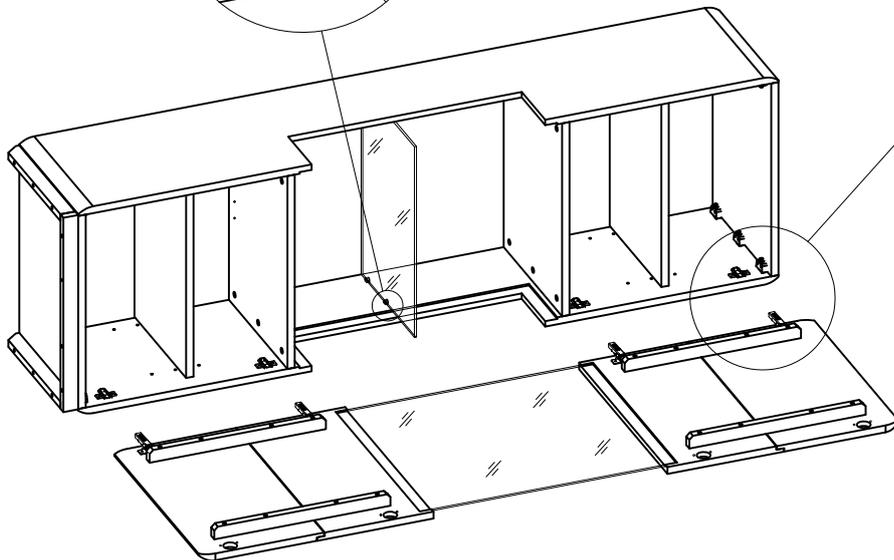
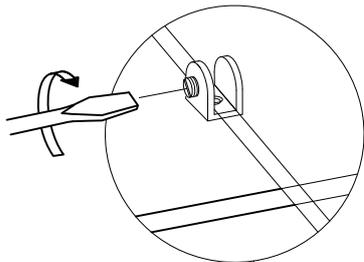
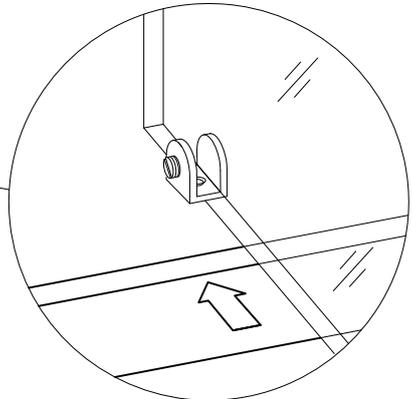




Z1

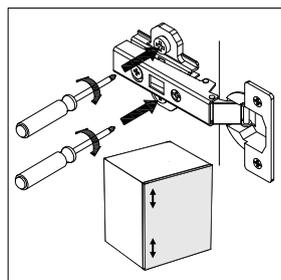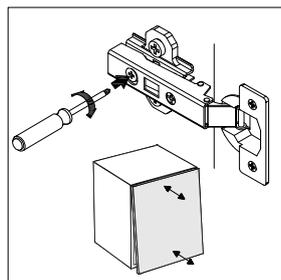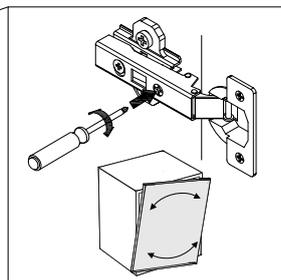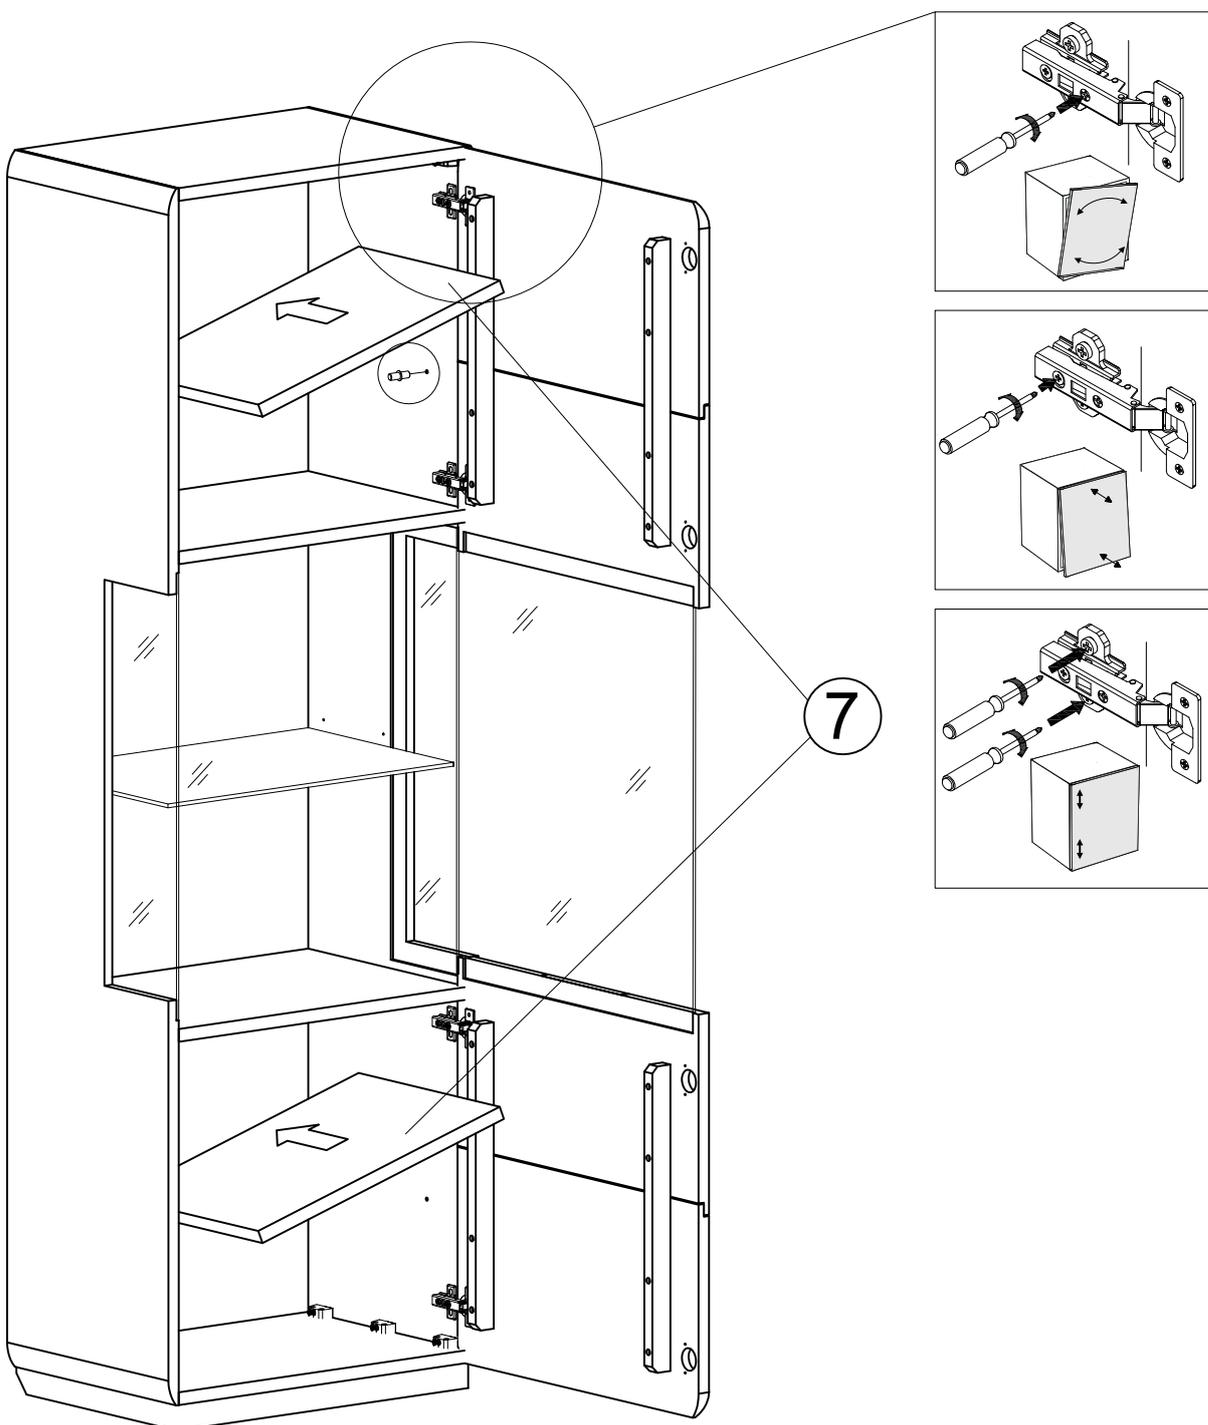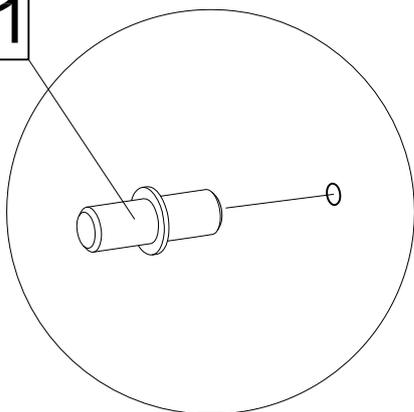

7

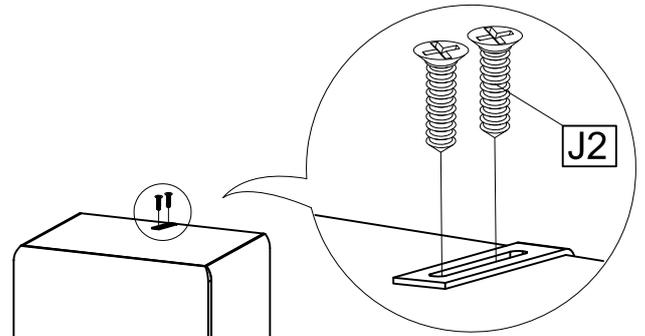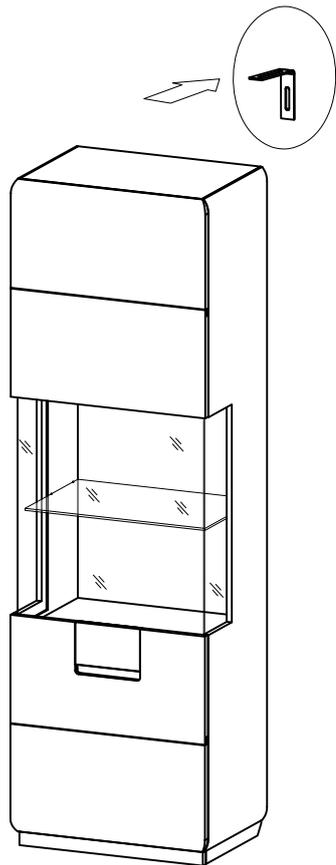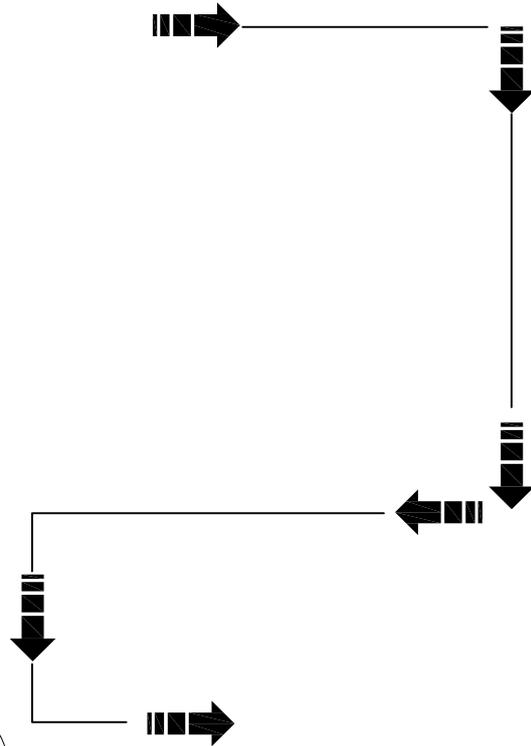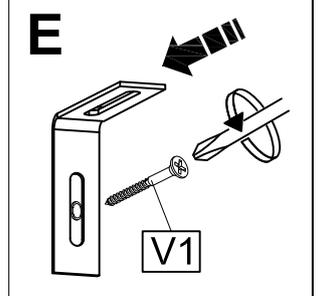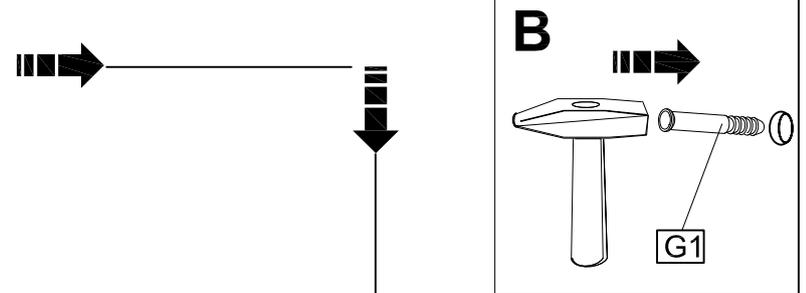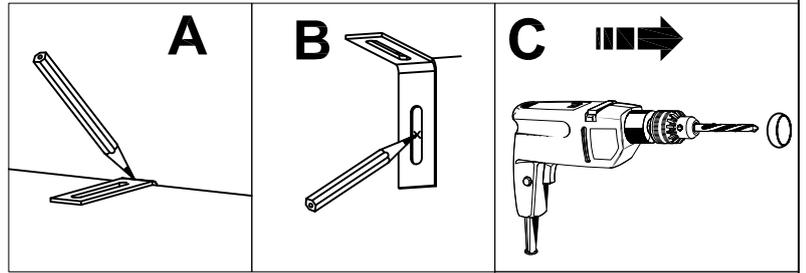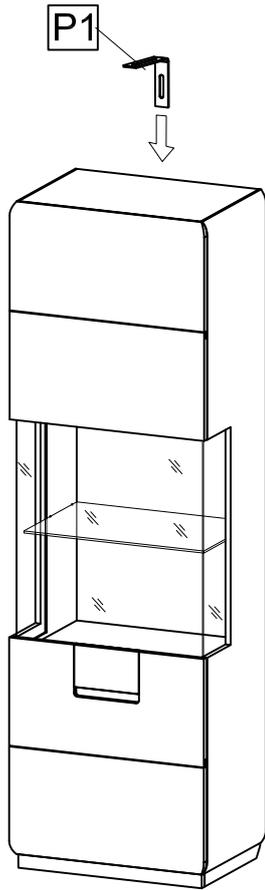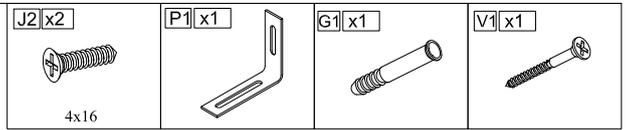



Achtung • Attention • Attenzione  
Opgelet • Uwaga • Pozor • Figyelem  
Atenție • Dikkat • Внимание



(D)	Wandbefestigung dient als Kippschutz - unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping - be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
(FR)	La fixation murale sert de protection contre le basculement - à installer impérativement ! Pour certains types de murs il faut des chevilles spéciales !
(IT)	Il fissaggio alla parete serve da protezione anti-ribaltamento - attaccarla assolutamente! Per alcune strutture di parete può essere necessario un tassello speciale!
(NL)	Bevestiging aan de muur dient als kantelbescherming - zeker en vast bevestigen! Bij enkele muurtypes is een speciale plug misschien vereist!
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem - koniecznie zamontować! Do niektórych rodzajów ścian koniecznie zastosować specjalne kołki mocujące.
(CZ)	Montáž na stěnu slouží jako ochrana proti převrnutí - bezpodmínečně umístěte! U některých typu stěn může být zapotřebí speciální hmoždinka!
(SK)	Upevnenie na stenu slúži ako ochrana proti prevráteniu - bezpodmienečne použite! Pre niektoré druhy stien môže byť potrebná špeciálna hmoždinka!
(HU)	A terméket a falhoz kel rögzíténi, különben az felborulhat! Egyes faltípusoknál speciális tiplit kell használni!
(RO)	Sistemul de fixare la perete servește ca protecție la răsturnare - de montat obligatoriu! Pentru unele tipuri de pereți este posibil să fie necesar un diblu special!
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir dübel gerekli olabilir!
(RU)	Обязательно установите крепление к стене во избежание опрокидывания ! Для некоторых типов стен может потребоваться специальный дюбель!