




# Assembly Stressless® Dining

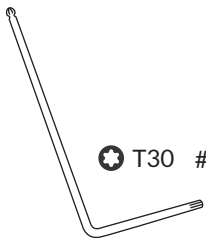

D100/D101

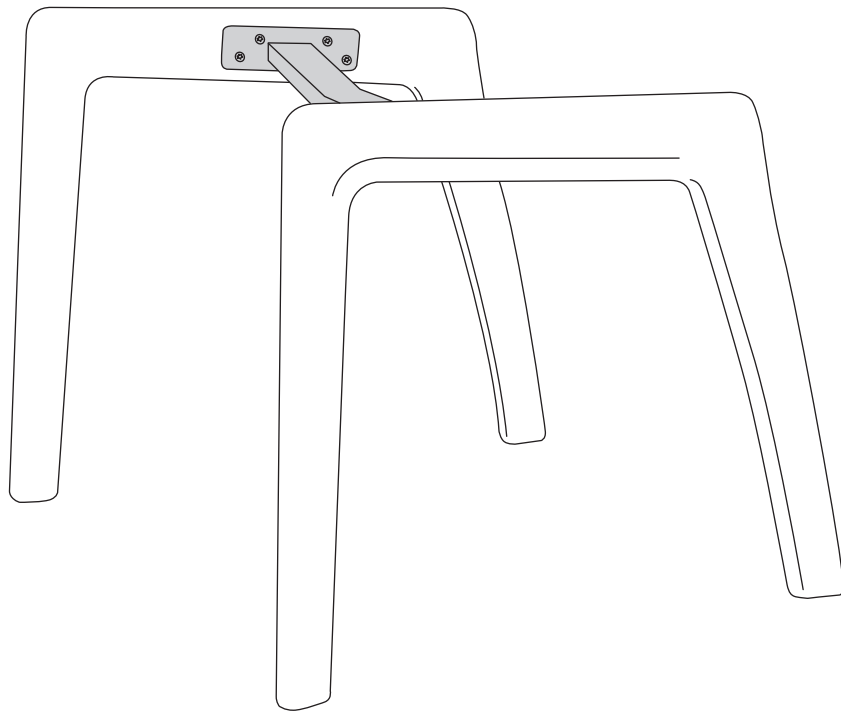


T30 #99230316



4 x

#990000984


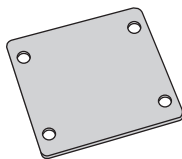


#75007922



8 x



#990000999

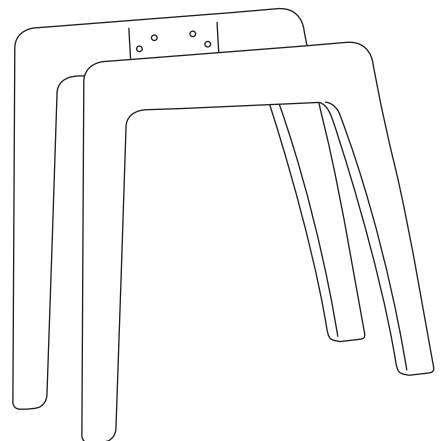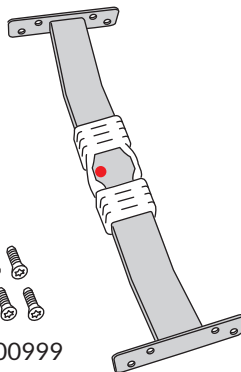




Scan me for assembly video

1

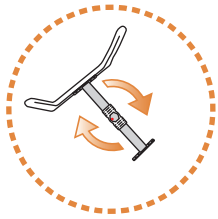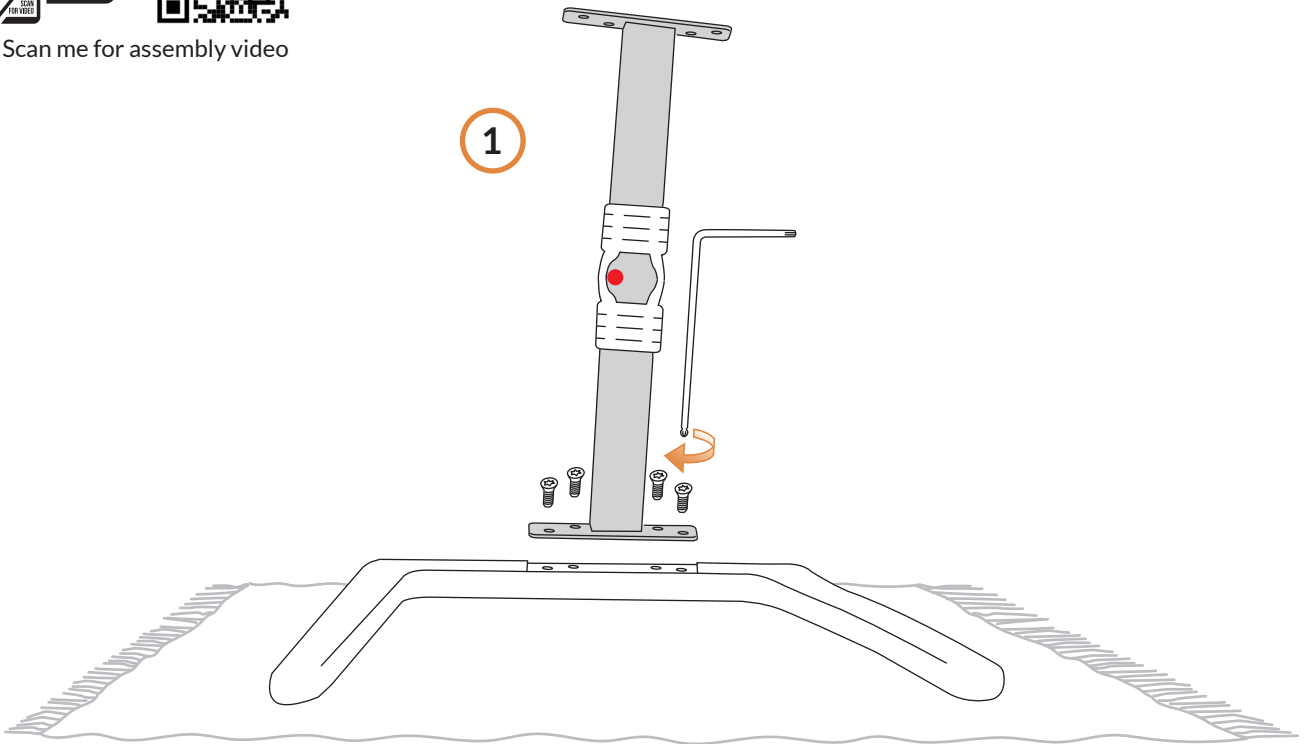

2

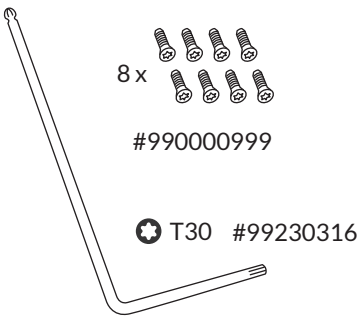





8 x









#990000999

T30 #99230316

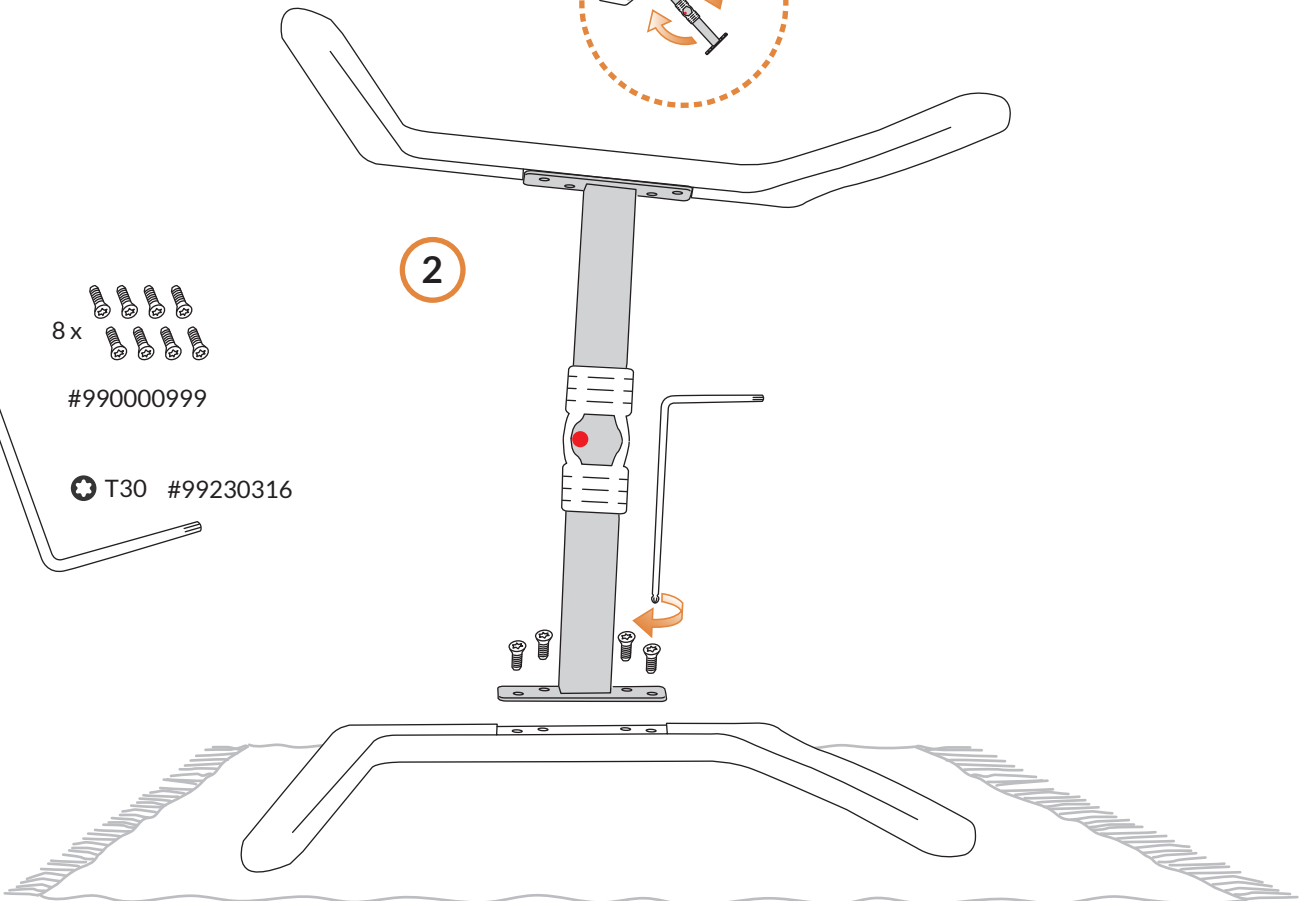

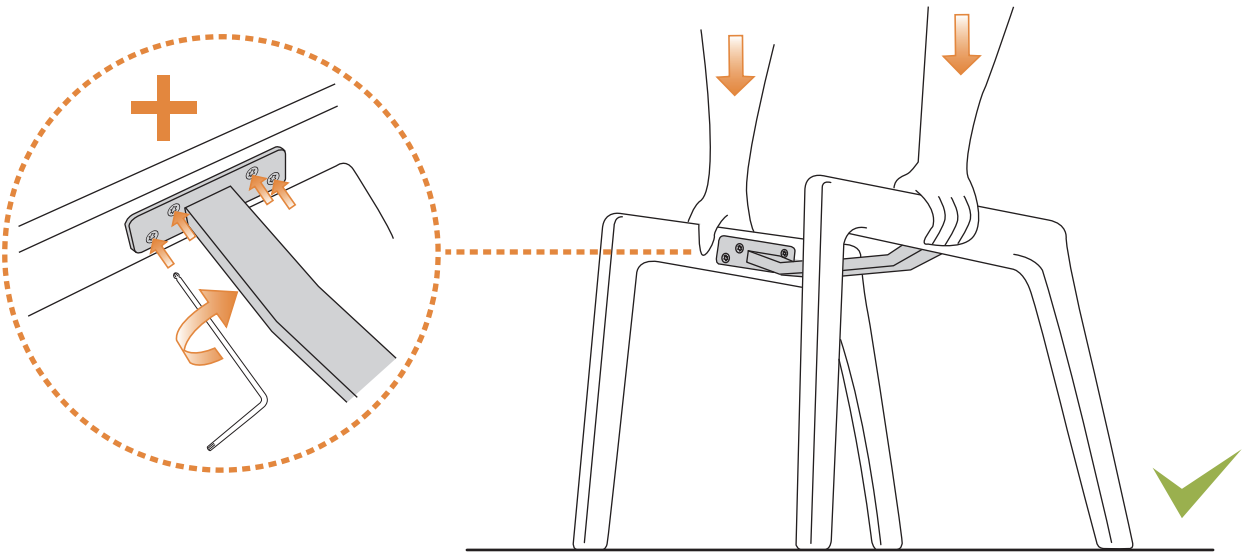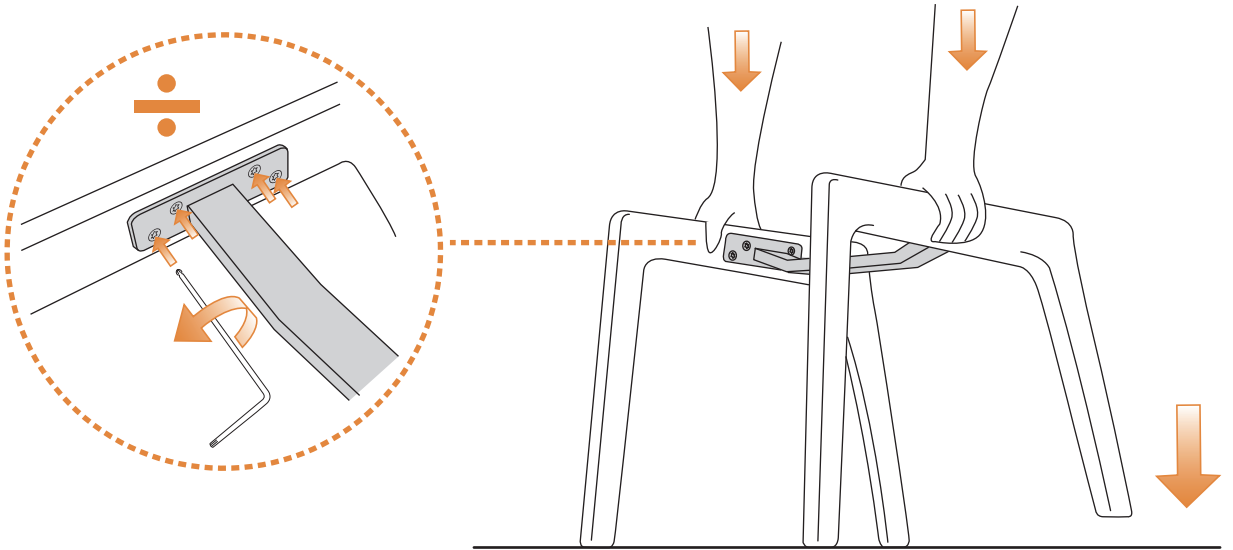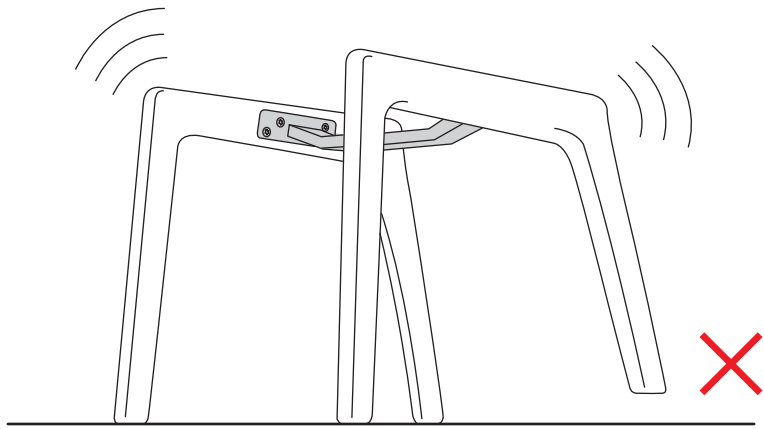


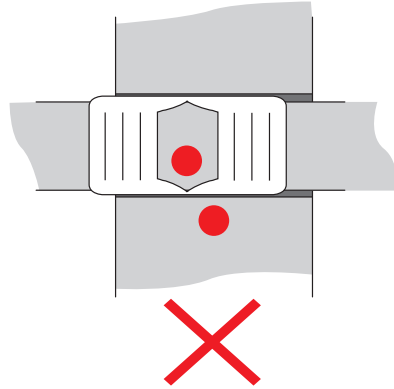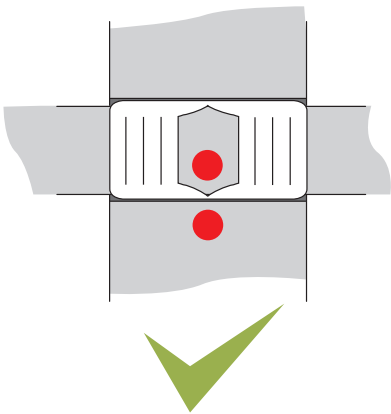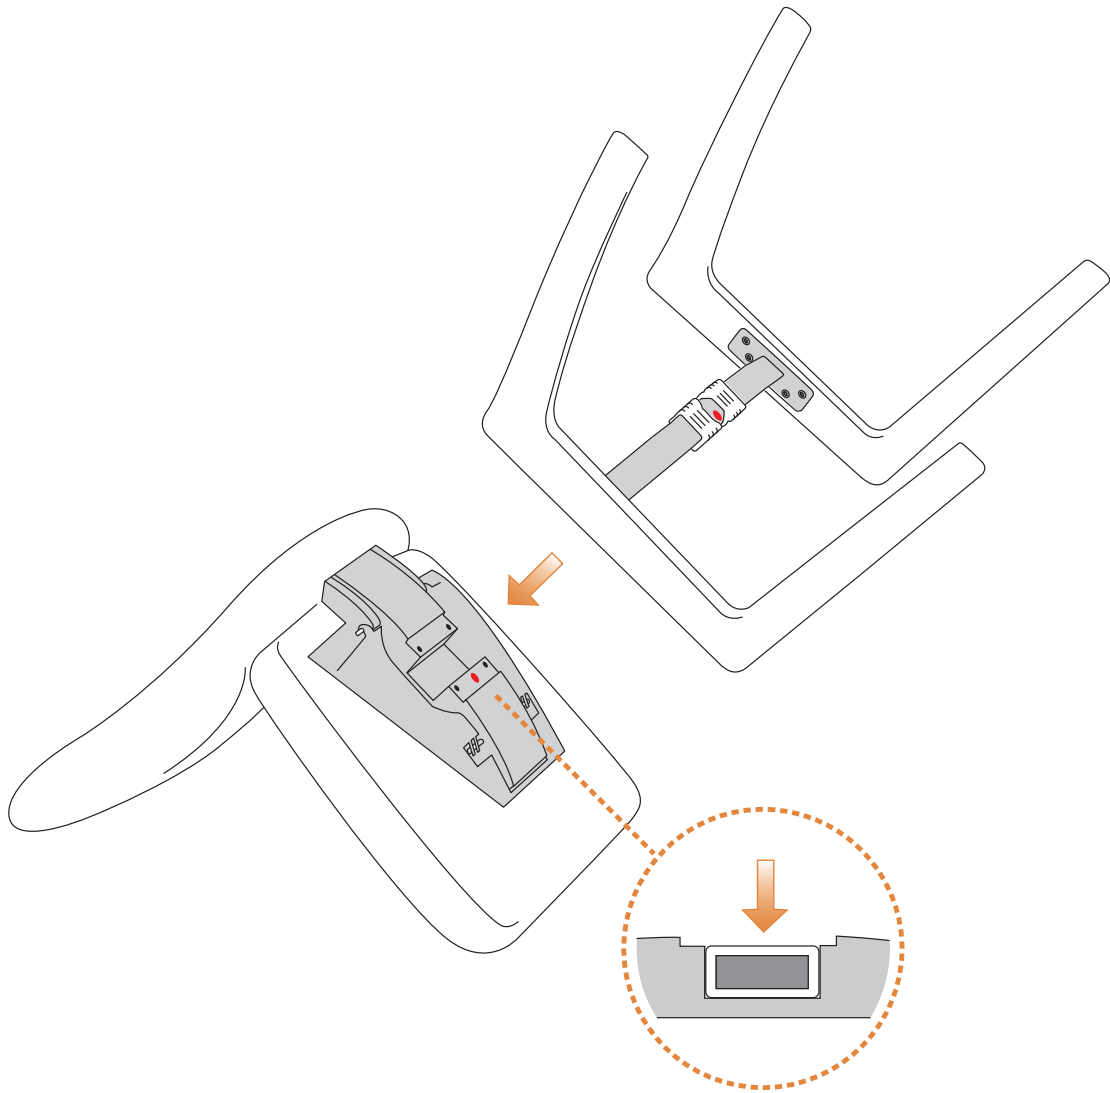

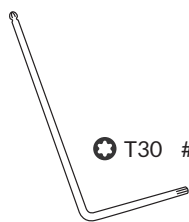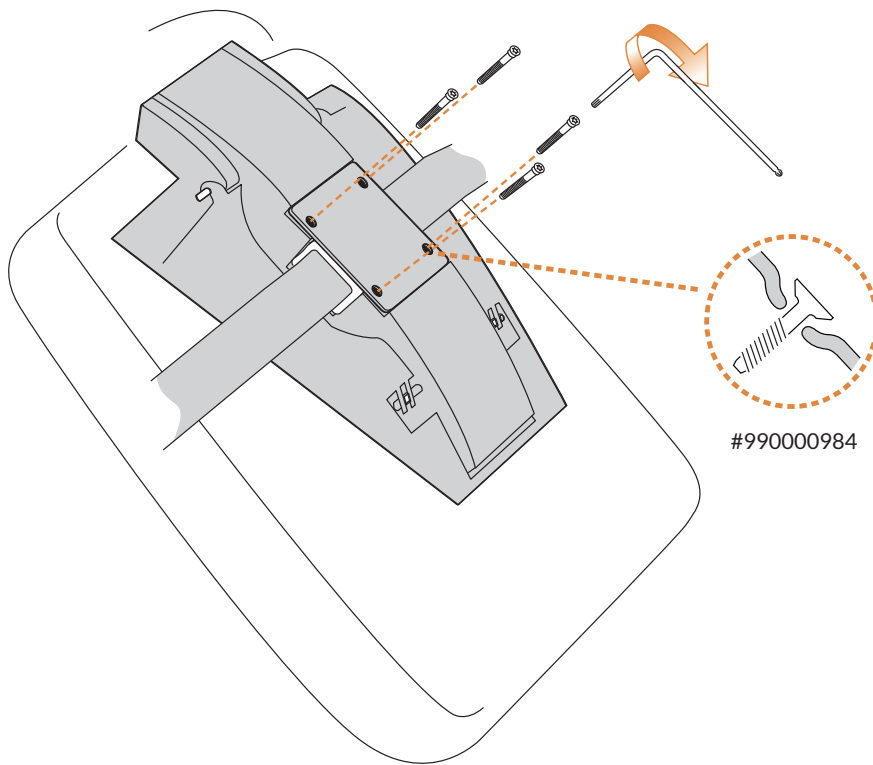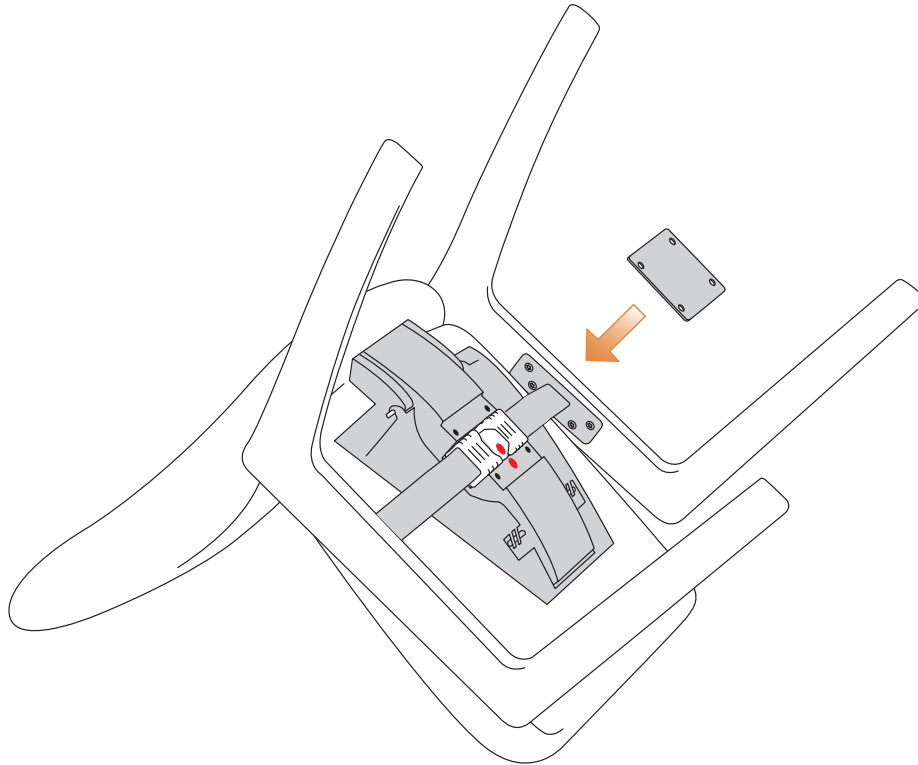


✦ T30 #99230316




4 x






#990000984

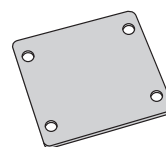

#75007922

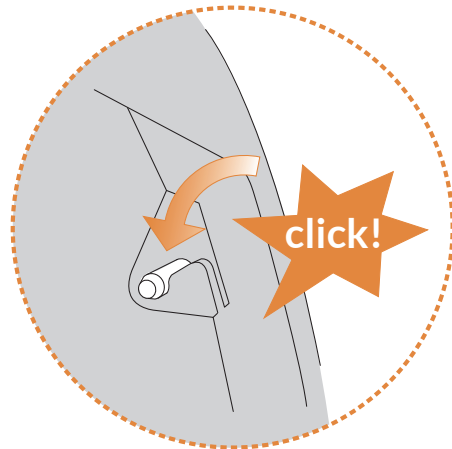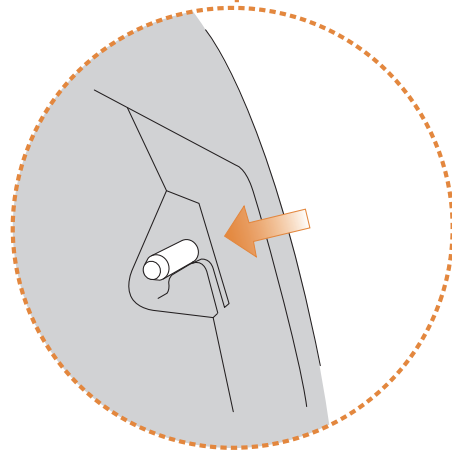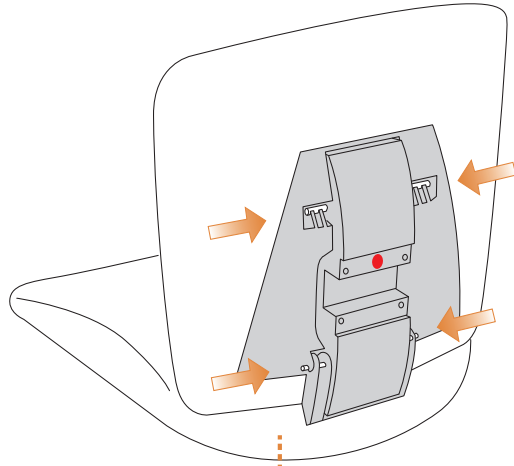

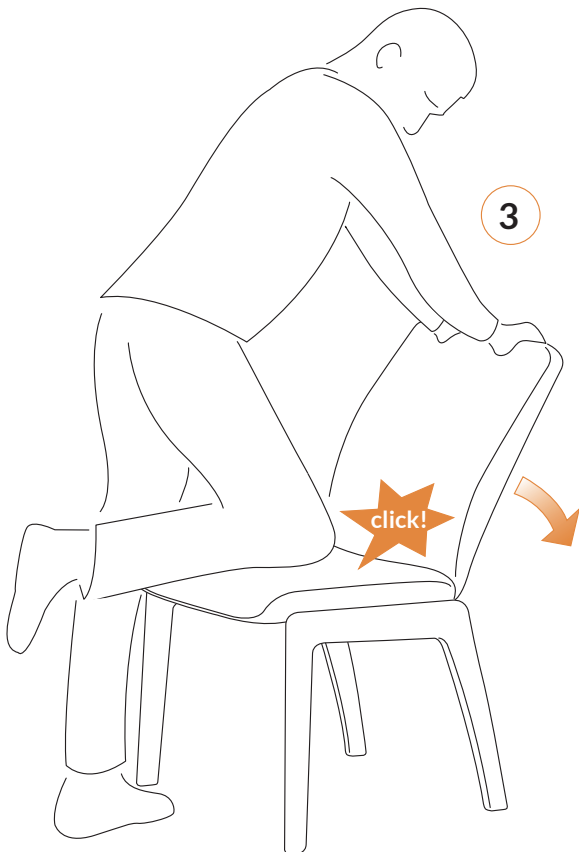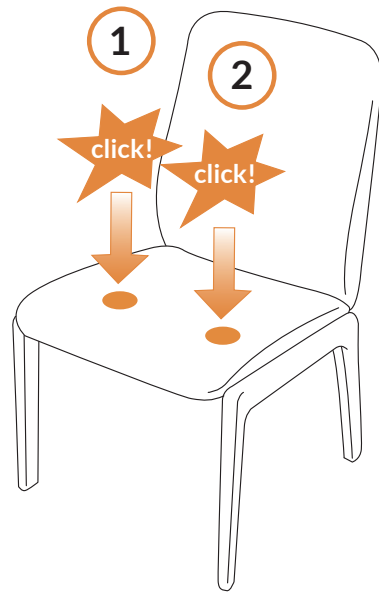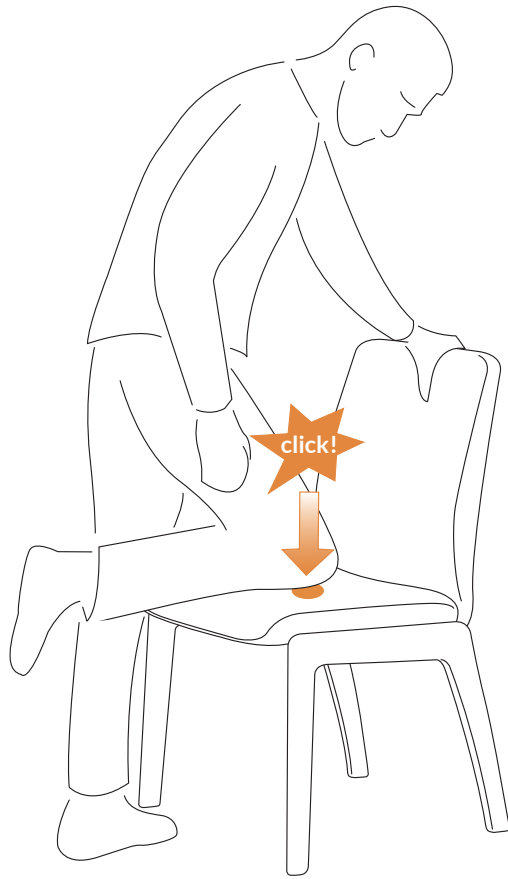



[www.stressless.com/mystressless](http://www.stressless.com/mystressless)