



(D) Montageanleitung

(F) Notice de montage

(NL) Handleiding voor de montage

(CZ) Monážní návod

(HU) Szerelési útmutató

(TR) Montaj talimatı

(GB) Assembly instructions

(I) Istruzione di montaggio


(PL) Instrukcja montażu

(SK) Návod na montáž






(RO) Instrucțiuni de montaj

(RU) ИНСТРУКЦИЯ ПО МОНТАЖУ




Art. Nr. 1039

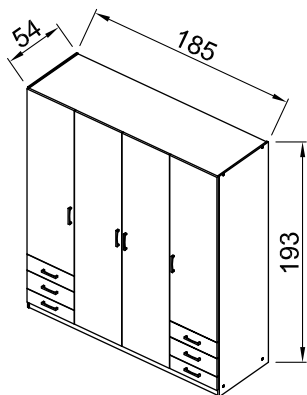






Art. Nr. 1039

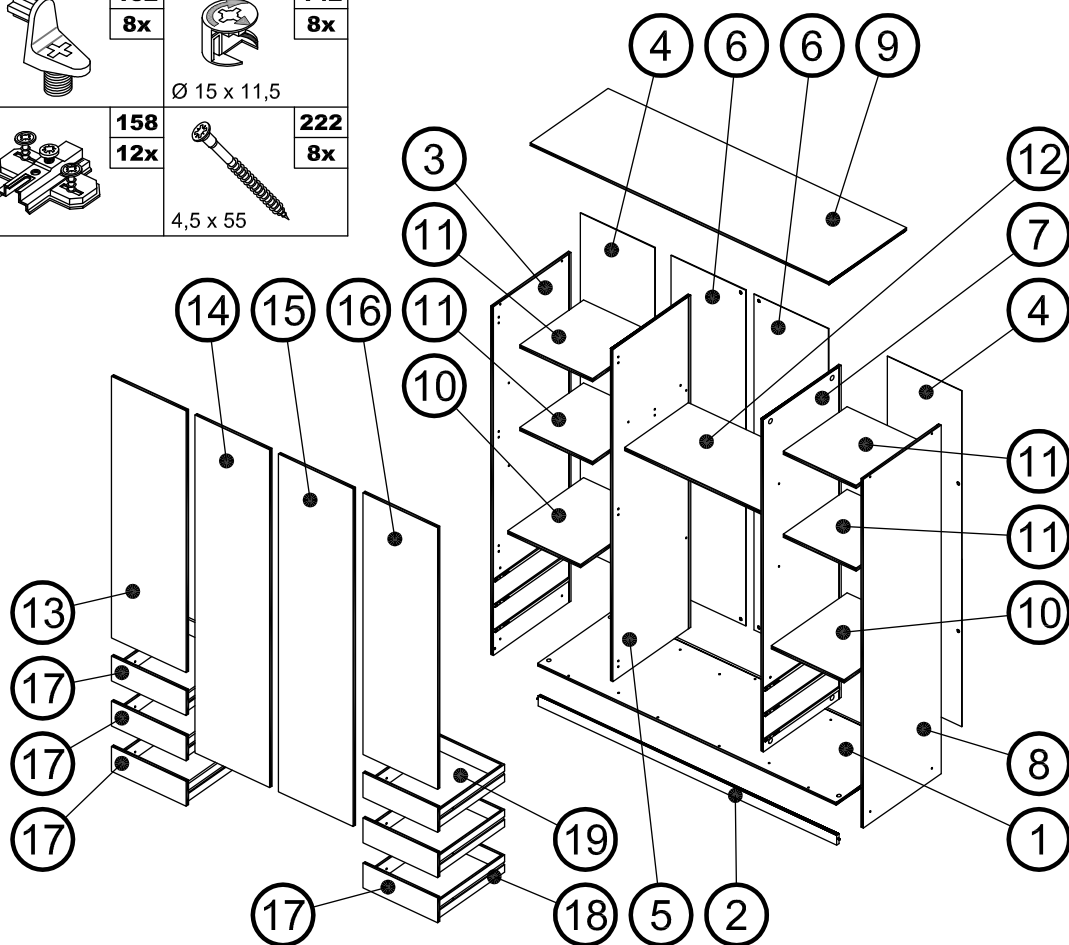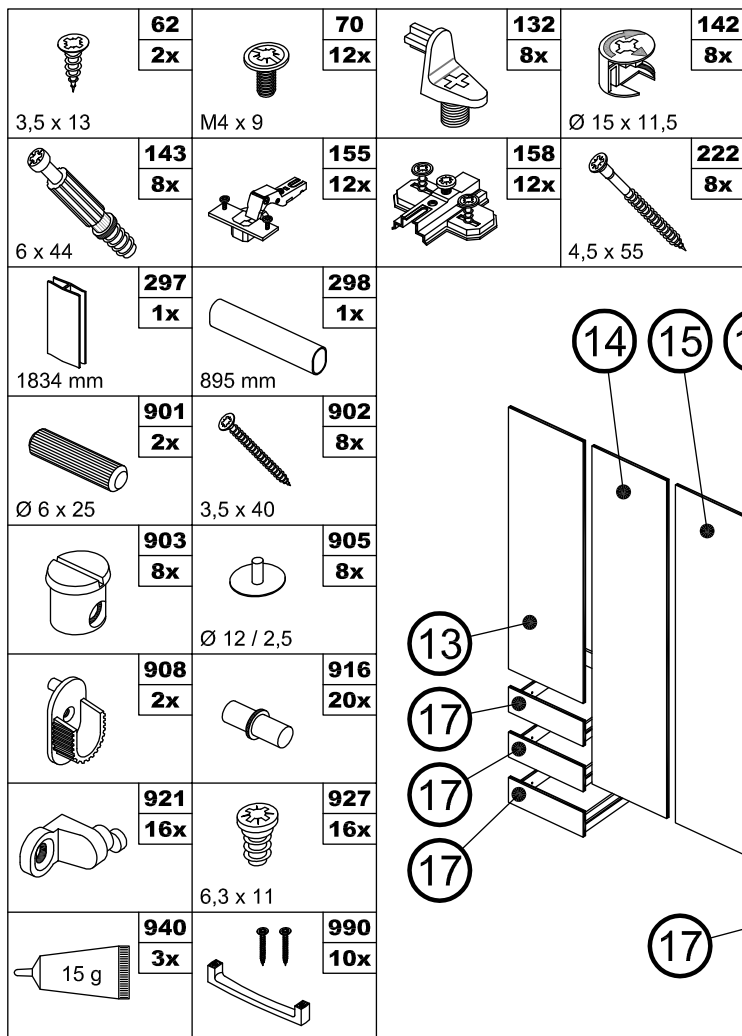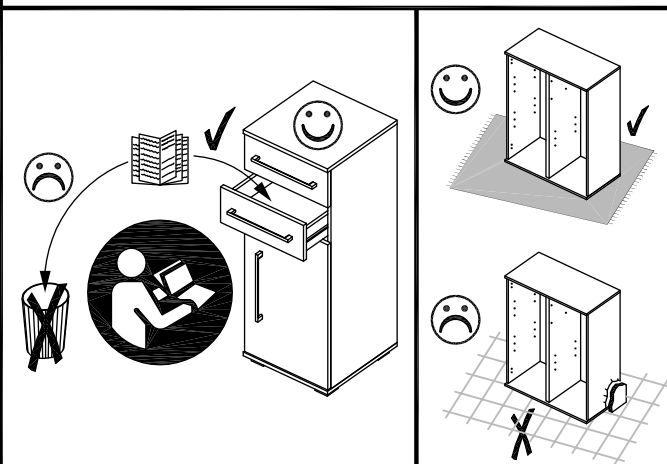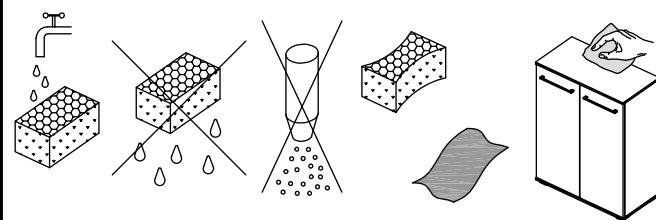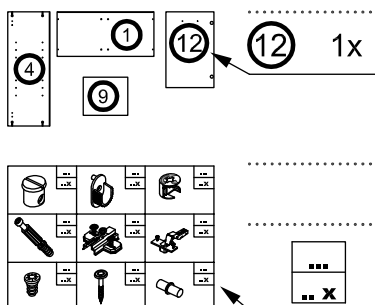

1

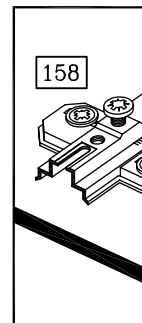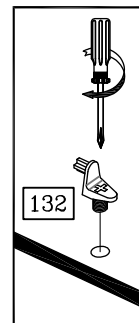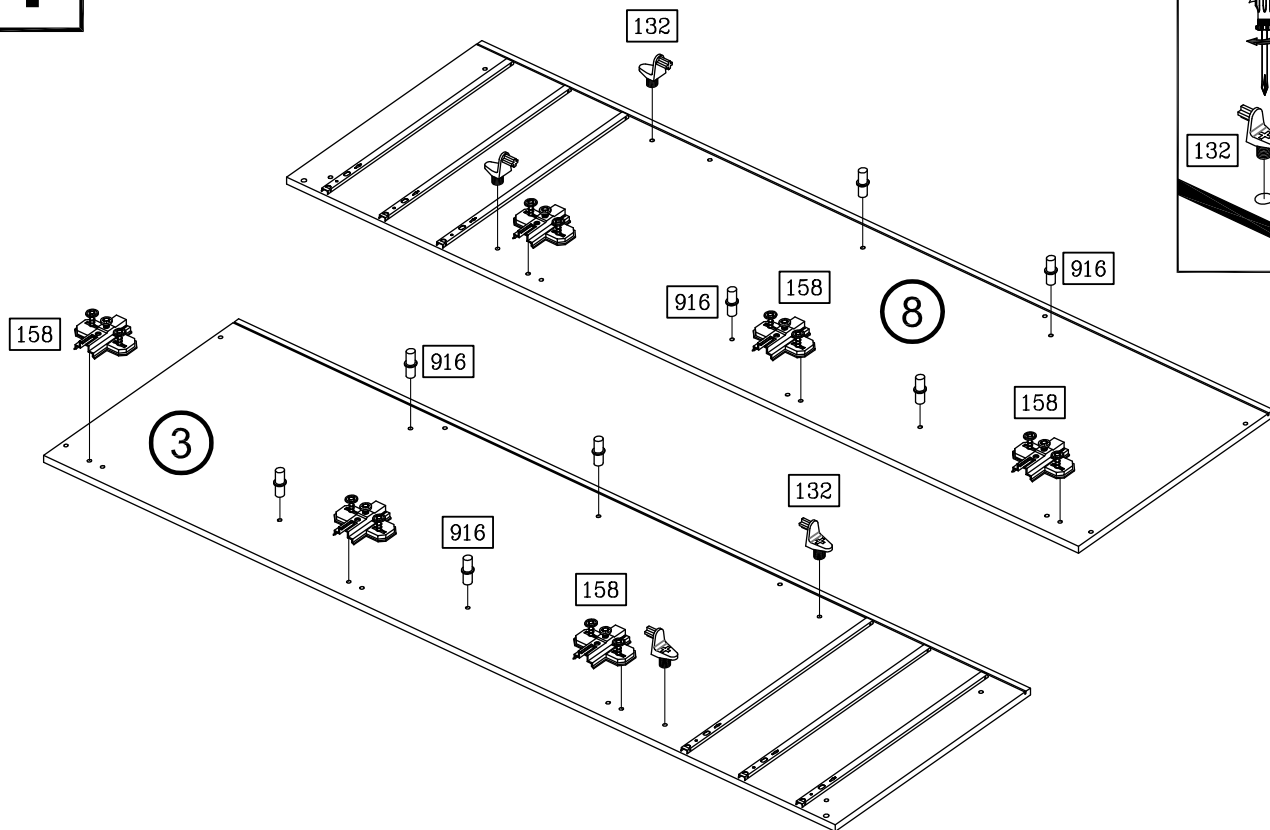

2

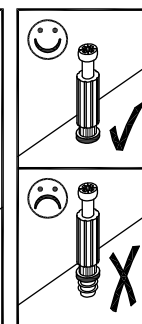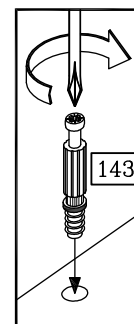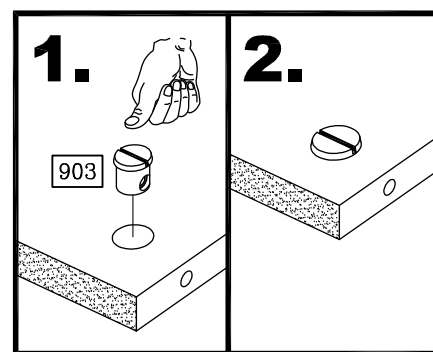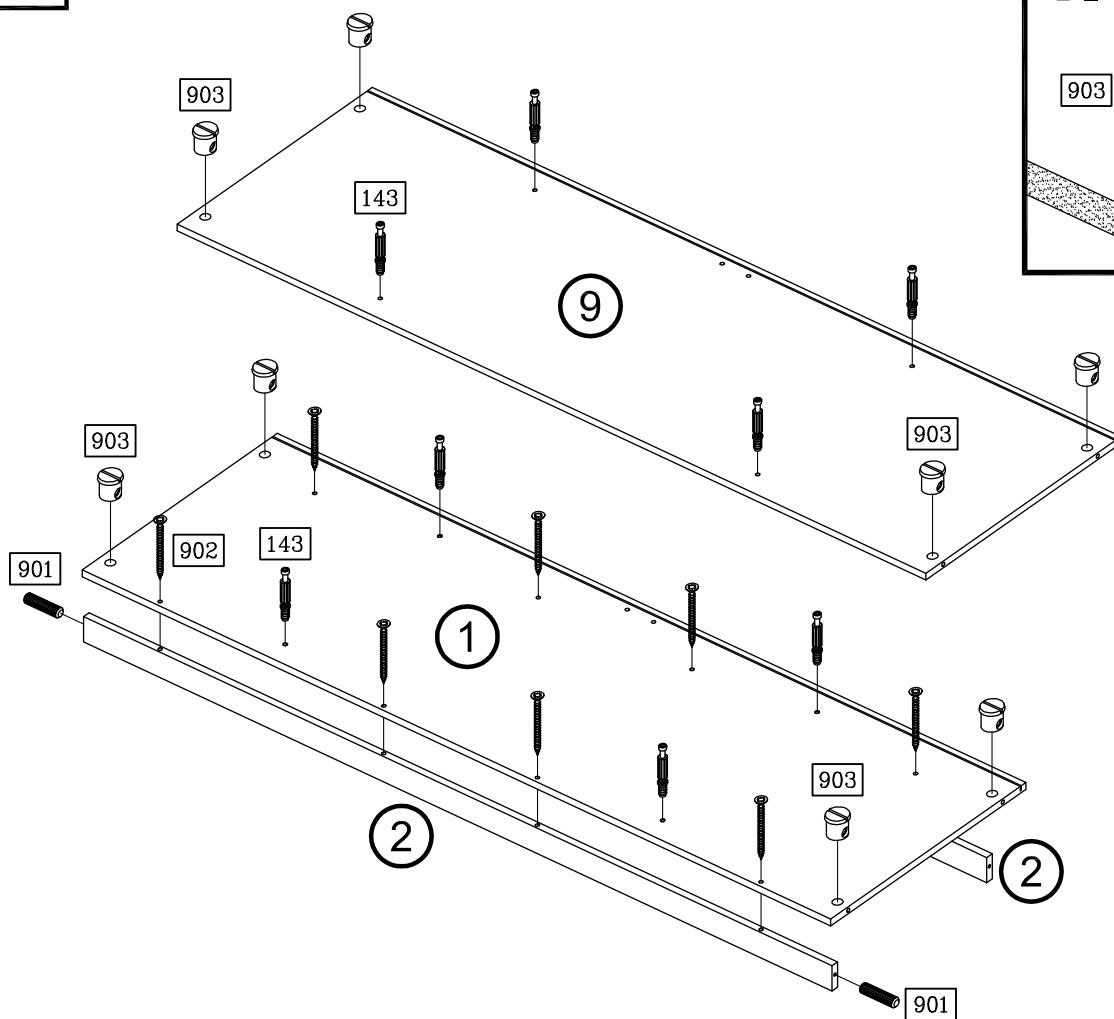

1039-1

2/6

3

3

Diagram illustrating the assembly of the table frame, showing the connection of the two main panels (5 and 7) using various hardware components.

Hardware Components:

- 142:** Corner brackets/plates.
- 158:** Corner braces/plates.
- 132:** Screws.
- 916:** Screws.
- 908:** Screws.
- 62:** Screws.

Assembly Steps:

- Attach hardware 142 to the corners of panel 5.
- Attach hardware 158 to the corners of panel 5.
- Attach hardware 132 to the corners of panel 5.
- Attach hardware 916 to the corners of panel 5.
- Attach hardware 908 to the corners of panel 5.
- Attach hardware 62 to the corners of panel 5.
- Attach hardware 142 to the corners of panel 7.
- Attach hardware 158 to the corners of panel 7.
- Attach hardware 132 to the corners of panel 7.
- Attach hardware 916 to the corners of panel 7.
- Attach hardware 908 to the corners of panel 7.
- Attach hardware 62 to the corners of panel 7.

Inset Diagrams:

- Top right inset: Shows the installation of hardware 132 into the corner of panel 5.
- Bottom right inset: Shows the installation of hardware 142 into the corner of panel 5.

4

Diagram illustrating the assembly of the back panel (19) and the top panel (17) onto the main frame (18).


The diagram shows the back panel (19) being attached to the main frame (18) using two 15 g adhesive tubes (940). The top panel (17) is shown separately, with two 15 g adhesive tubes (940) applied to its bottom edge. A circular inset shows a close-up of the adhesive application to the joint between the back panel and the main frame.

The top panel (17) is then shown being attached to the main frame (18) using two screws (990). A clock icon indicates a 3-hour drying time.


1039-1

3/6



5

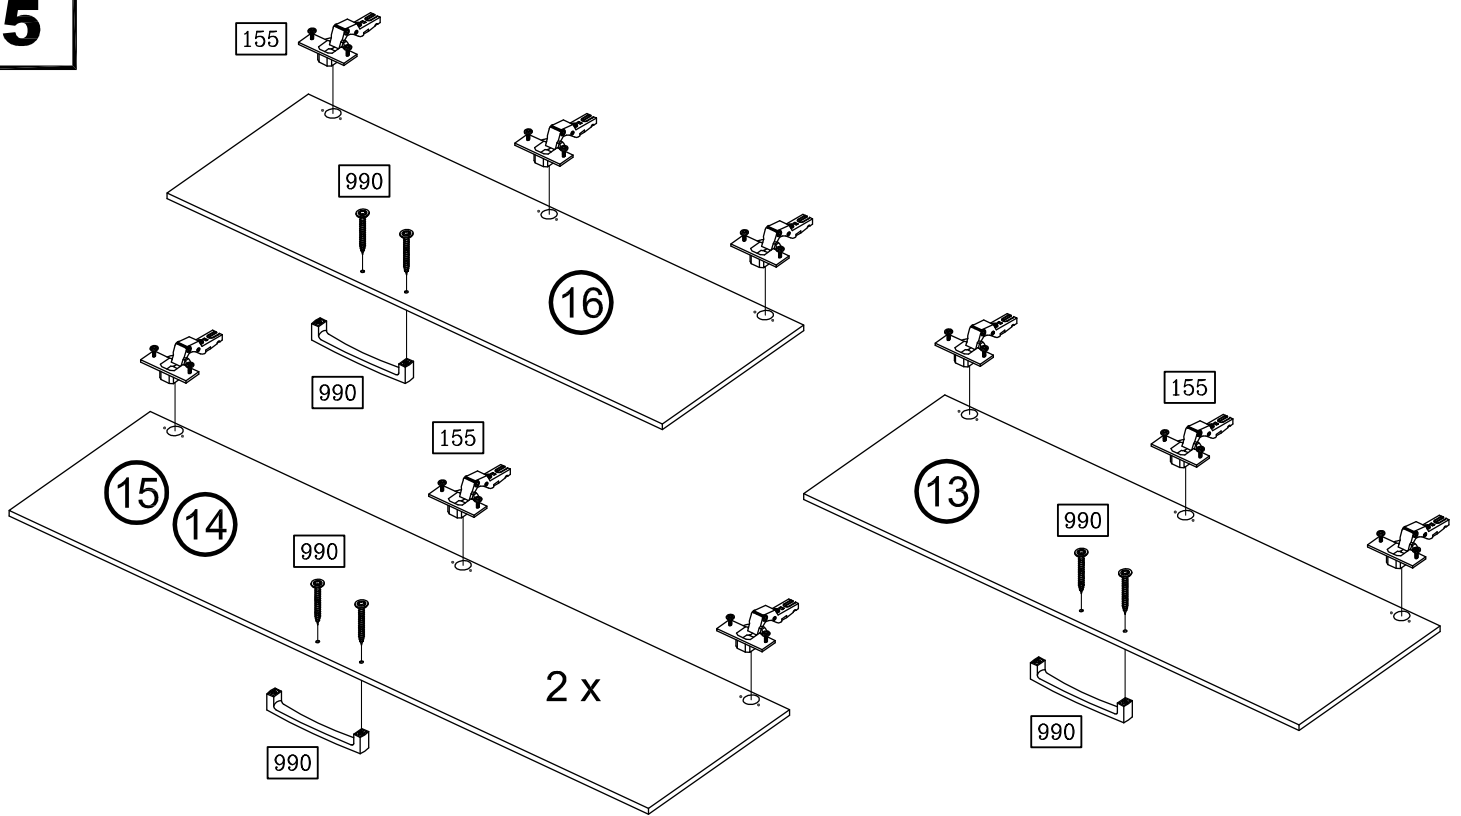


6

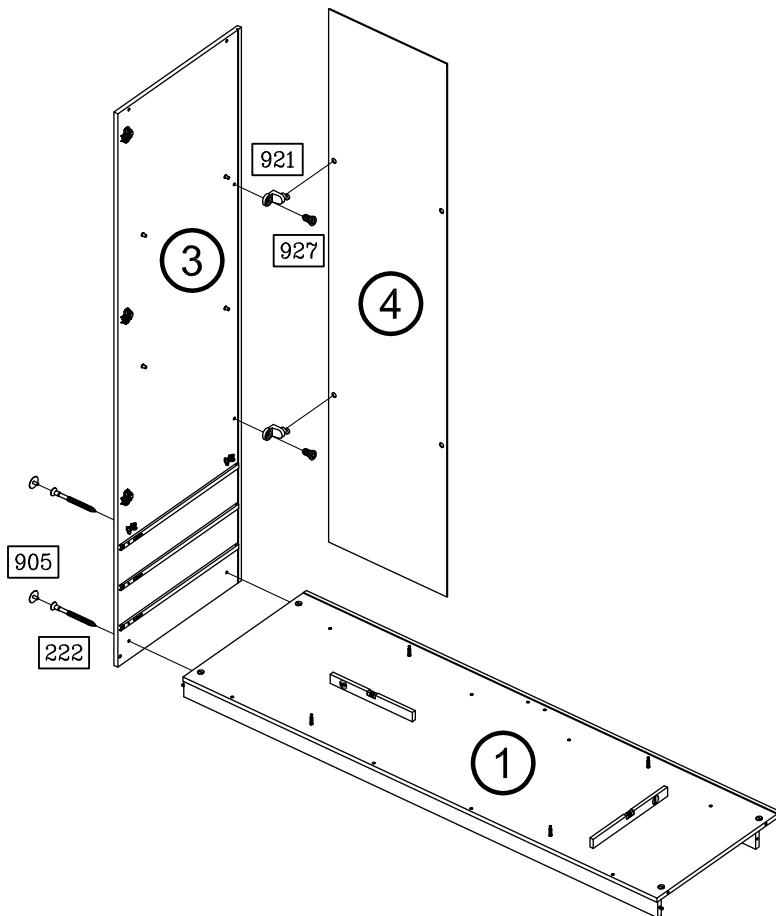


7

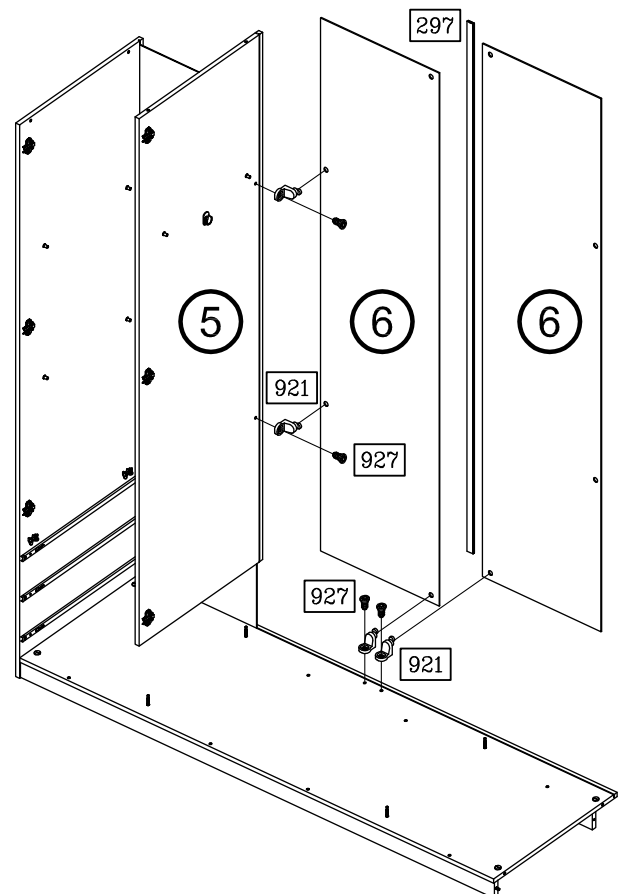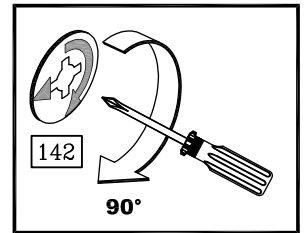


8


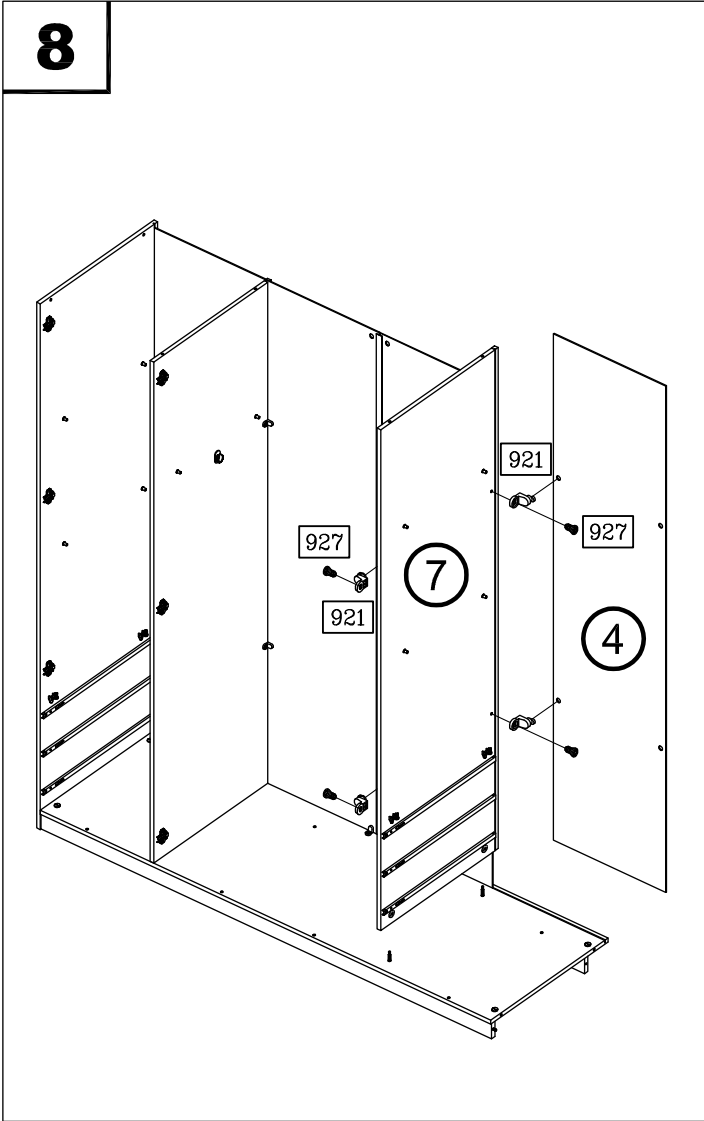


9

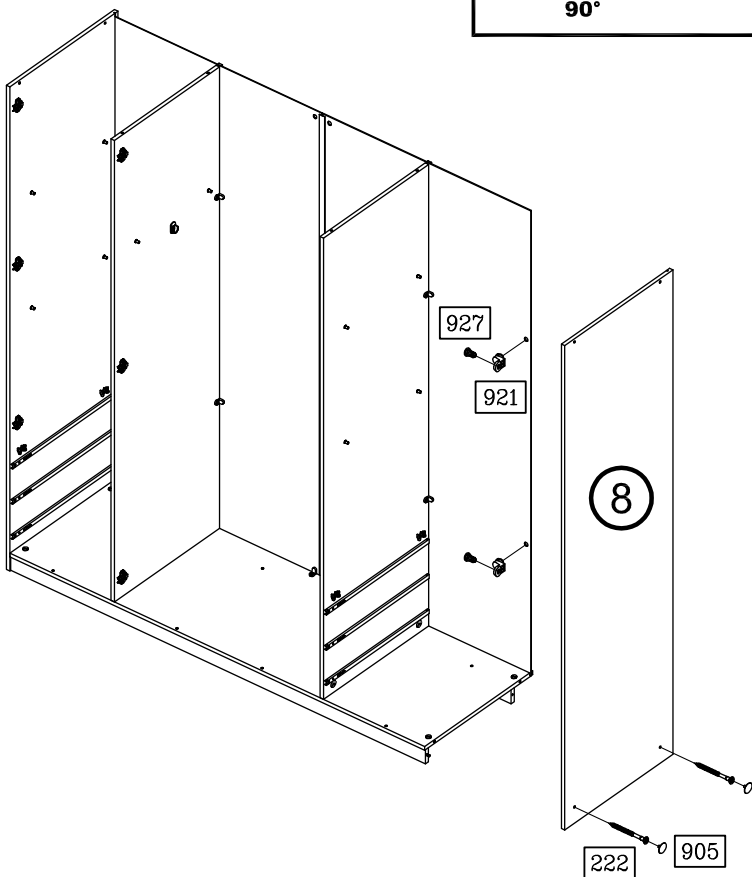


10

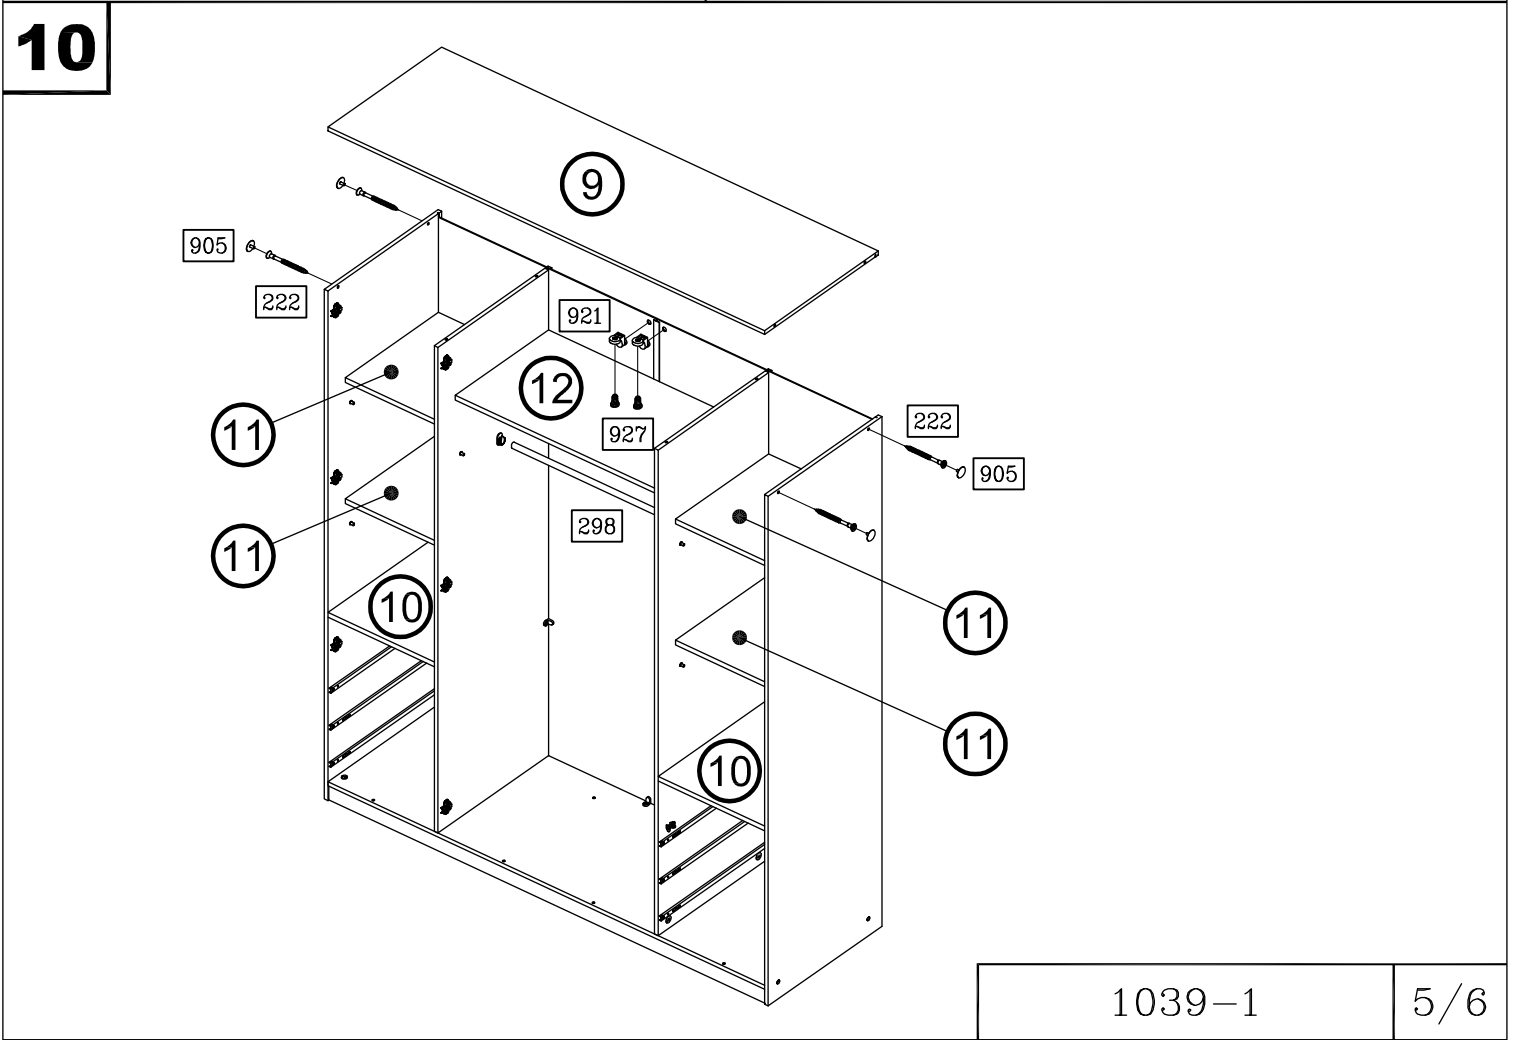

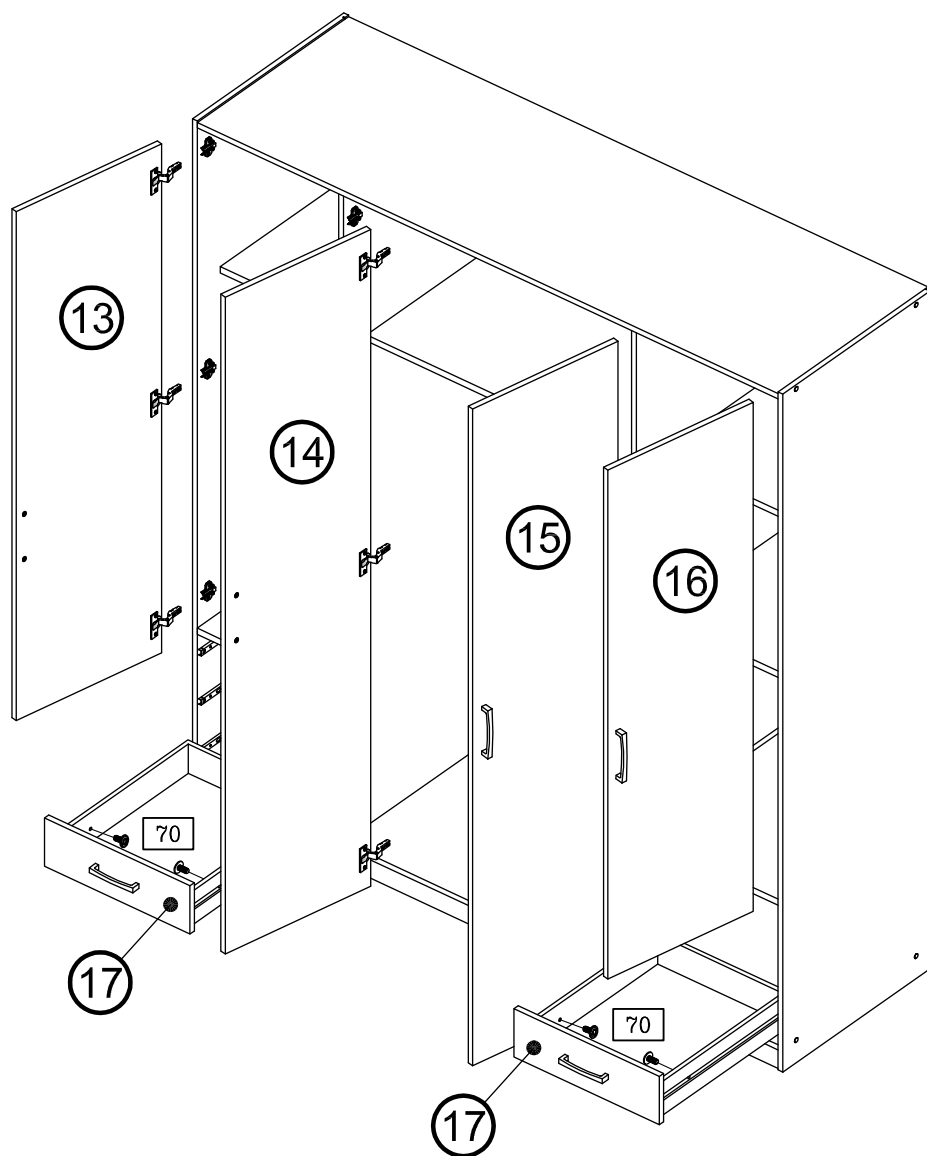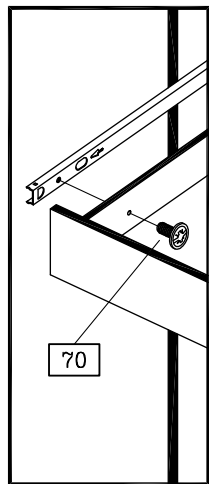

1.

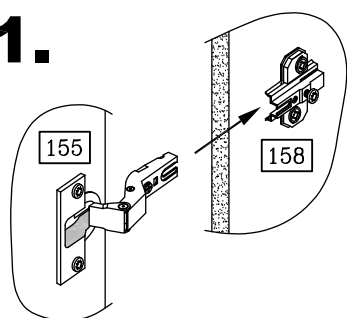

2.

