



Parma



- (DE) Montageanleitung

(PL) Instrukcja montażu

(NL) Handleiding voor de montage

(GB) Assembly instructions

(TR) Montaj talimatı

(RU) Инструкция по монтажу
- (IT) Istruzioni di montaggio

(FR) Notice de montage

(RO) Instrucțiuni de asamblare









(SK) Montážny návod

(CZ) Montážní návod

(HU) Szerelési útmutató



2 x (M8x60) a	5 x (M8x90) k	12 x j	9 x Ø8 b	9 x r	9 x M8 c	9 x (4x16) d	4 x s
6 x (5x50) t	2 x (M6x35) g	8 x y	2 x (M8x70) e		1 x 3	1 x 2	5 x 1

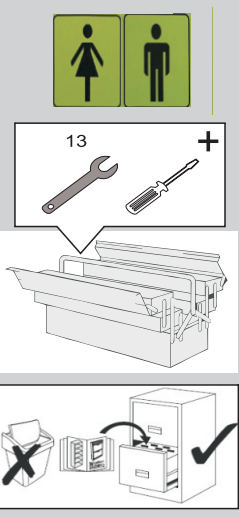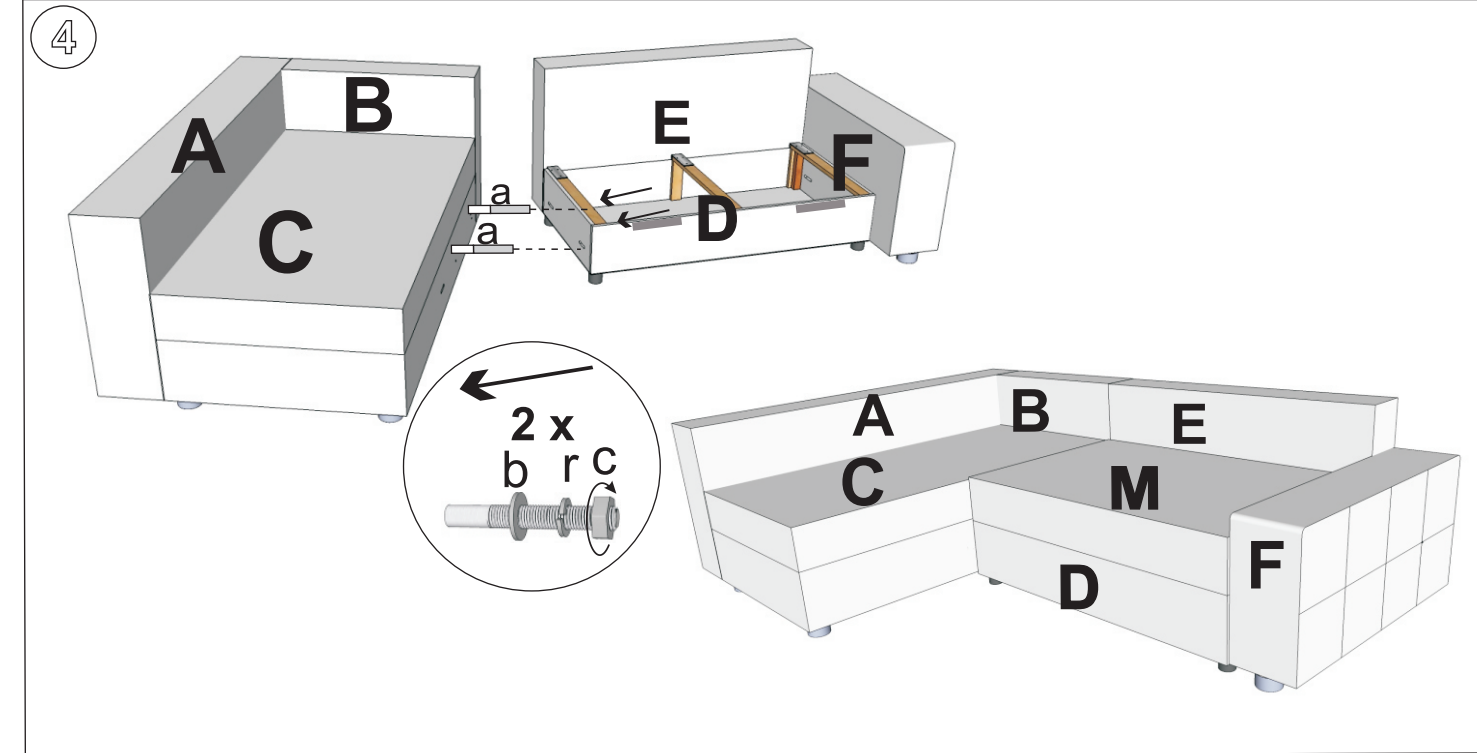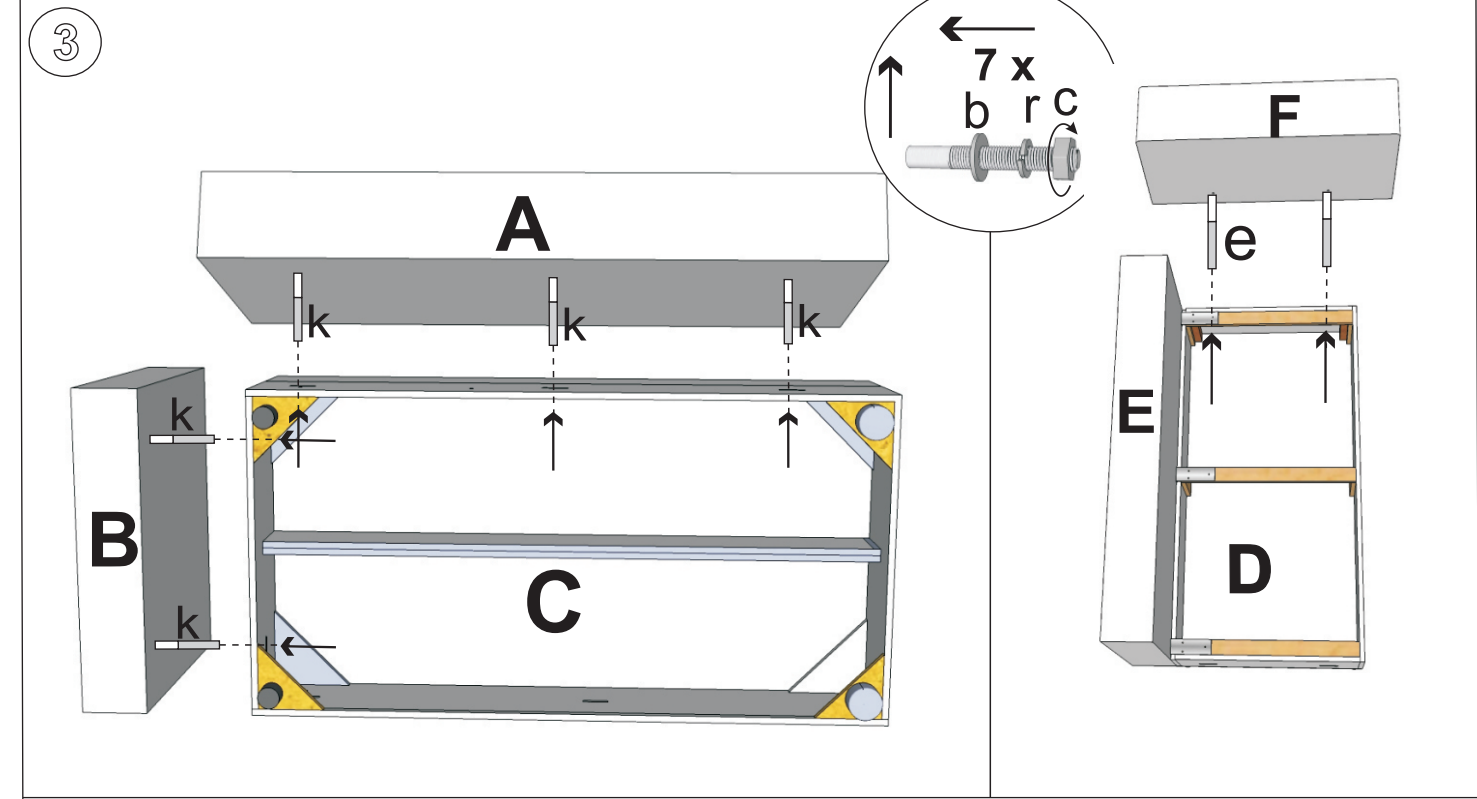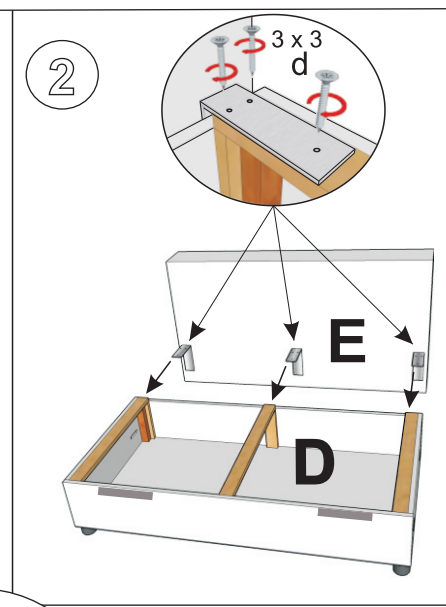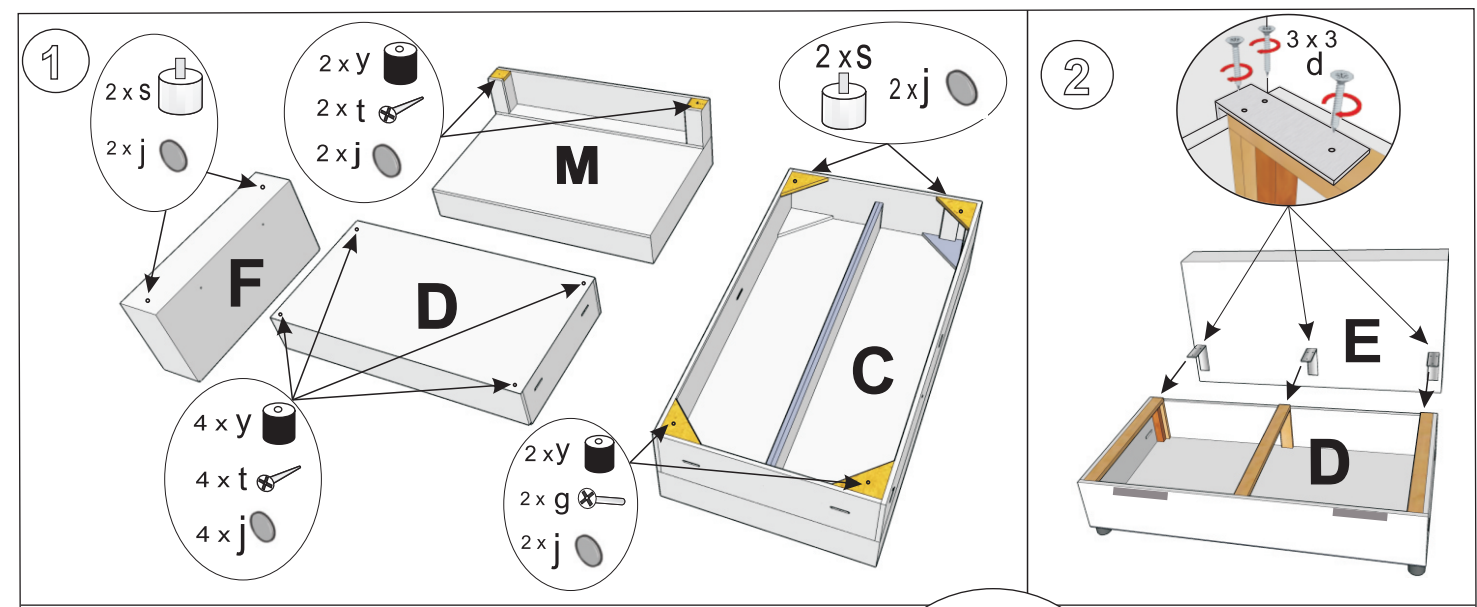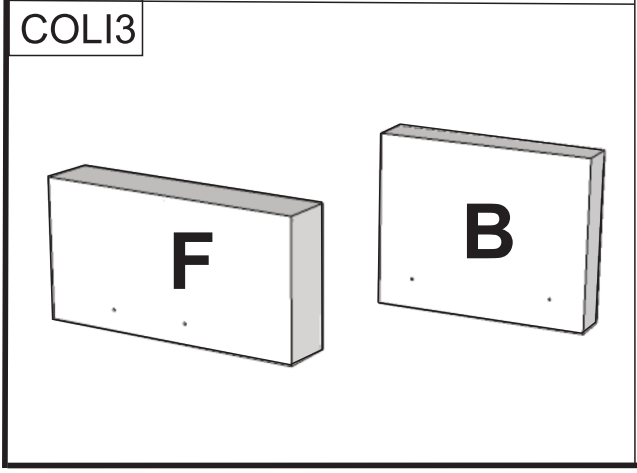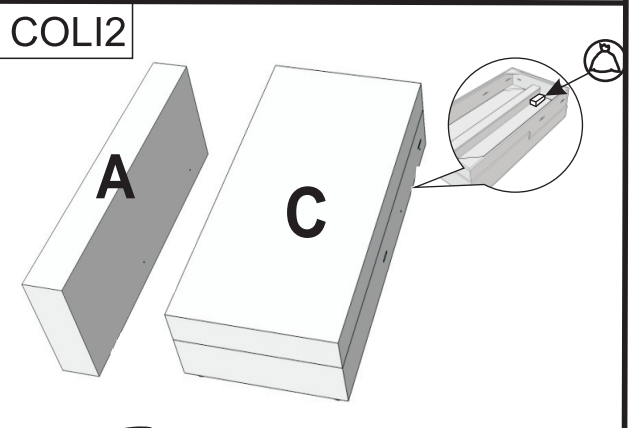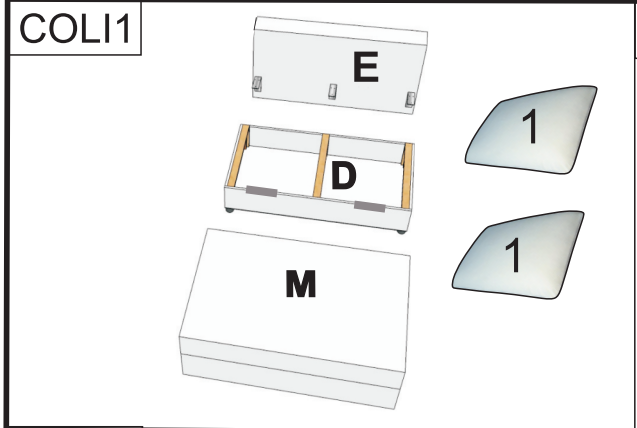

Parma



DE Montageanleitung

PL Instrukcja montażu

NL Handleiding voor de montage

GB Assembly instructions

TR Montaj talimatı

RU Инструкция по монтажу

IT Istruzioni di montaggio


FR Notice de montage

RO Instrucțiuni de asamblare

SK Montány návod

CZ Montání návod


HU Szerelési útmutató

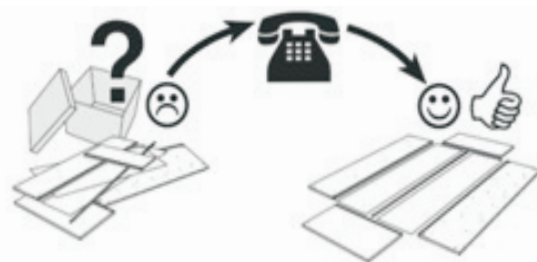


2:R

2x (M8x60)  a	5 x (M8x90)  k	12 x  j	9 x Ø8  b	9 x  r	9 x M8  c	9x (4x16)  d	4 x  s 50mm 70mm
6x (5x50)  t	2x (M6x35)  g	8x  y 50mm 50mm	2x (M8x70)  e		1 x  3 35 cm 50 cm	1 x  2 45cm 45cm	5 x  1 45cm 65cm








COLI1

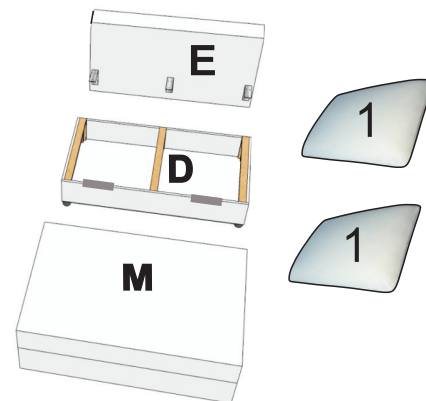

COLI2

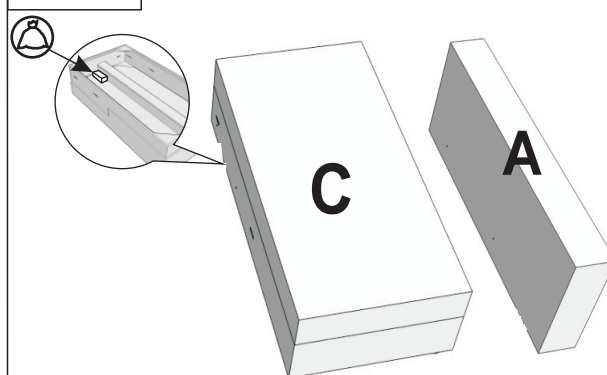

COLI3

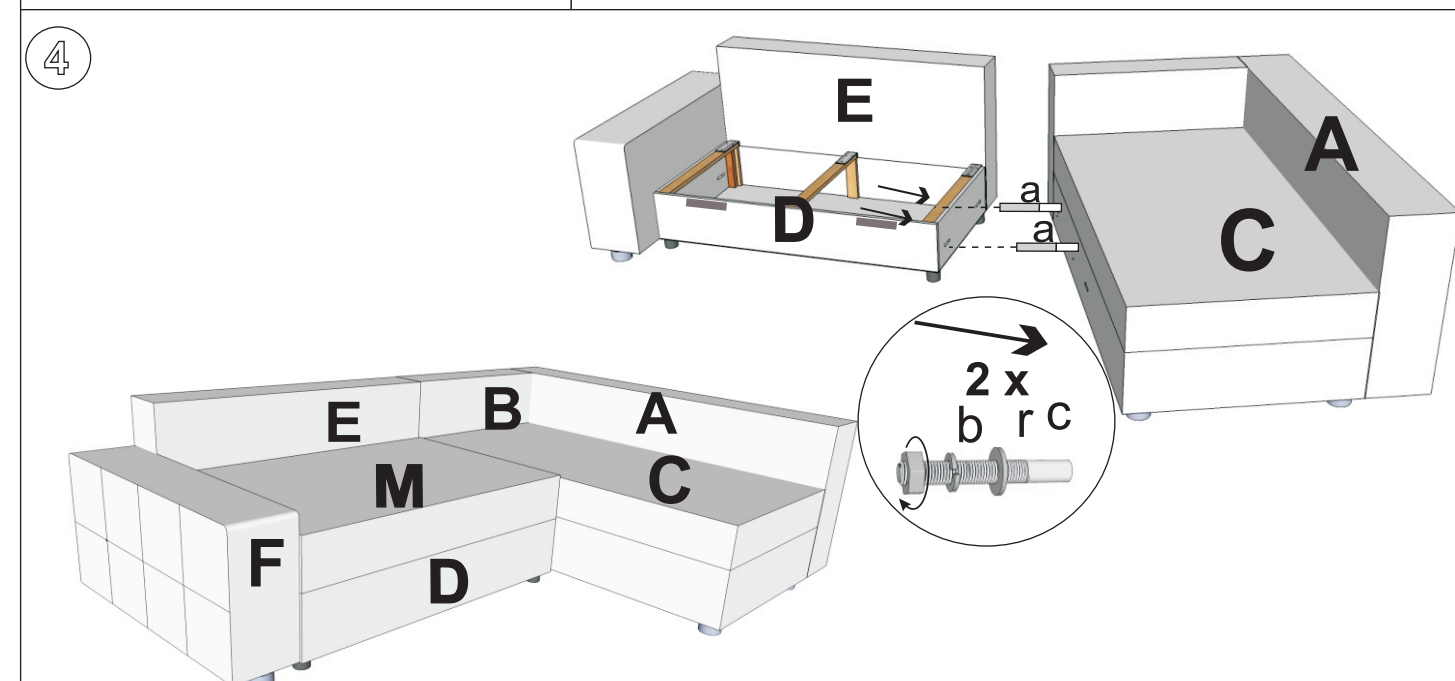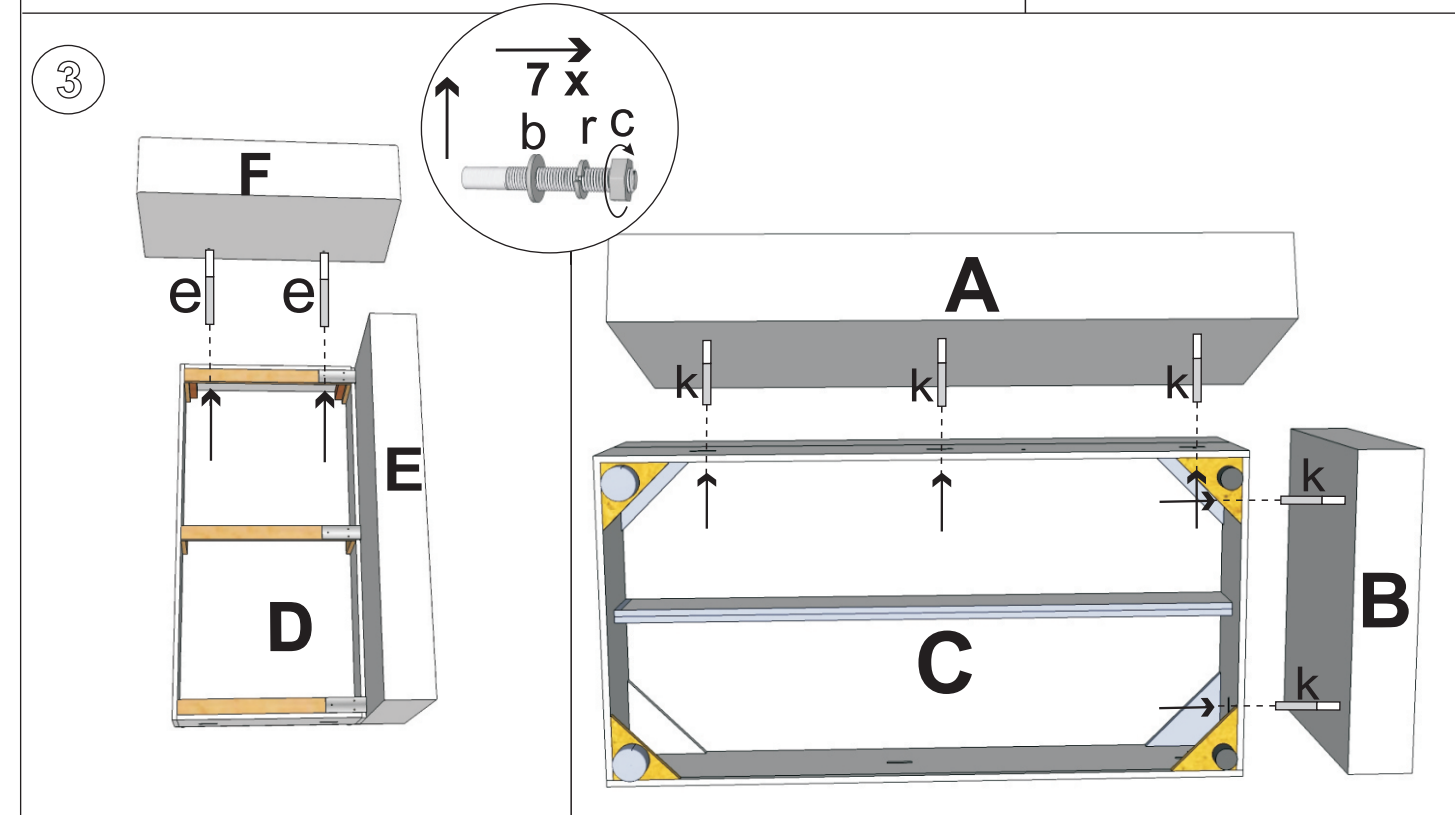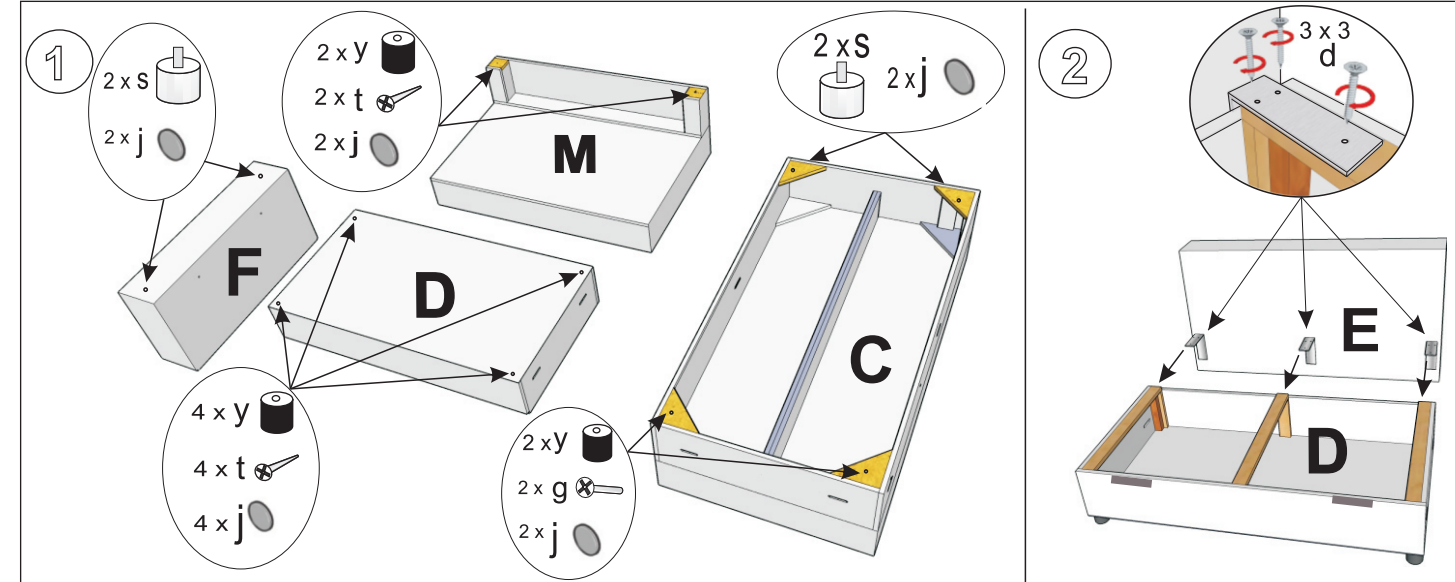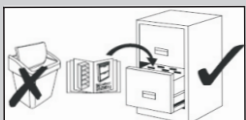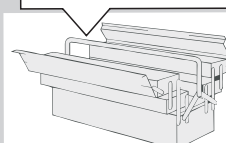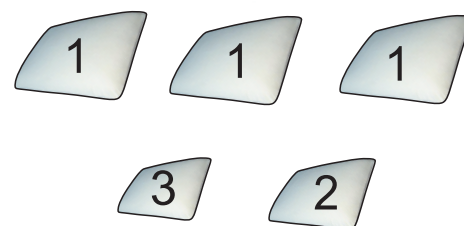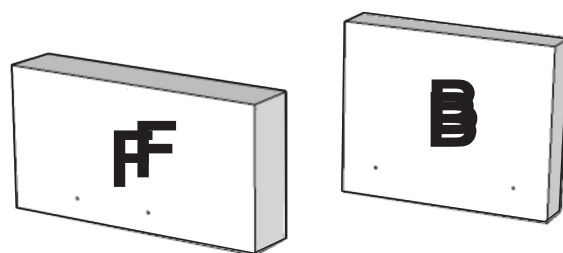

Ver:	29.05.2025
------	------------

Service page2 - Parma - R