


NOVA LUCE




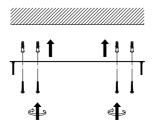

1. Turn off the general switch


2. Align, mark & drill holes Apply the screws

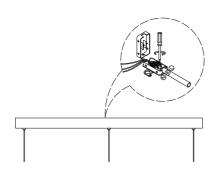

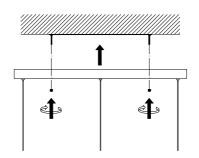

3. Connect the wires

4. Apply side screws to make it stable

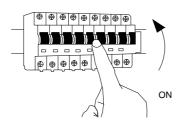

5. Turn on the general switch

