


ALABASTER CHAIR


ASSEMBLY INSTRUCTIONS

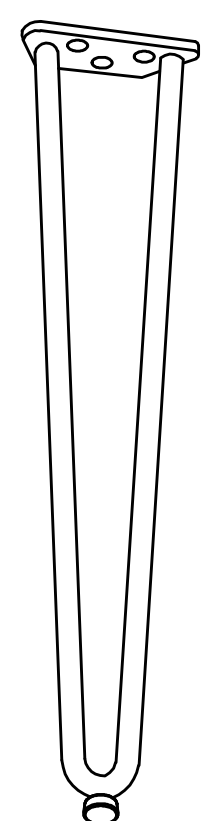


A. Front Left Leg 1PC





B. Front Right Leg 1PC

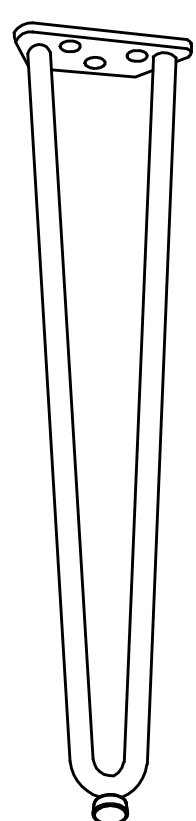


C. Back Right Leg 1PC

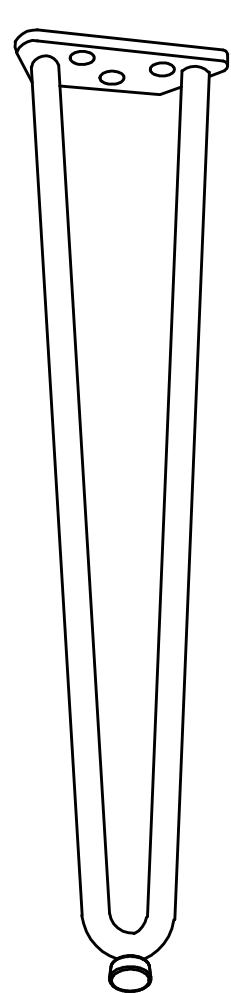

D. Back Left Leg 1PC

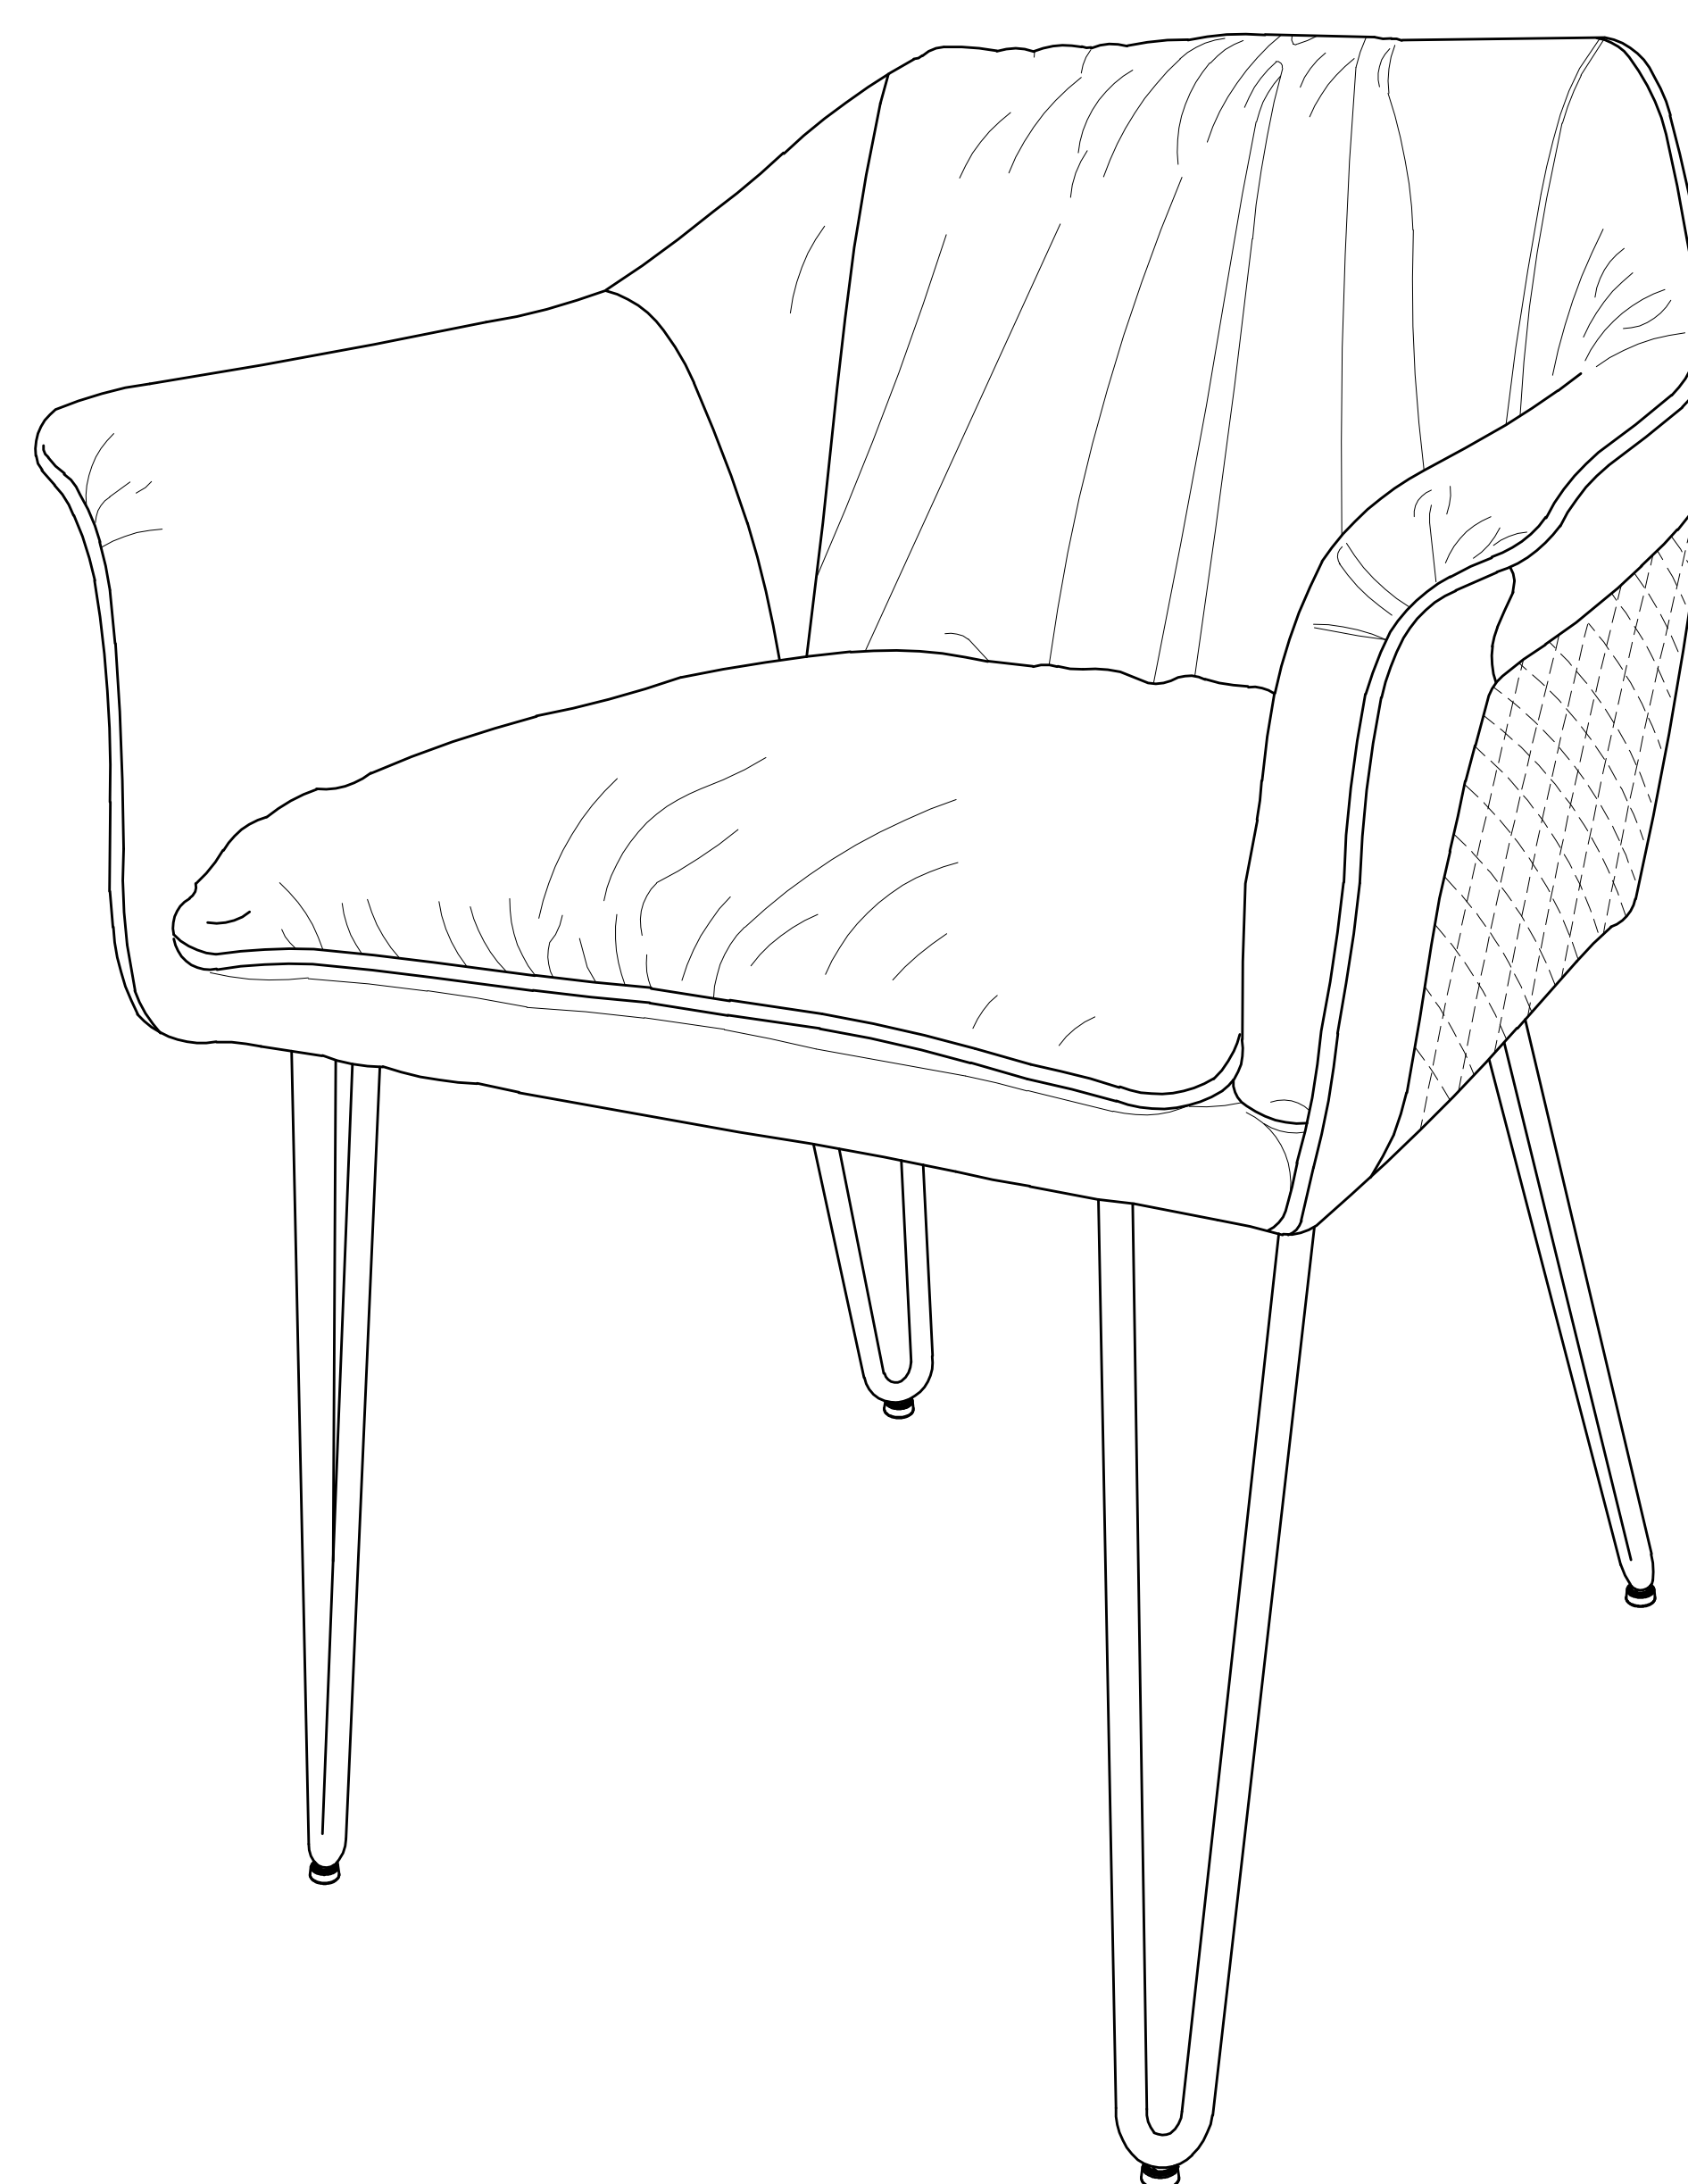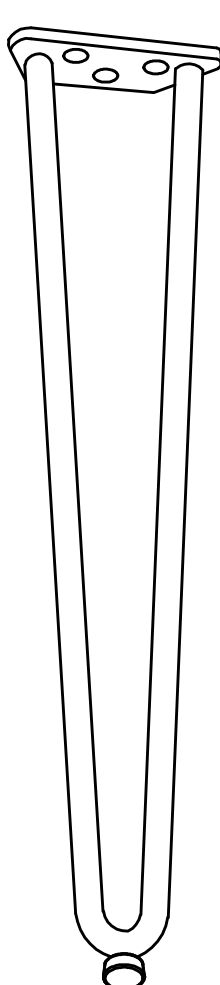

E. Seat 1PC

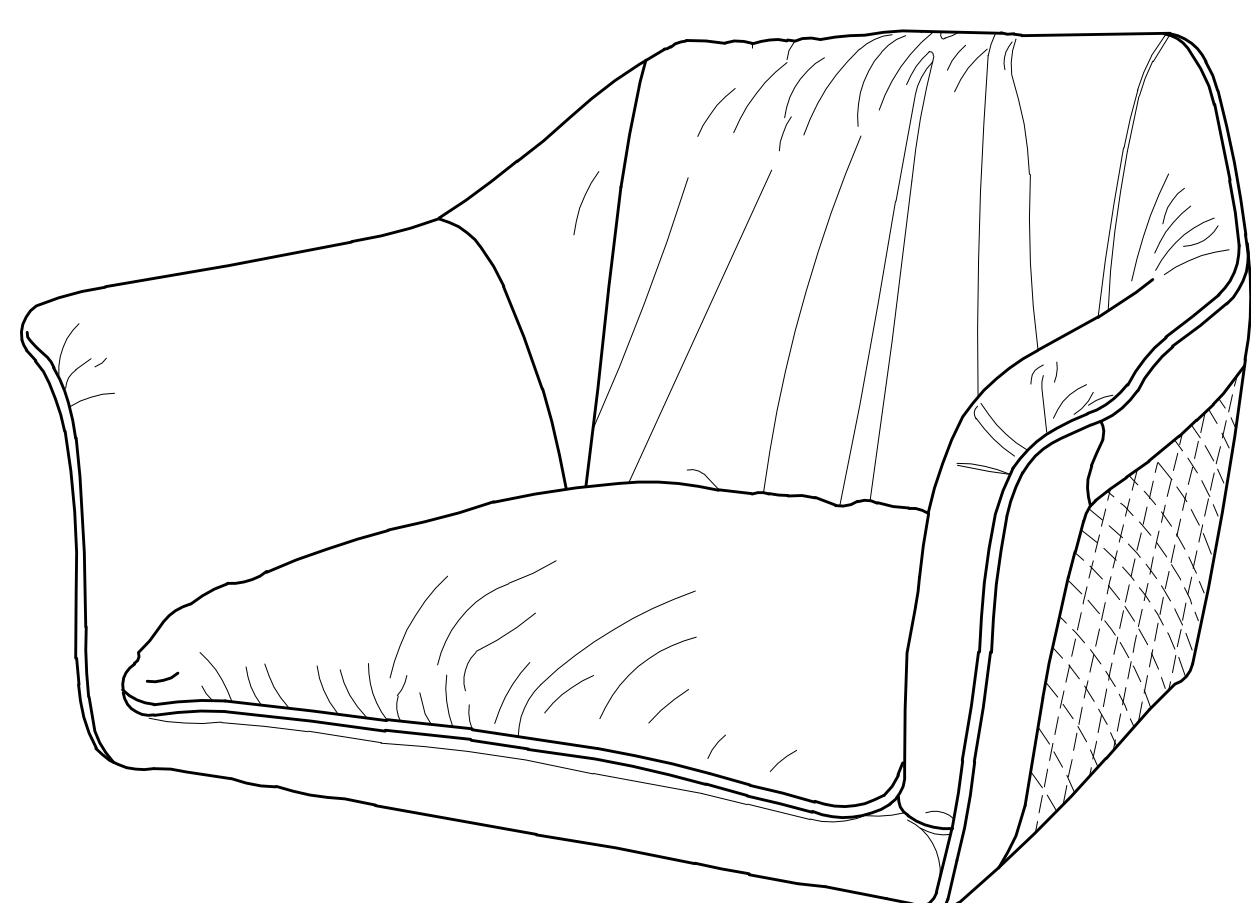

Hardware Packed in Box

1	Allen Bolt (M6X18)	12 PCS	2	Lock Washer (M6)	12 PCS	3	Flat Washer (M6)	12 PCS	4	Allen Key	1 PC

STEP 1:

NOTE! PLEASE ENSURE THAT THE CHAIR LEG CORRESPONDS WITH THE MARKING ON THE UNDERSIDE OF THE CHAIR!

ATTACH CHAIR LEGS (A, B, C, D) TO THE SEAT (E) USING THREE ALLEN BOLTS (1), LOCK WASHERS (2) AND FLAT WASHERS (3) PER LEG; A TOTAL OF 12 BOLTS AND WASHERS. TIGHTEN ALL BOLTS COMPLETELY WITH THE ALLEN KEY (4)

