

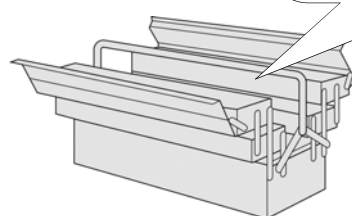
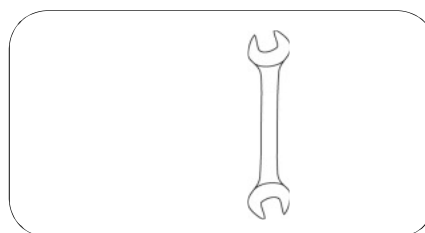


## Oregon 2

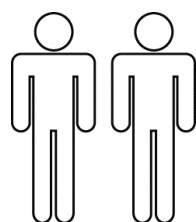


- |                                  |                                       |
|----------------------------------|---------------------------------------|
| <b>D</b> Montageanleitung        | <b>GB</b> Assembly instructions       |
| <b>FR</b> Notice de montage      | <b>NL</b> Handleiding voor de montage |
| <b>CZ</b> Montážní návod         | <b>IT</b> Istruzioni di montaggio     |
| <b>RO</b> Instrucțiuni de montaj | <b>RU</b> инструкция по сборке        |
| <b>PL</b> Instrukcja montażu     | <b>SK</b> Návod na montáž             |
| <b>HU</b> Szerelési útmutató     | <b>TR</b> Montaj talimatı             |

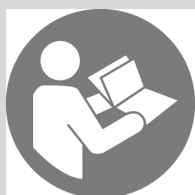

## Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба


Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	<b>Oregon 2 DB</b>	
Nr. • No. • N° • Номер • Č • Sz	<b>SH50</b>	
Typ • Type • Tip • Típus • Tipo Тип	<b>BS G</b>	

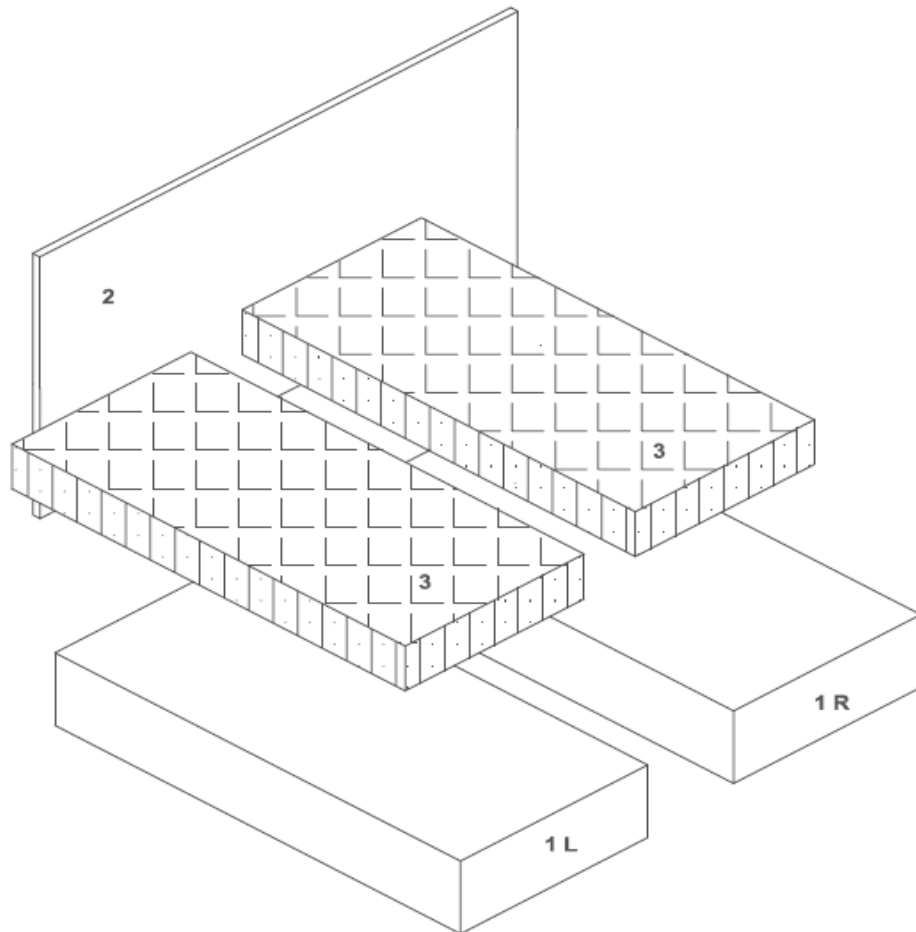


A	B	C	D	E	F
4x	12x 8x40	8x	8x 8x50	8x 8x60	8x M8



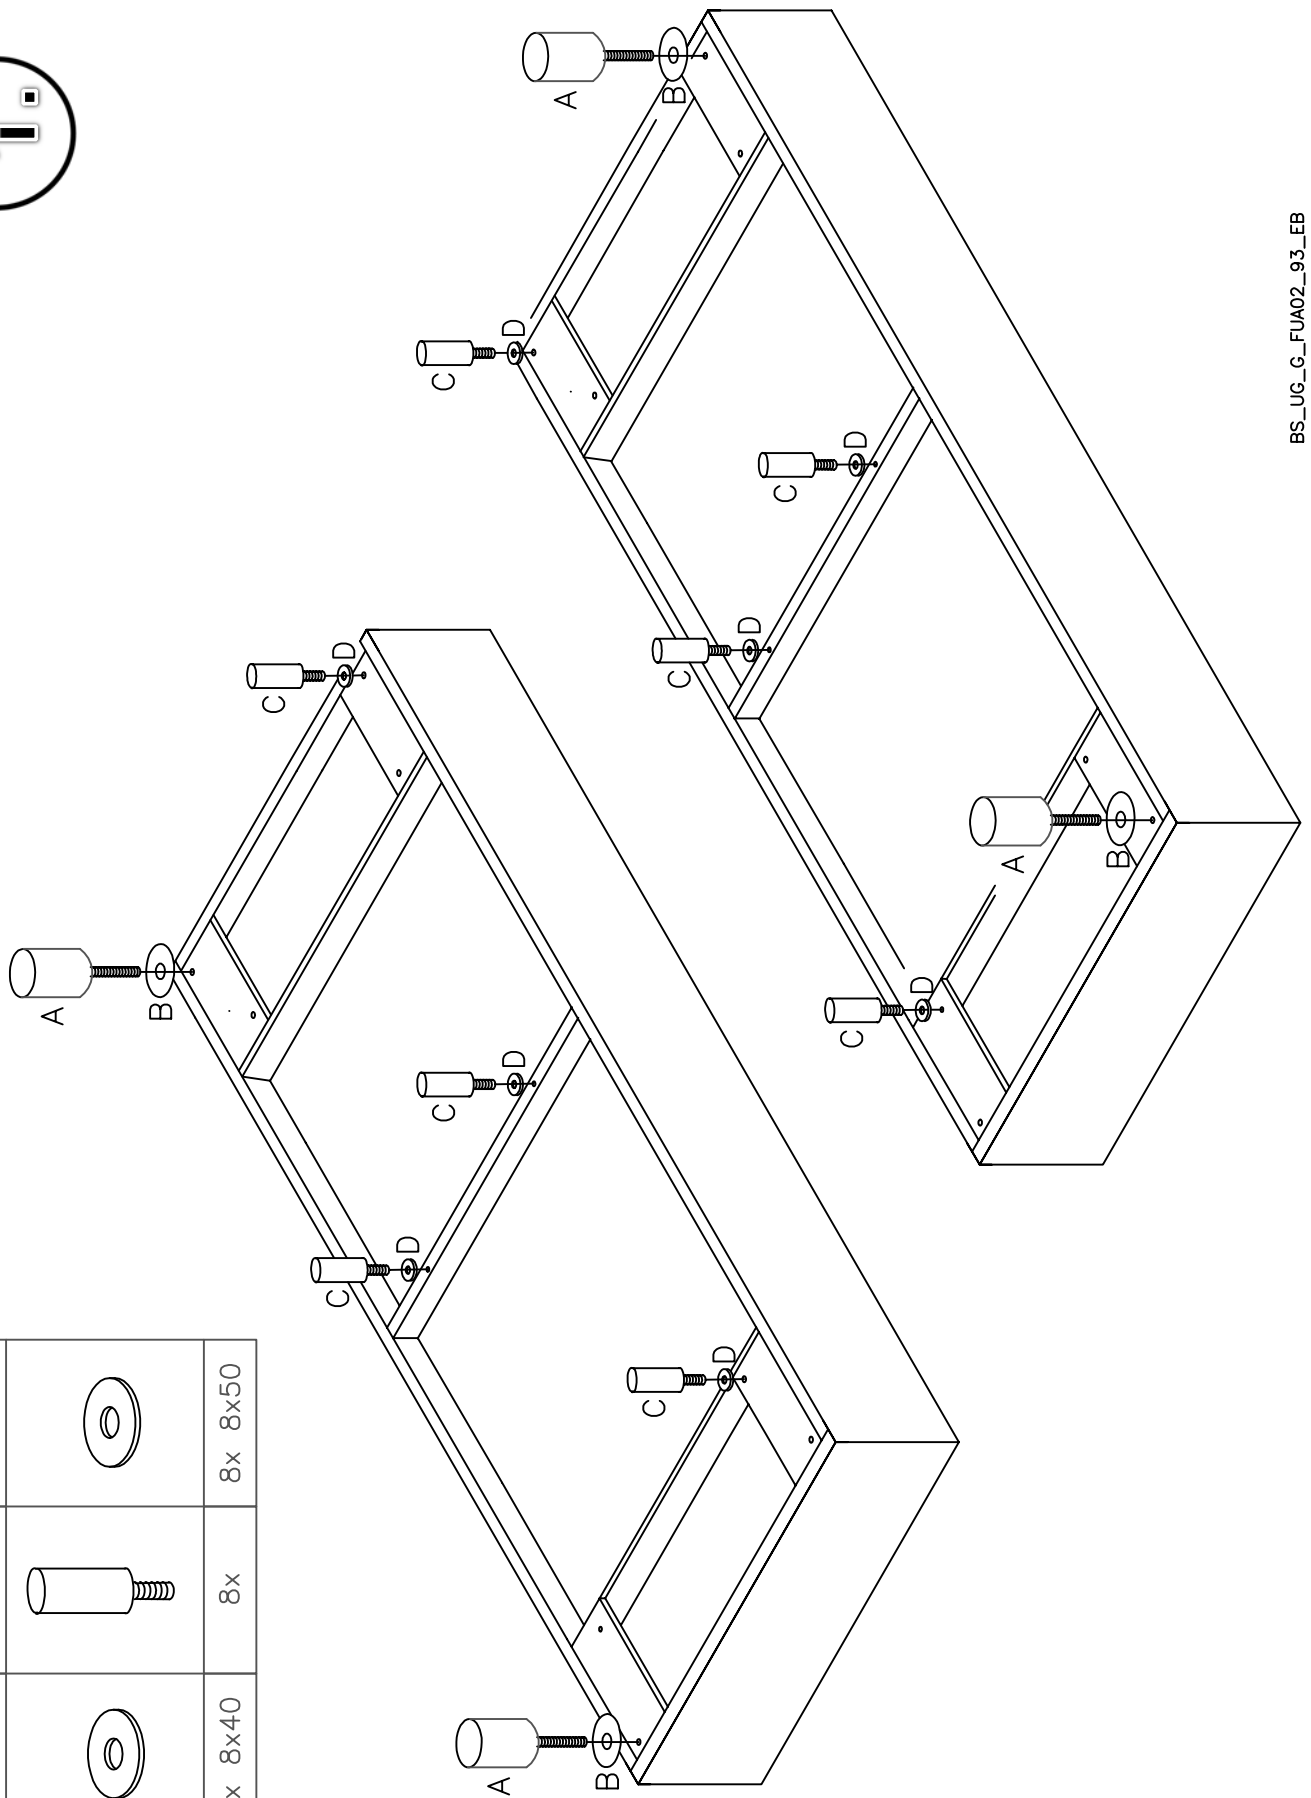


A		4x
B		4x 8x40
C		8x
D		8x 8x50

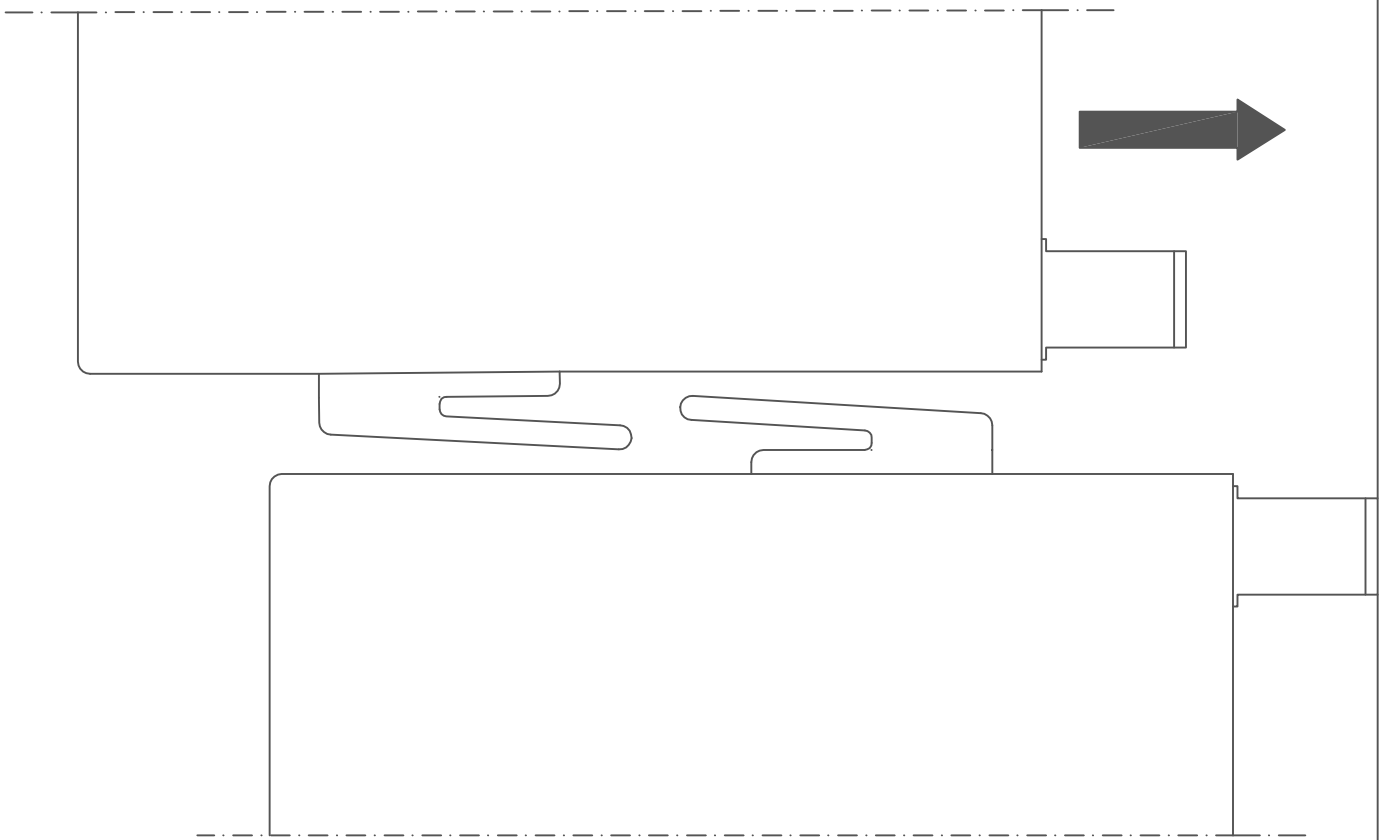



3.

Achtung! Schrauben nicht überdrehen	GB	Watch Out! Do not over tighten
FR Attention! Ne serrez pas trop	NL	Let Op! Niet te vast
CZ Dávej Pozor! Nepřetahujte	IT	Attenzione! Non stringere
RO Ai Grija! Nu strângeți	RU	Осторожно! Не затягивайте
PL Uwaga! Nie dokręcać zbyt mocno	SK	Dávaj Pozor! Nepretahujte
HU Vigyázz! Ne húzza túl	TR	Dikkat! Üzerinde sıkmayın

E	B	F
		
8x 8x60	8x 8x40	8x M8

