

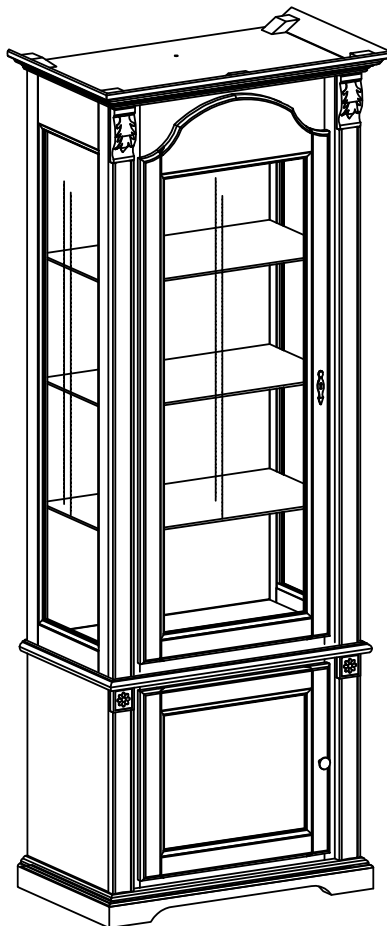
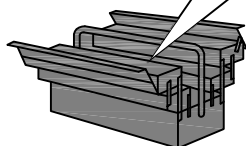




Art. Nr 4387 7134; 8693 1605



LKZ 41569

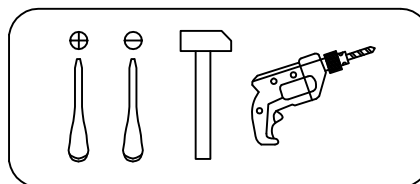


- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montazu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrukțiuni de montaj |
| (TR) Montaj talimati | (RU) Инструкция по монтажу |

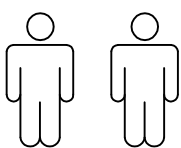

















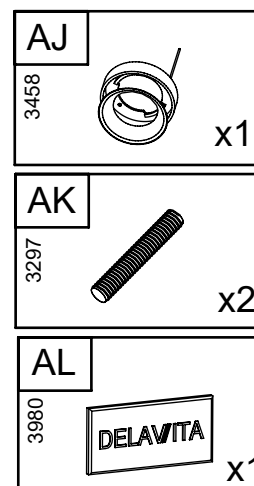
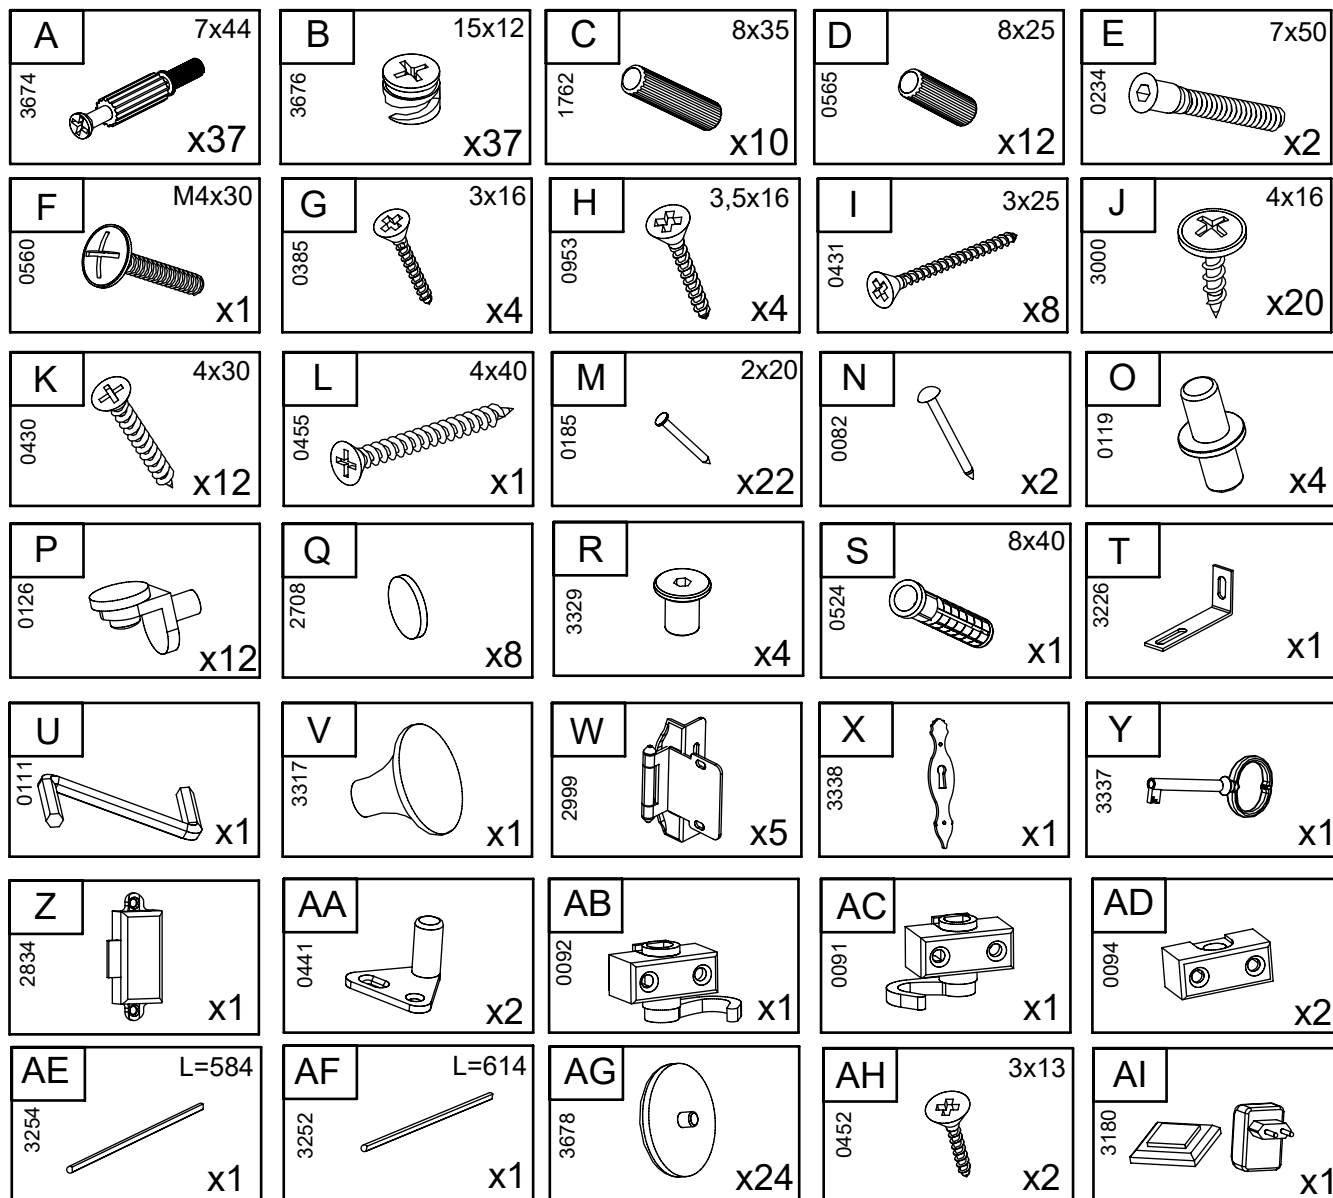


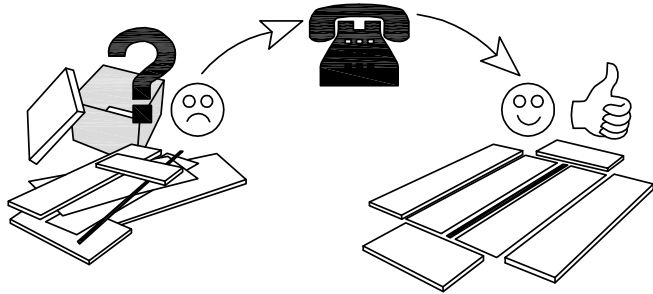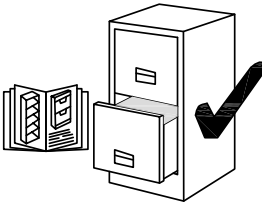Service - Dienstverlening - Serwis - Servis - Сервисная служба	
Name - Naam - Nazwa - Isim - Название	
Nr. - No. - Номер	
Тур - Type - Тип - Тип	
	
 	

N	Size/MaB (mm)	Qty	√	N	Size/MaB (mm)	Qty	√
1	758x454x77	1		11	662x369x16	1	
2	530x408x16	1		12	1470x408x22	1	
3	530x408x16	1		13	1470x408x22	1	
4	750x454x25	1		14	1472x668x21	1	
5	530x658x18	1		15	828x497x66	1	
6	530x60x22	1		16	1470x658x18	1	
7	530x60x22	1		17	1470x60x22	1	
8	552x694x3	1		18	1470x60x22	1	
9	670x372x16	1		19	658x360x4	3	
10	482x542x22	1		20	1422x542x22	1	


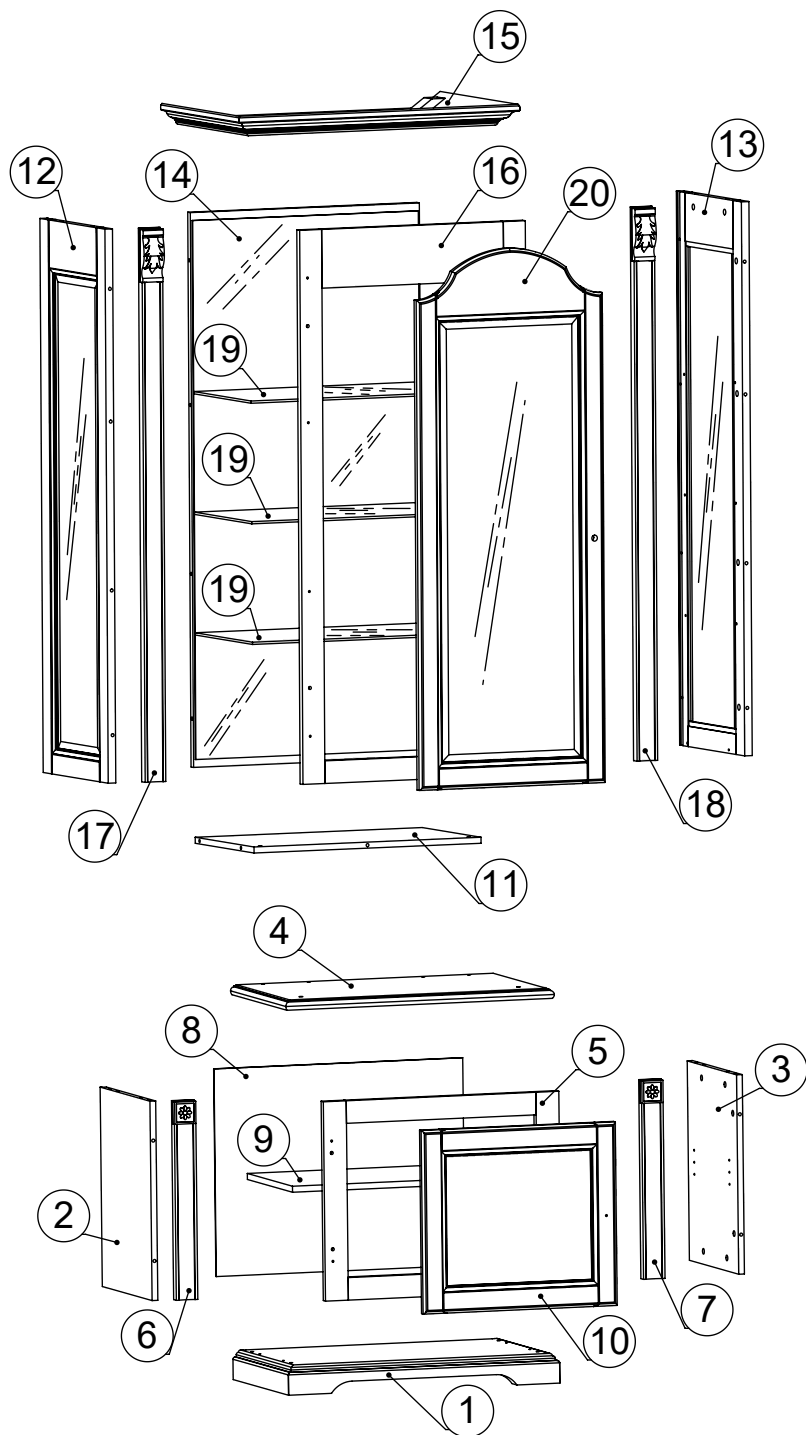


1

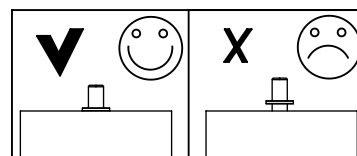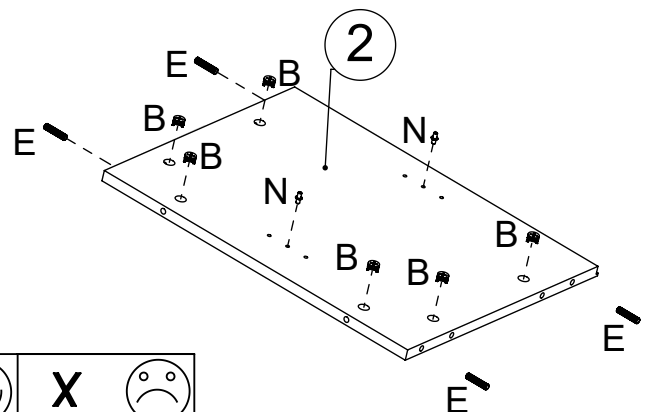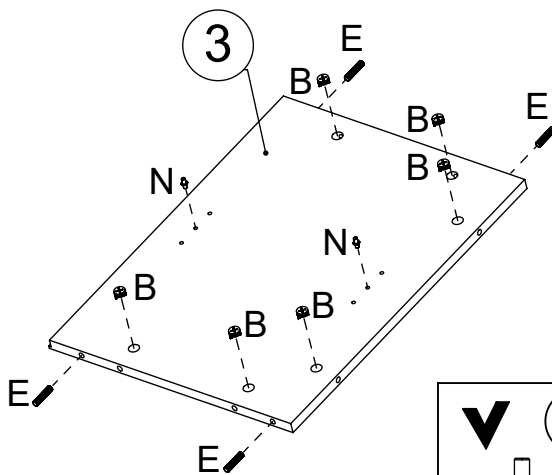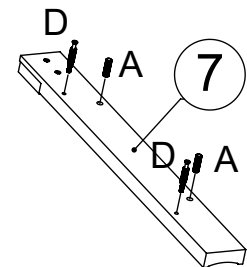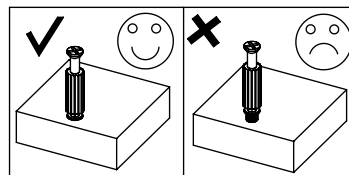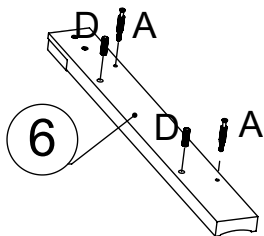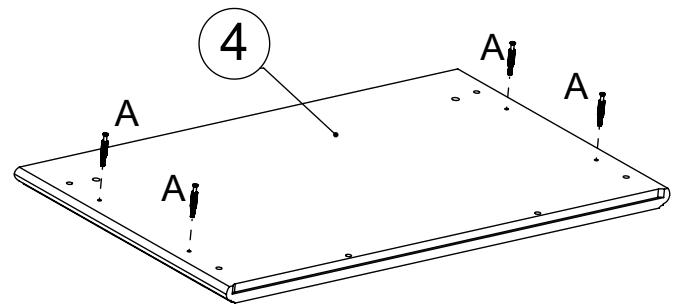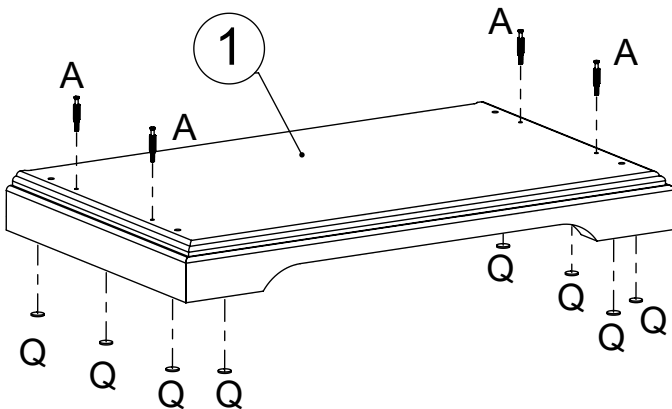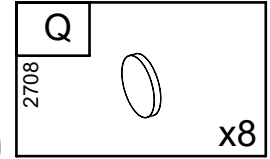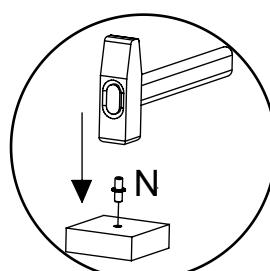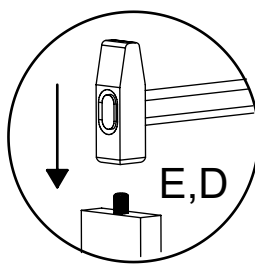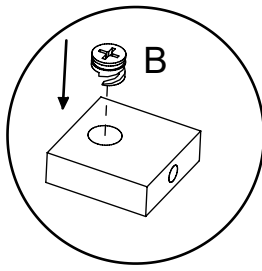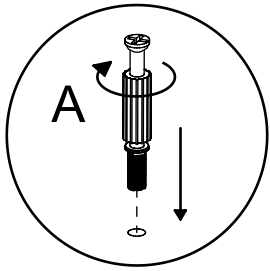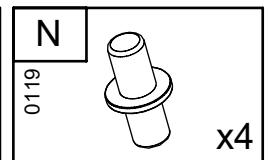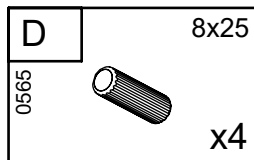
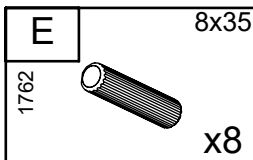
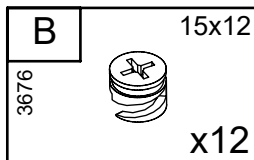
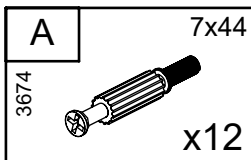


4

K	4x30
0430	 x4

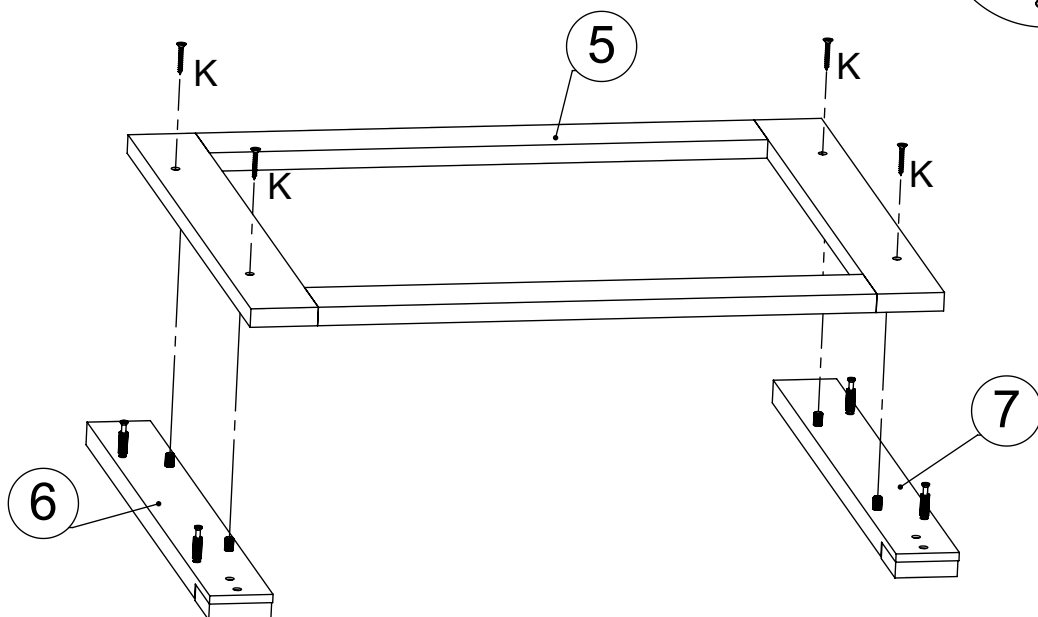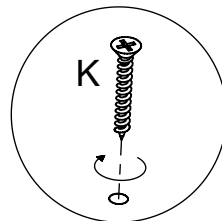


F	M4x30
0560	
	x1

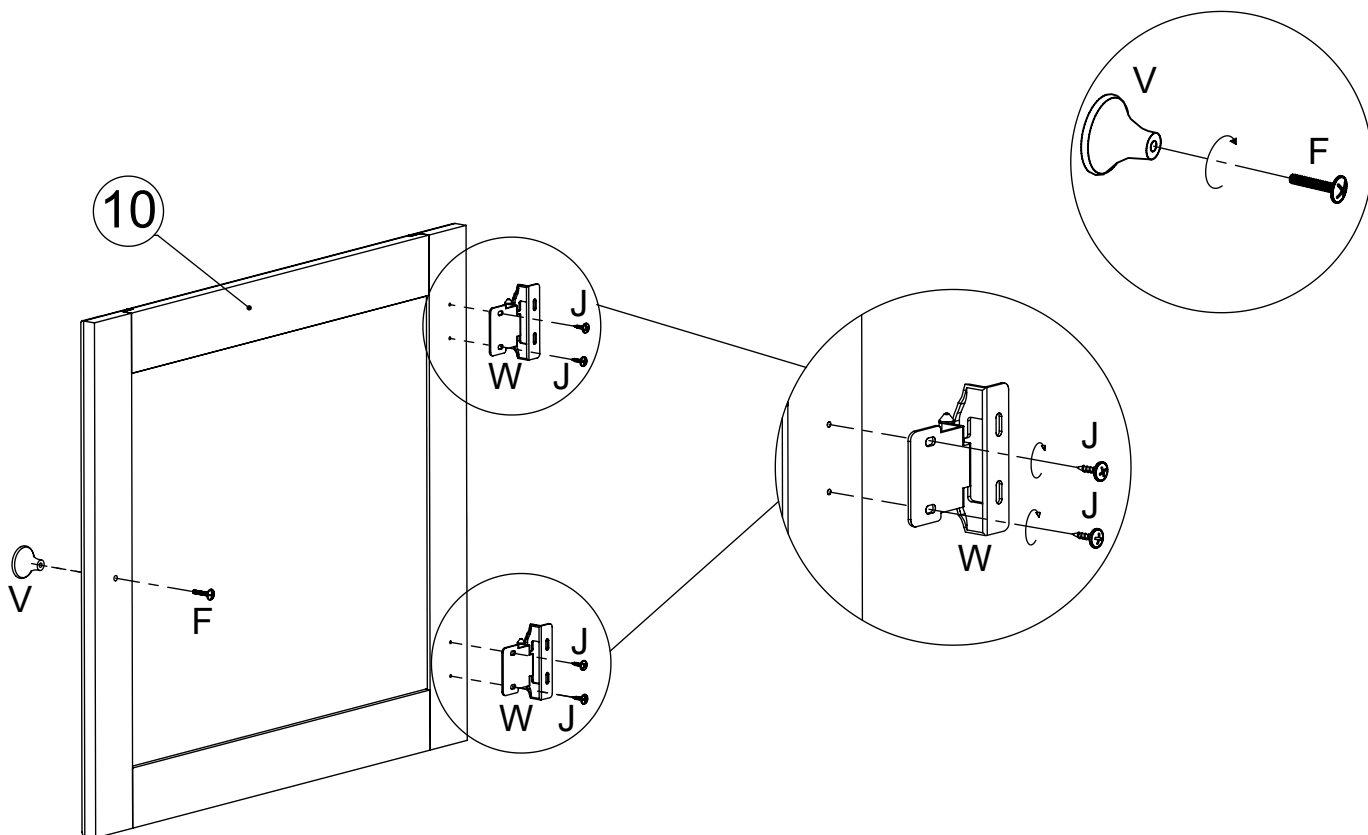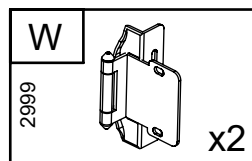
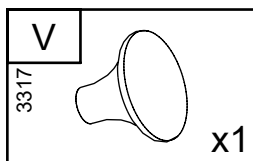
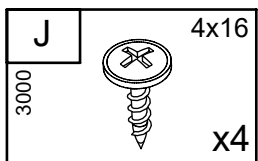


5

4



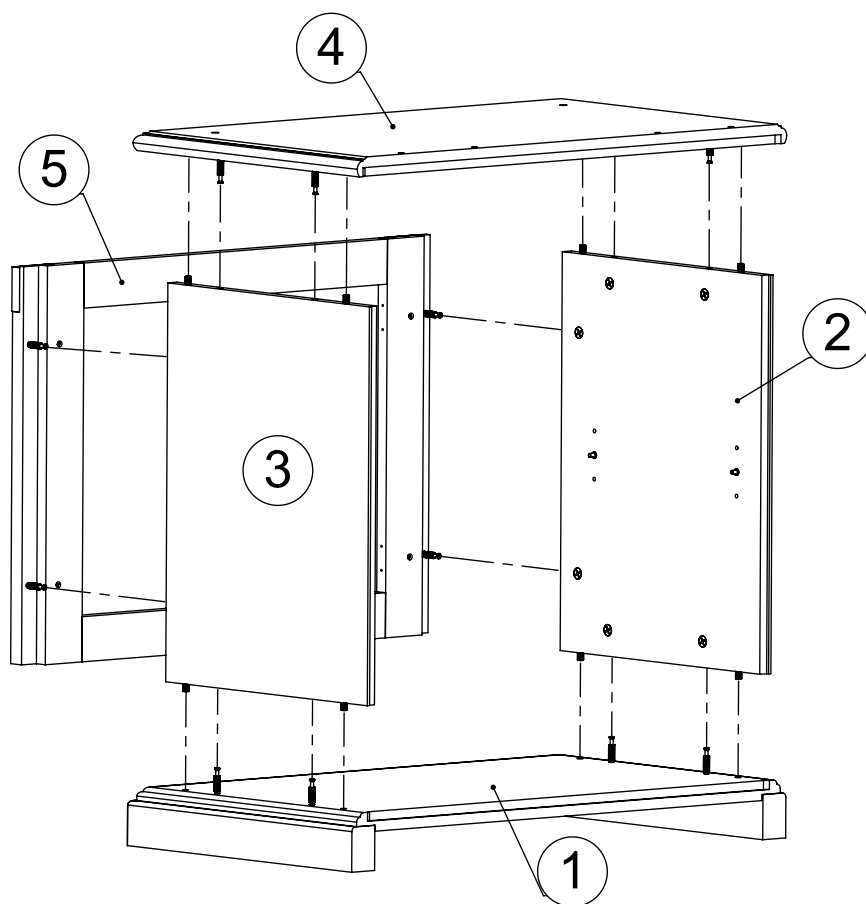







5

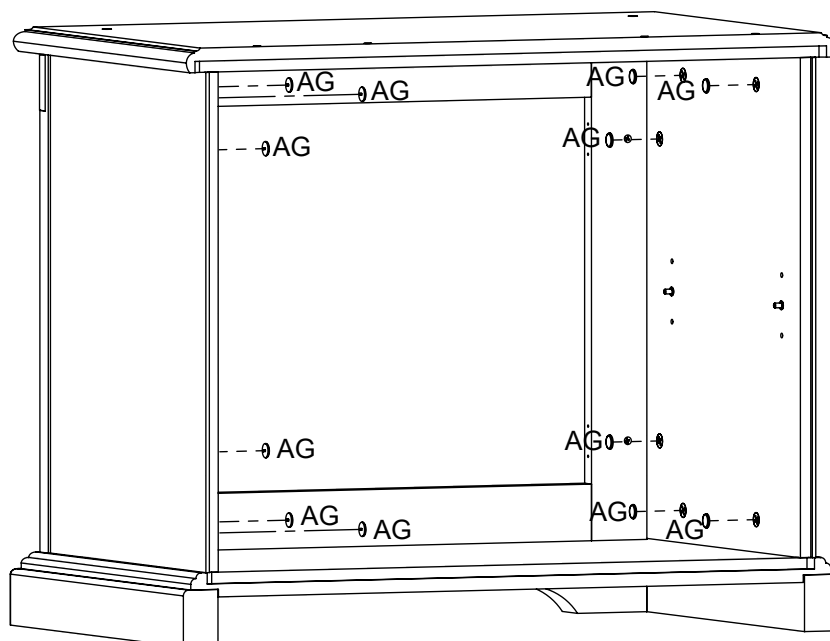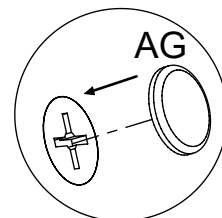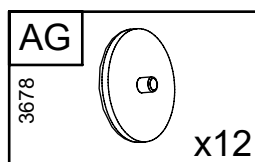

6




6

A 3674  7x44 x25	B 3676  15x12 x25	C 1762  8x35 x2	D 0565  8x25 x8	P 0126  x12
--	---	---	---	--

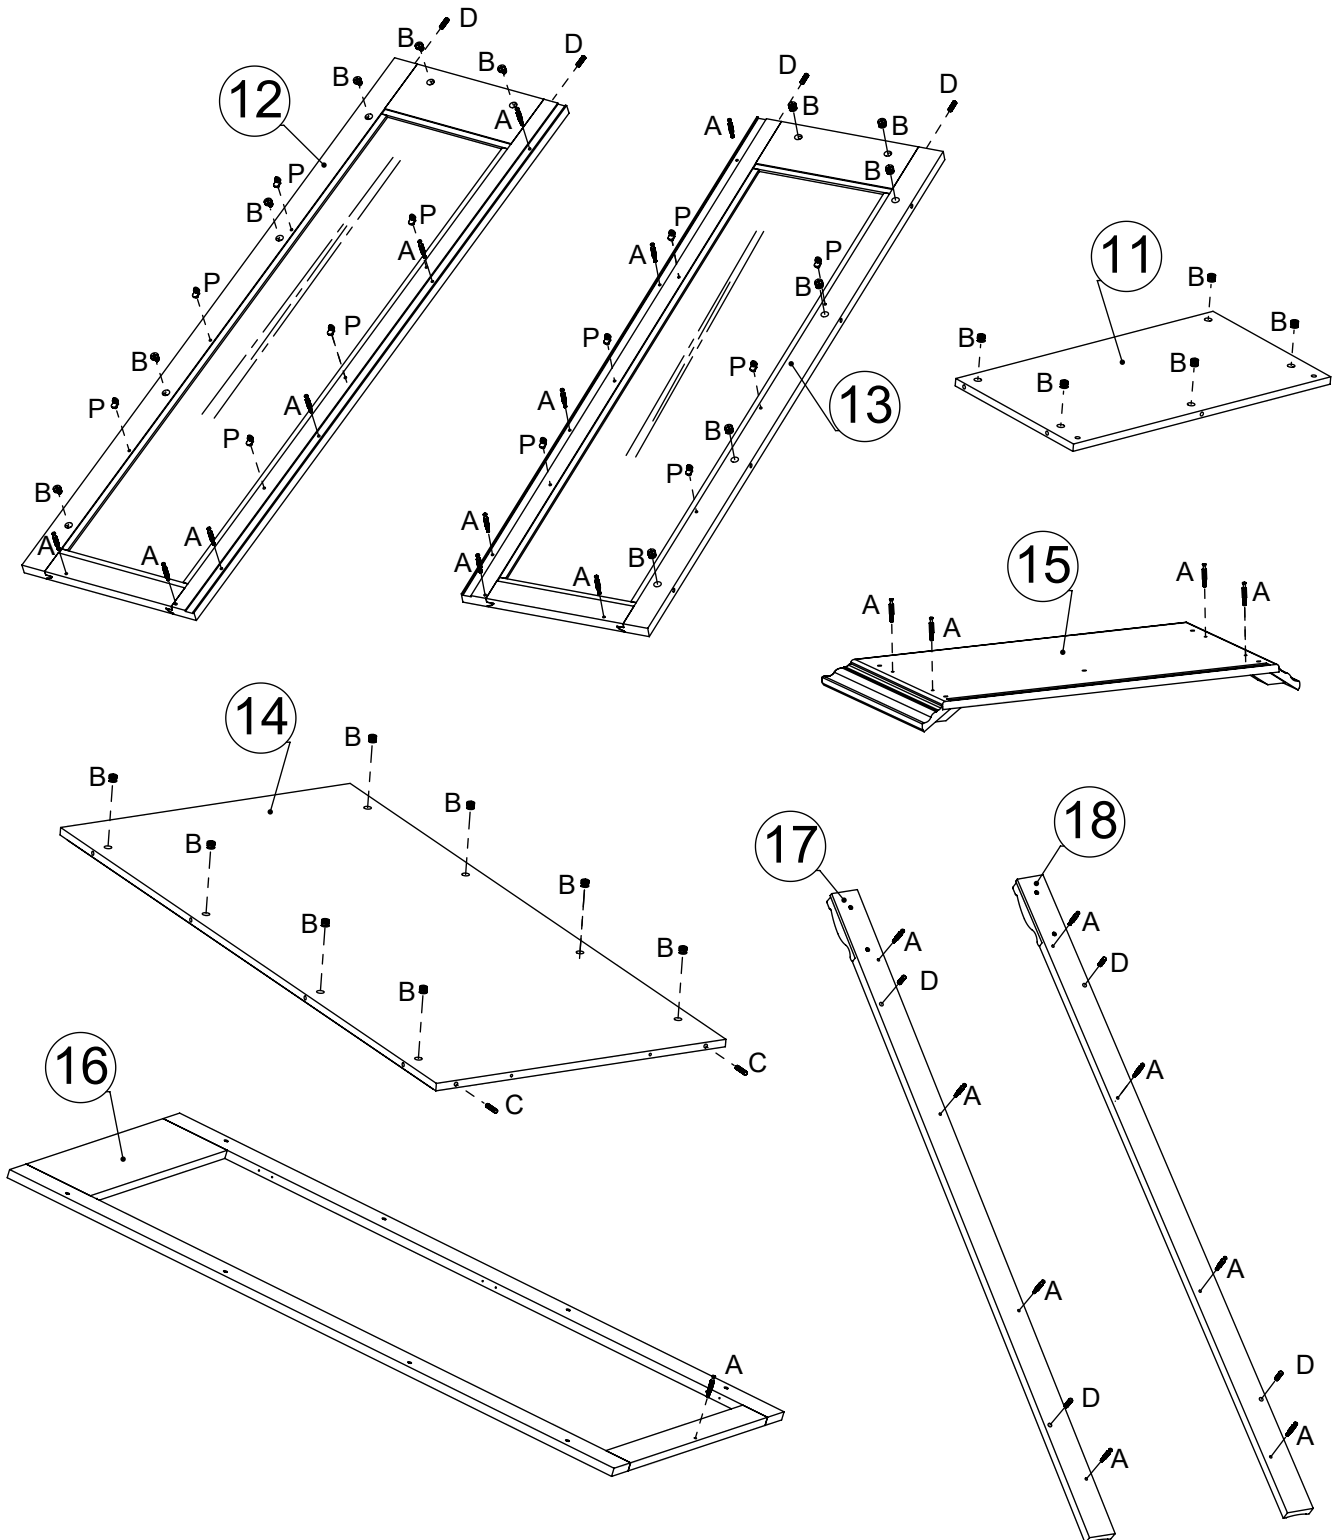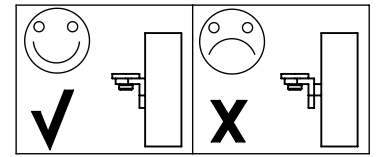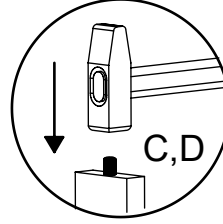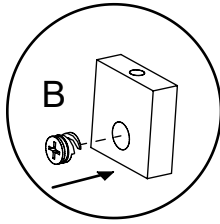
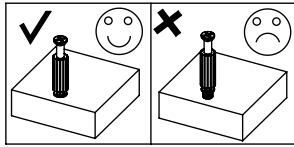


7

7

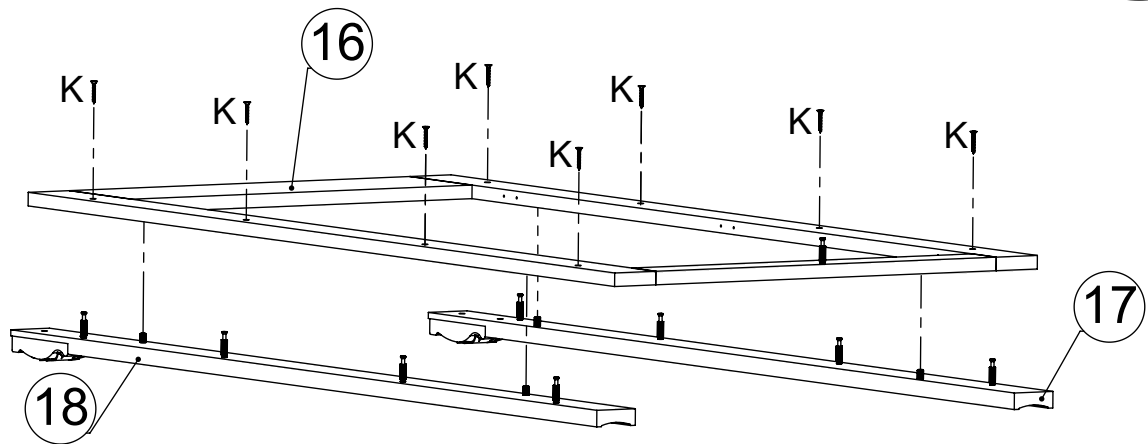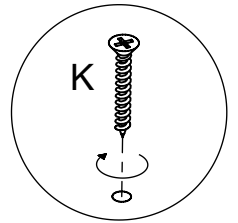
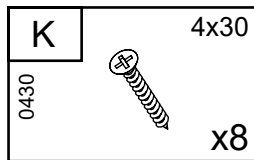


8


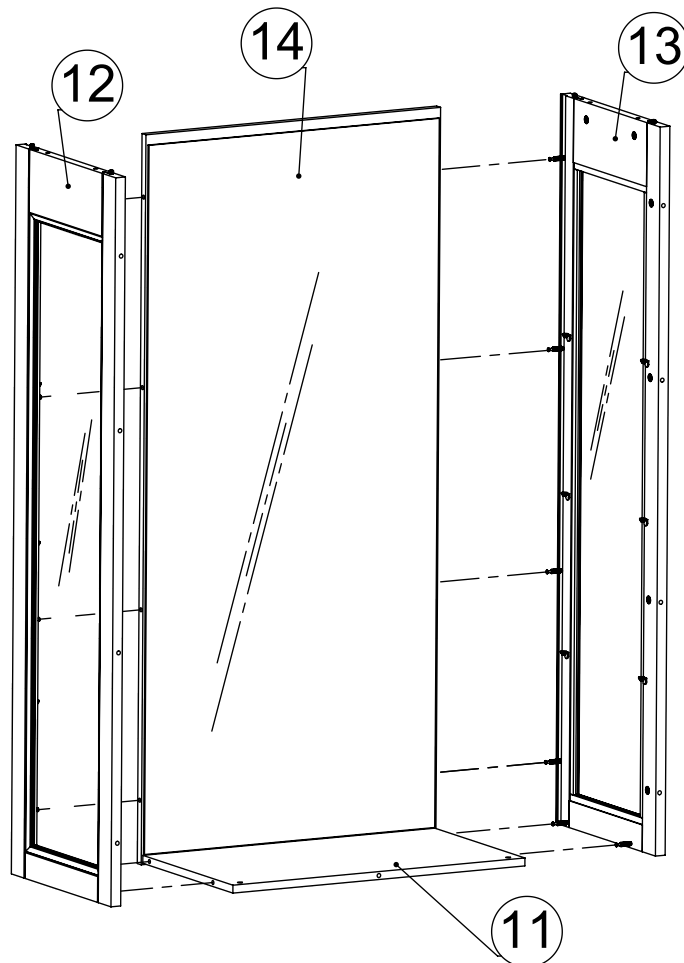
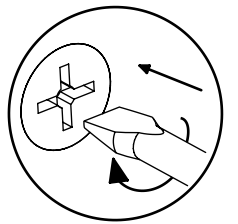


8

9






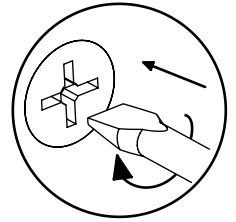
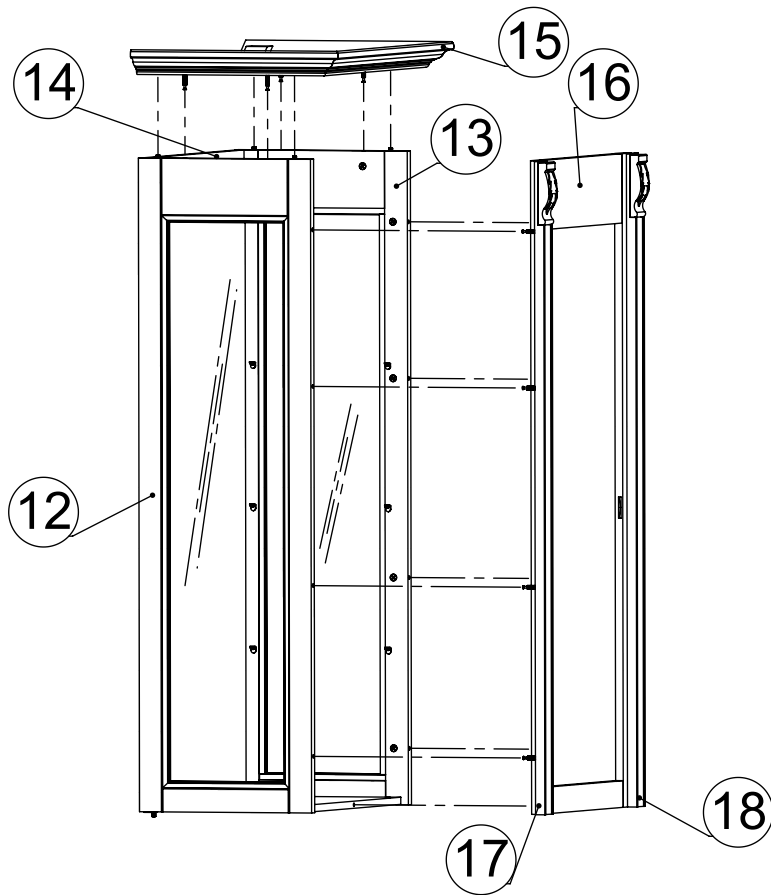


10

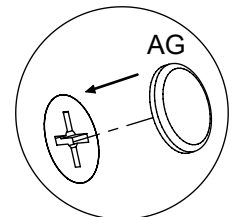
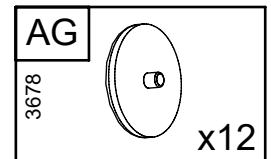
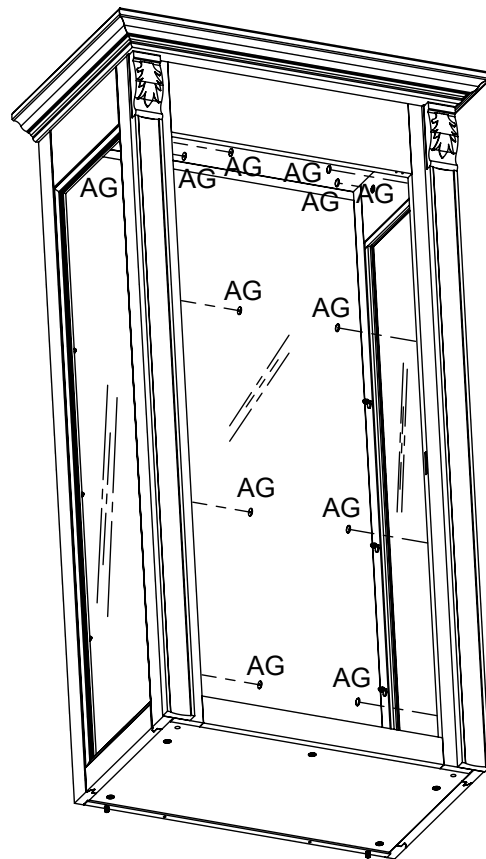


9

11

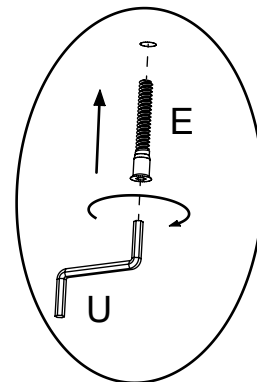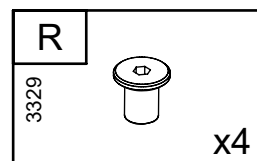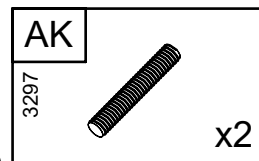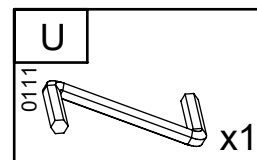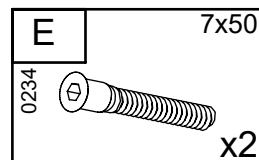
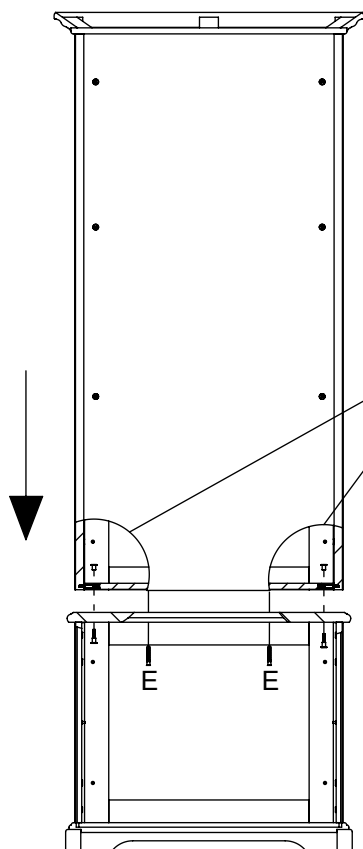


12

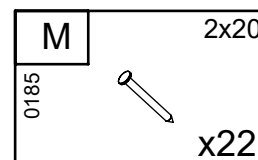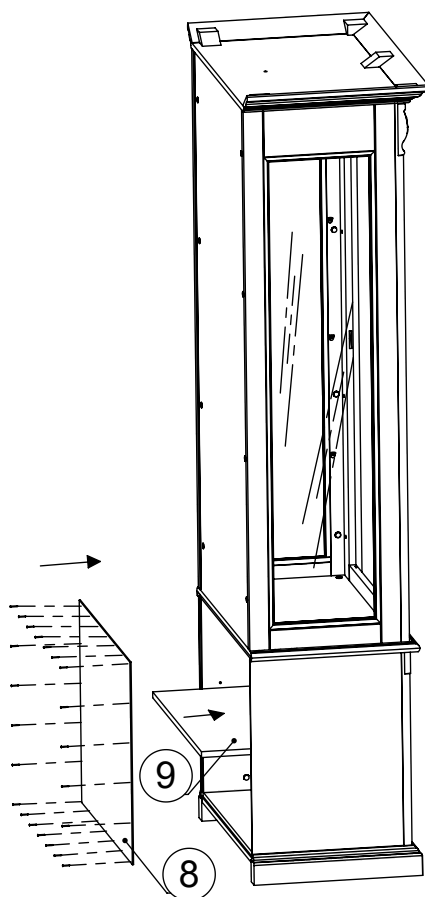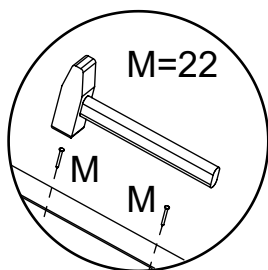


10

13


H 0953  3,5x16 x2	J 3000  4x16 x6	N 0082  x2	W 2999  x3	Z 2834  x1
---	---	---	---	---


X 3338  x1

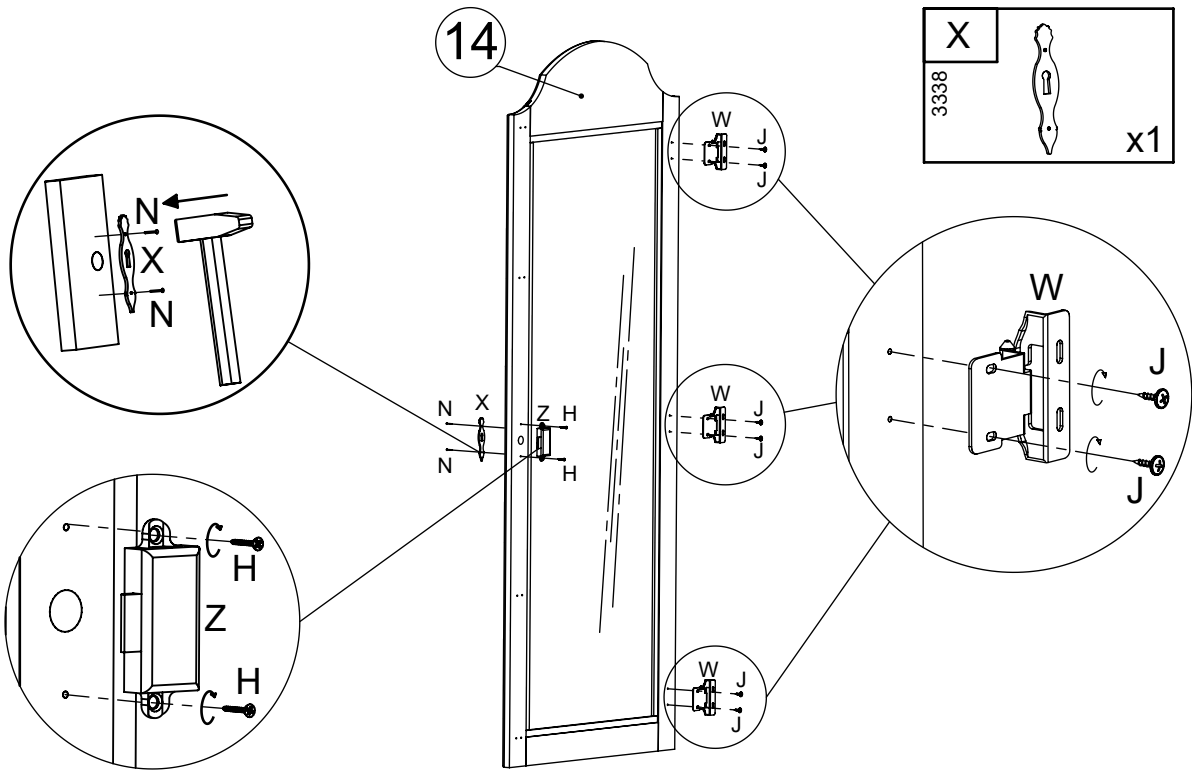


14

I 0431  3x25 x8


AB 0092  x1
--

AC 0091  x1
--

AD 0094  x2
--


AE 3254  L=584 x1

AF 3252  L=614 x1

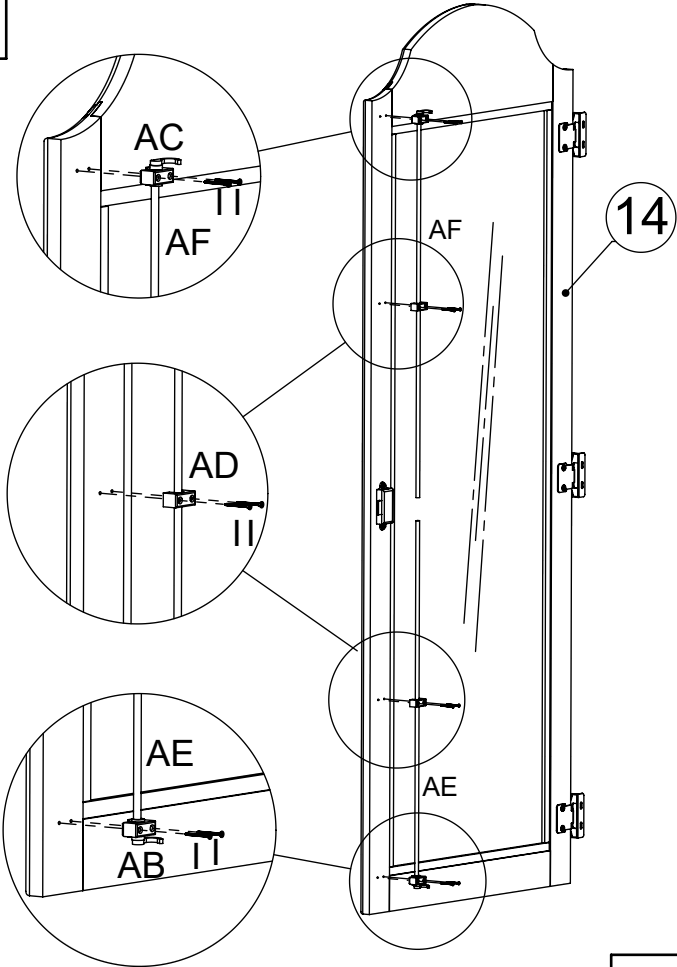


11







15






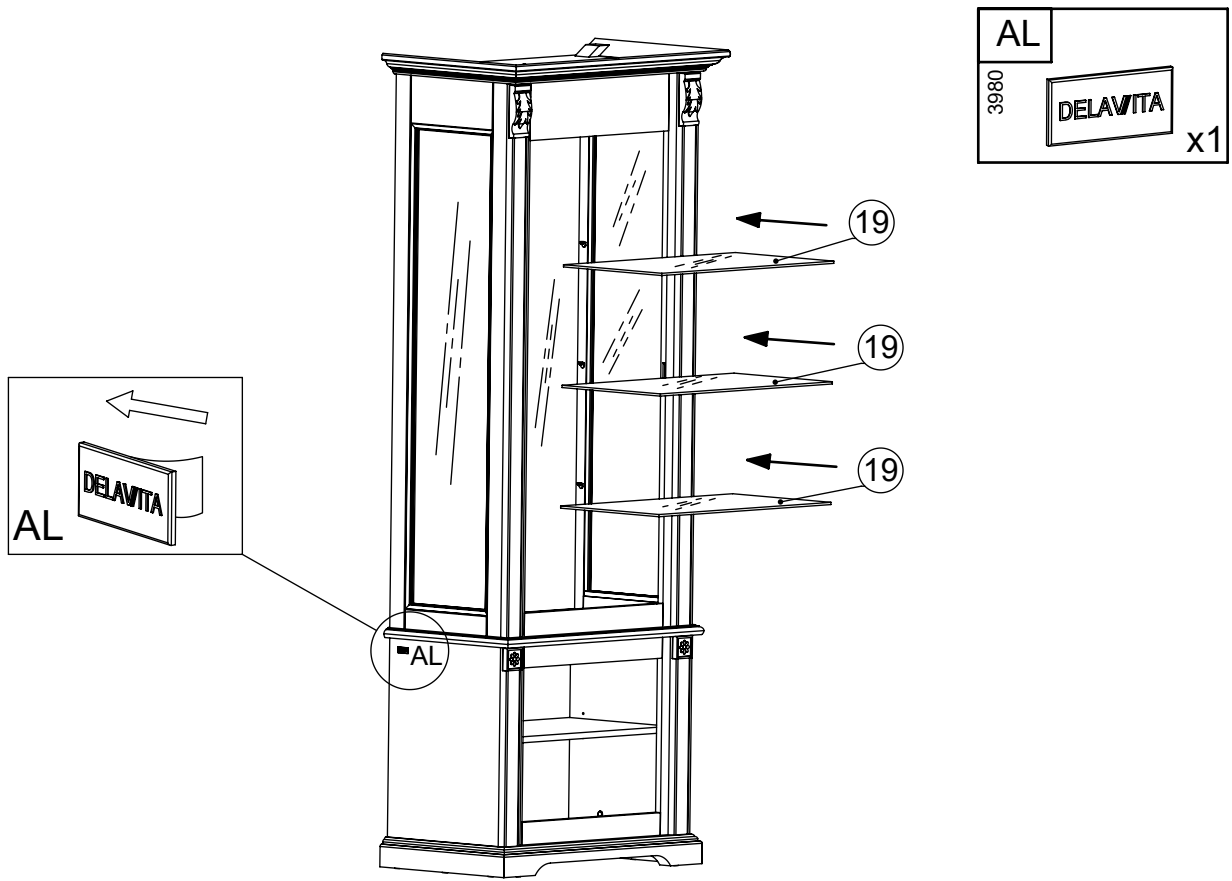



16

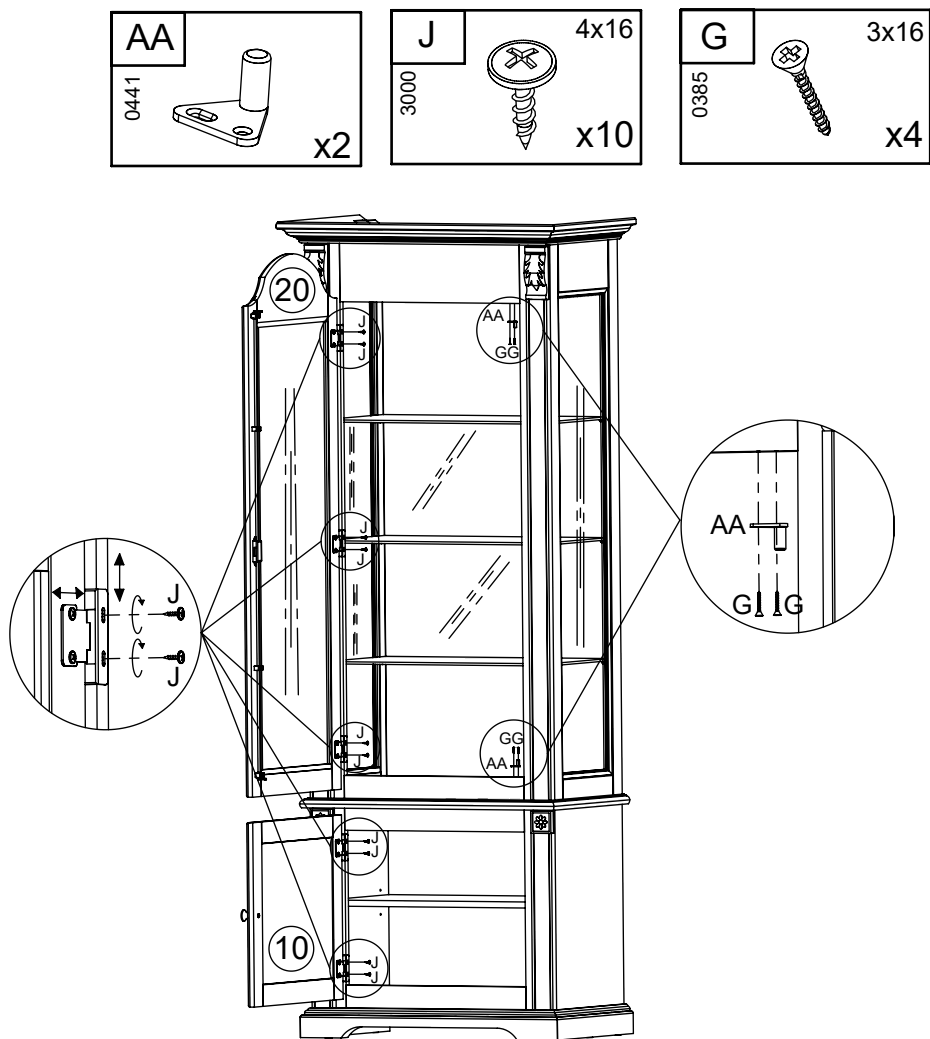


12

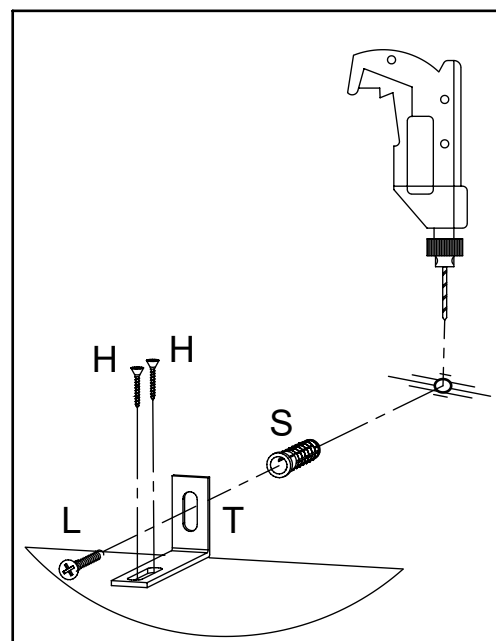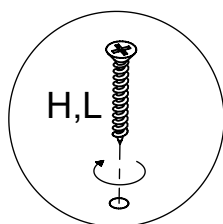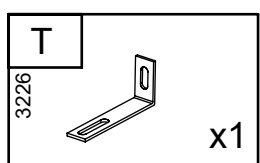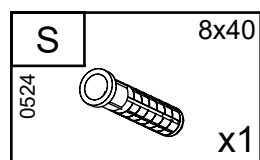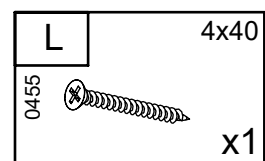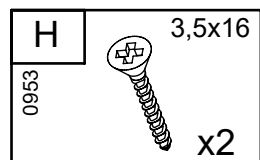

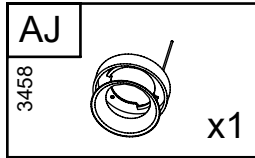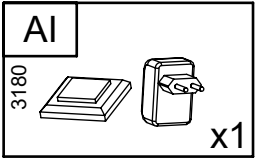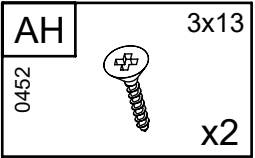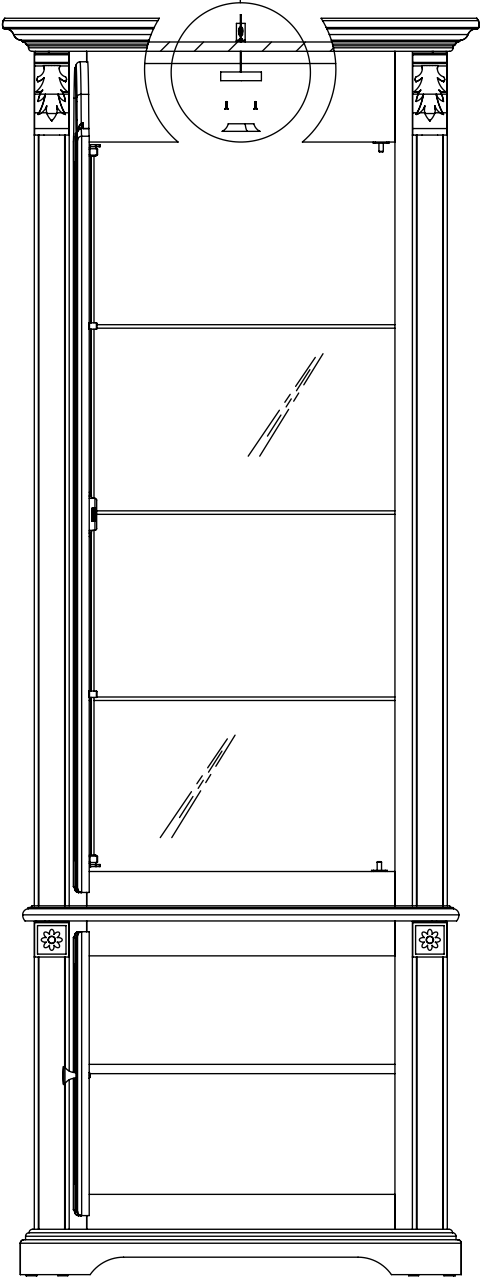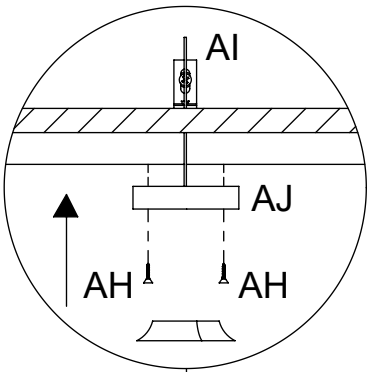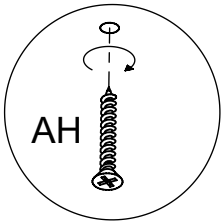

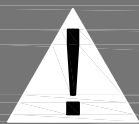

Achtung • Attention • Attenzione
Opgelet • Uwaga • Pozor • Figyelem
Atenție • Dikkat • Внимание

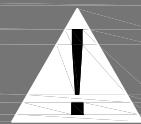

(D)	Wandbefestigung dient als Kippschutz — unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping — be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
(FR)	La fixation murale sert de protection contre le basculement — à installer impérativement ! Pour certains types de murs il faut des chevilles specials !
(IT)	Il fissaggio alla parete serve da protezione anti-ribaltamento — attaccarla assolutamente ! Per alcune strutture di parete può essere necessario un tassello speciale !
(NL)	Bevestiging aan de muur dient als kantelbescherming — zeker en vast bevestigen ! Bij enkele muurtypes is een speciale plug misschien vereist !
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem — koniecznie zamontować! Do niektórych rodzajów ścian koniecznie zastosować specjalne kołki mocujące.
(CZ)	Montáž na stěnu slouží jako ochrana proti převrhnutí — bezpodmienečně umístěte! Uněkterých typů stěn může být zapotřebí speciální hmoždinka !
(SK)	Upevnenie na stenu slúži ako ochrana proti prevráteniu — bezpodmienečne použite! Pre niektoré druhy stien môže byť potrebná špeciálna hmoždenka !
(HU)	A terméket a falhoz kel rögzíteni, különben az felborulhat! Egyes faltípusoknál speciális tiplit kell használni !
(RO)	Sistemul de fixare la perete servește ca protecție la răsturnare — de montat obligatoriu! Pentru unele tipuri de pereți este posibil să fie necesar un diblu special !
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir düble gerekli olabilir !
(RU)	Обязательно установите крепление к стене во избежание опрокидывания ! Для некоторых типов стен может потребоваться специальный дюбель !