





Progress / Zenna / NXT

140 x 200 / 220cm

160 x 200 / 220cm


180 x 200 / 220cm




200 x 200 / 220cm

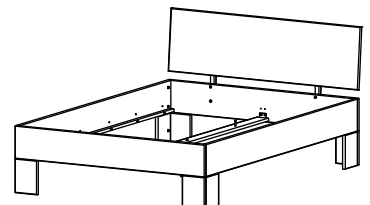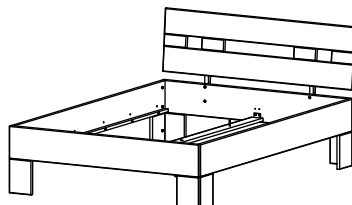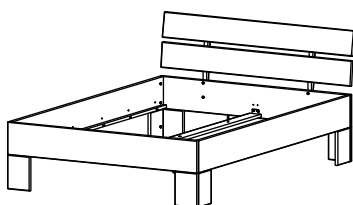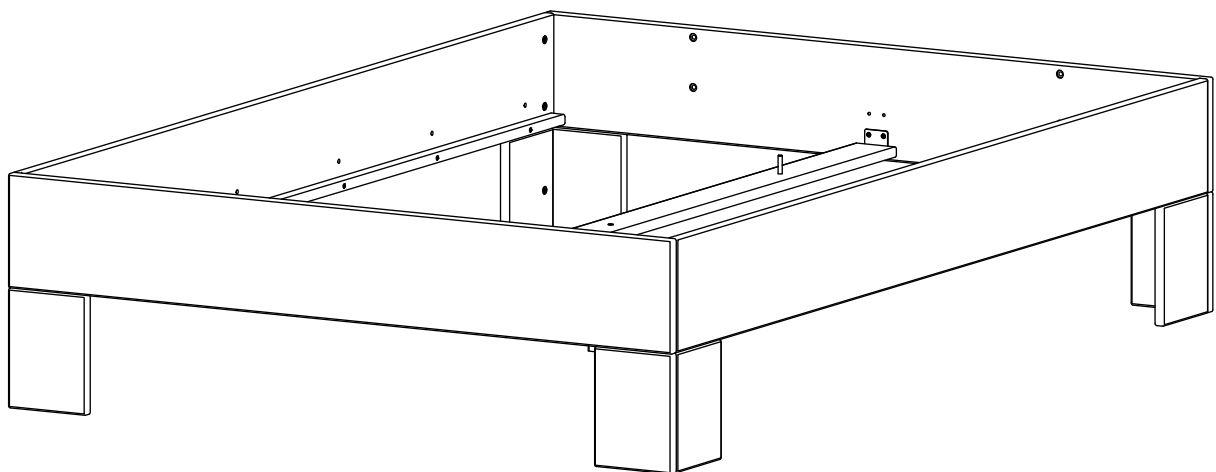


140 x 200 cm: 901 114 + 901 218
 160 x 200 cm: 901 116 + 901 218
 180 x 200 cm: 901 118 + 901 218
 200 x 200 cm: 901 120 + 901 218

140 x 220 cm: 901 114 + 901 220
 160 x 220 cm: 901 116 + 901 220
 180 x 220 cm: 901 118 + 901 220
 200 x 220 cm: 901 120 + 901 220

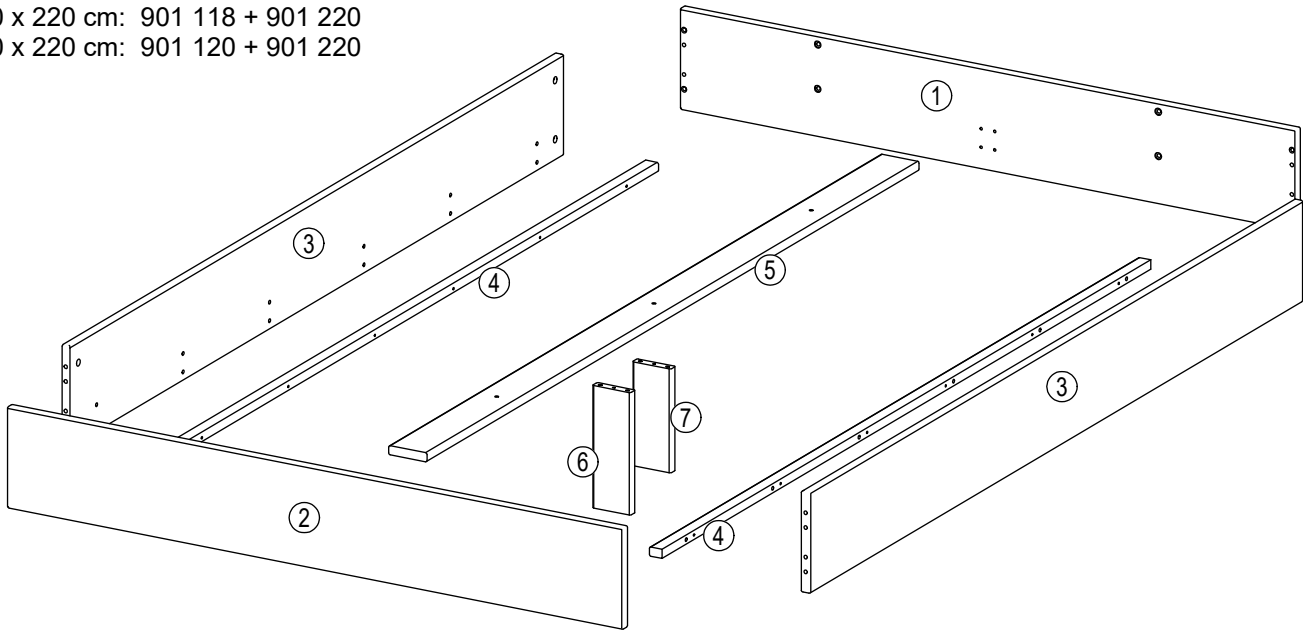


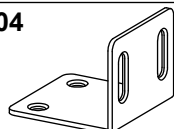
A24  12 x ø8 x 30mm	A28  12 x ø8 x 50mm	B01  8 x ø15 x 12,5mm	B14  8 x cc34, M6 x 7,8mm	
D37  12 x ø4 x 45mm	F63  8 x ø6,2 x 15mm	K11  1 x ø7 x 70mm	M21  1 x M6, ø8,8 x 13,5, ø14mm	Q52  1 x M6 x 22, ø19 x 6mm
V04  2 x 50 x 50 x 40 x 2mm	Z04  1 x 4mm			

901 121


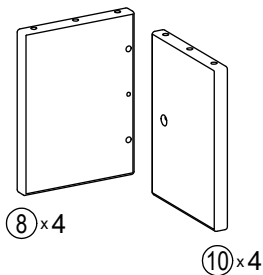


A28  32 x ø8 x 50mm	B01  4 x ø15 x 12,5mm	B10  4 x cc34, ø5 x 11mm
---	--	---



1

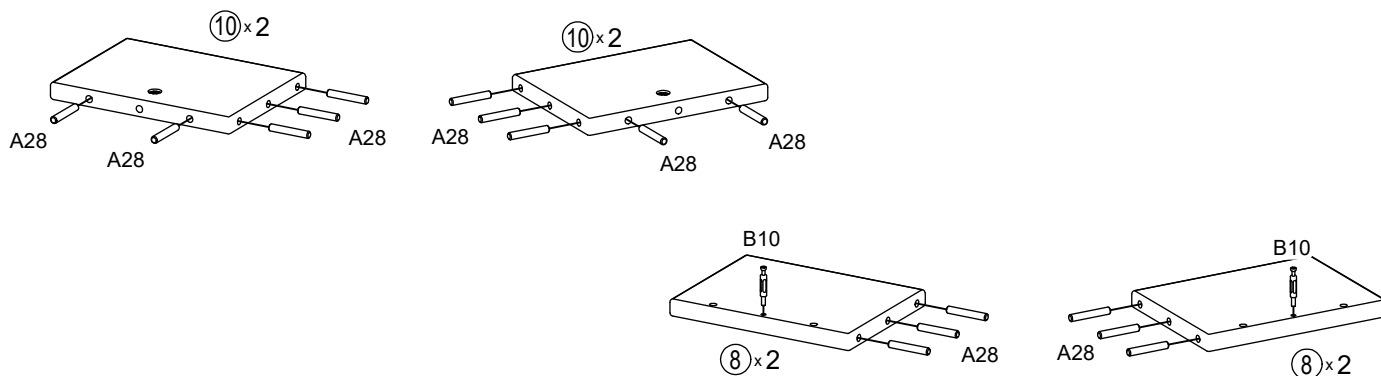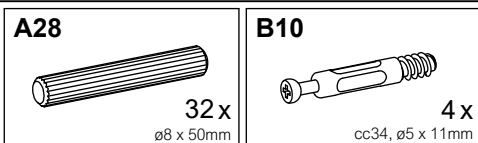


2

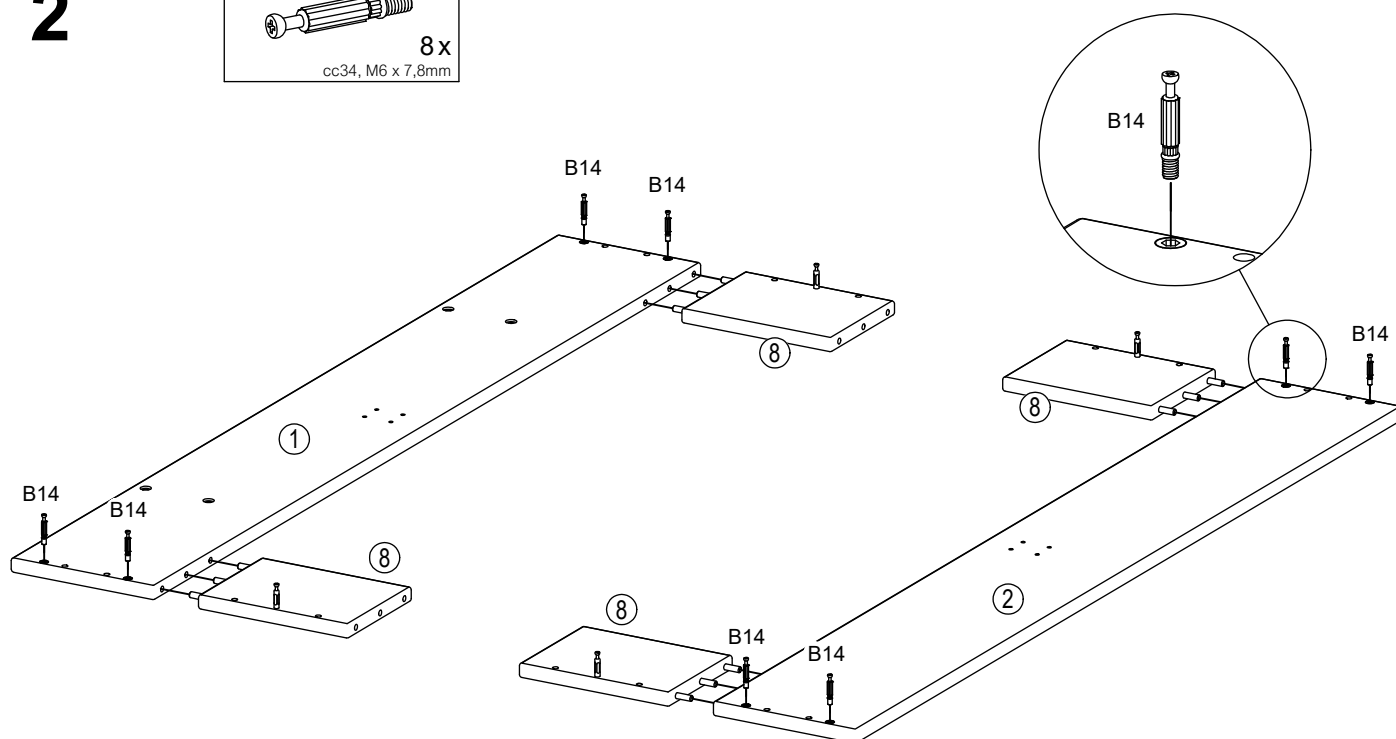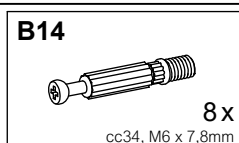



3

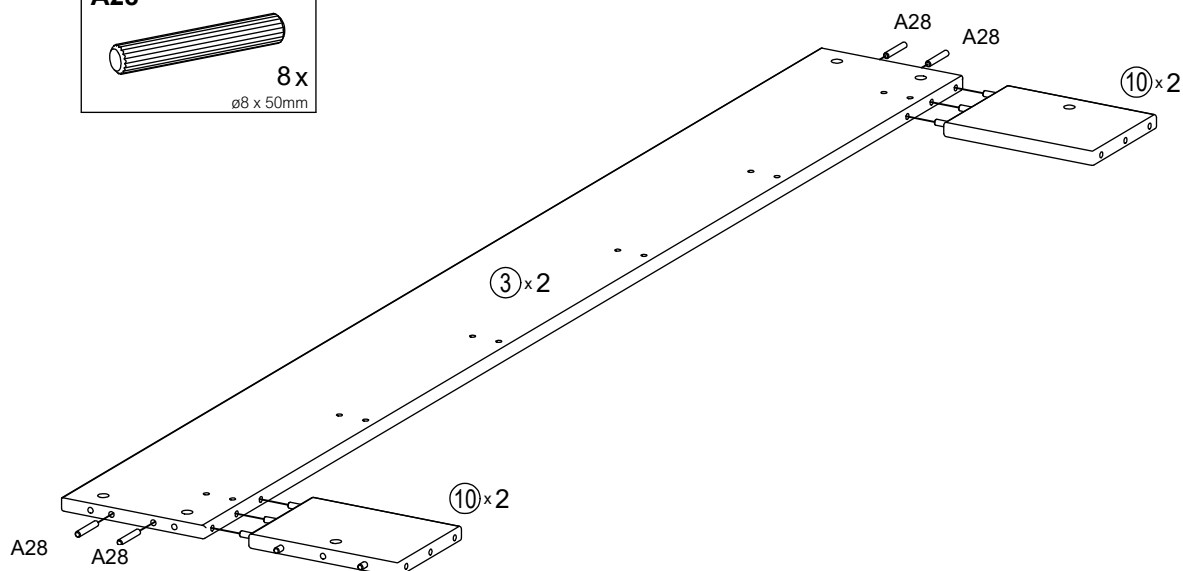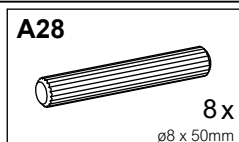



4

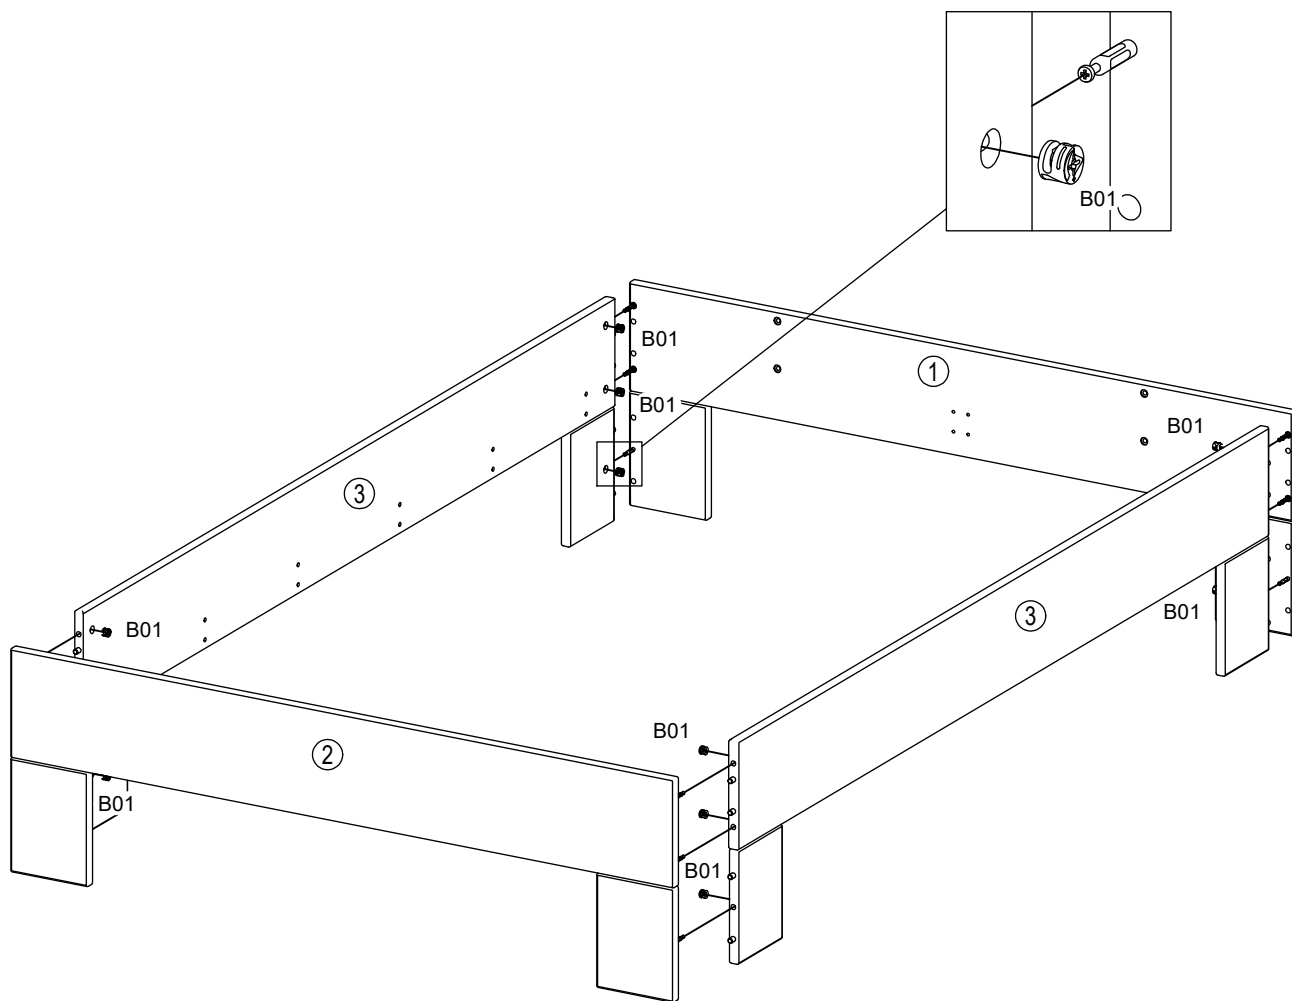


5

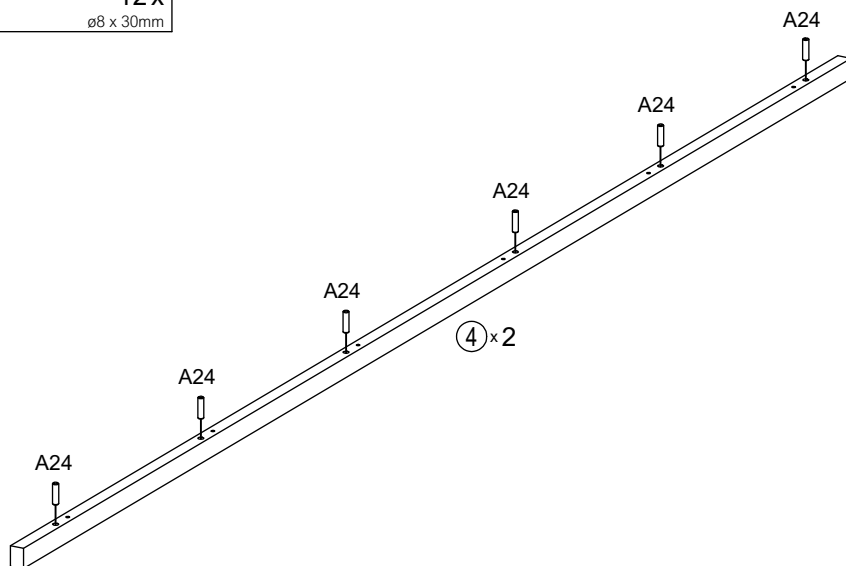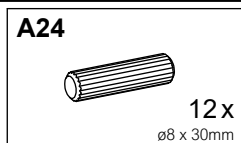


6

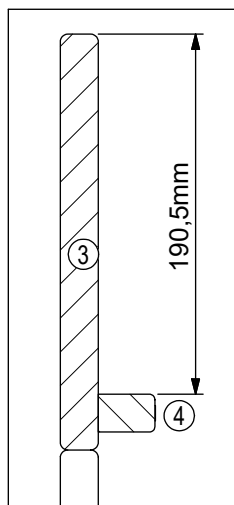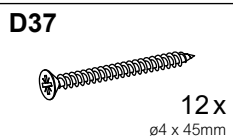


6A

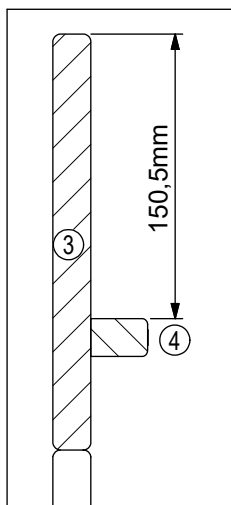


6B

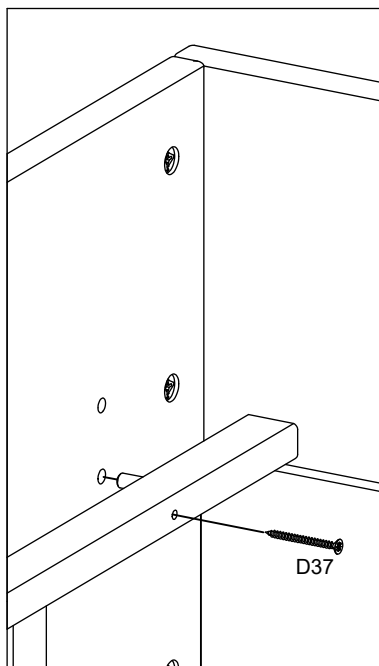




6A

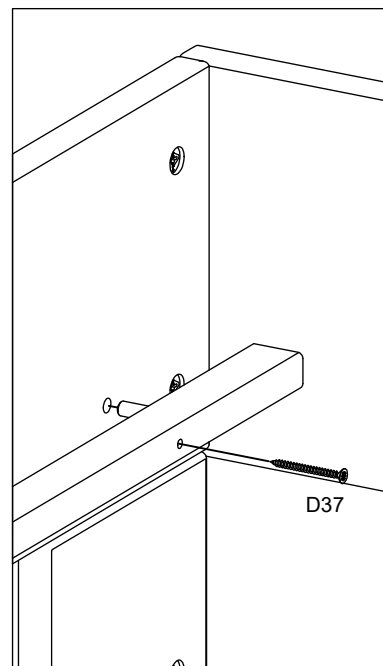


6B

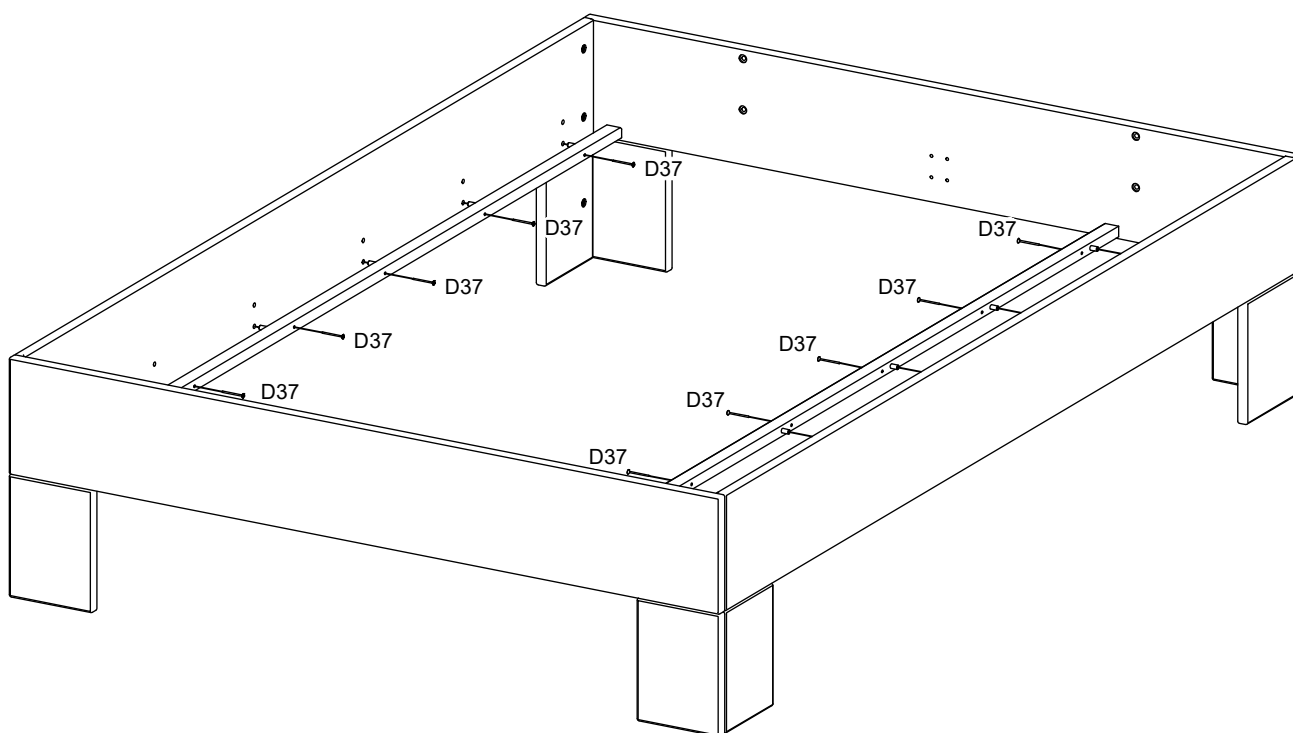


7

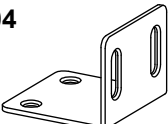
A28  4 x ø8 x 50mm	F63  4 x ø6,2 x 15mm	K11  1 x ø7 x 70mm	M21  1 x M6, ø8,8 x 13,5, ø14mm
Q52  1 x M6 x 22, ø19 x 6mm	V04  2 x 50 x 50 x 40 x 2mm	Z04  1 x 4mm	

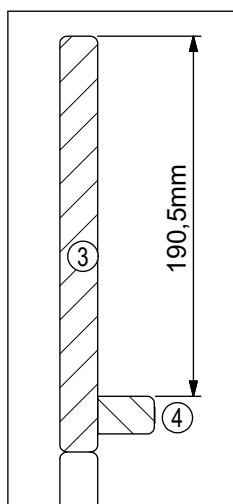


7A

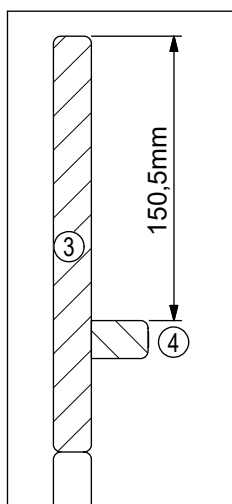



7B

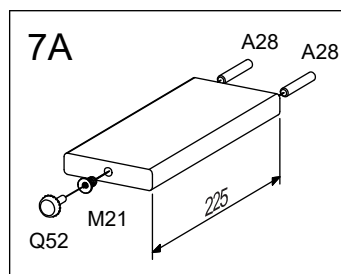

7A


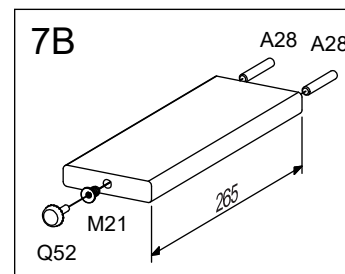


7B

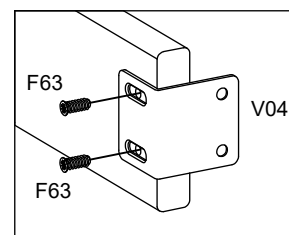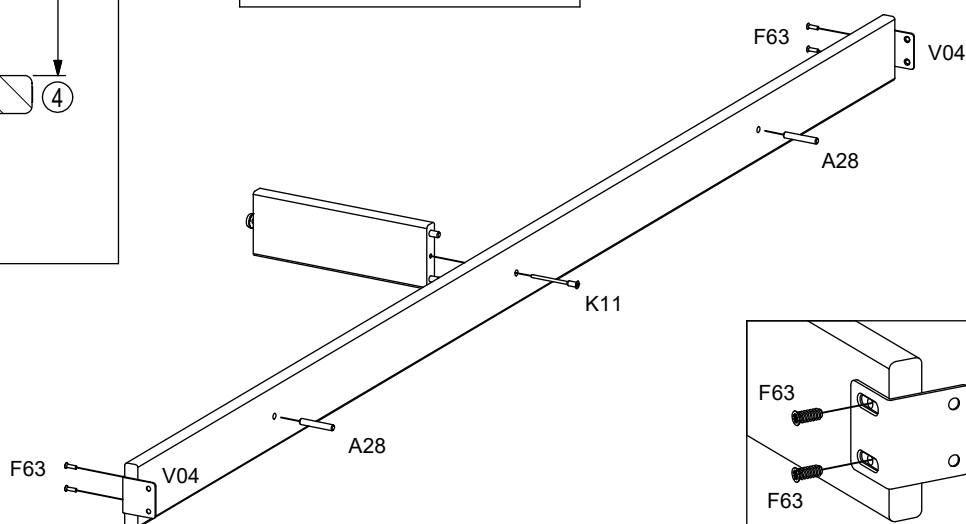


8

F63  4 x ø6,2 x 15mm

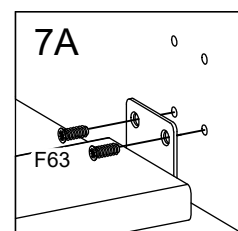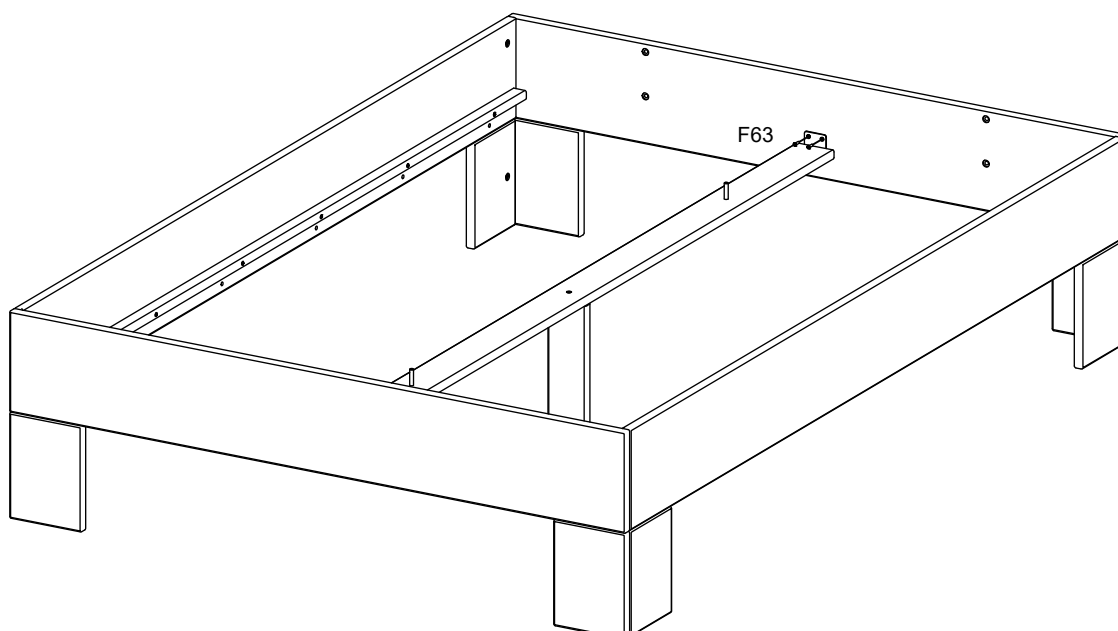

7A

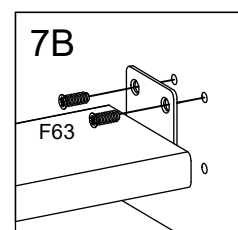

7B

Progress / Zenna / NXT


901 309



901 314

901 316




901 318

901 320


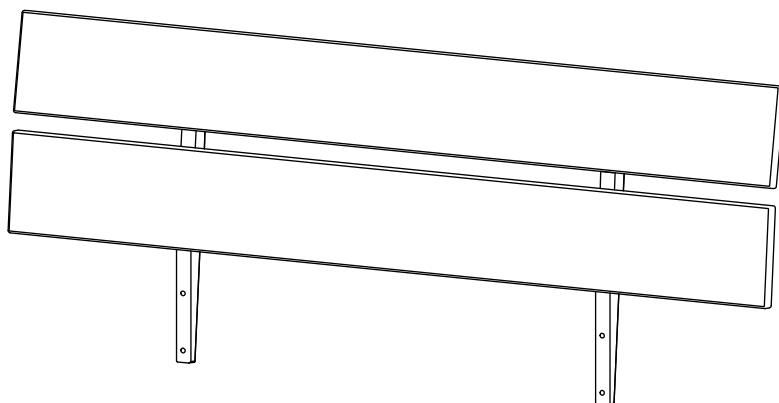


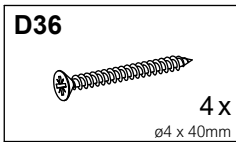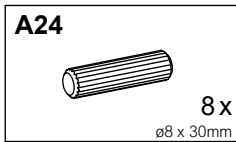



90cm: 901 309
140cm: 901 314
160cm: 901 316
180cm: 901 318
200cm: 901 320

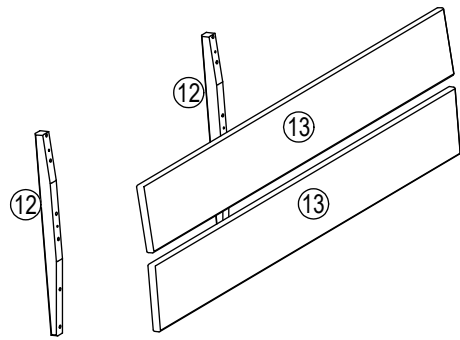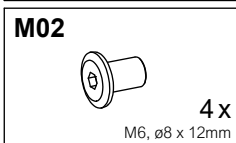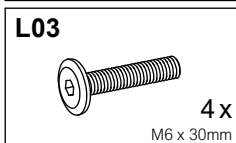

1

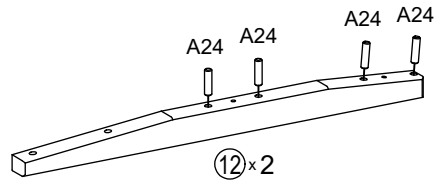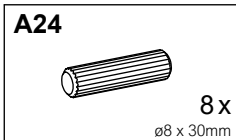

2

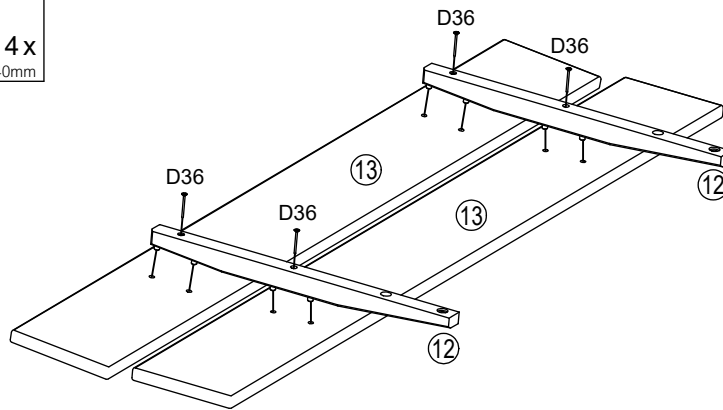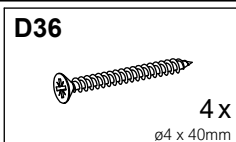

3

