
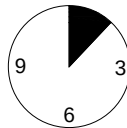

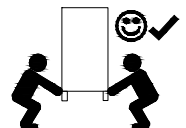
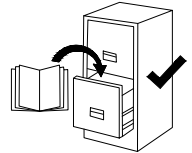

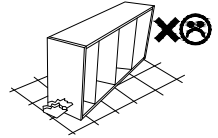
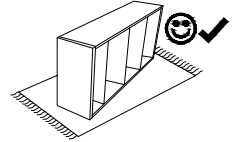




TORGE

A33ZNO 23

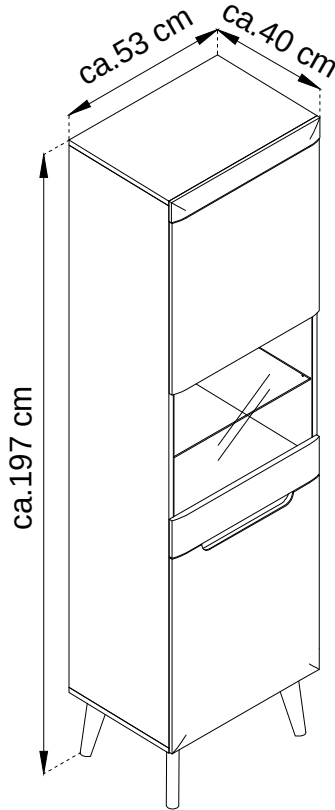

1,5 H

(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(TR) Montaj talimatı

(GB) Assembly Instructions


(IT) Istruzioni di montaggio

(PL) Instrukcja montaży

(SK) Návod na montáž

(RO) Instrucțiuni de montaj

(RU) Инструкции по монтажу

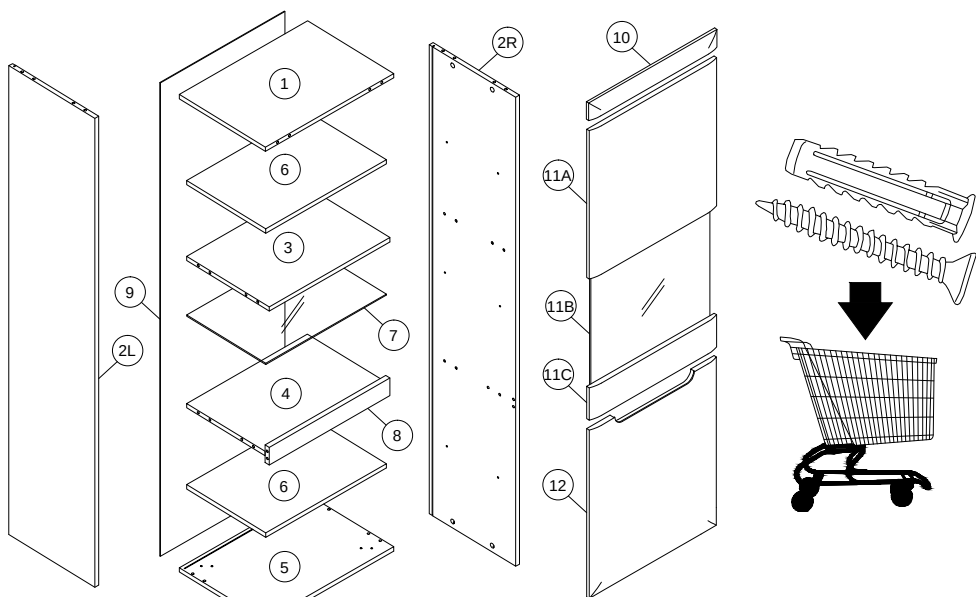

1	534	380	16	x1	1 / 2
---	-----	-----	----	----	-------

2L	1738	380	16	x1	1 / 2
----	------	-----	----	----	-------

2R	1738	380	16	x1	1 / 2
----	------	-----	----	----	-------

3	501	342	16	x1	1 / 2
---	-----	-----	----	----	-------

4	501	342	16	x1	1 / 2
---	-----	-----	----	----	-------

5	534	380	16	x1	1 / 2
---	-----	-----	----	----	-------

6	501	342	16	x2	2 / 2
---	-----	-----	----	----	-------

7	500	341	4	x1	2 / 2
---	-----	-----	---	----	-------

8	501	65	16	x1	2 / 2
---	-----	----	----	----	-------

9	1750	514	2.5	x1	1 / 2
---	------	-----	-----	----	-------

10	534	65	18	x1	2 / 2
----	-----	----	----	----	-------


11A	550	530	18	x1	2 / 2
-----	-----	-----	----	----	-------

11B	496	466	4	x1	2 / 2
-----	-----	-----	---	----	-------



11C	530	120	18	x1	2 / 2
-----	-----	-----	----	----	-------

12	624	530	18	x1	2 / 2
----	-----	-----	----	----	-------




Z  x18	ND 3,5x16  x10	ZA  x1	FIL  x4	TA  x1	PHM+H0  x5
N 3x20  x8	X  x14	HD  x8	NGD  x4	ZE  x4	C  x18
B  x18	A 8x32  x22	NC 4x16  x6	ZD  x6	Z  x8	NA 4x13  x1



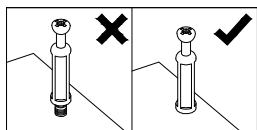


1


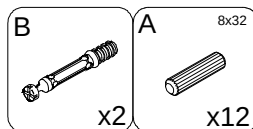
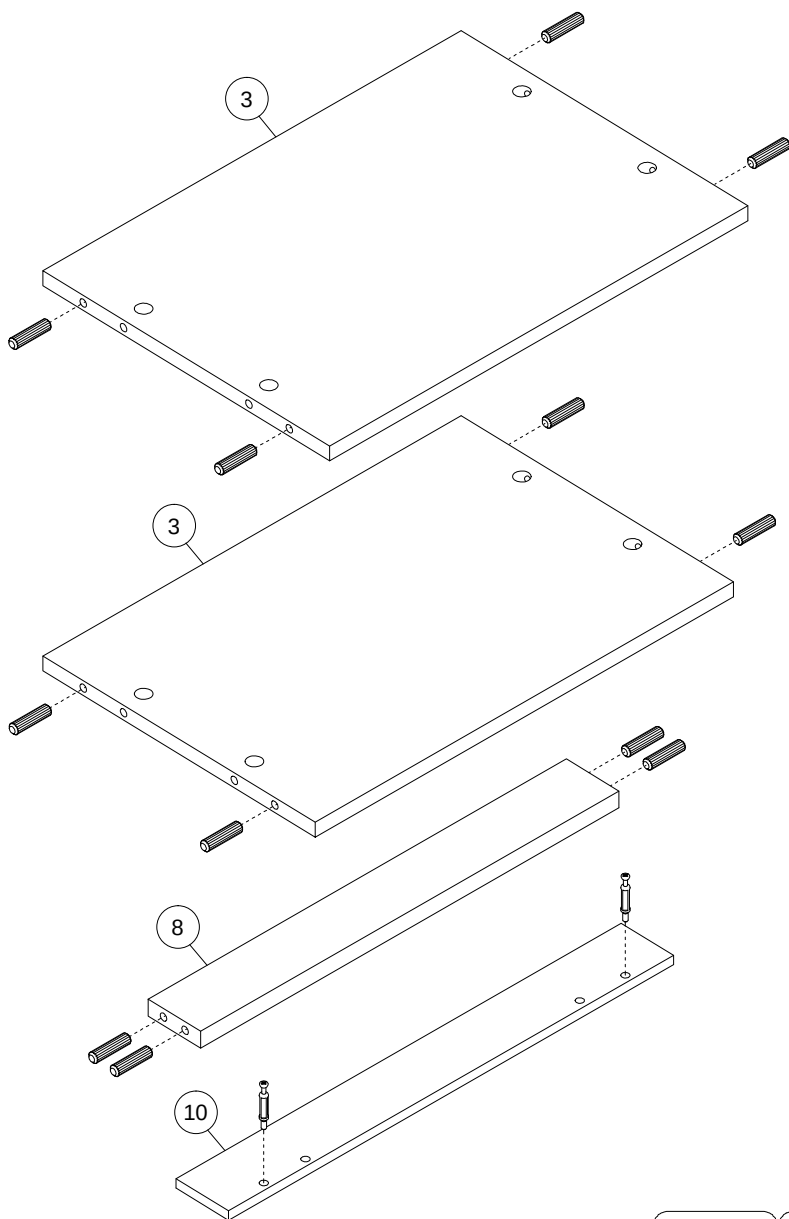



2

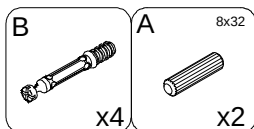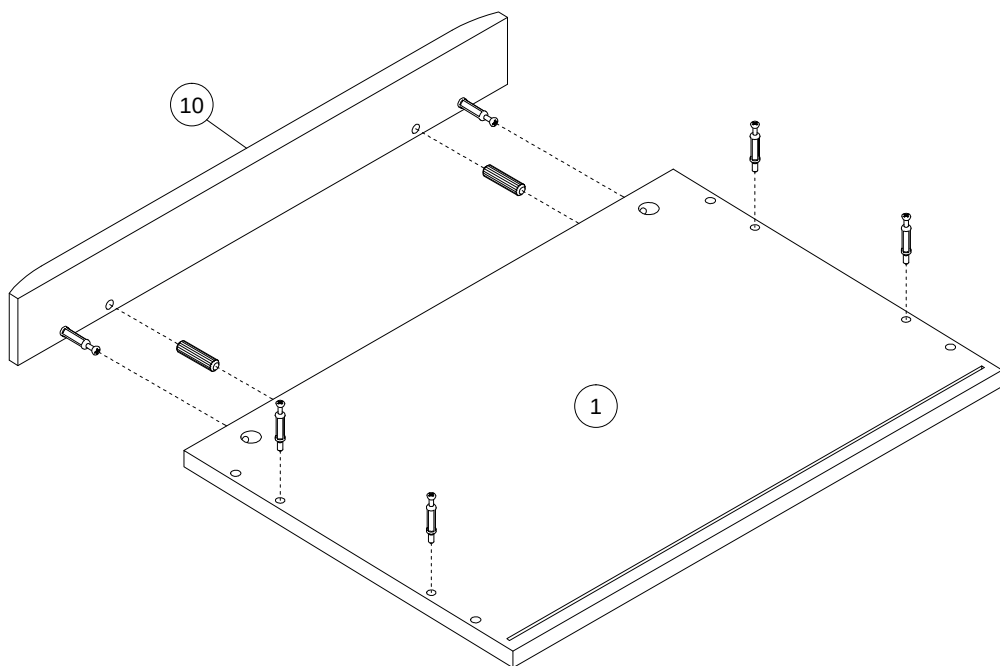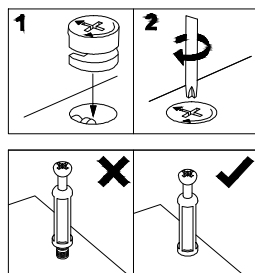

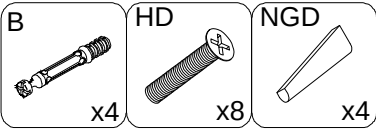
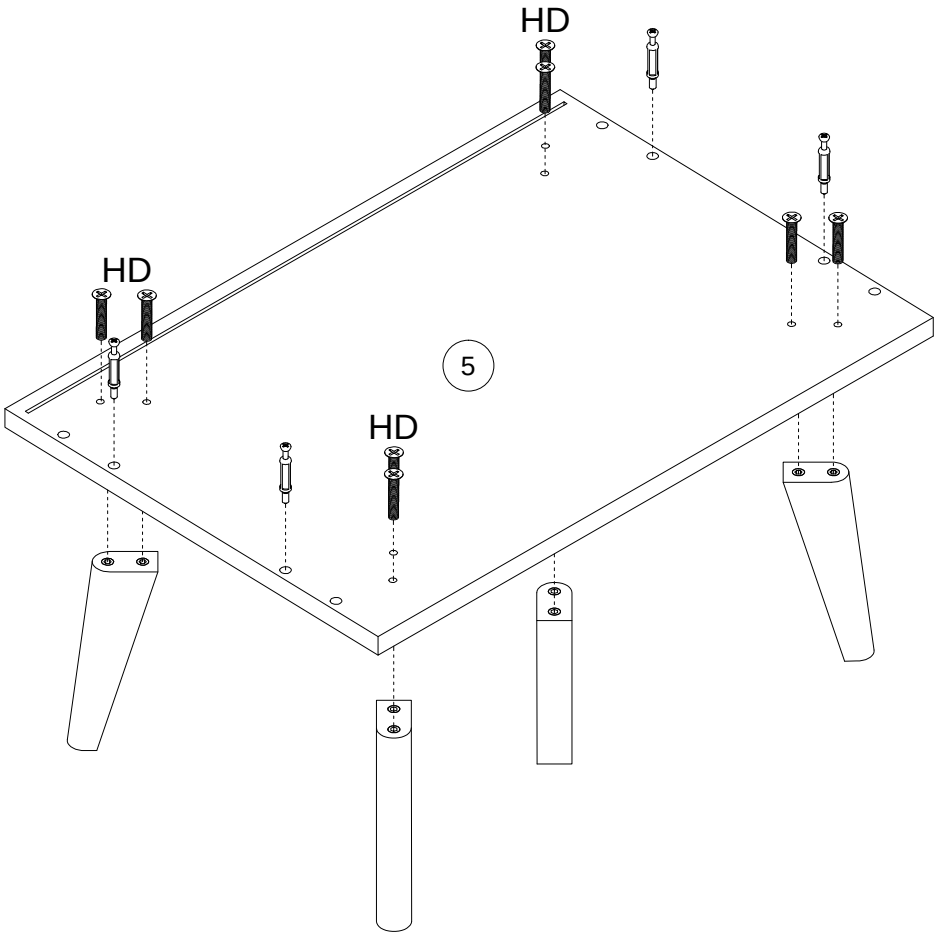
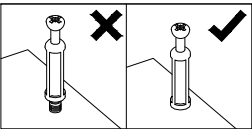




4

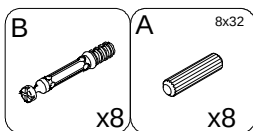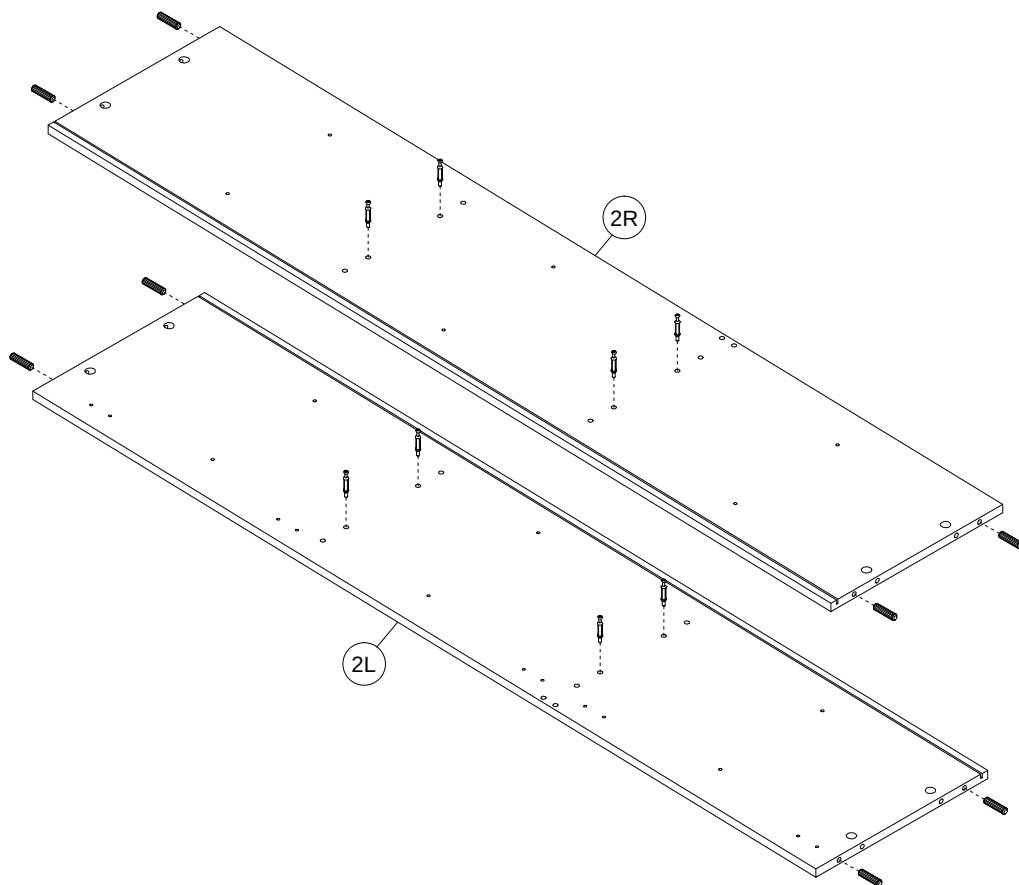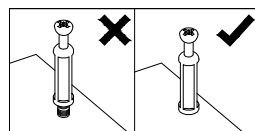


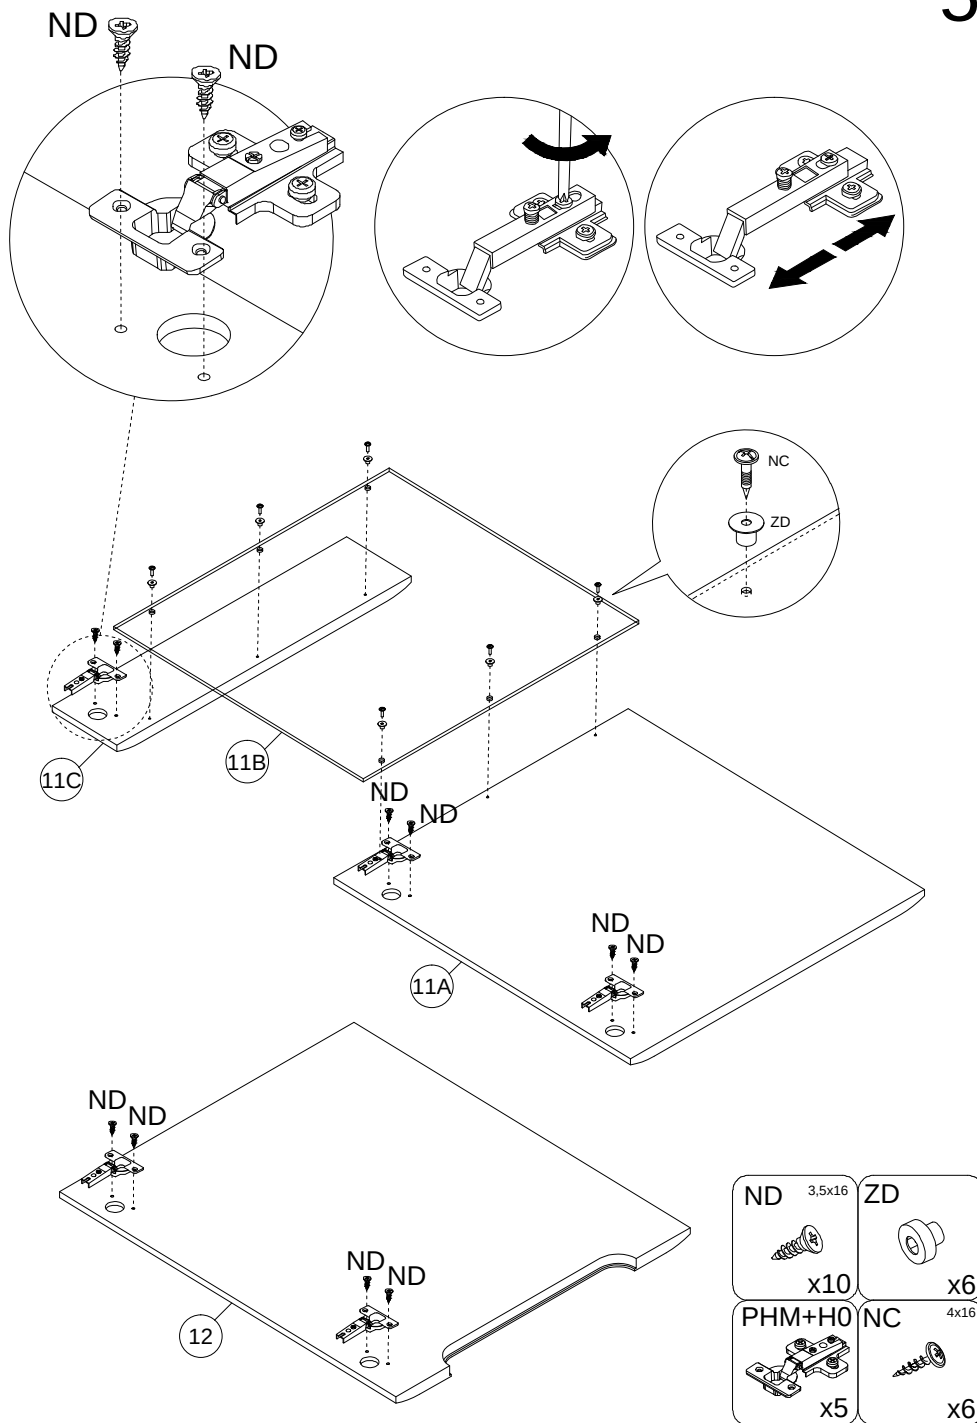




6

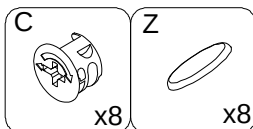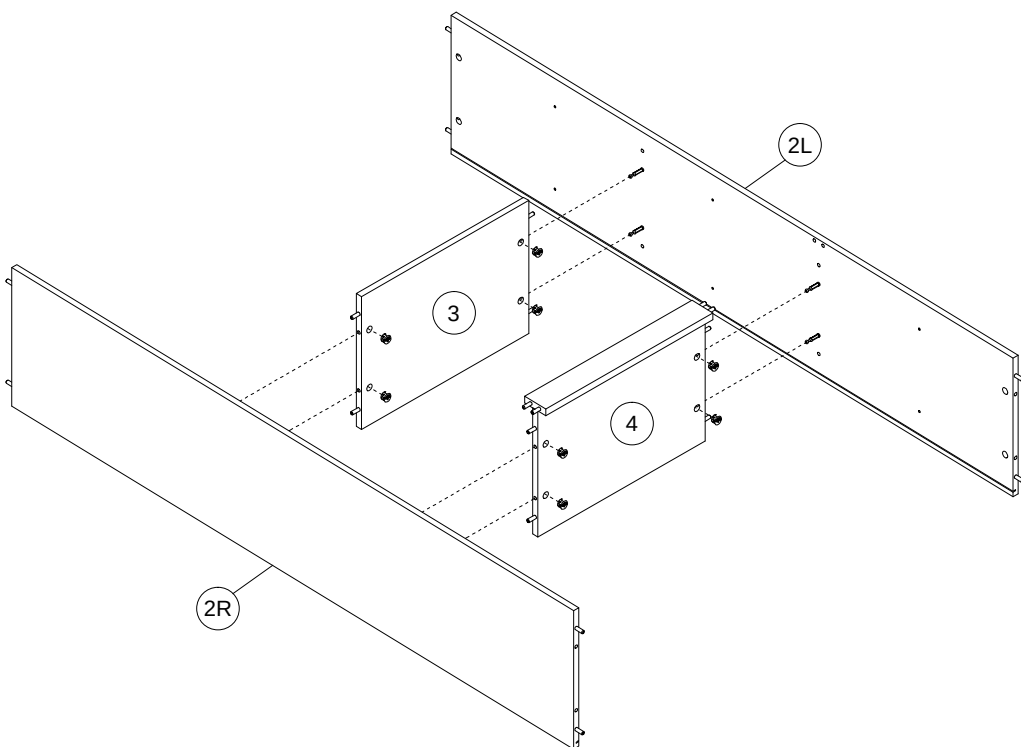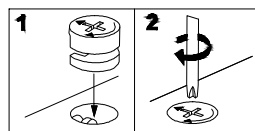












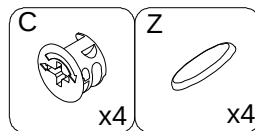
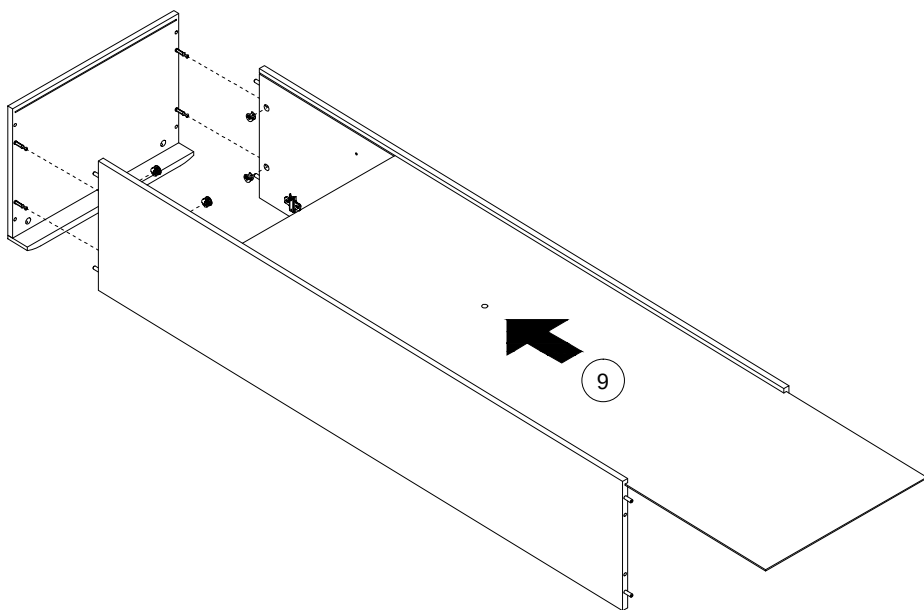





8

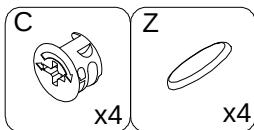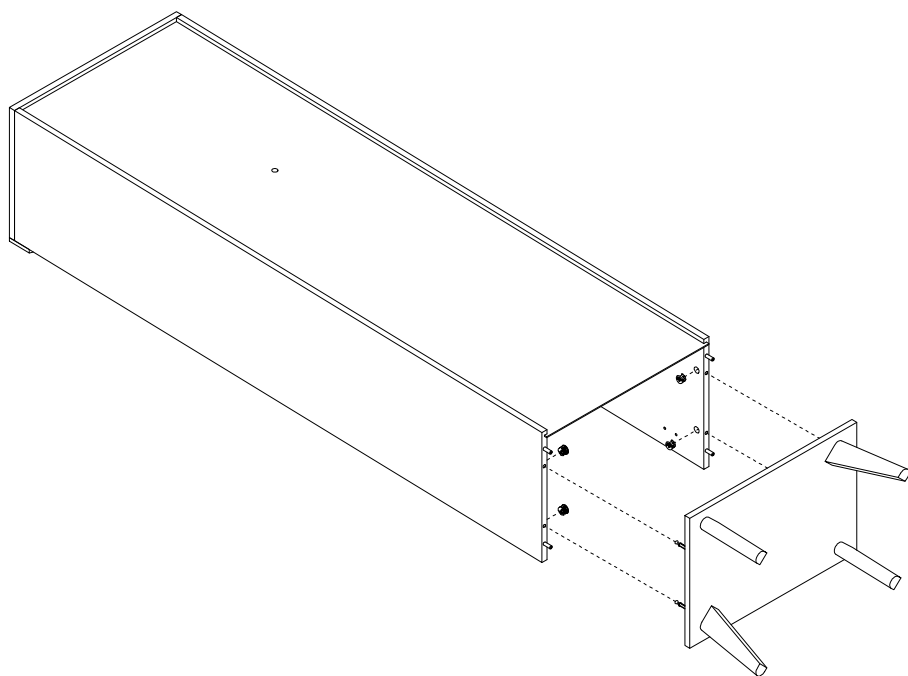

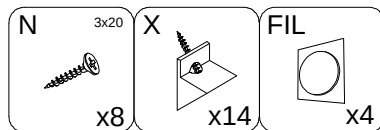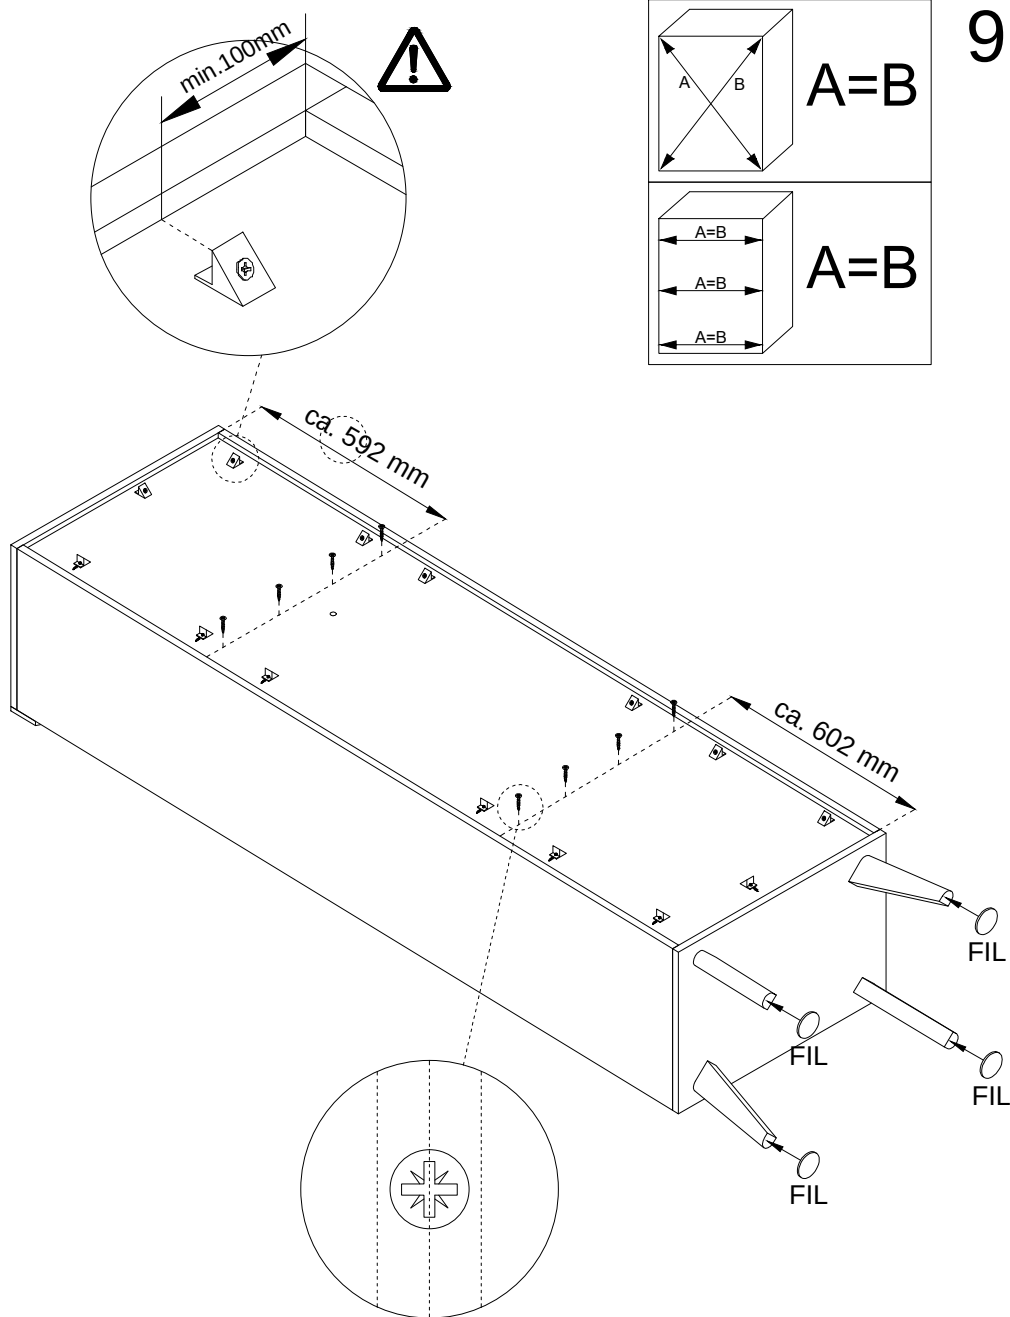



10

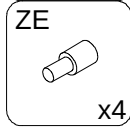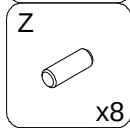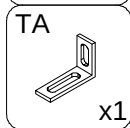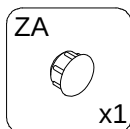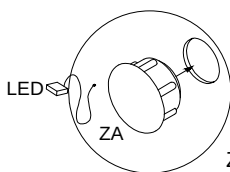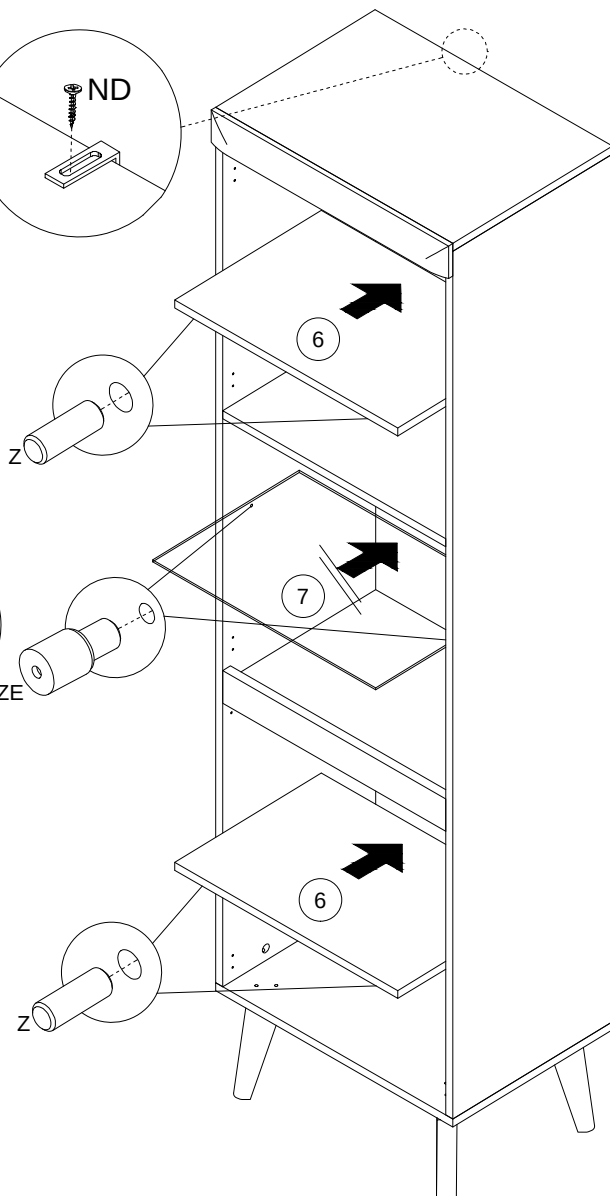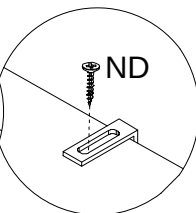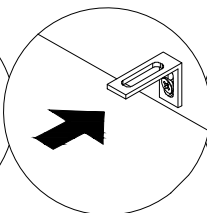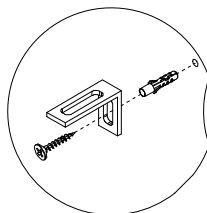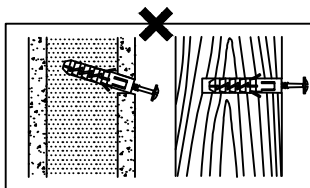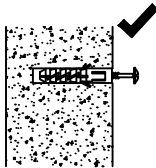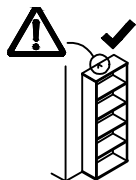

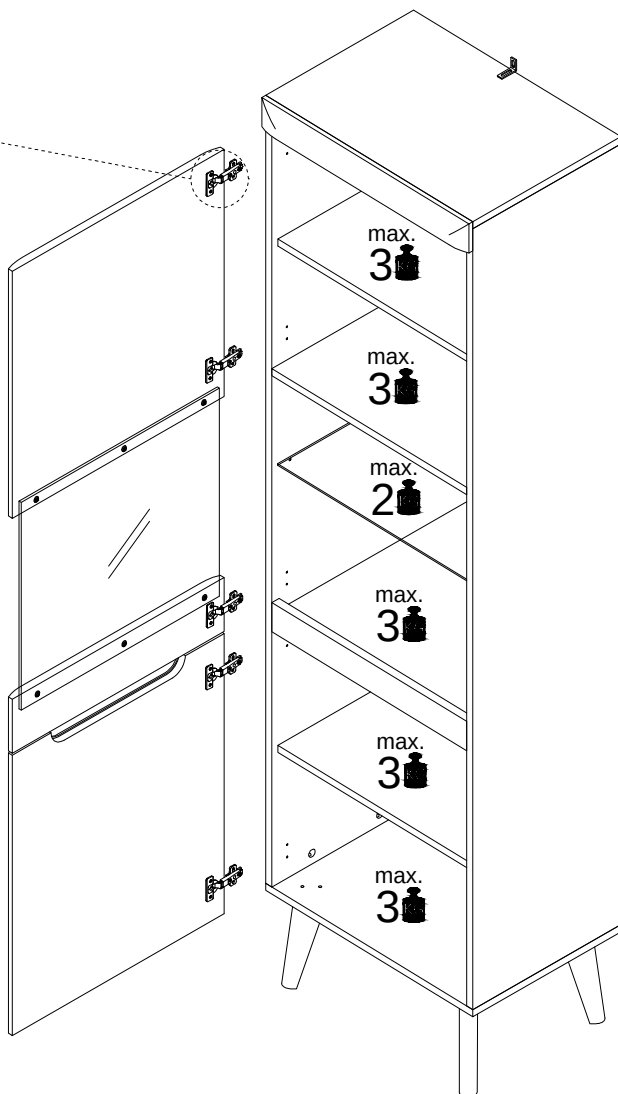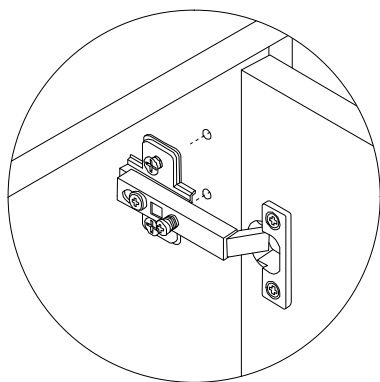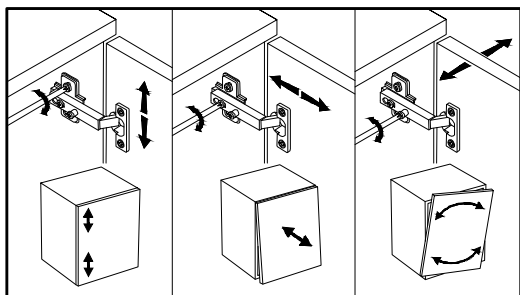

TORGE

A33ZNO 23

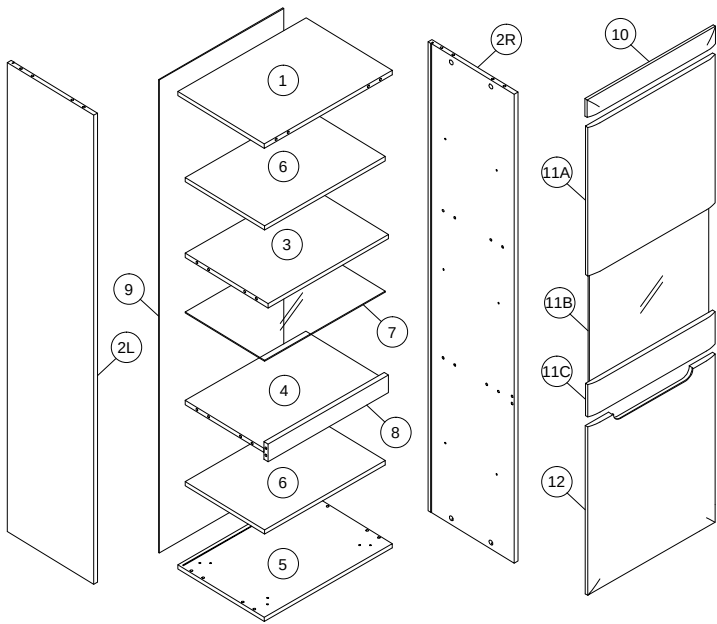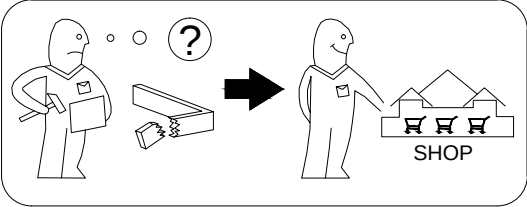

1	534	380	16	x1	1 / 2
---	-----	-----	----	----	-------

2L	1738	380	16	x1	1 / 2
----	------	-----	----	----	-------

2R	1738	380	16	x1	1 / 2
----	------	-----	----	----	-------

3	501	342	16	x1	1 / 2
---	-----	-----	----	----	-------

4	501	342	16	x1	1 / 2
---	-----	-----	----	----	-------

5	534	380	16	x1	1 / 2
---	-----	-----	----	----	-------

6	501	342	16	x2	2 / 2
---	-----	-----	----	----	-------

7	500	341	4	x1	2 / 2
---	-----	-----	---	----	-------

8	501	65	16	x1	2 / 2
---	-----	----	----	----	-------

9	1750	514	2.5	x1	1 / 2
---	------	-----	-----	----	-------

10	534	65	18	x1	2 / 2
----	-----	----	----	----	-------

11A	550	530	18	x1	2 / 2
-----	-----	-----	----	----	-------








11B	496	466	4	x1	2 / 2
-----	-----	-----	---	----	-------



11C	530	120	18	x1	2 / 2
-----	-----	-----	----	----	-------

12	624	530	18	x1	2 / 2
----	-----	-----	----	----	-------

TORGE












A33ZNO 23

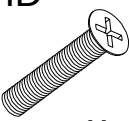TA  X...	PHM+H0  X...	Z  X...		
Z  X...	ND 3,5x16  X...	ZA  X...	C  X...	NA 4x13  X...
N 3x20  X...	X  X...	HD  X...	NGD  X...	FIL  X...
B  X...	A 8x32  X...	NC 4x16  X...	ZD  X...	ZE  X...

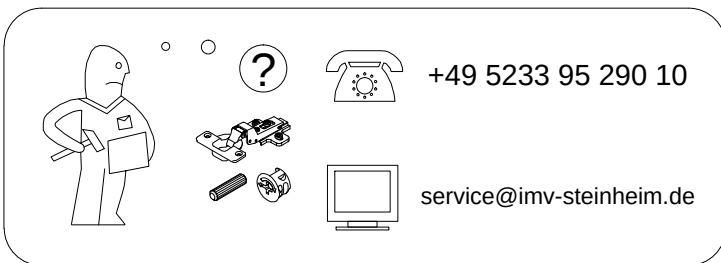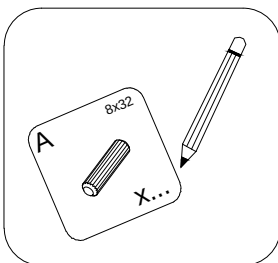

TORGE




A33ZNO 33

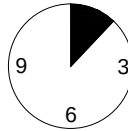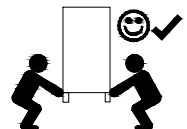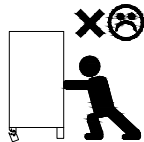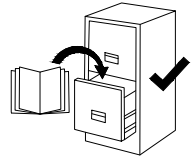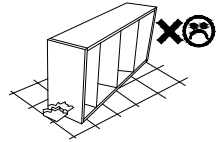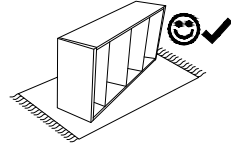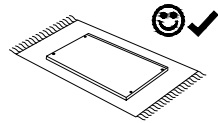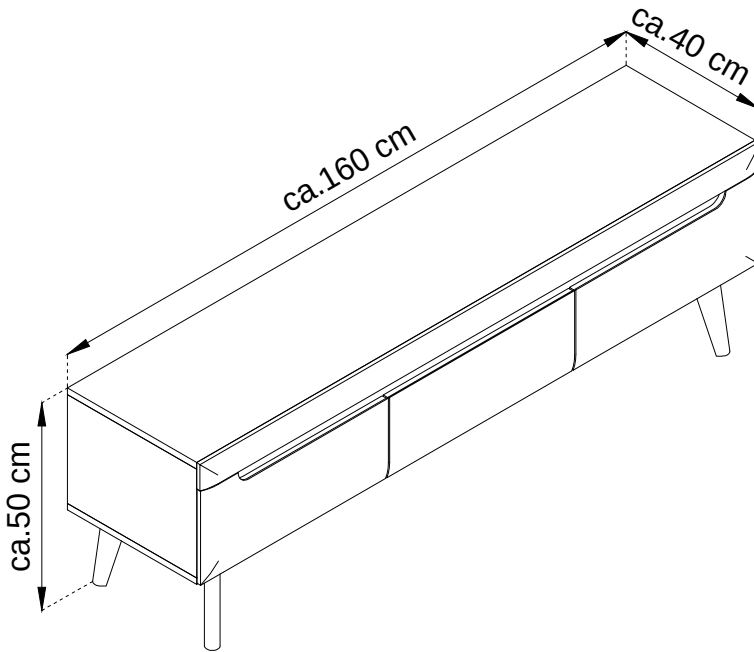


1,5 H

- (D) Montageanleitung
- (FR) Notice de montage
- (NL) Handleiding voor de montage
- (CZ) Montážní návod
- (HU) Szerelési útmutató
- (TR) Montaj talimati



- (GB) Assembly Instructions
- (IT) Istruzioni di montaggio
- (PL) Instrukcja montażu
- (SK) Návod na montáž
- (RO) Instrucțiuni de montaj
- (RU) Инструкции по монтажу

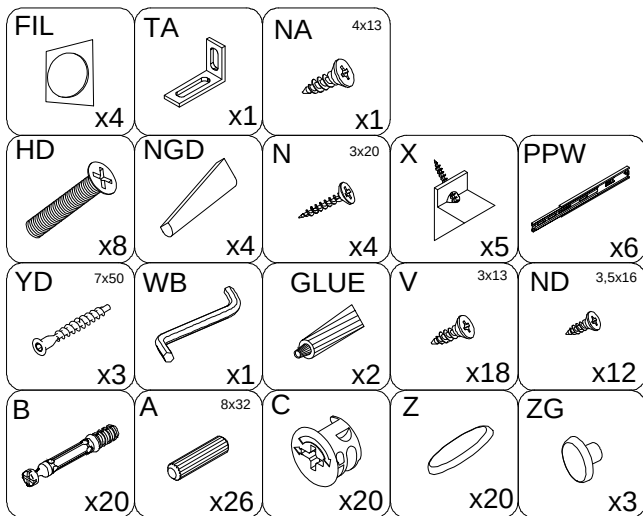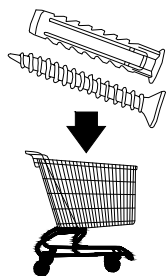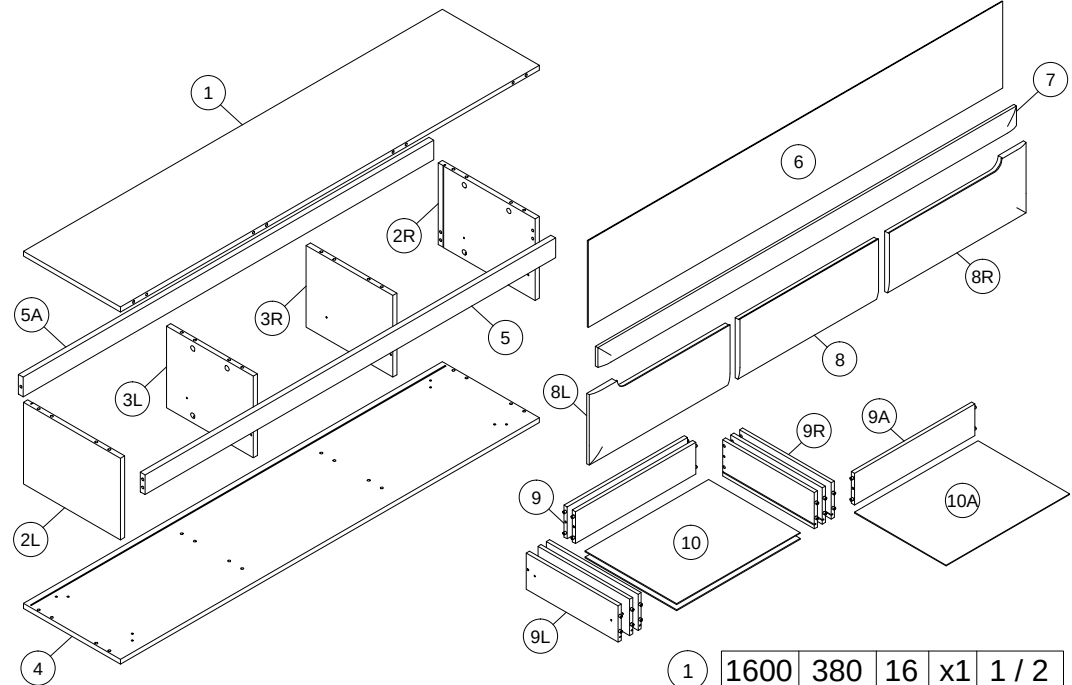

1	1600	380	16	x1	1 / 2
2L	380	270	16	x1	2 / 2
2R	380	270	16	x1	2 / 2
3L	342	270	16	x1	2 / 2
3R	342	270	16	x1	2 / 2
4	1600	380	16	x1	1 / 2
5	1567	65	16	x1	1 / 2
5A	1567	120	16	x1	1 / 2
6	1580	282	2.5	x1	1 / 2
7	1600	65	18	x1	1 / 2
8	530	233	18	x1	2 / 2
8L	530	203	18	x1	2 / 2
8R	530	233	18	x1	2 / 2
9	469	100	12	x2	2 / 2
9A	460	100	12	x1	2 / 2
9L	350	100	12	x2	2 / 2
9R	350	100	12	x2	1 / 2
10	470	349	2.5	x2	1 / 2
10A	479	349	2.5	x1	1 / 2

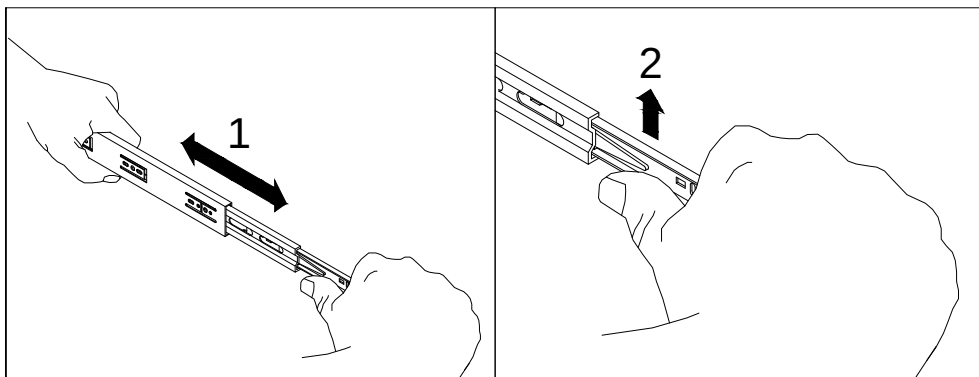


1

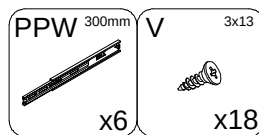
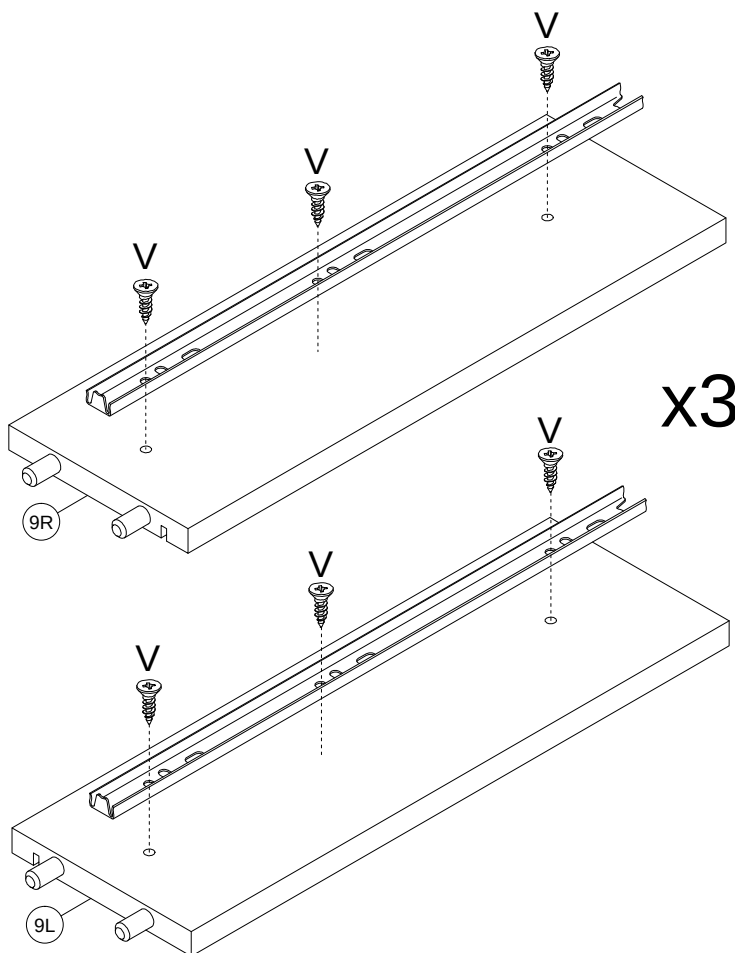


2

30 min

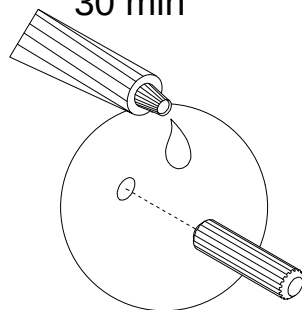

x2

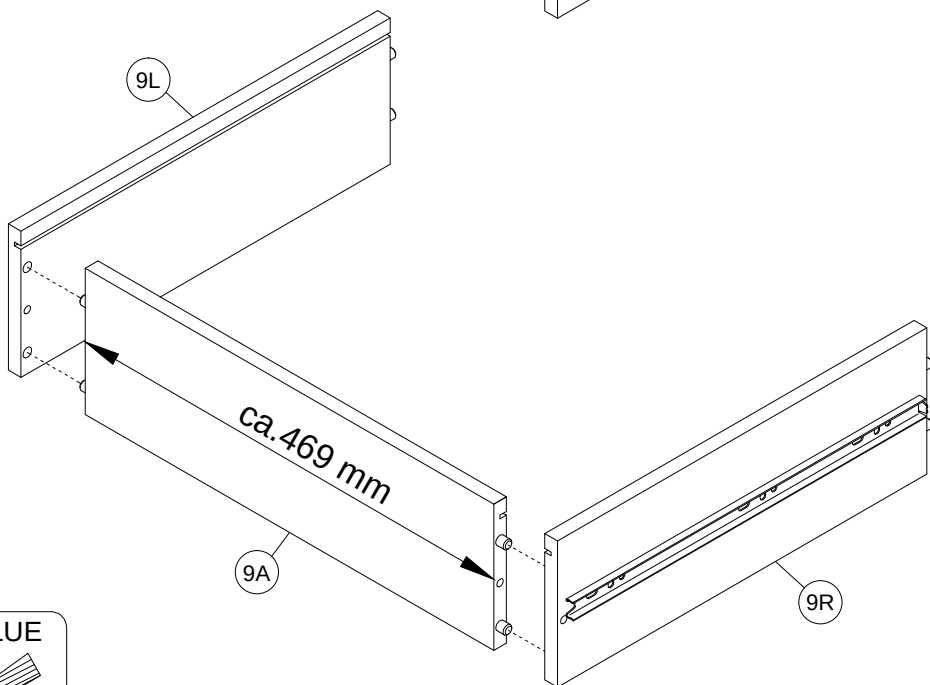
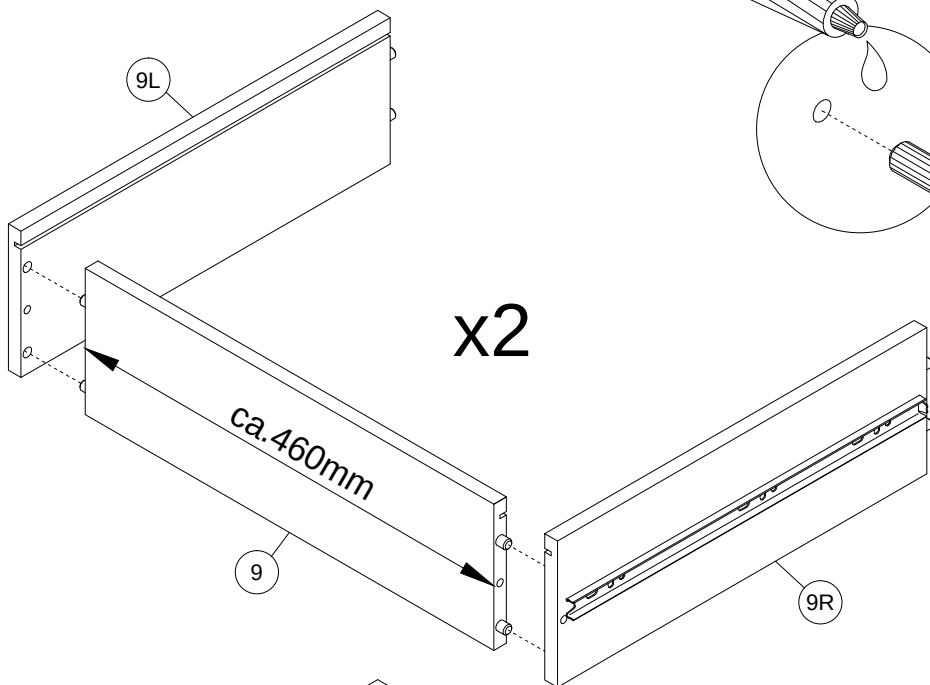


GLUE







x2

3

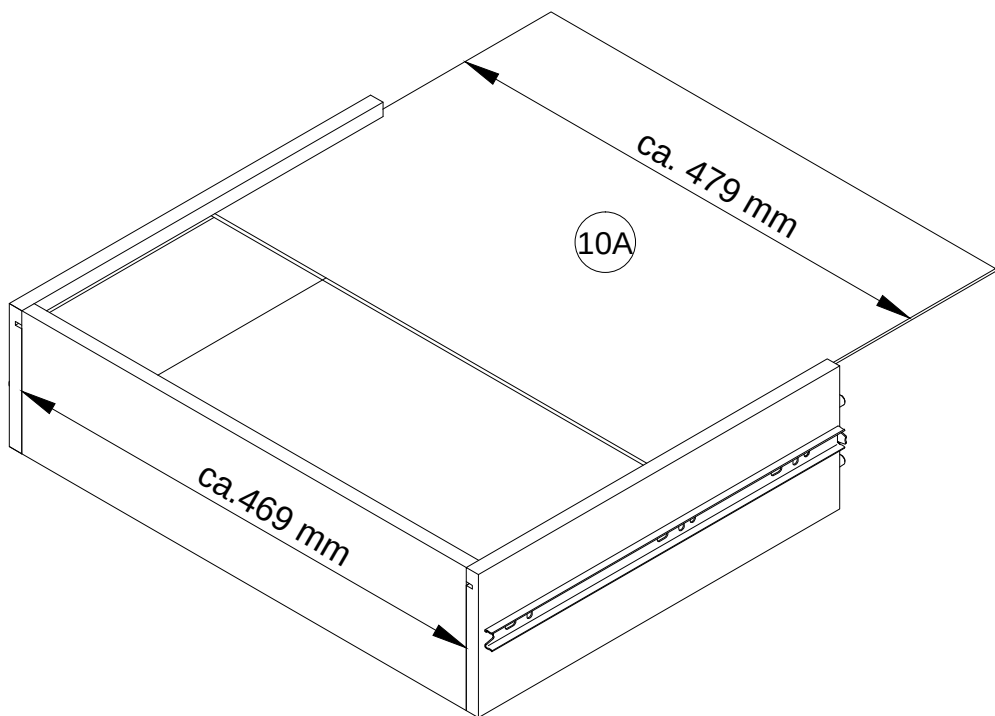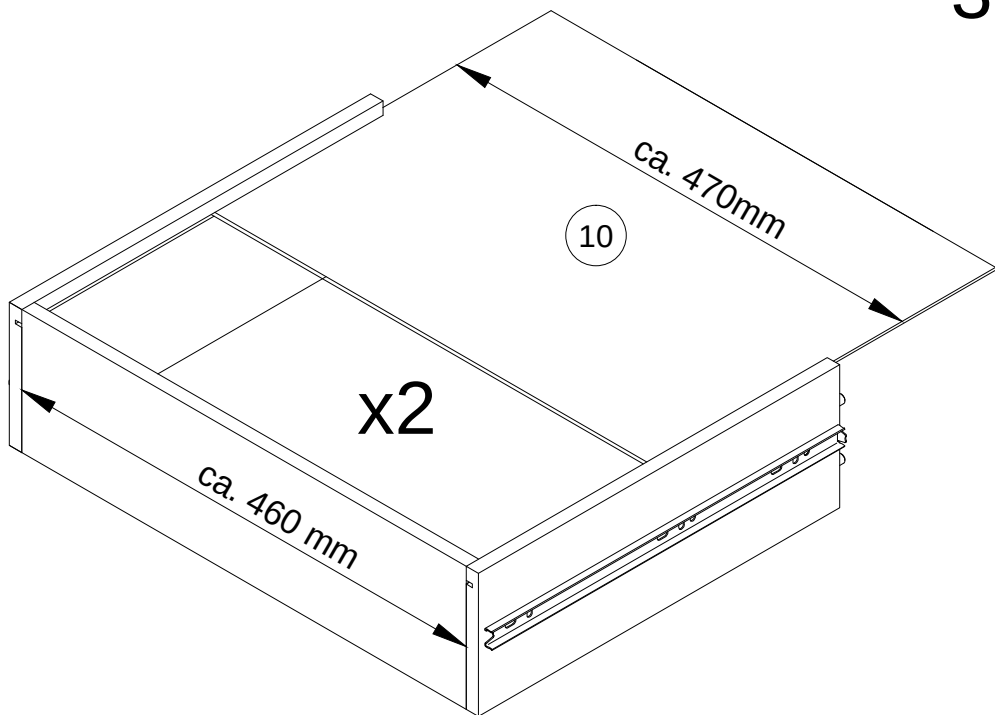




4

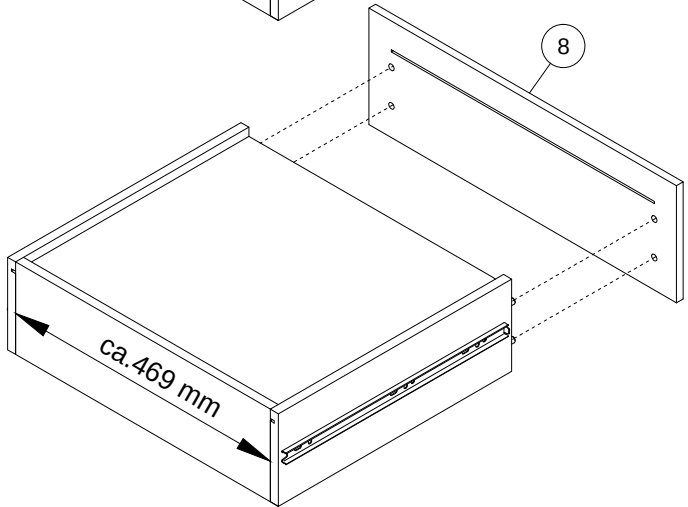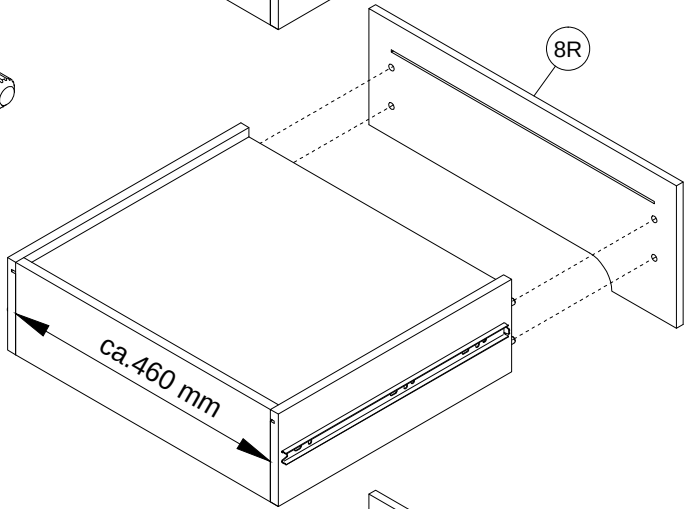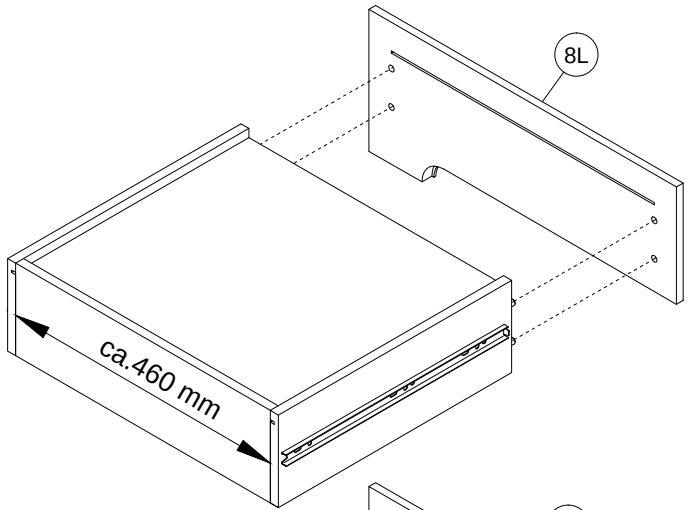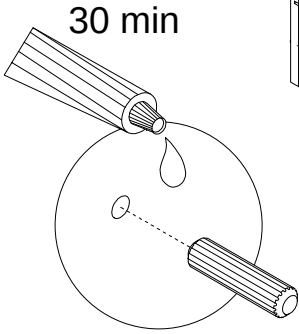




GLUE





x2

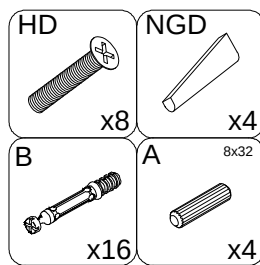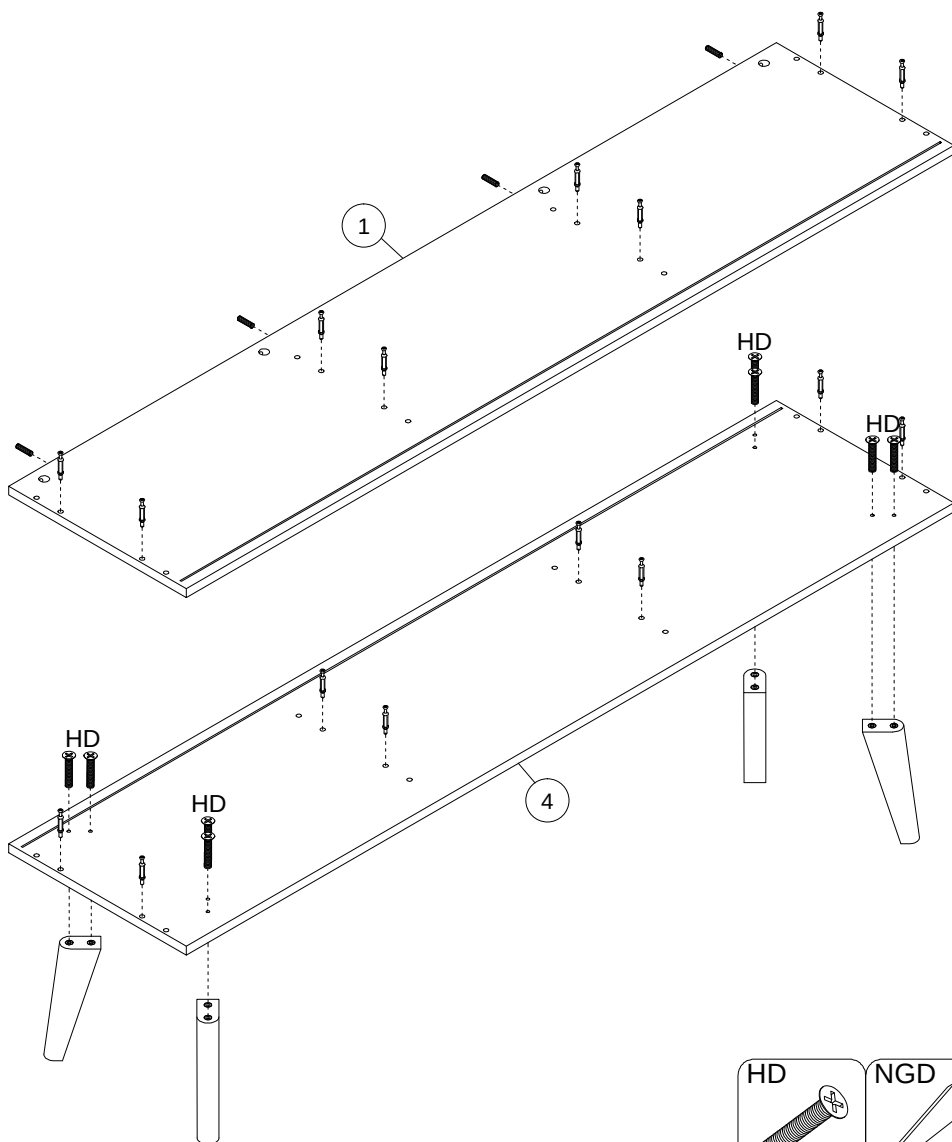
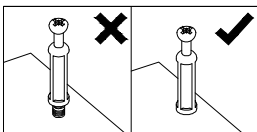





6

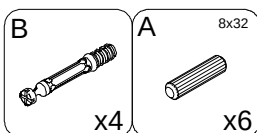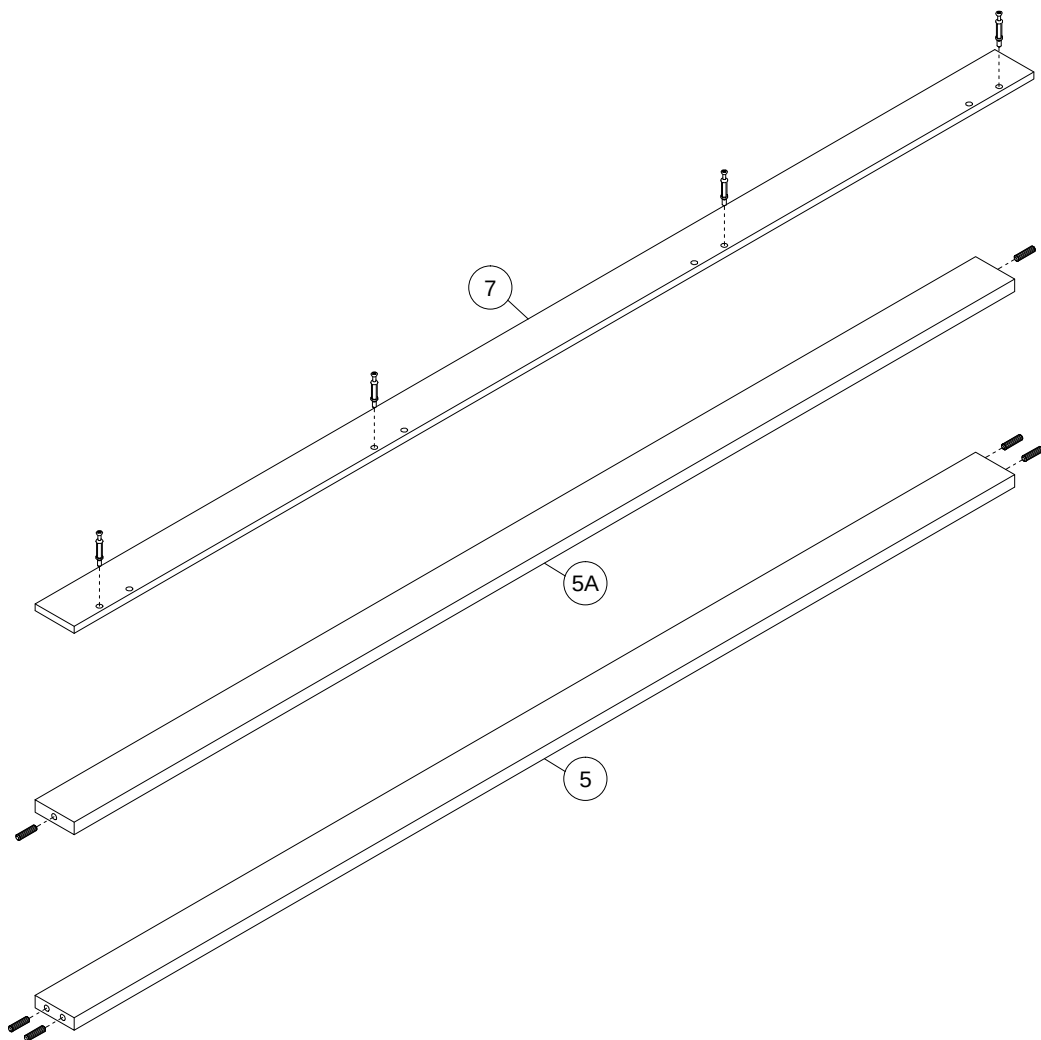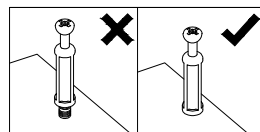


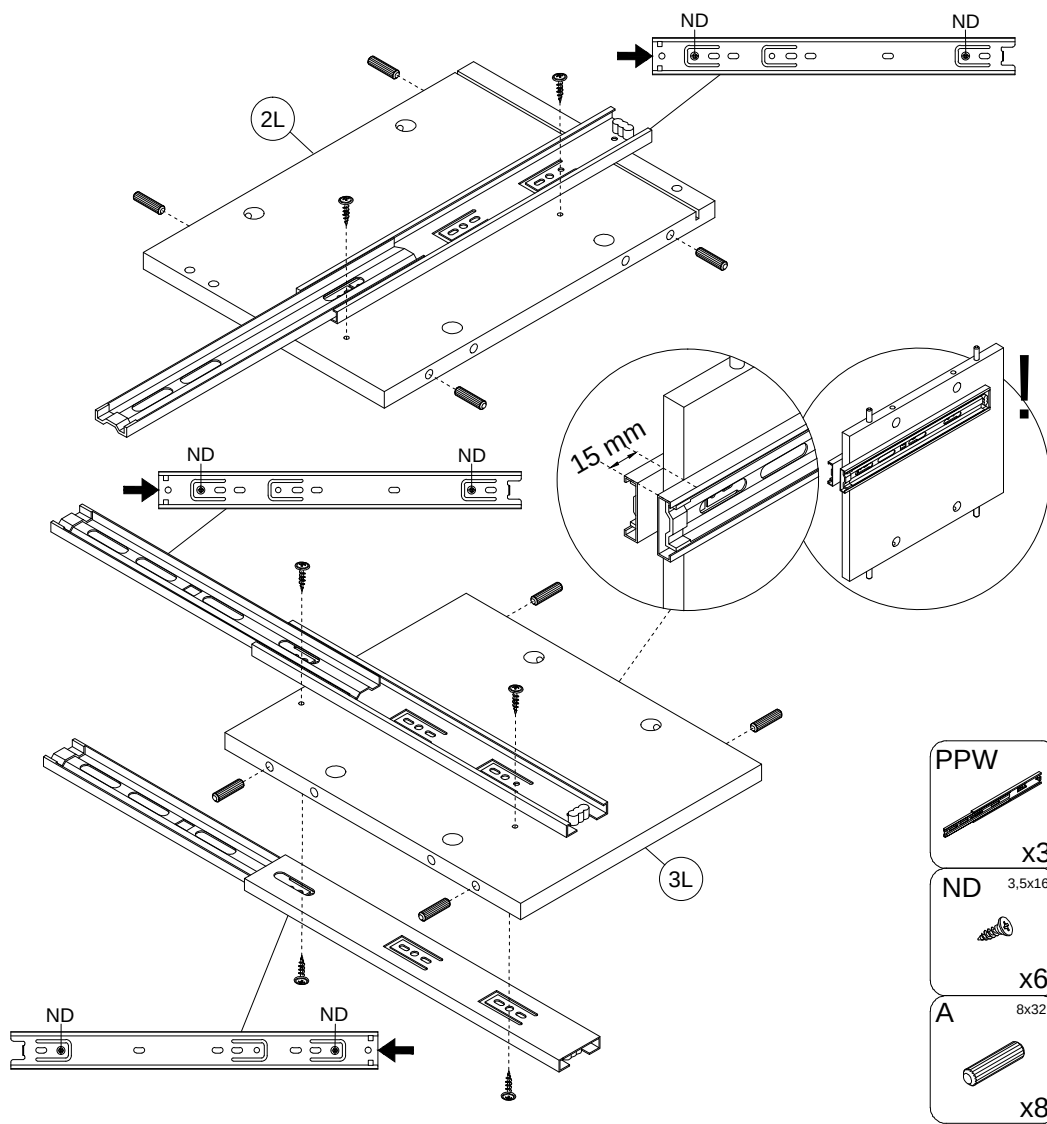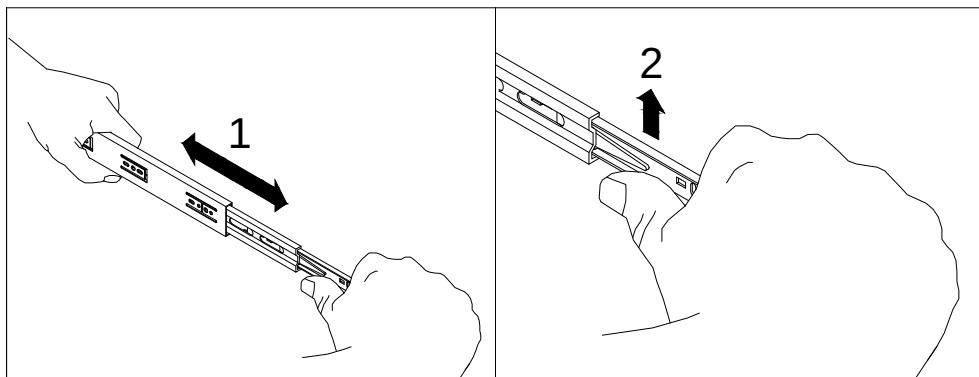


8

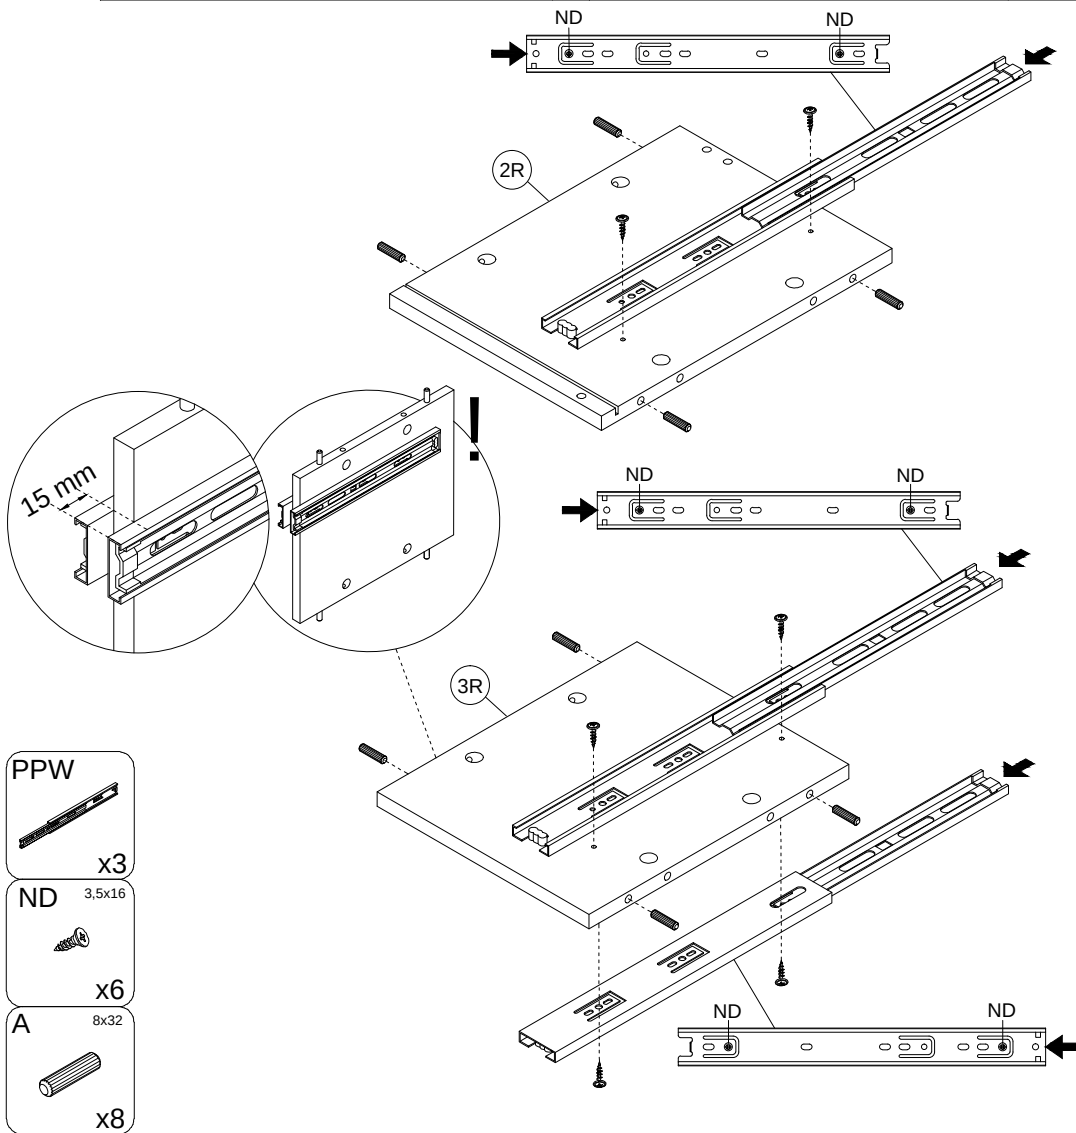
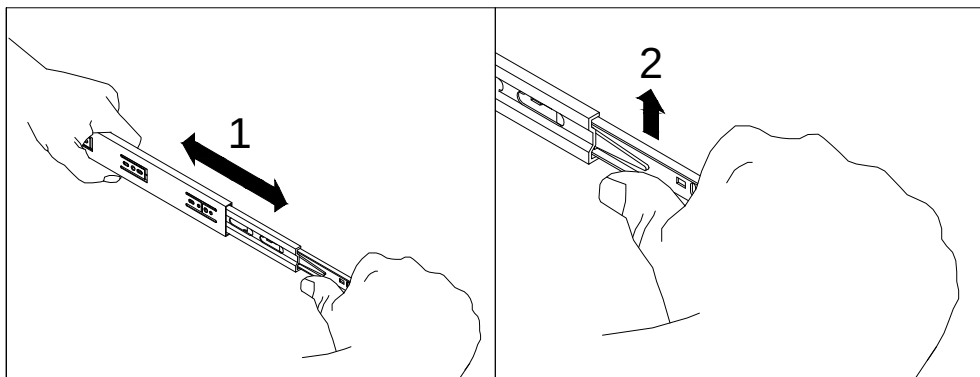


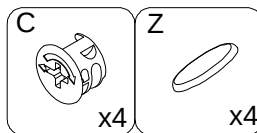
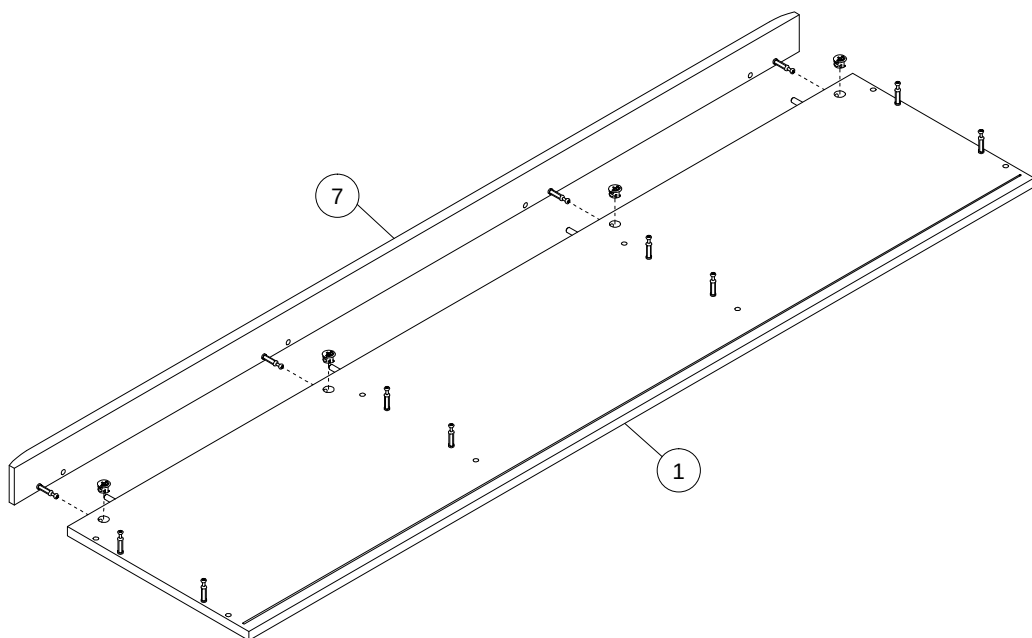
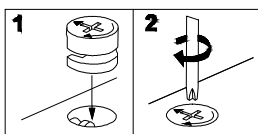





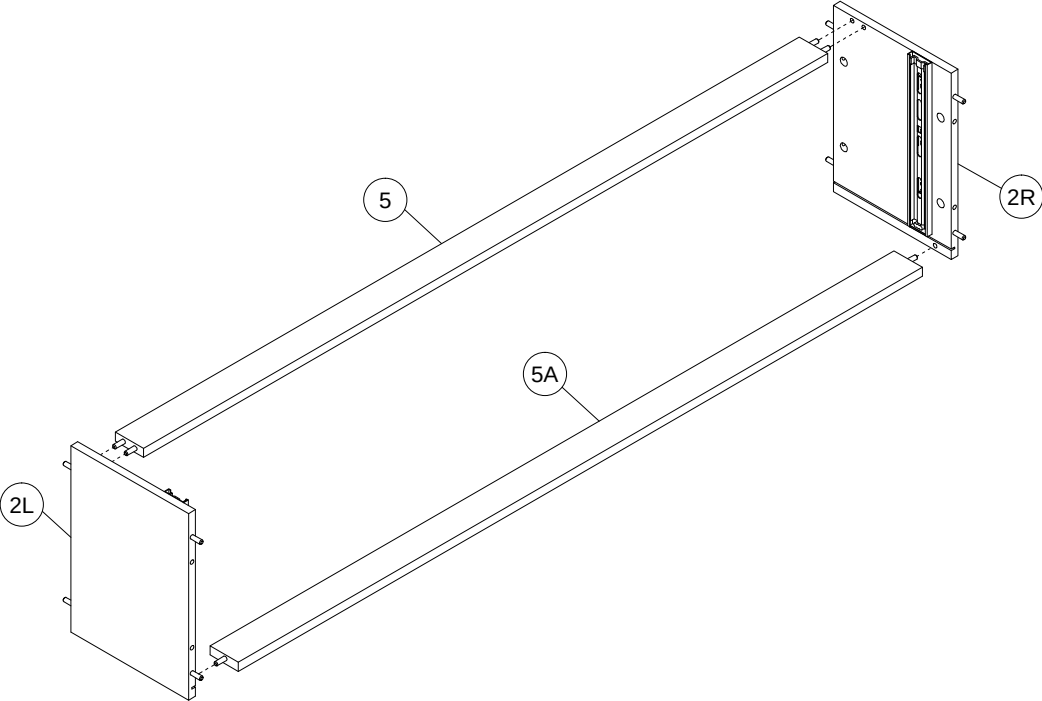


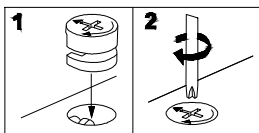




11



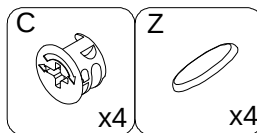
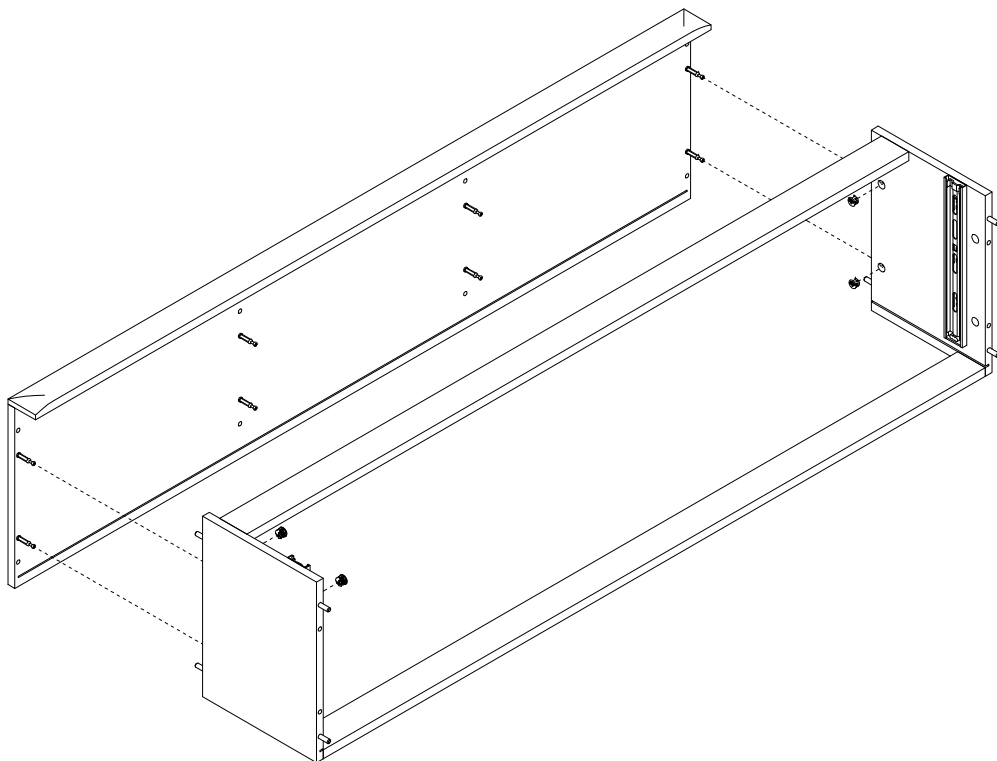


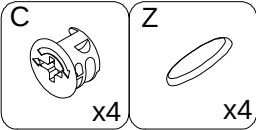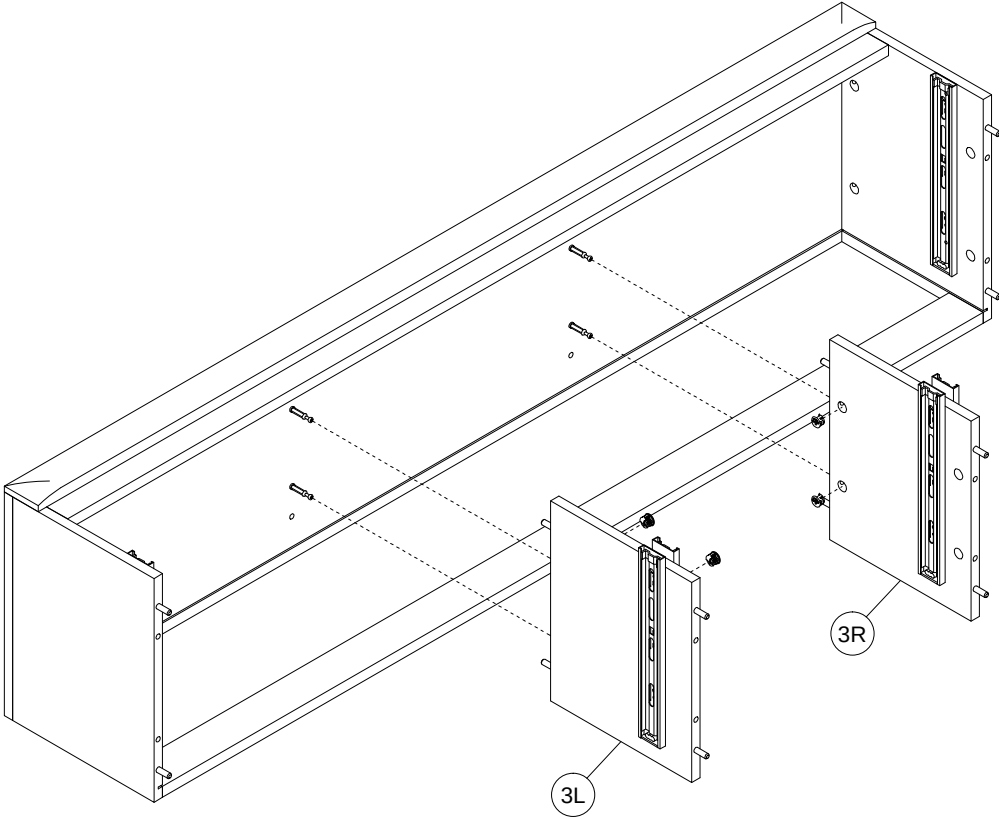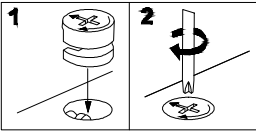


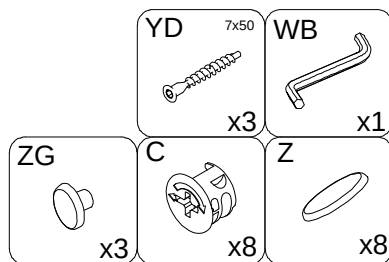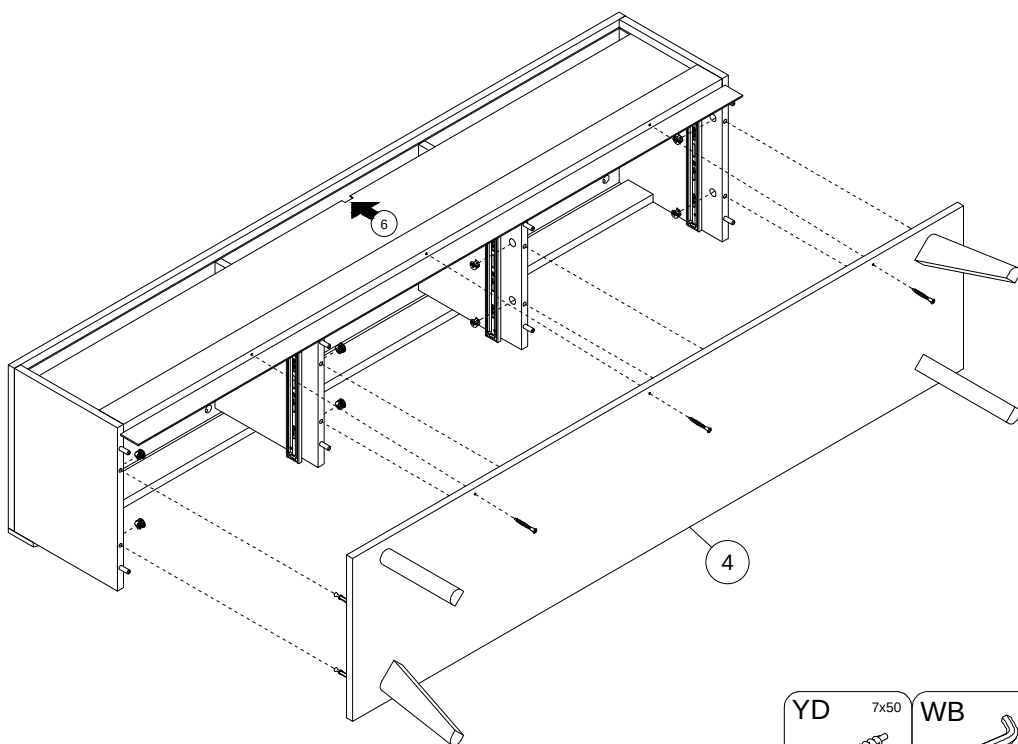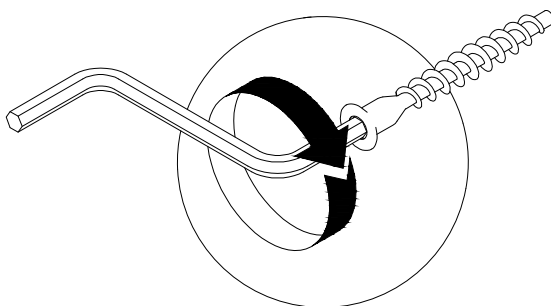
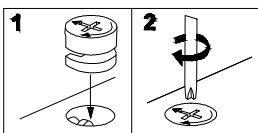


14

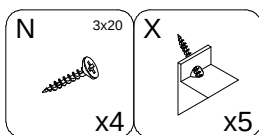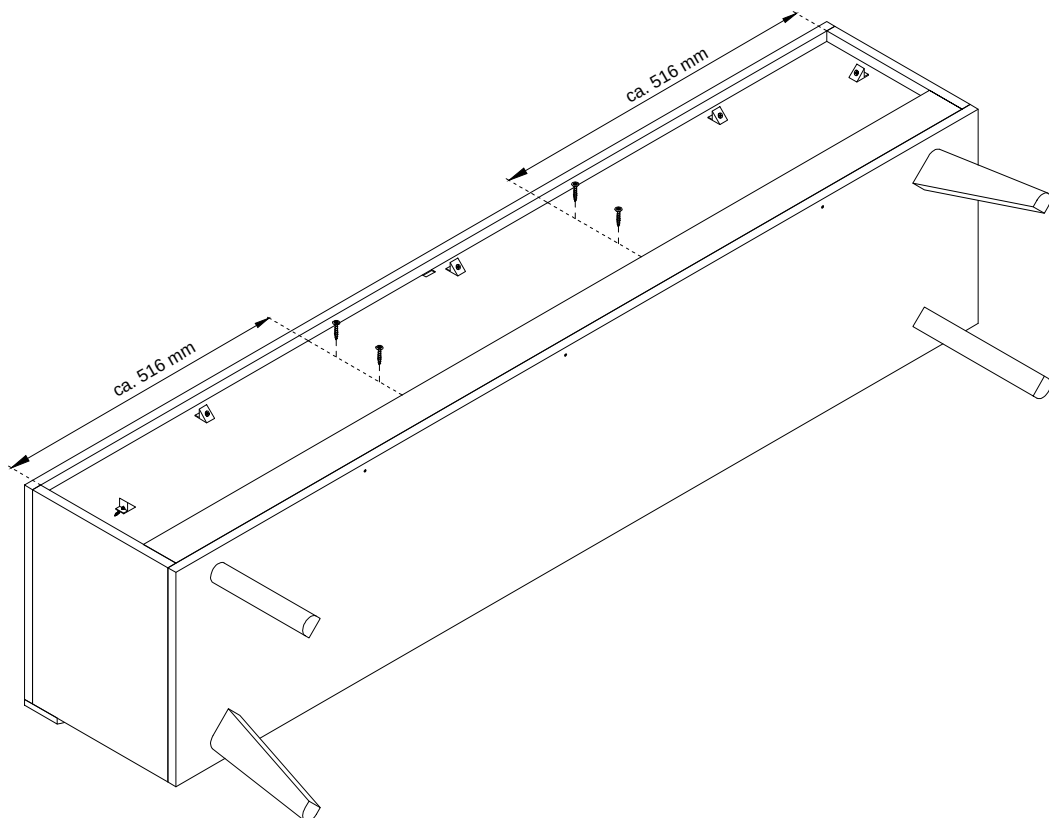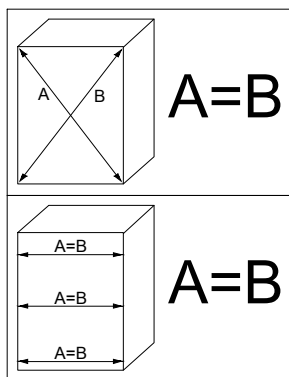

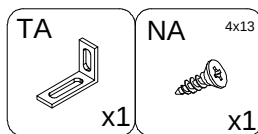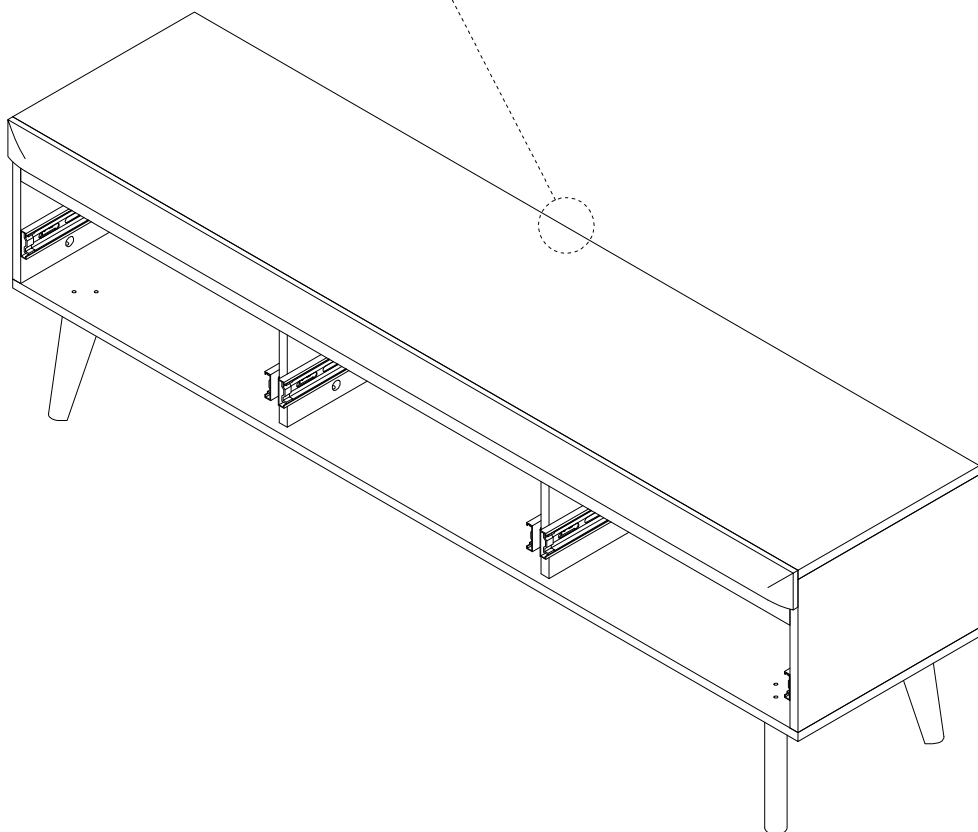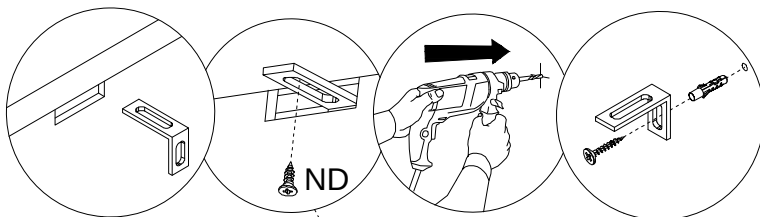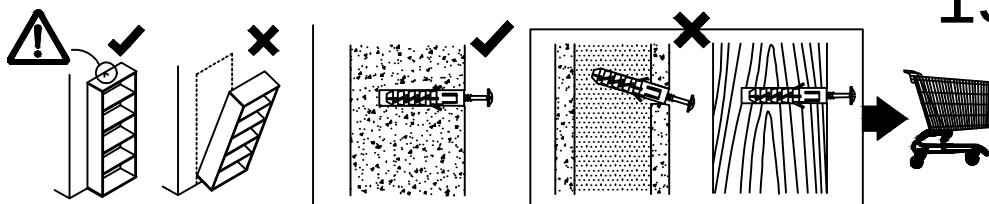

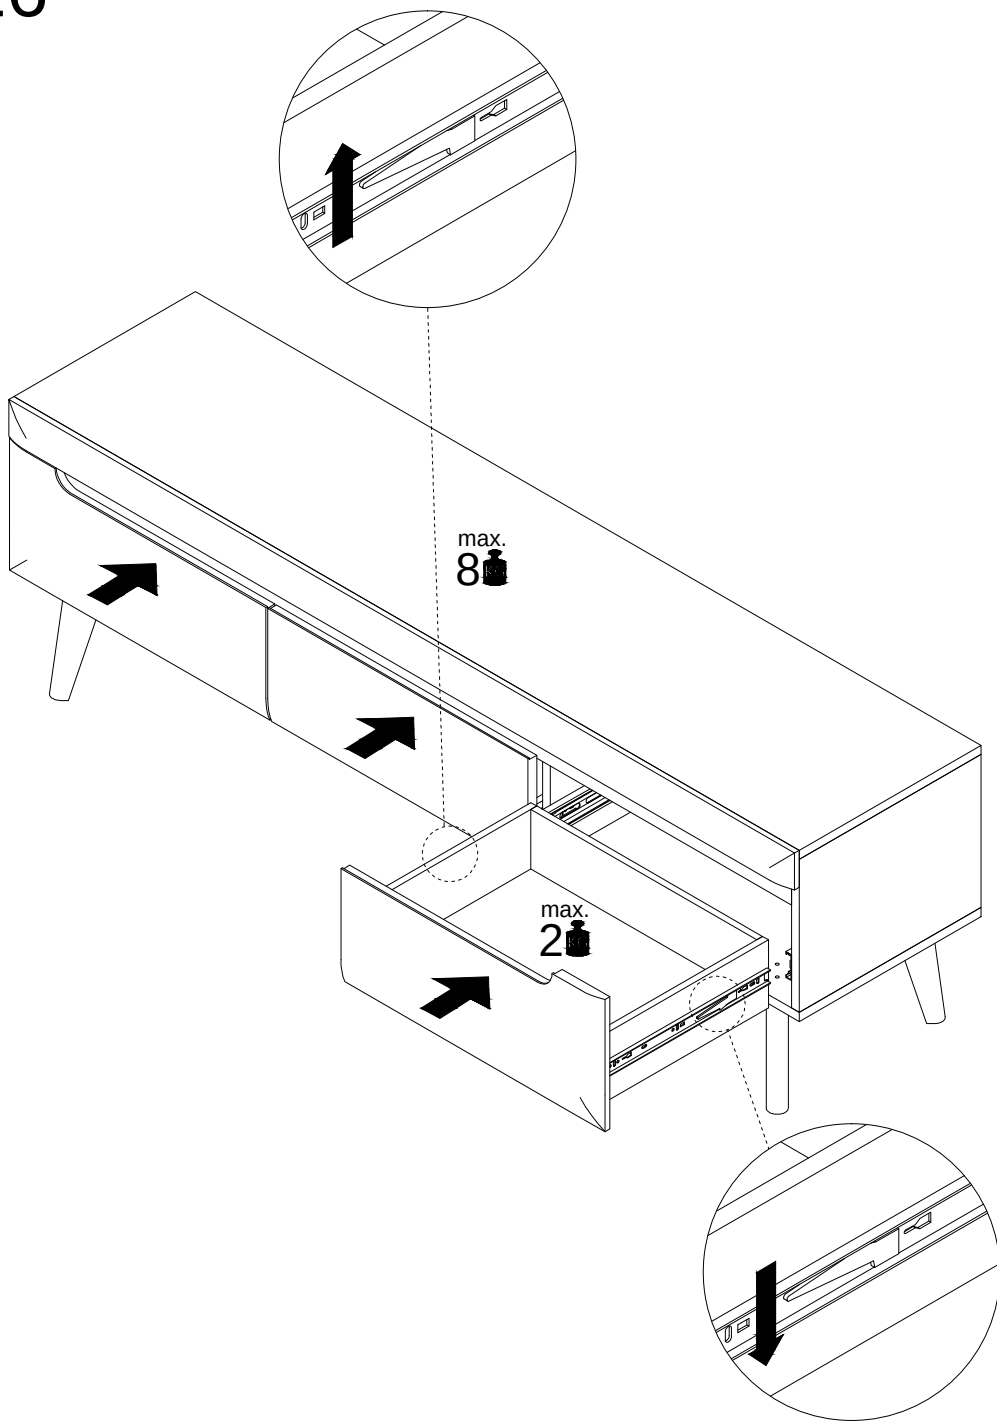









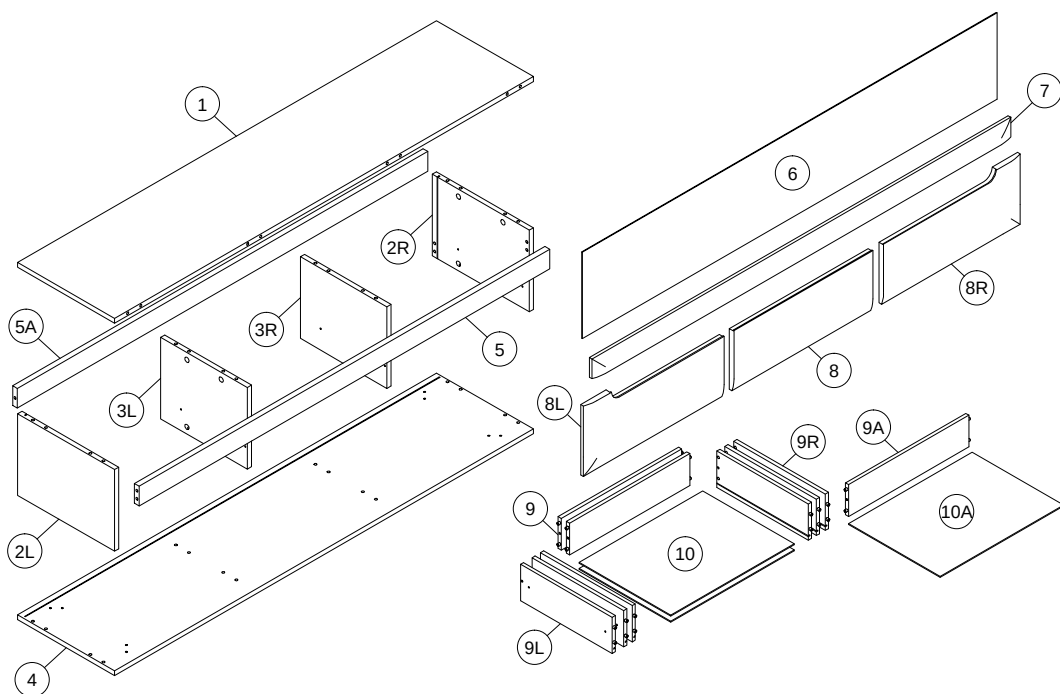
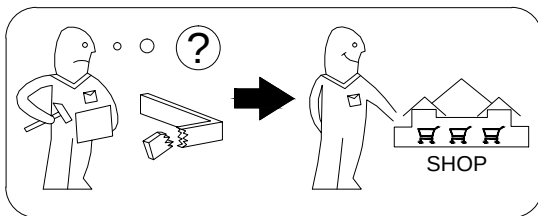
TORGE**A33ZNO 33**

1	1600	380	16	x1	1 / 2
2L	380	270	16	x1	2 / 2
2R	380	270	16	x1	2 / 2
3L	342	270	16	x1	2 / 2
3R	342	270	16	x1	2 / 2
4	1600	380	16	x1	1 / 2
5	1567	65	16	x1	1 / 2
5A	1567	120	16	x1	1 / 2
6	1580	282	2.5	x1	1 / 2
7	1600	65	18	x1	1 / 2

8	530	233	18	x1	2 / 2
8L	530	203	18	x1	2 / 2
8R	530	233	18	x1	2 / 2
9	469	100	12	x2	2 / 2
9A	460	100	12	x1	2 / 2
9L	350	100	12	x2	2 / 2
9R	350	100	12	x2	1 / 2
10	470	349	2.5	x2	1 / 2
10A	479	349	2.5	x1	1 / 2

TORGE


A33ZNO 33

FIL  X...	TA  X...	NA 4x13  X...		
HD  X...	NGD  X...	N 3x20  X...	X  X...	PPW  X...
YD 7x50  X...	WB  X...	GLUE  X...	V 3x13  X...	ND 3,5x16  X...
B  X...	A 8x32  X...	C  X...	Z  X...	ZG  X...

A 8x32











X...

   +49 5233 95 290 10

  service@imv-steinheim.de

TORGE

A33ZNO 56

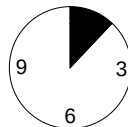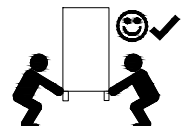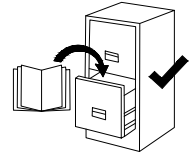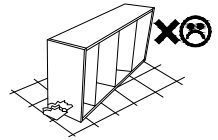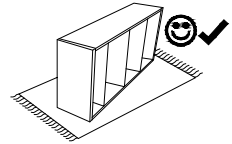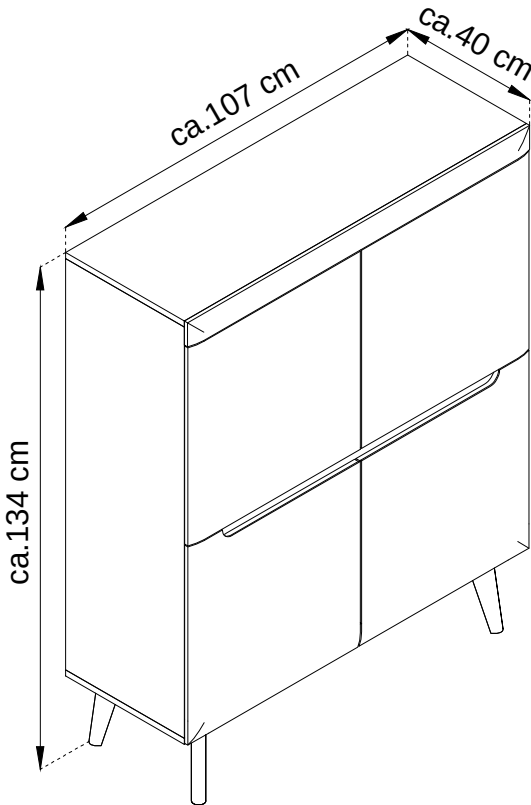

1,5 H

(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(TR) Montaj talimatı

(GB) Assembly Instructions



(IT) Istruzioni di montaggio

(PL) Instrukcja montaży


(SK) Návod na montáž

(RO) Instrucțiuni de montaj



(RU) Инструкции по монтажу

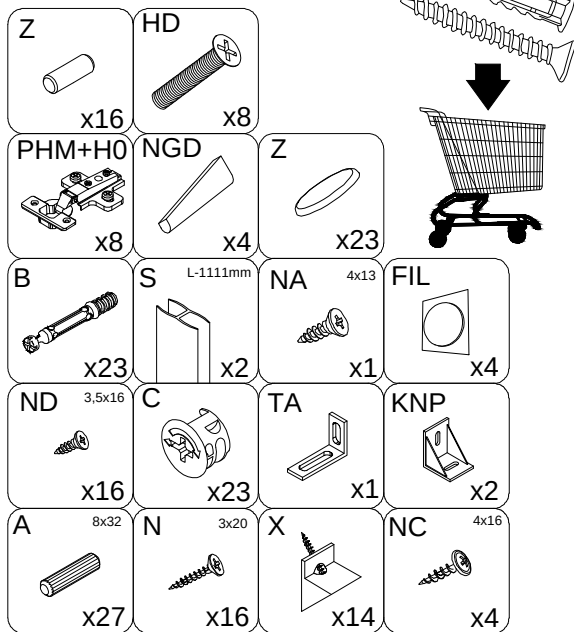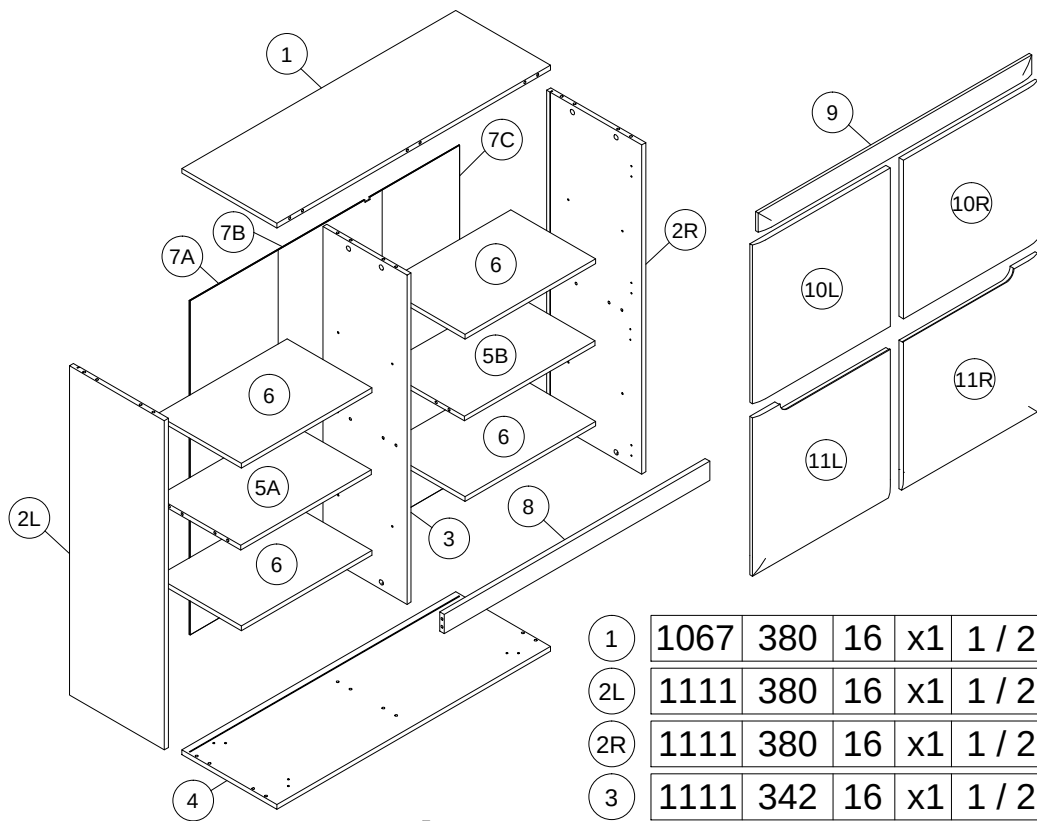




1	1067	380	16	x1	1 / 2
2L	1111	380	16	x1	1 / 2
2R	1111	380	16	x1	1 / 2
3	1111	342	16	x1	1 / 2
4	1067	380	16	x1	1 / 2
5A	509	342	16	x1	2 / 2
5B	509	342	16	x1	2 / 2
6	509	337	16	x4	2 / 2
7A	1123	348	2.5	x1	1 / 2
7B	1123	348	2.5	x1	1 / 2
7C	1123	348	2.5	x1	1 / 2
8	1034	65	18	x1	1 / 2
9	1067	65	18	x1	1 / 2
10L	535	530	18	x1	2 / 2
10R	535	530	18	x1	2 / 2
11L	535	530	18	x1	2 / 2
11R	535	530	18	x1	2 / 2

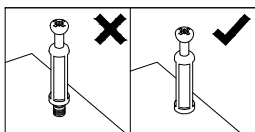


1

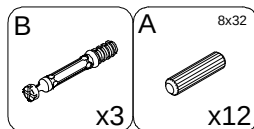
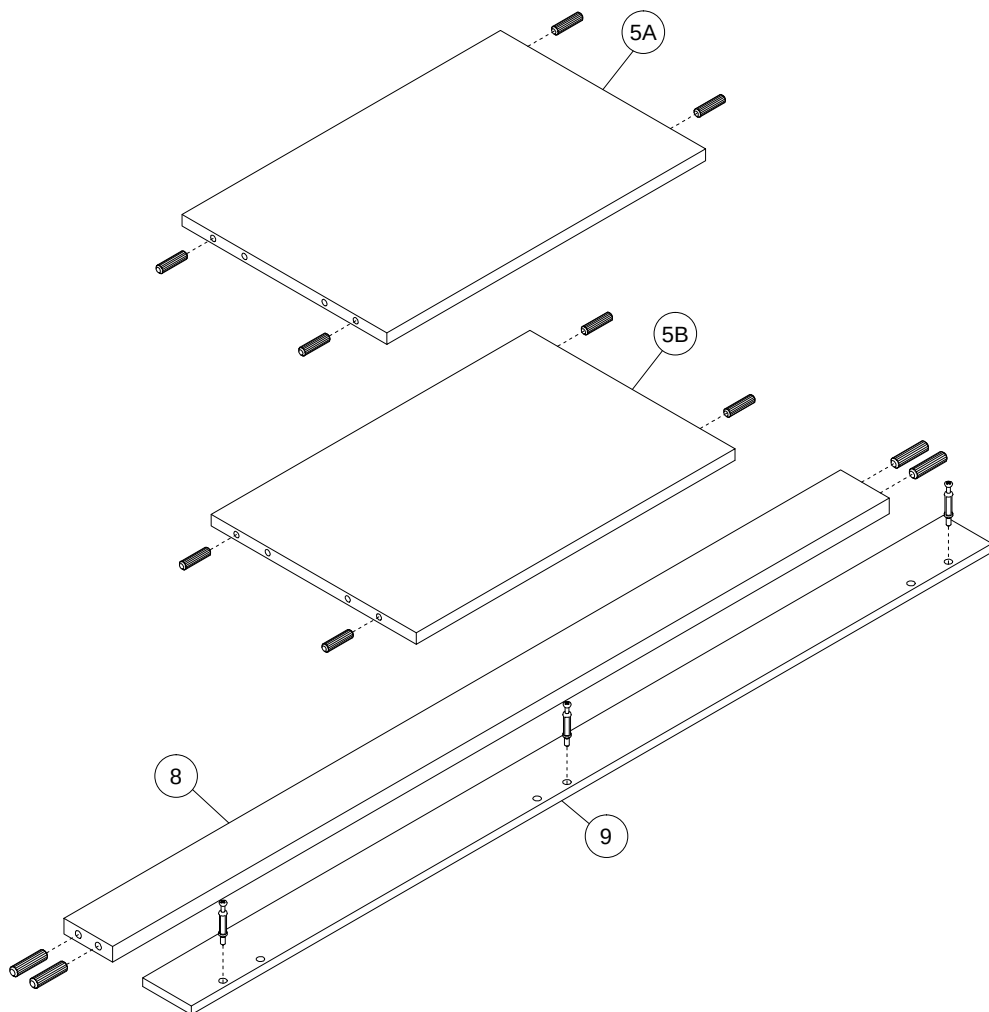


2

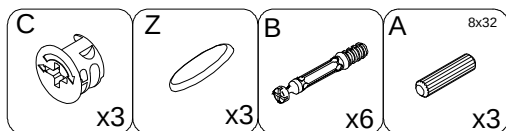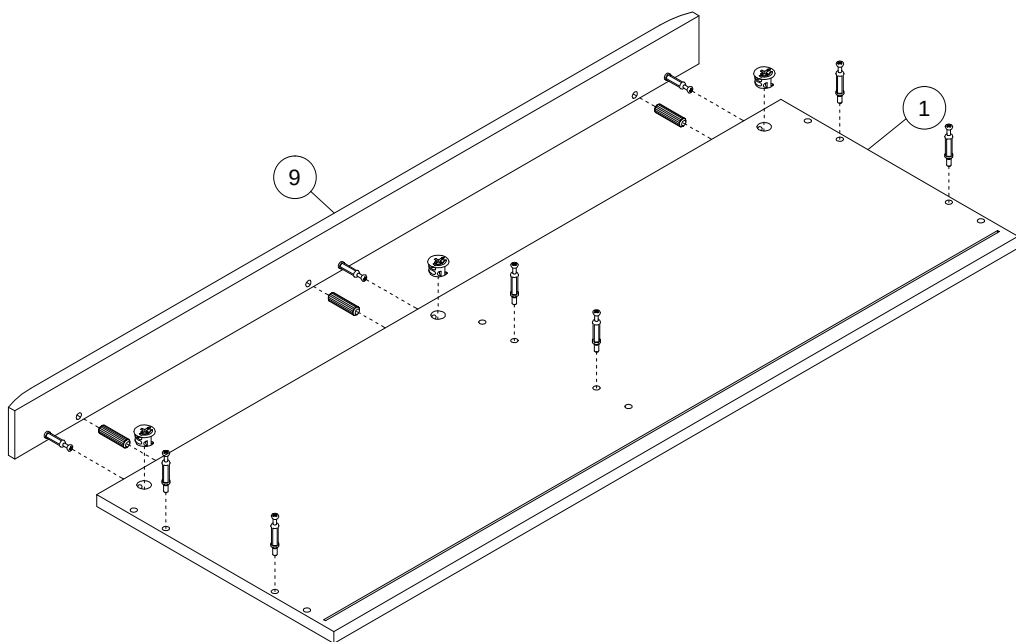
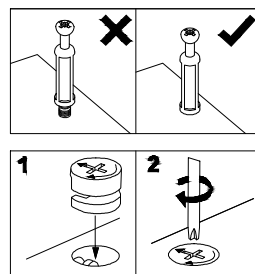



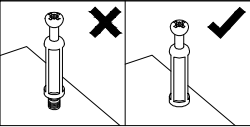






3

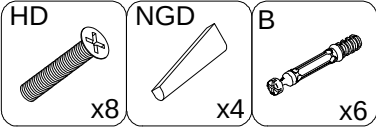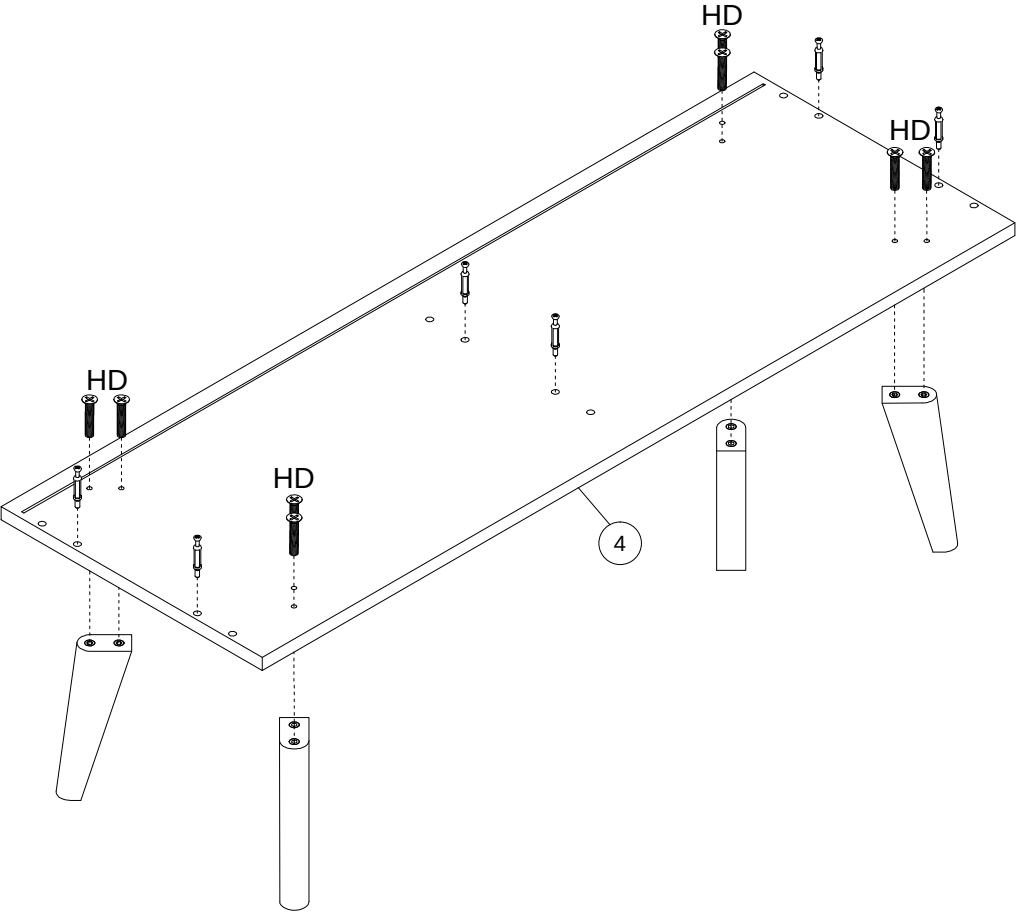


4

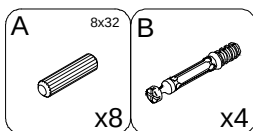
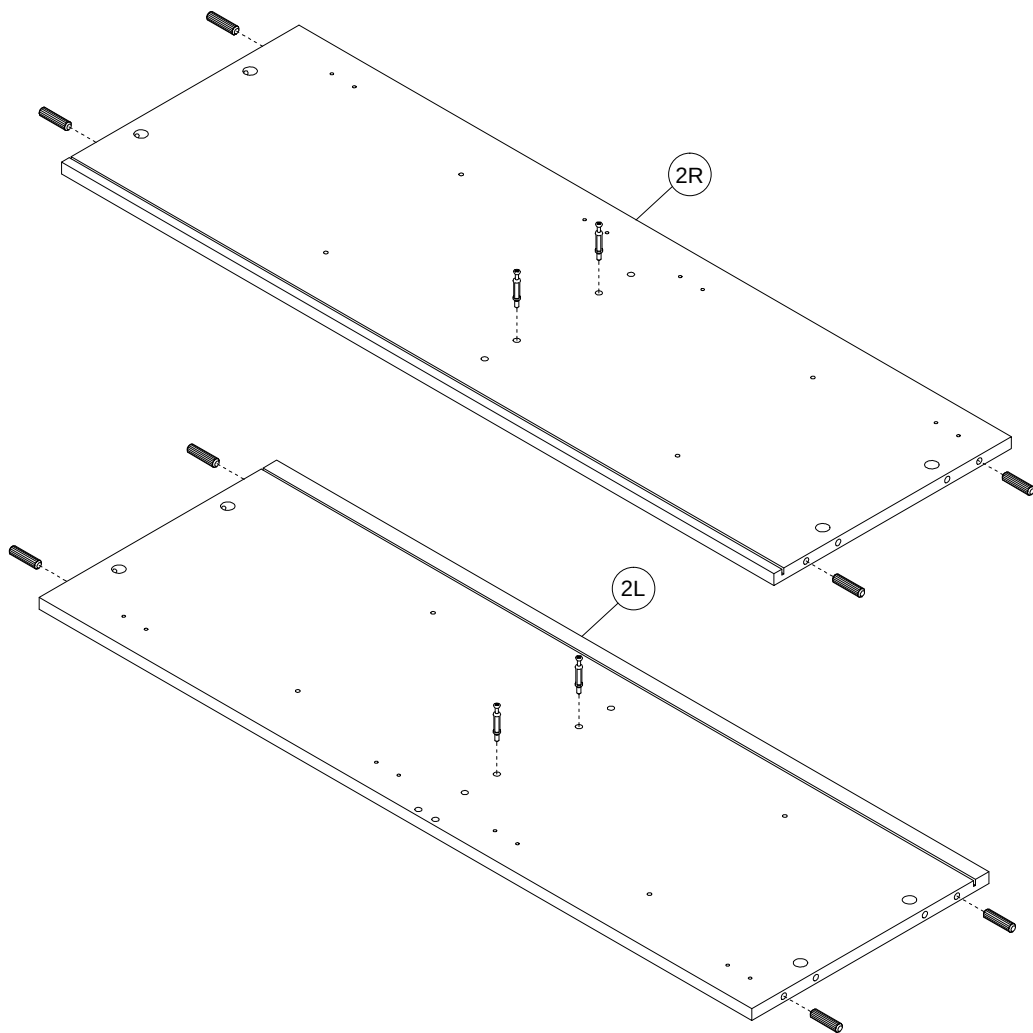


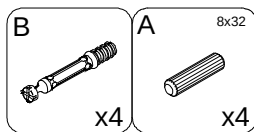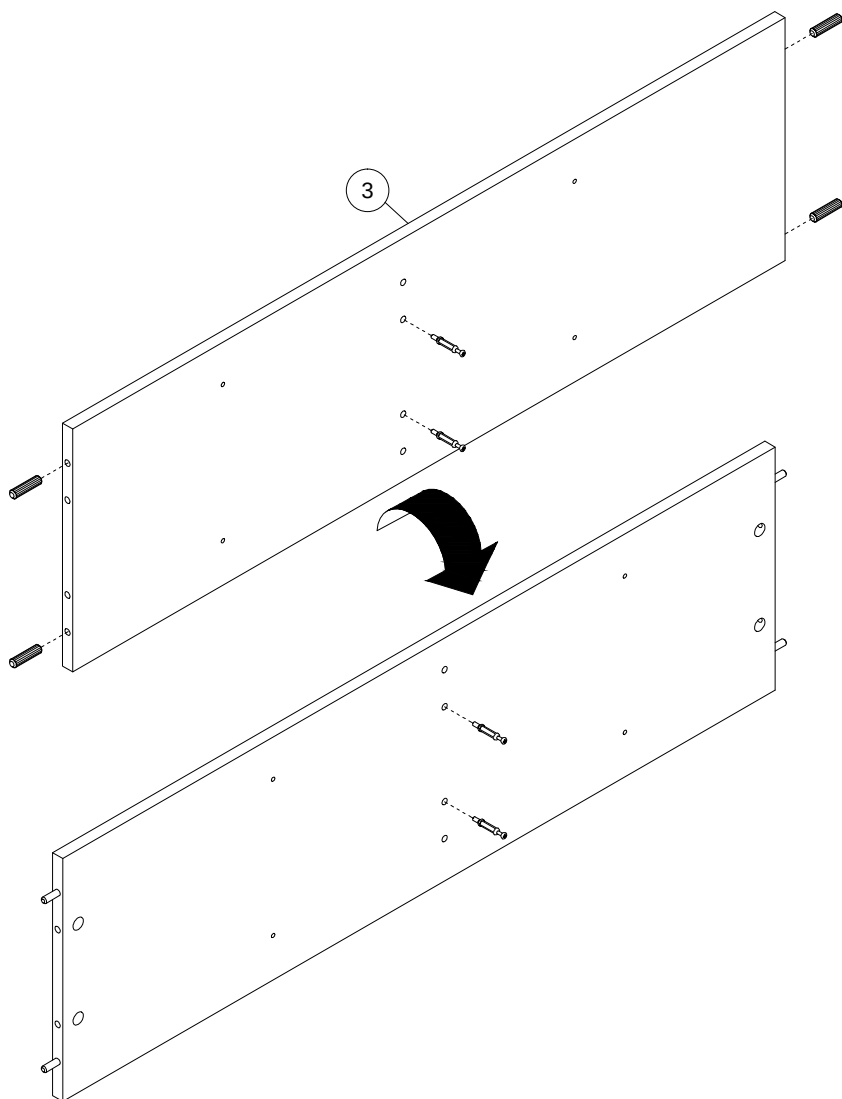

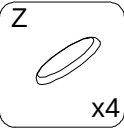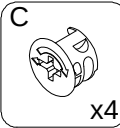
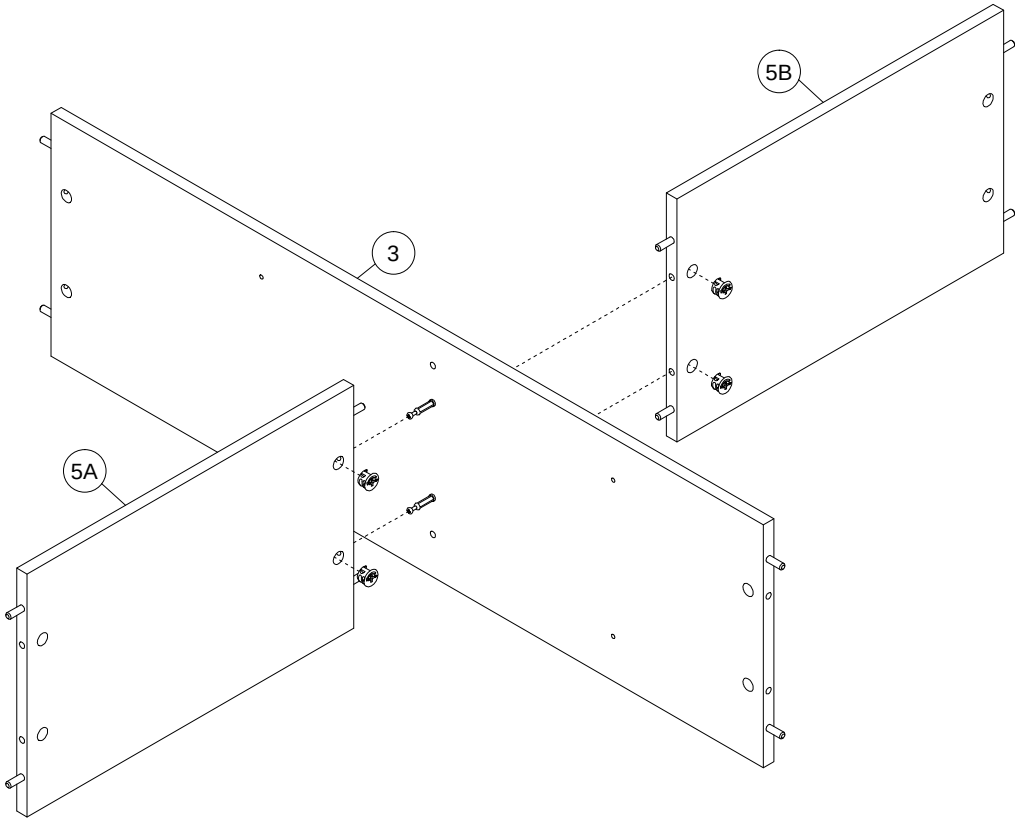
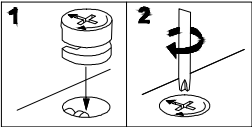




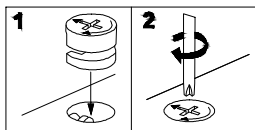



7

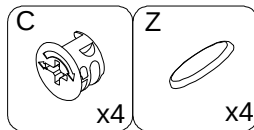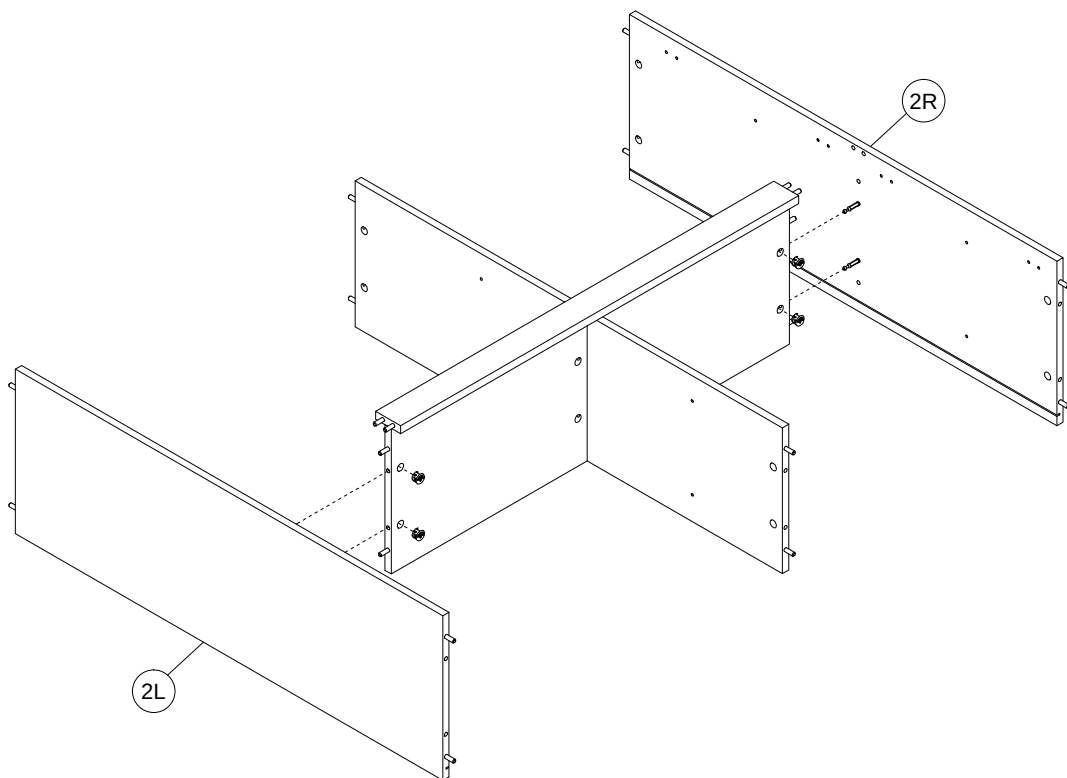


8

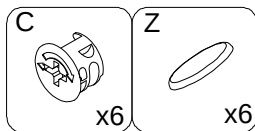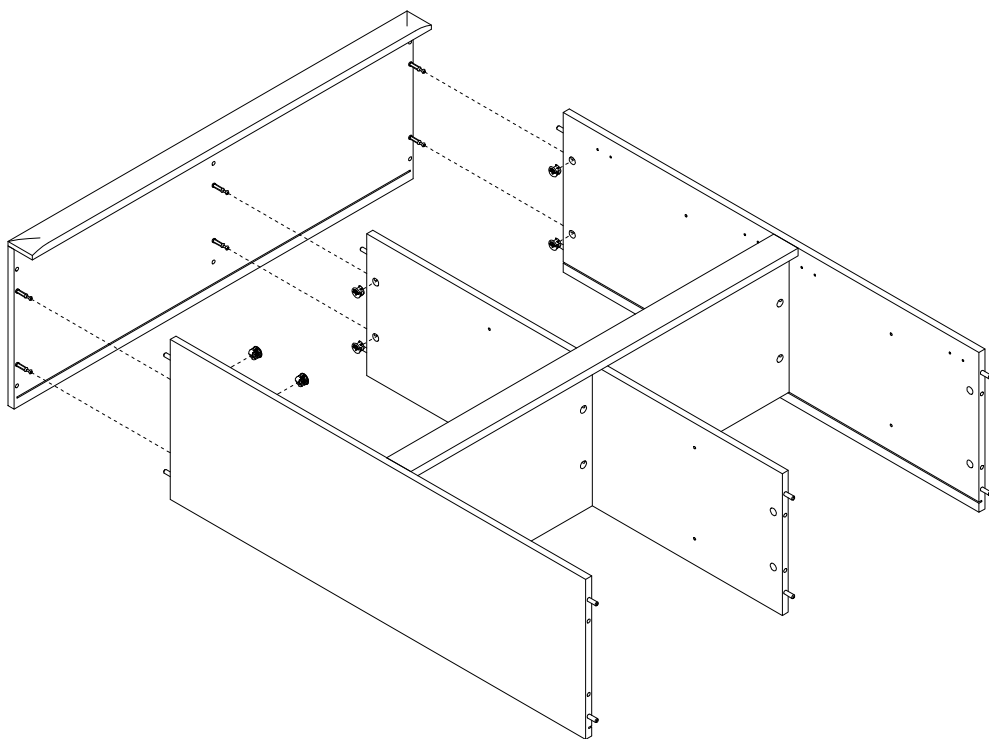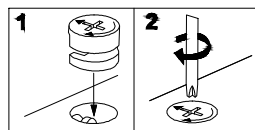

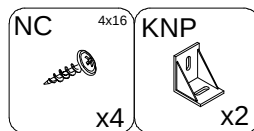
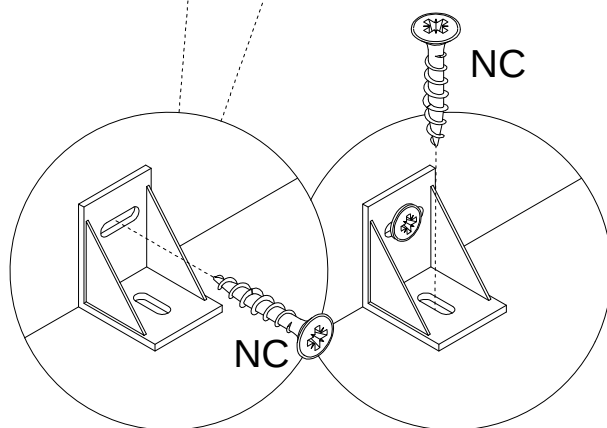
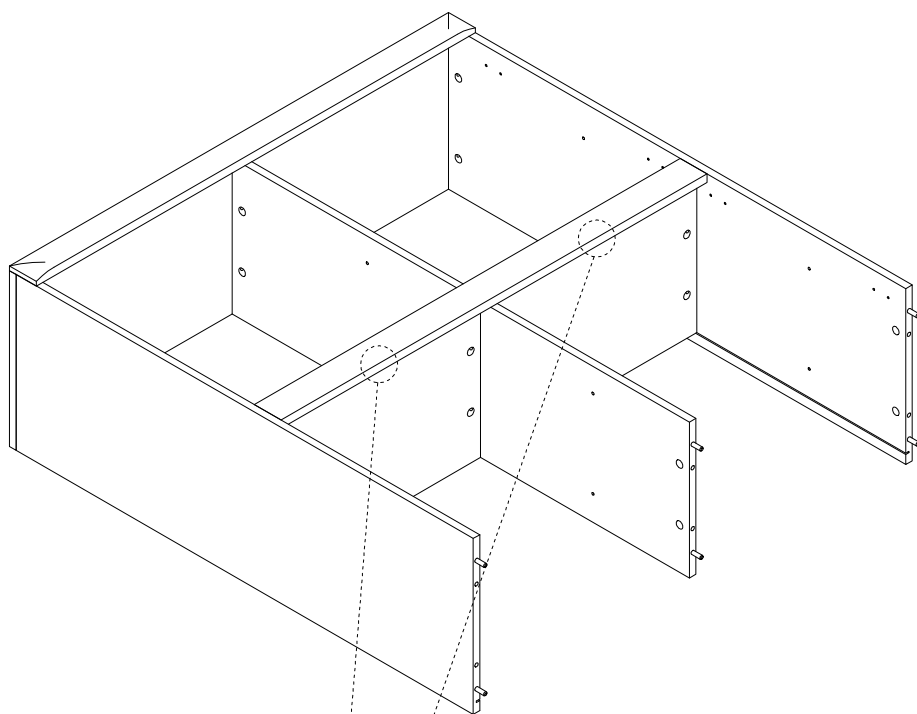


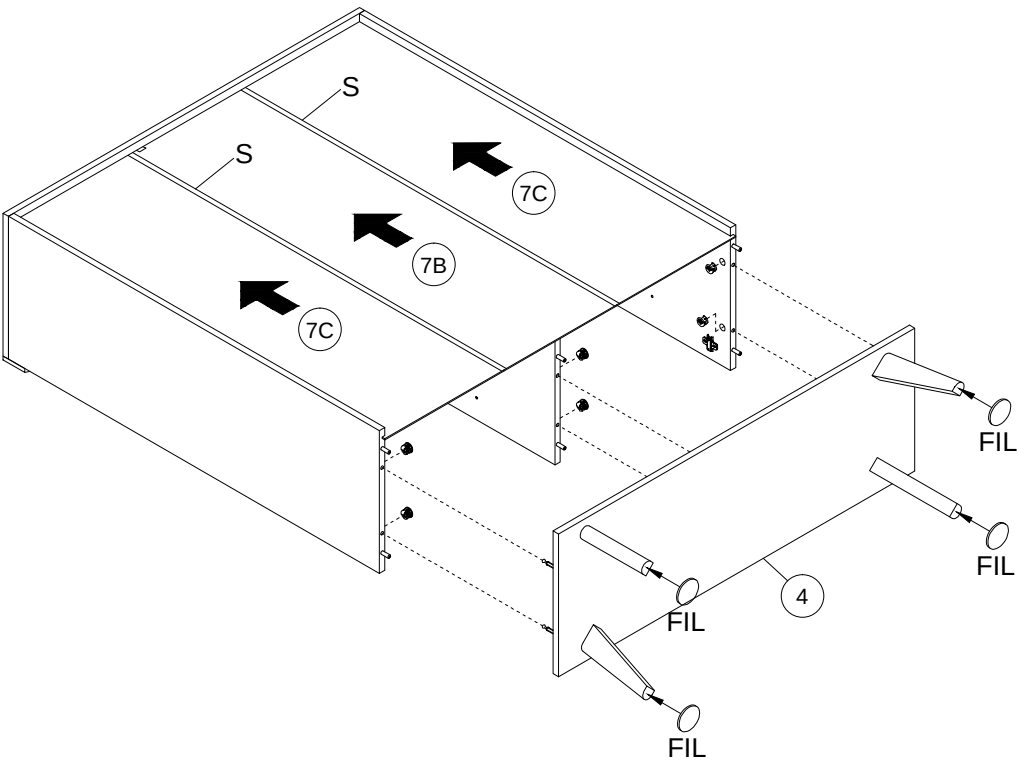





S L-1111mm x2	C x6	Z x6	FIL x4
--------------------------------	--------------------	--------------------	----------------------

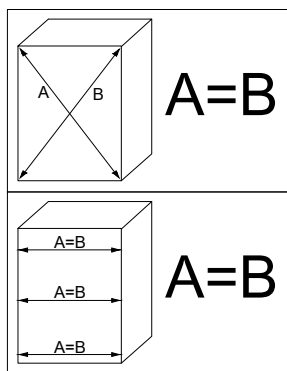

11

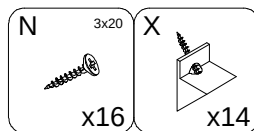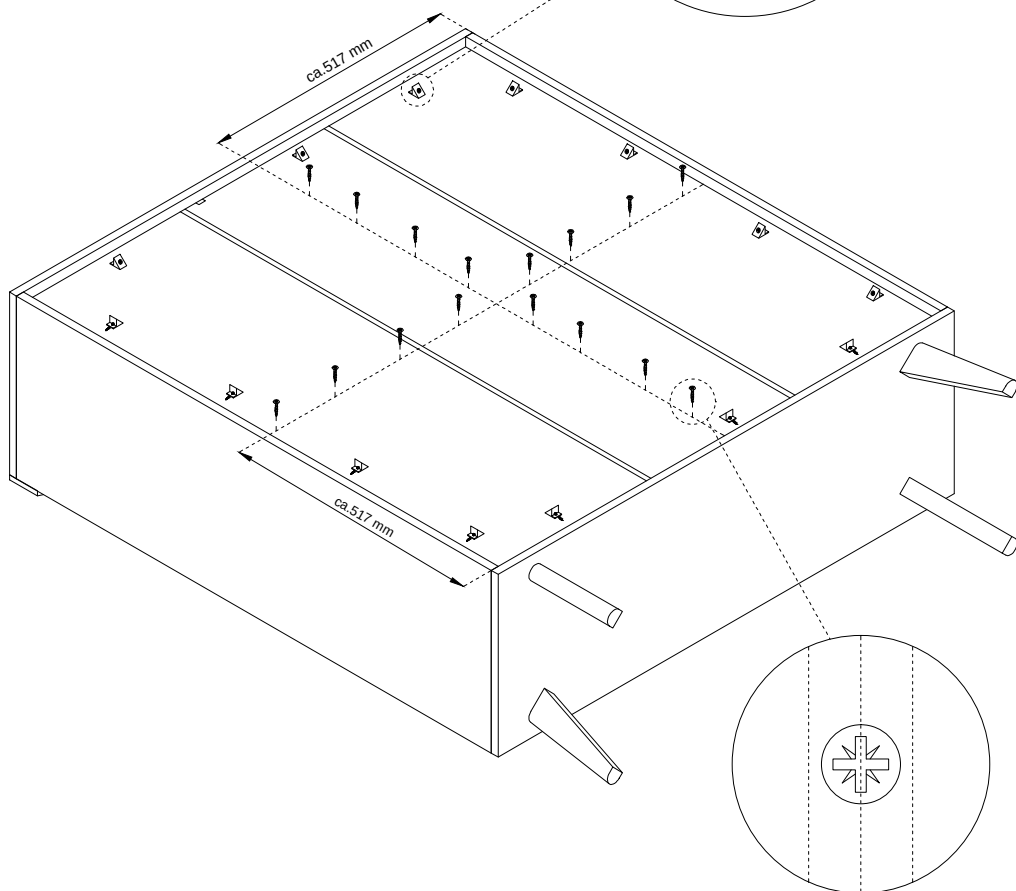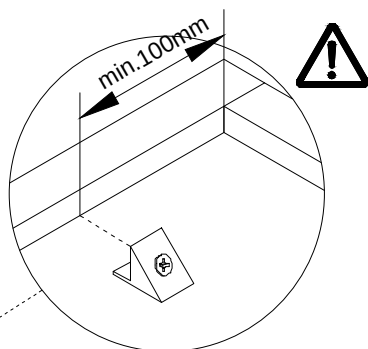

12

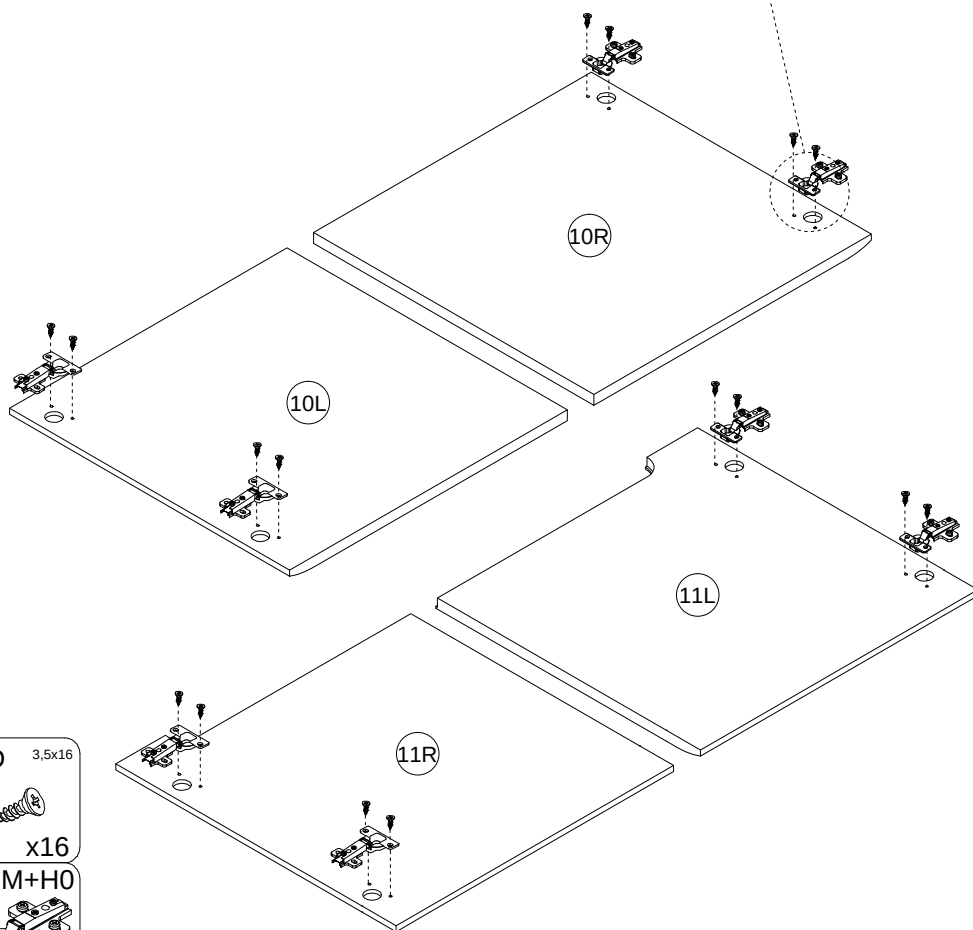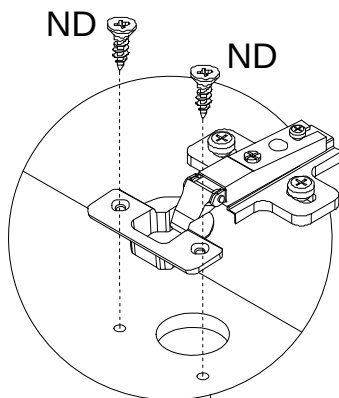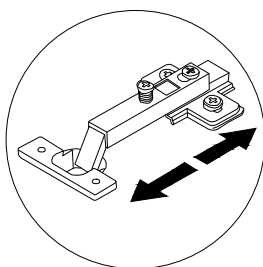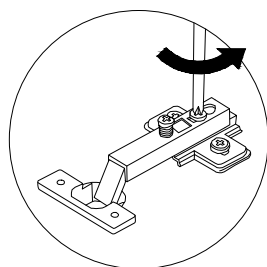


ND 3,5x16








x16





PHM+H0



x8

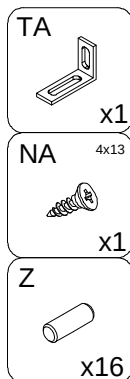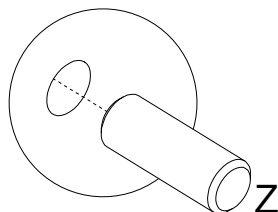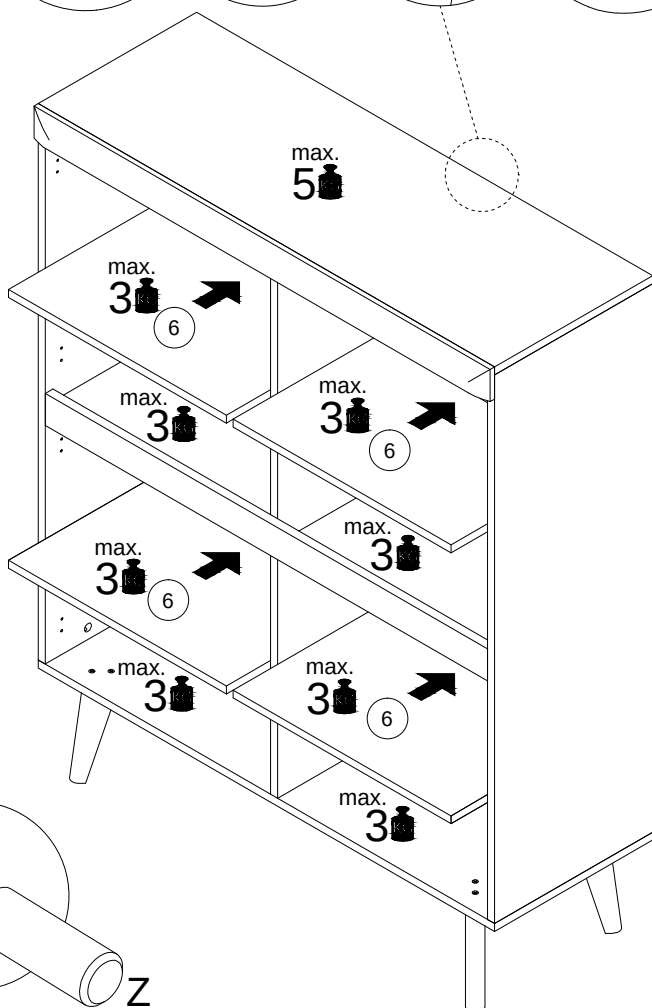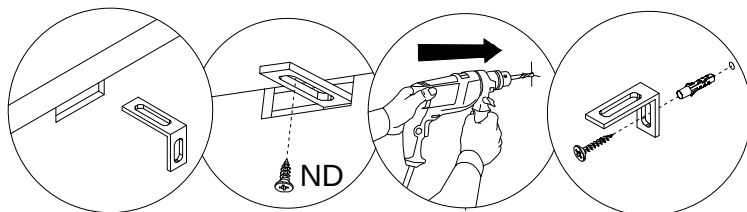
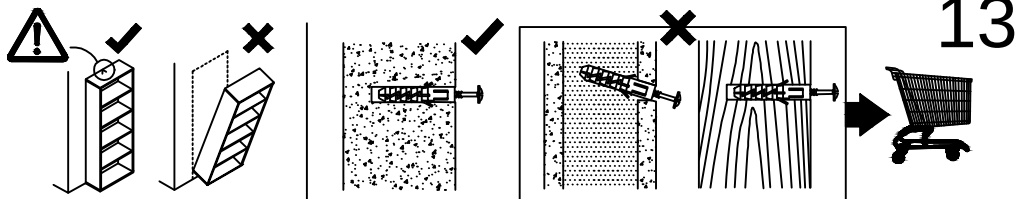


14

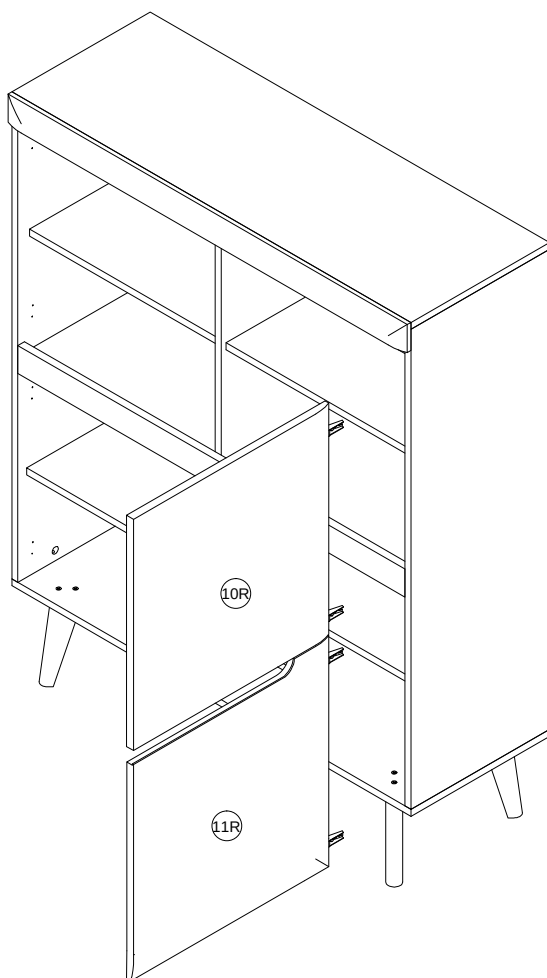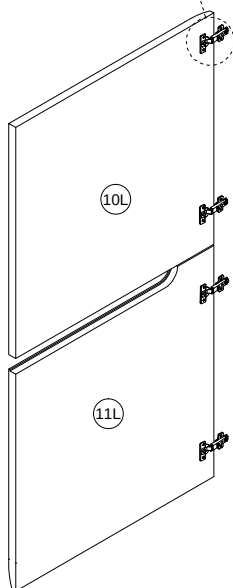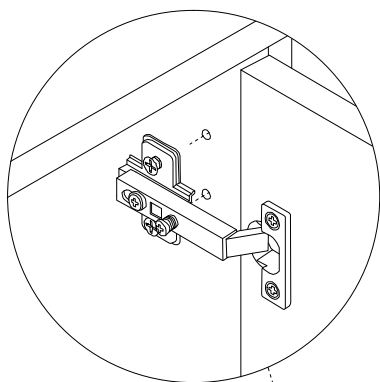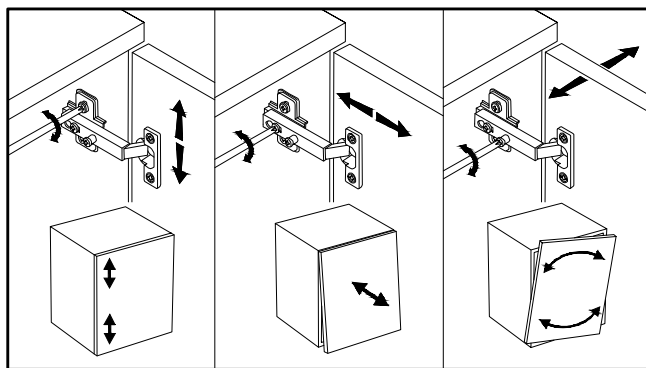

TORGE

A33ZNO 56








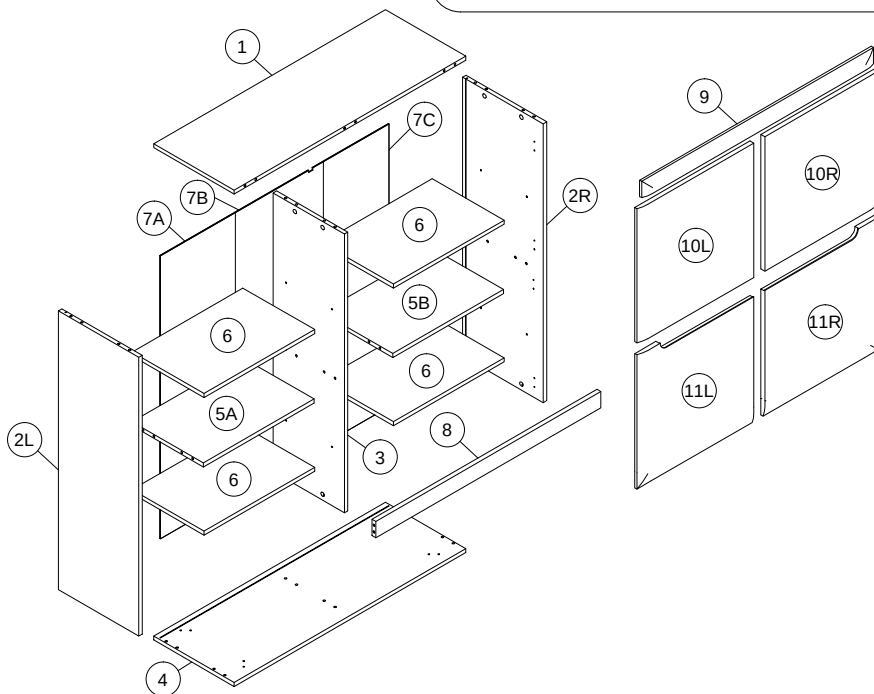
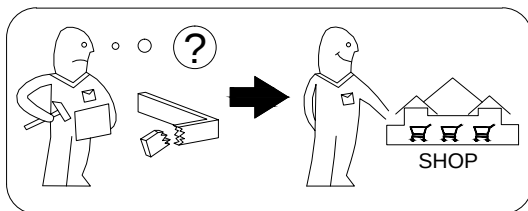


1	1067	380	16	x1	1 / 2
2L	1111	380	16	x1	1 / 2
2R	1111	380	16	x1	1 / 2
3	1111	342	16	x1	1 / 2
4	1067	380	16	x1	1 / 2
5A	509	342	16	x1	2 / 2
5B	509	342	16	x1	2 / 2
6	509	342	16	x4	2 / 2
7A	1123	348	2.5	x1	1 / 2

7B	1123	348	2.5	x1	1 / 2
7C	1123	348	2.5	x1	1 / 2
8	1034	65	18	x1	1 / 2
9	1067	65	18	x1	1 / 2
10L	535	530	18	x1	2 / 2
10R	535	530	18	x1	2 / 2
11L	535	530	18	x1	2 / 2
11R	535	530	18	x1	2 / 2

TORGE

A33ZNO 56

Z  X...			
PHM+H0  X...	HD  X...	Z  X...	C  X...
B  X...	NGD  X...	NA 4x13  X...	FIL  X...
ND 3,5x16  X...	S L-1111mm  X...	TA  X...	KNP  X...
A 8x32  X...	N 3x20  X...	X  X...	NC 4x16  X...



A 8x32

 X...
















+49 5233 95 290 10



service@imv-steinheim.de

TORGE

A33ZNO71

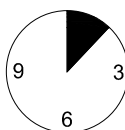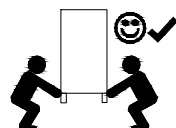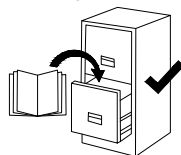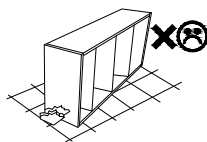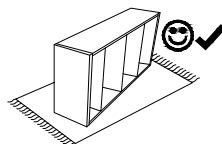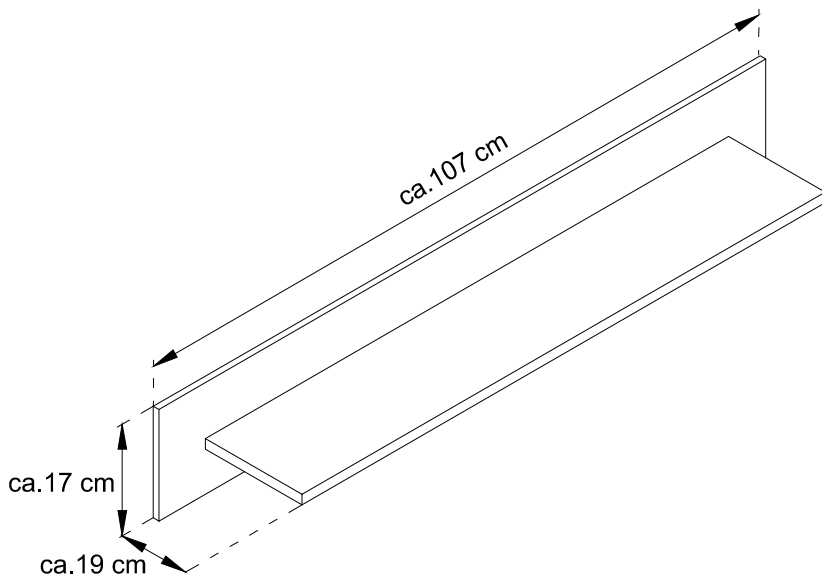

0,5 H

(D) Montageanleitung

(FR) Notice de montage

(NL) Handleiding voor de montage

(CZ) Montážní návod

(HU) Szerelési útmutató

(TR) Montaj talimati

(GB) Assembly Instructions



(IT) Istruzioni di montaggio

(PL) Instrukcja montażu

(SK) Návod na montáž


(RO) Instrucțiuni de montaj

(RU) Инструкции по монтажу


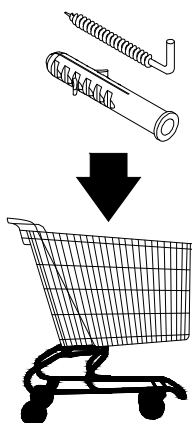
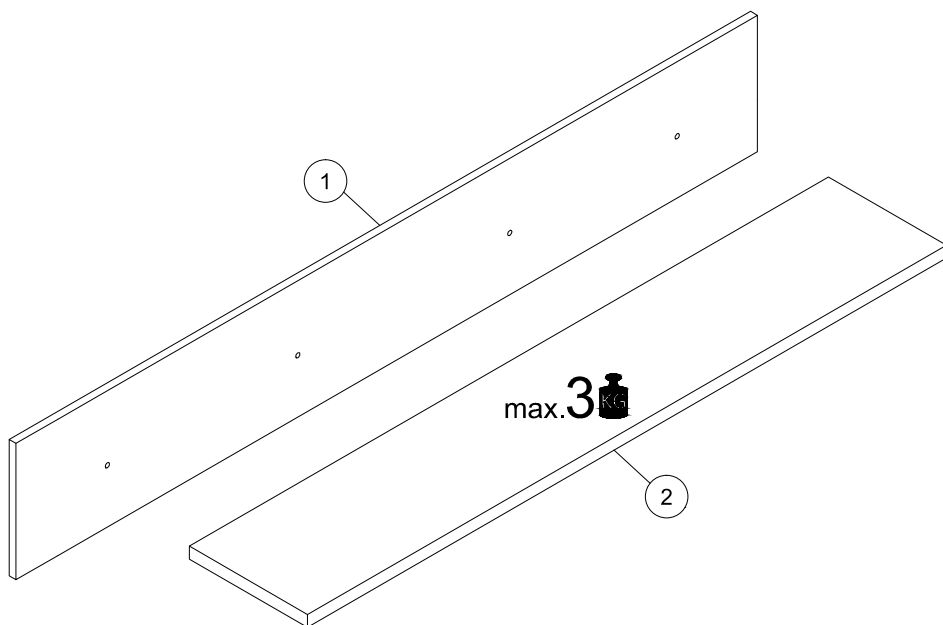




1	1067	170	16	x1	1 / 1
2	920	120	12	x1	1 / 1

XA	WB	HA	5x9	YC	6,4x60
					
x2	x1	x4		x4	

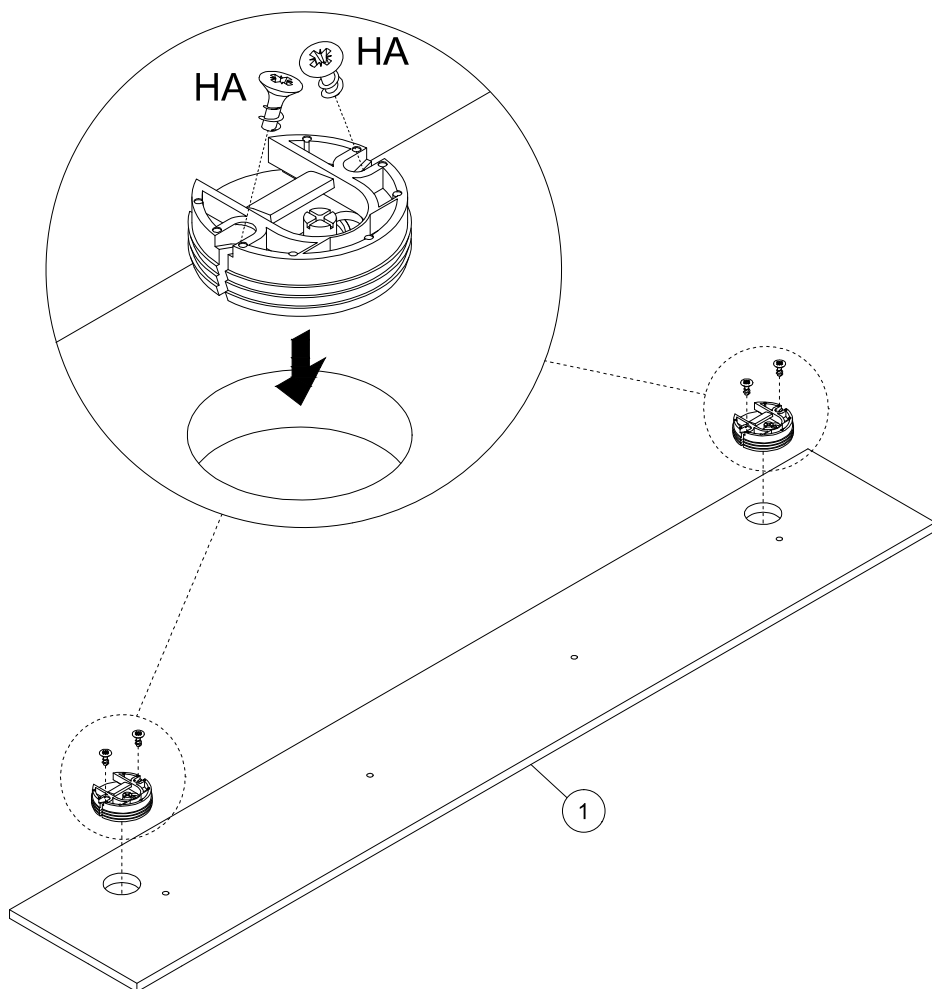


2

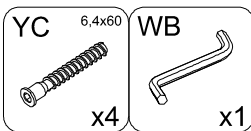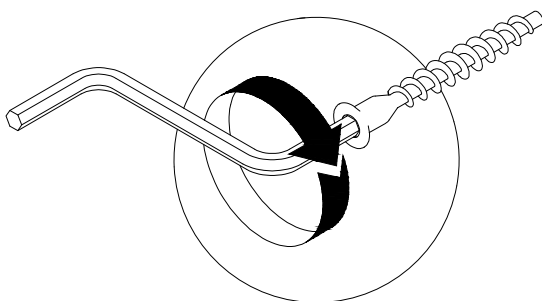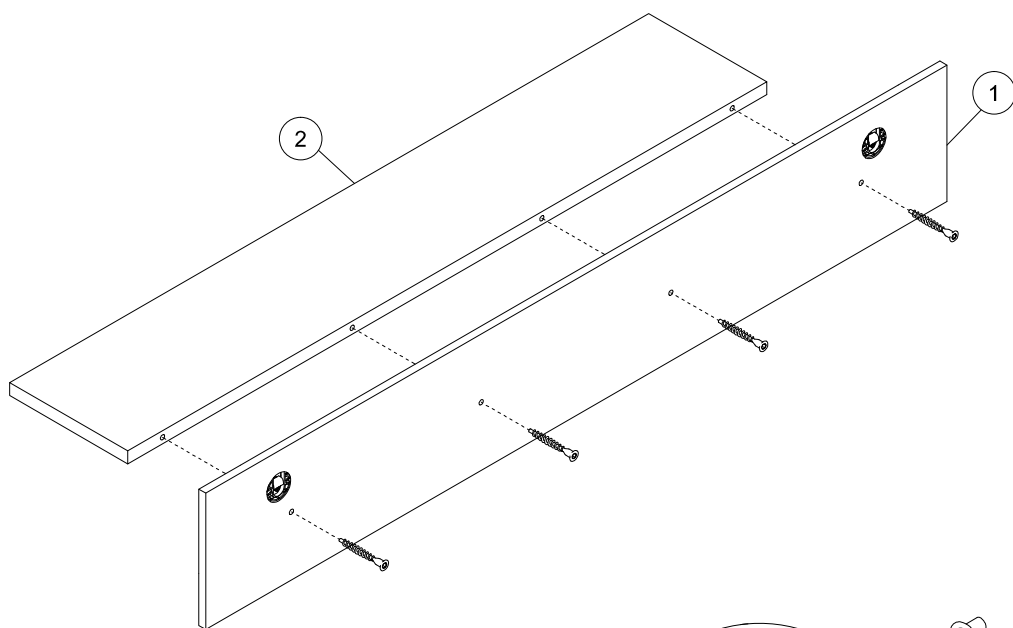

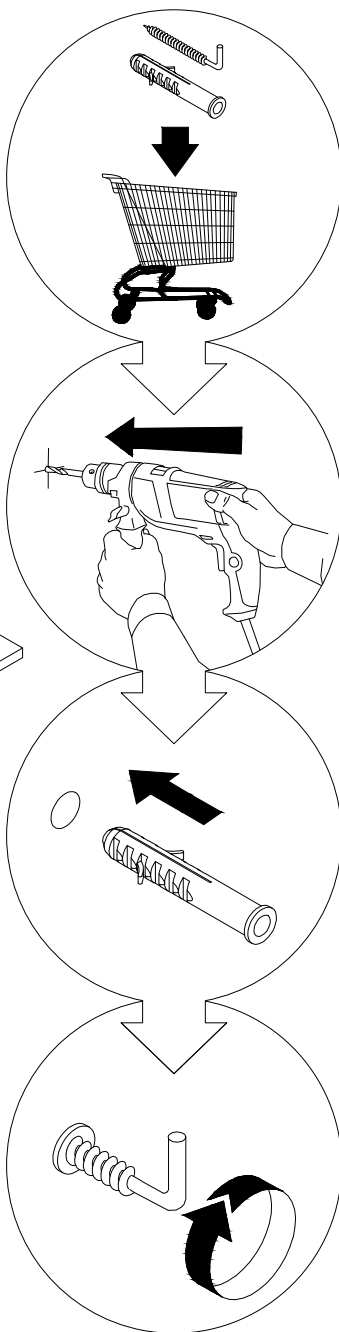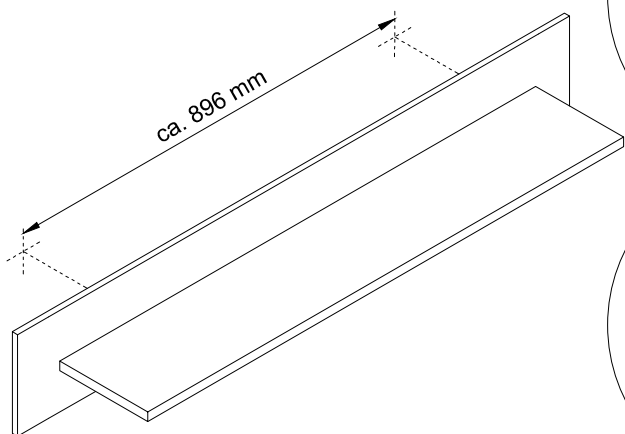

TORGE

A33ZNO71

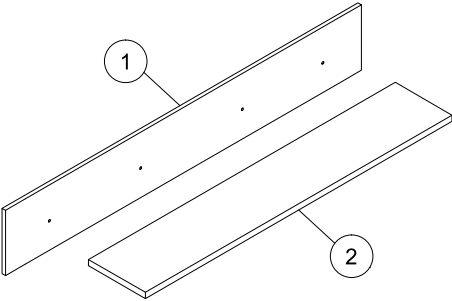

1	1067	170	16	x1	1 / 1
2	920	120	12	x1	1 / 1

