



## Lorenzo

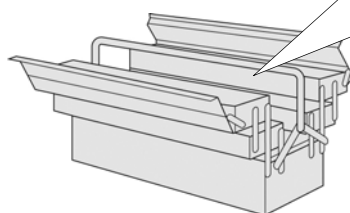


- |                                  |                                       |
|----------------------------------|---------------------------------------|
| <b>D</b> Montageanleitung        | <b>GB</b> Assembly instructions       |
| <b>FR</b> Notice de montage      | <b>NL</b> Handleiding voor de montage |
| <b>CZ</b> Montážní návod         | <b>IT</b> Istruzioni di montaggio     |
| <b>RO</b> Instrucțiuni de montaj | <b>RU</b> инструкция по сборке        |
| <b>PL</b> Instrukcja montażu     | <b>SK</b> Návod na montáž             |
| <b>HU</b> Szerelési útmutató     | <b>TR</b> Montaj talimati             |

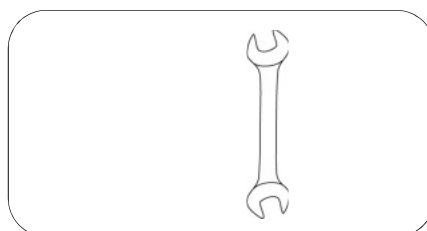

0  
10  
20  
30  
40  
50  
60  
70  
80  
90  
100  
110  
120  
130  
140  
150  
160  
170  
180  
190  
200

## Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба


Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • Ísim • Название	<b>Lorenzo 140</b>	
Nr. • No. • N° • Номер • Č • Sz	<b>SH59</b>	
Typ • Type • Tip • Típus • Tipo Тип	<b>BS</b>	

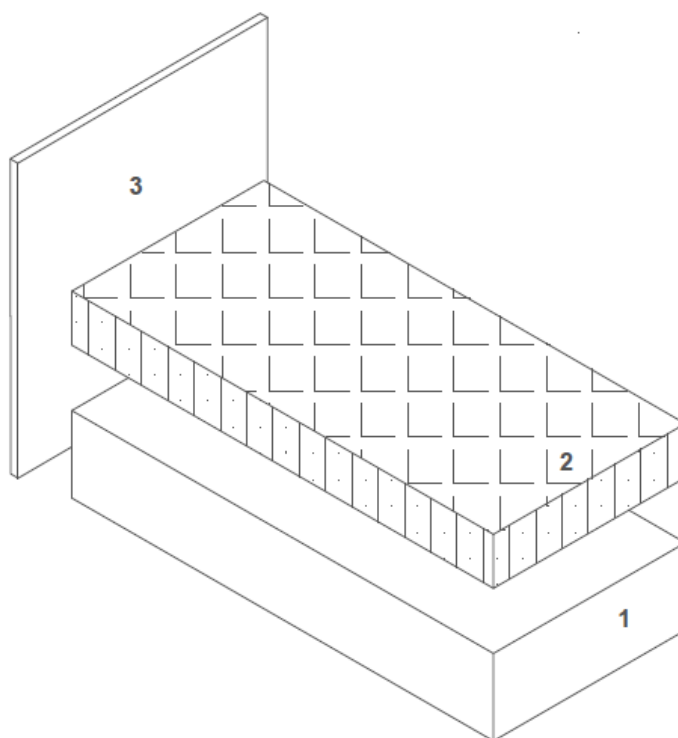


A	B	C
4x 8x80	4x 8x40	4x M8

1.

a) Transportsicherung entfernen

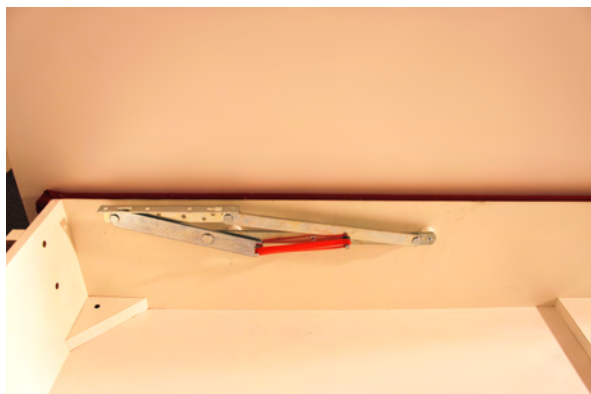

b) Gasfedermontage vorbereiten

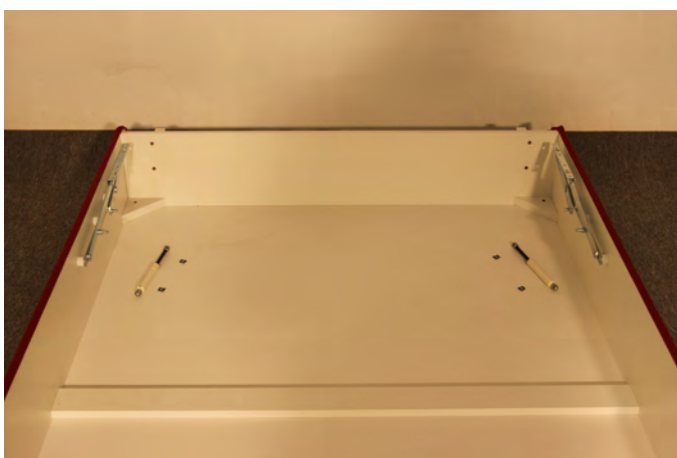


2x





4x

c) Gasfeder aufstecken und mit Splinten sichern (aufschieben)

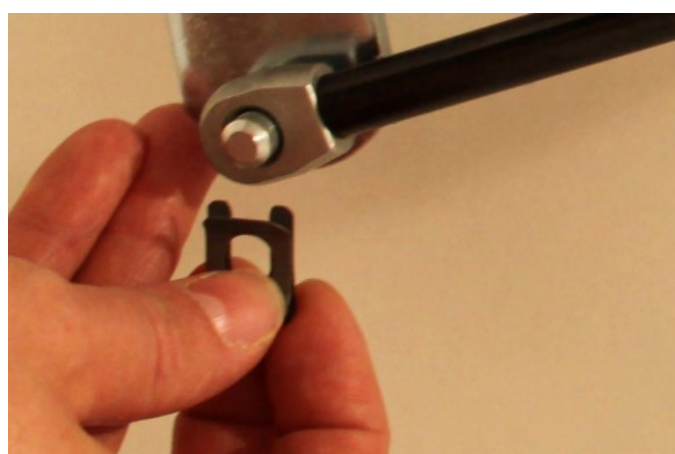

2.

d) Bettkasten auf die Seite stellen, Liegefläche anschrauben, Bett auf die Füße stellen

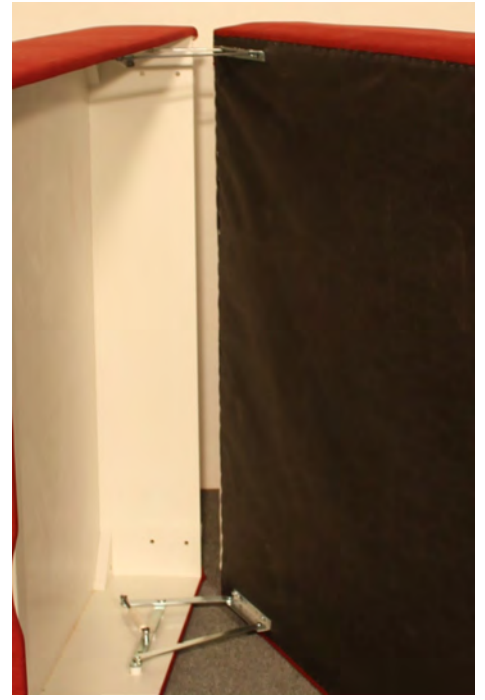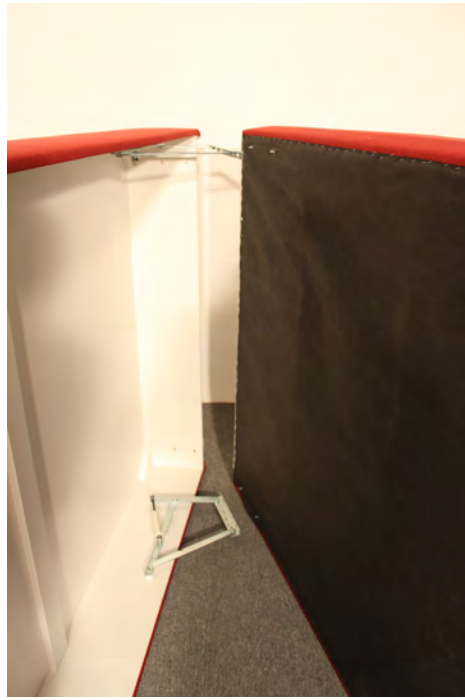




1x




4x





 4x 8x80	 4x 8x40	 4x M8	Achtung! Schrauben nicht überdrehen FR Attention! Ne serrez pas trop CZ Dávej Pozor! Nepřetahujte RO Ai Grija! Nu strângeți PL Uwaga! Nie dokręcać zbyt mocno HU Vigyázz! Ne húzza túl	GB Watch Out! Do not over tighten NL Let Op! Niet te vast IT Attenzione! Non stringere RU Осторожно! Не затягивайте SK Dávaj Pozor! Nepretahujte TR Dikkat! Üzerinde sıkmayın
--	--	--	---	--

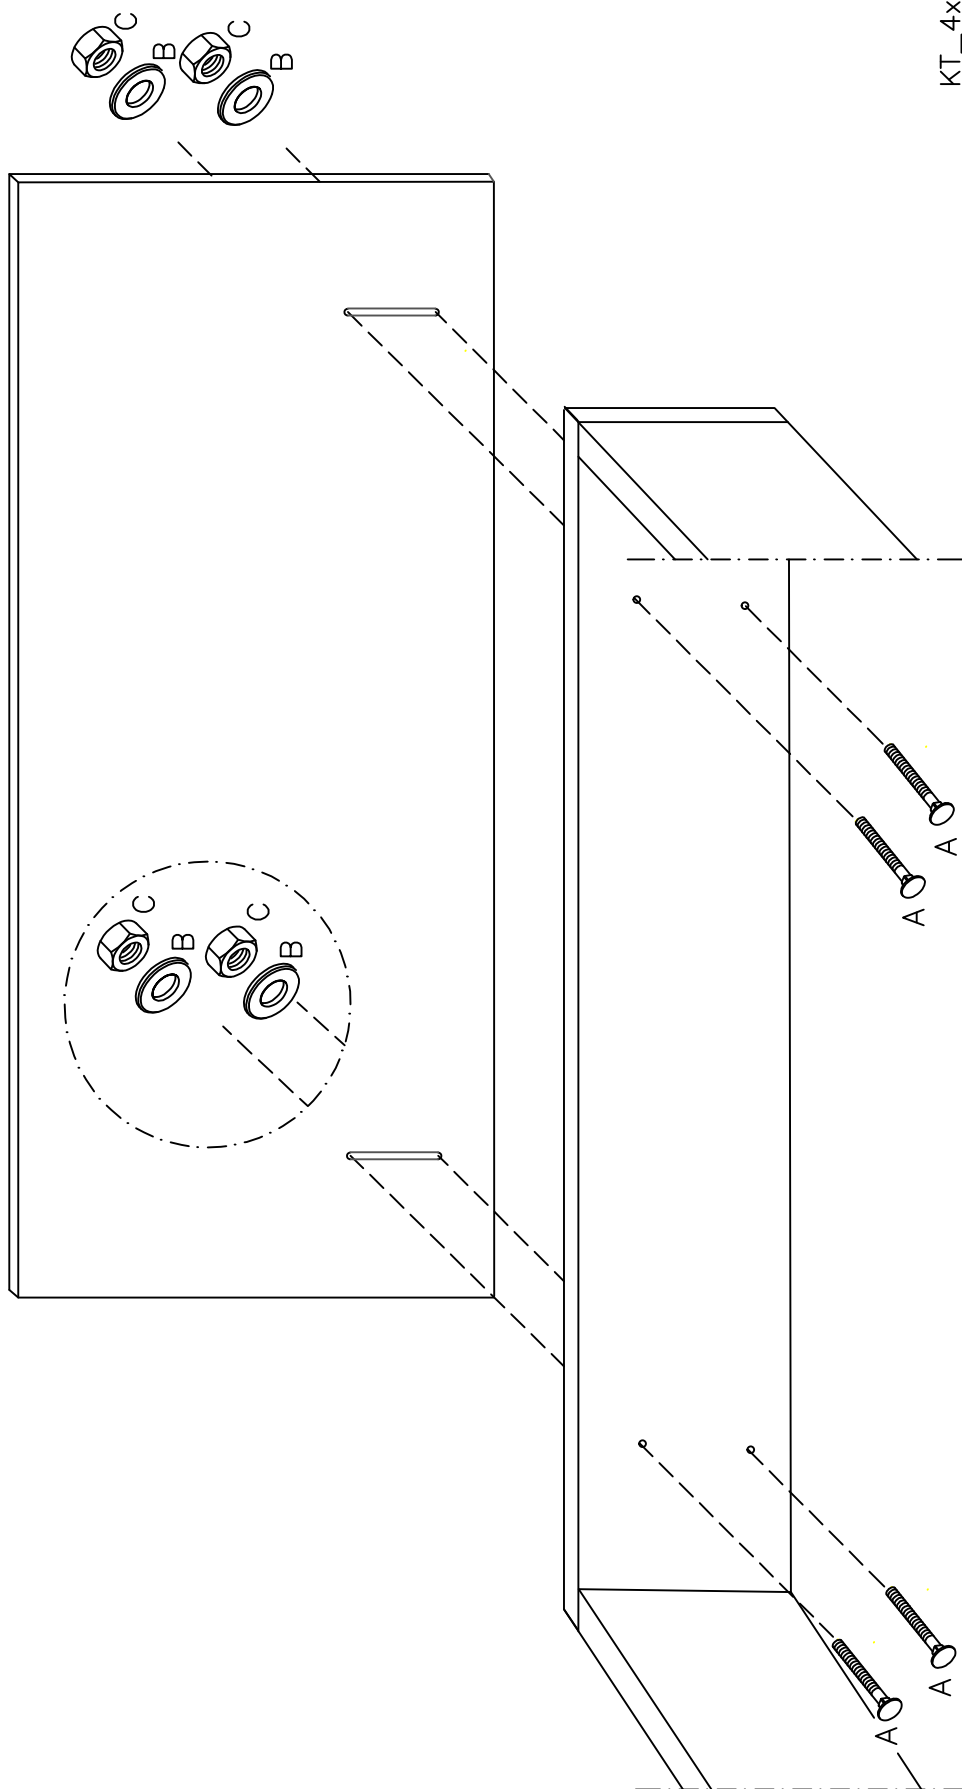

KT\_4xSchloss\_8x80