





Modular Plus – Fachboden 600


Montage

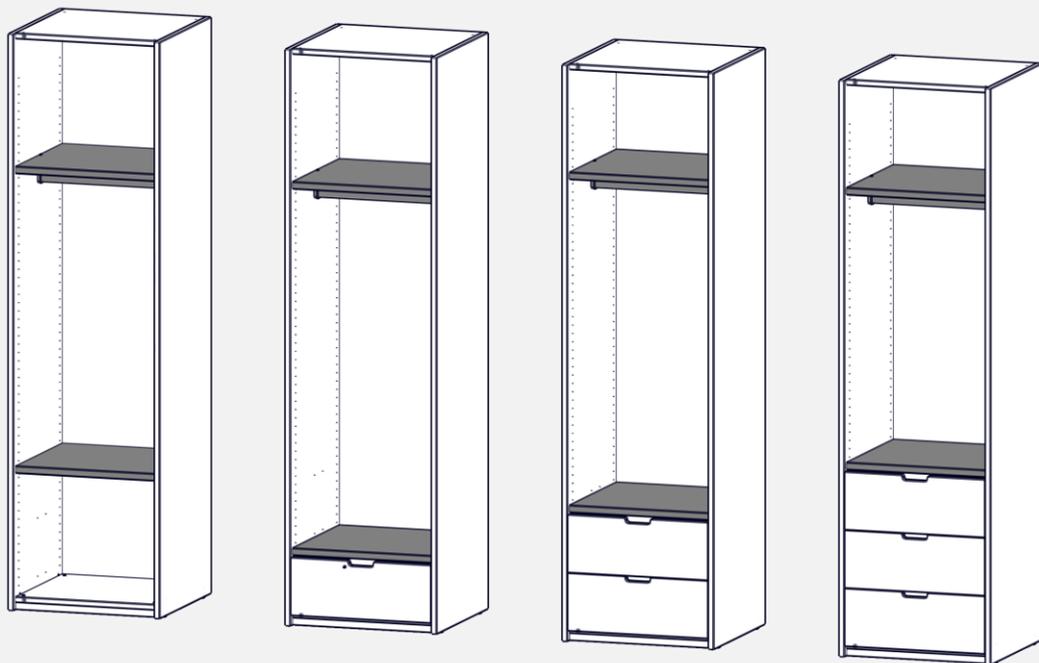



Modular Plus – Fachboden 600

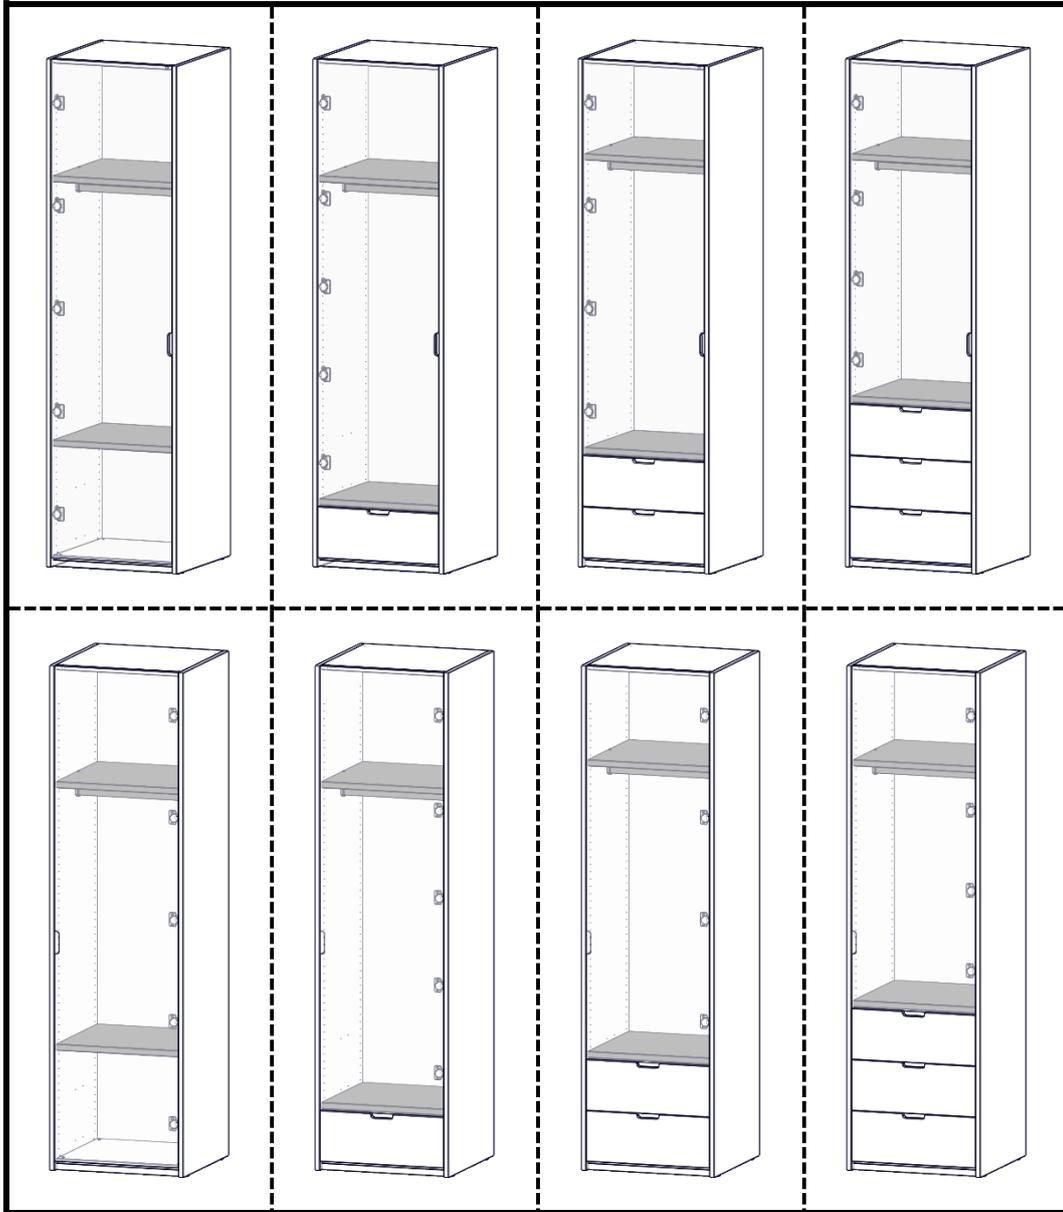

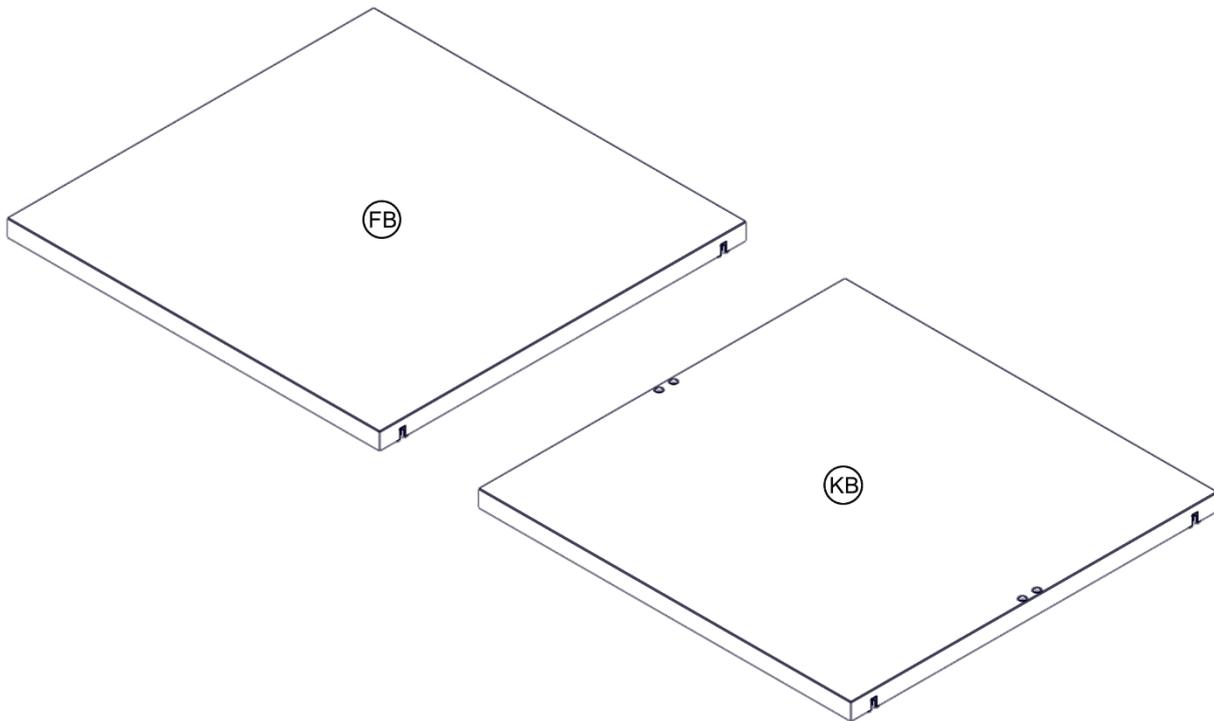

ZDIV-0646-0556



BBT-0001
x4




BBT-0008
x4




ZDIV-0654
x6



BAK-0025

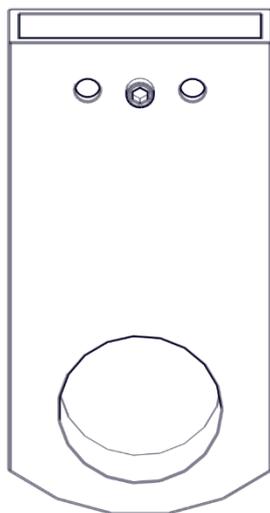

ZDIV-0647
x2




BSCH-0225
x4






Modular Plus – Fachboden 600


1


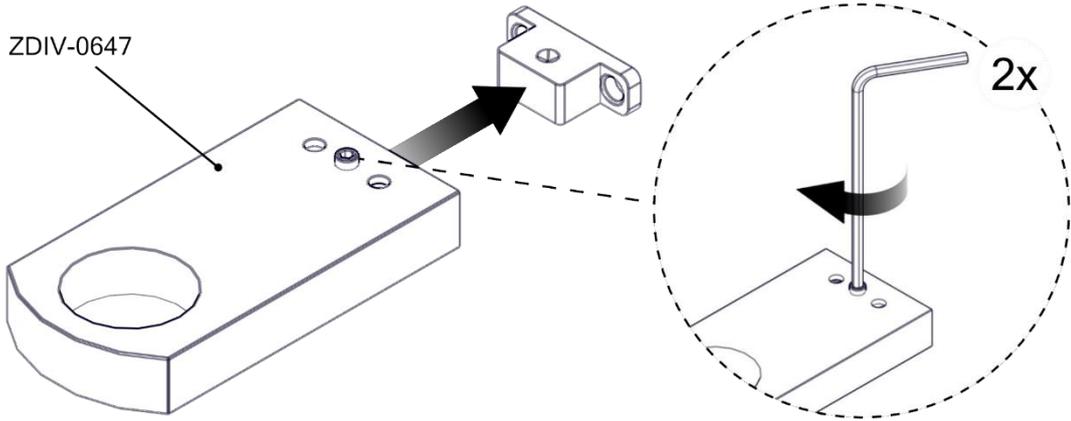


2

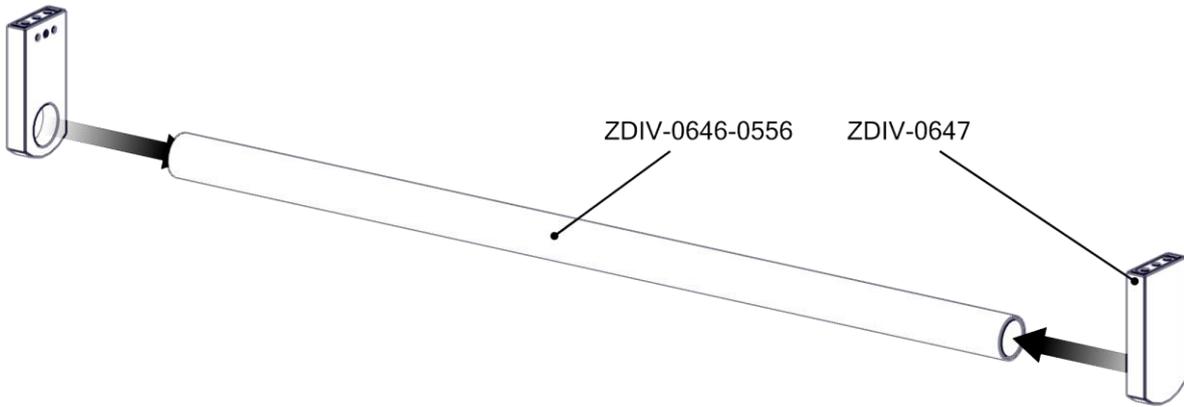


3

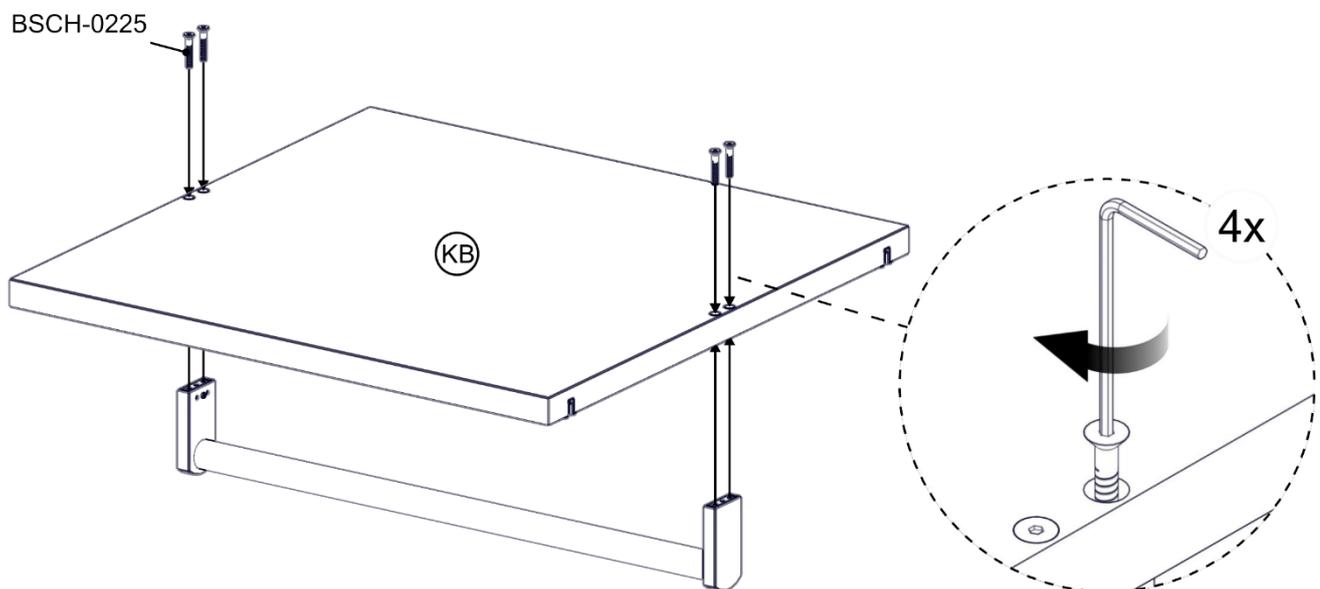

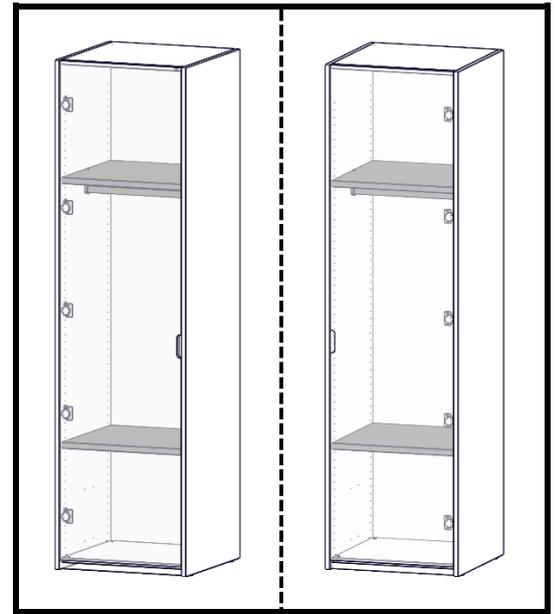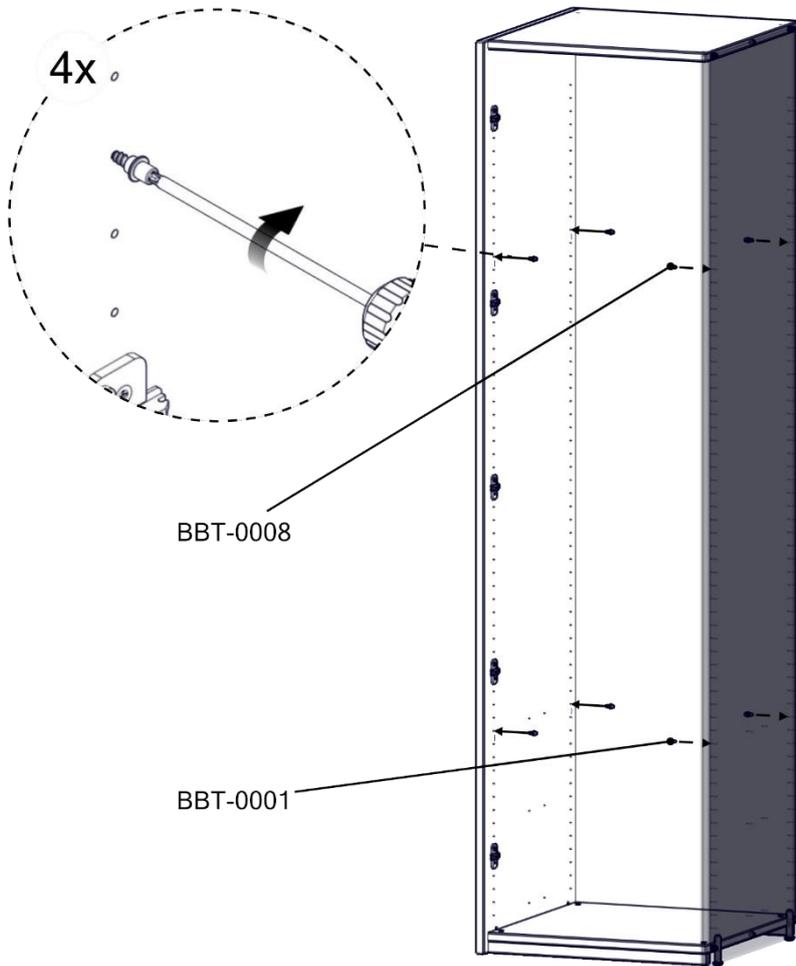



1

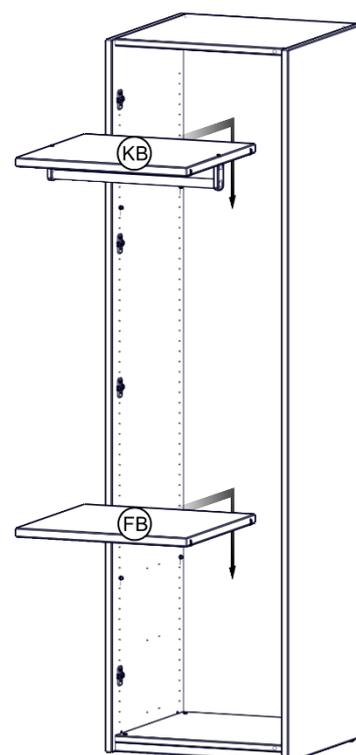

2




Modular Plus – Fachboden 600

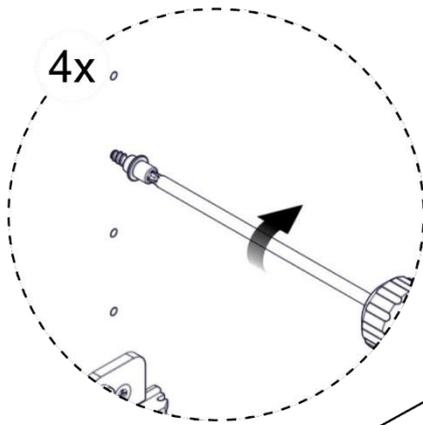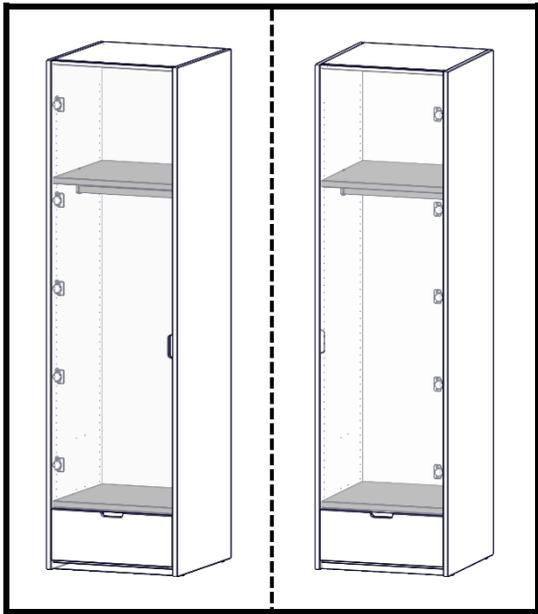

4x


BBT-0008



BBT-0001

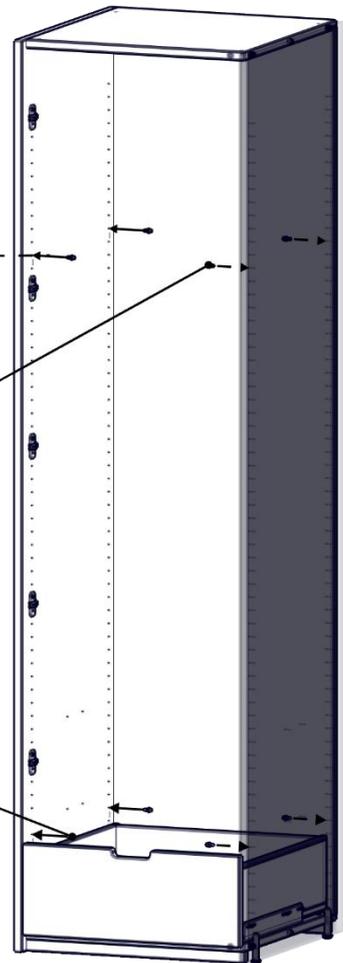


1

2

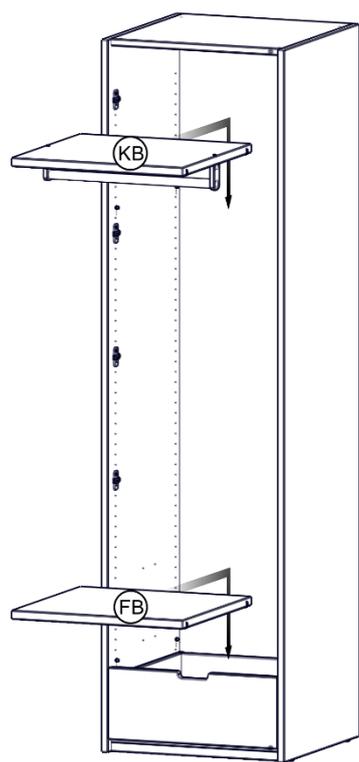

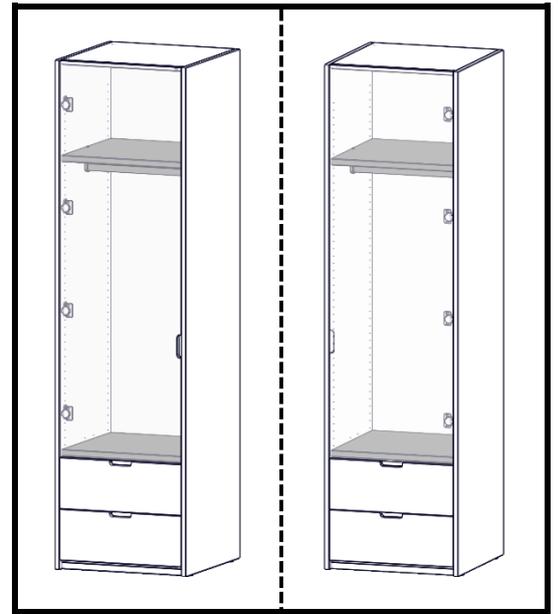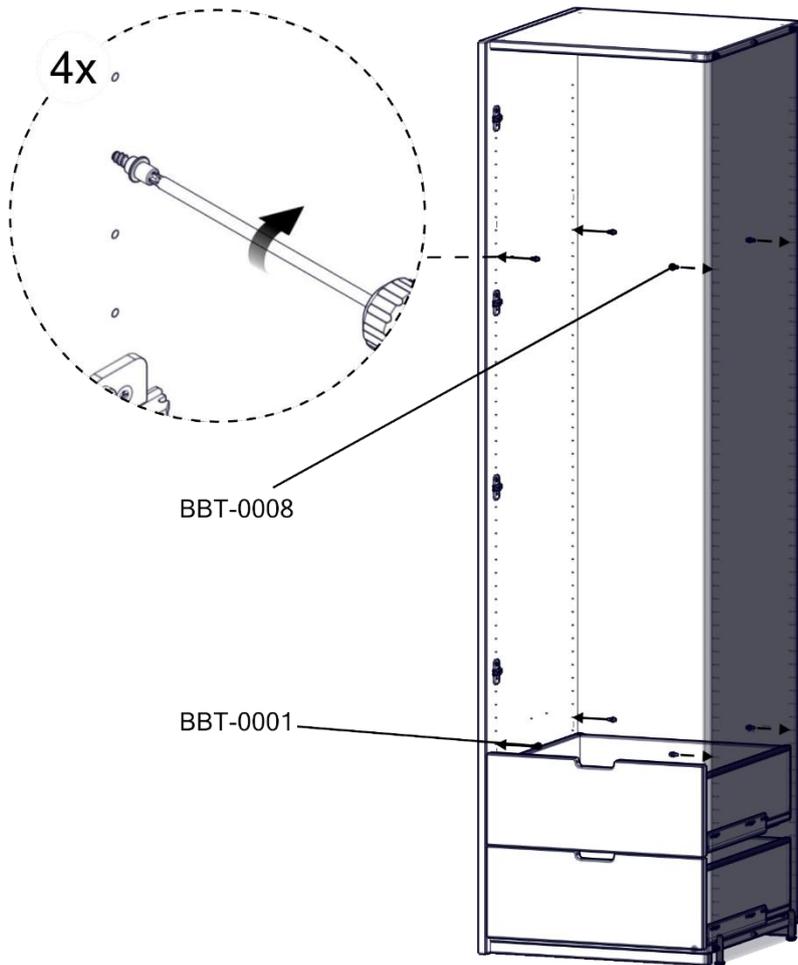



1

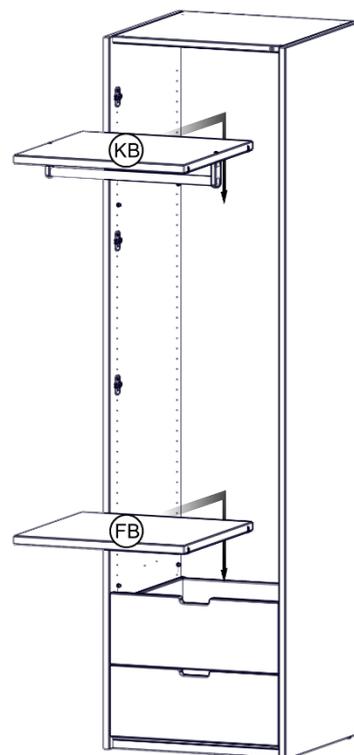

2




Modular Plus – Fachboden 600

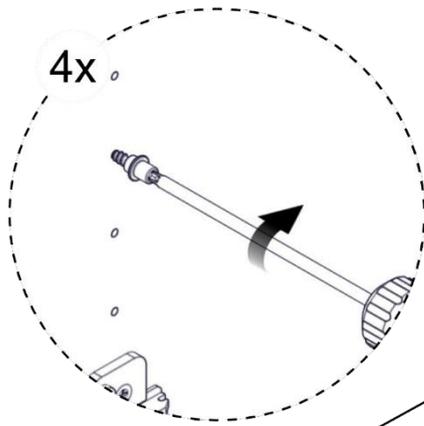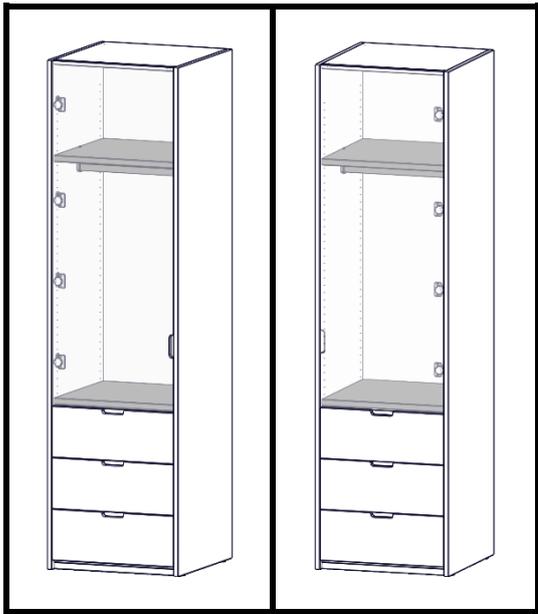


BBT-0008



BBT-0001

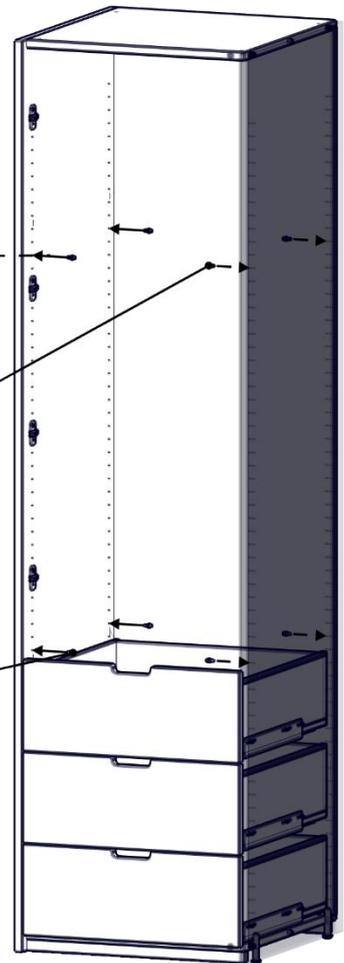

1

2

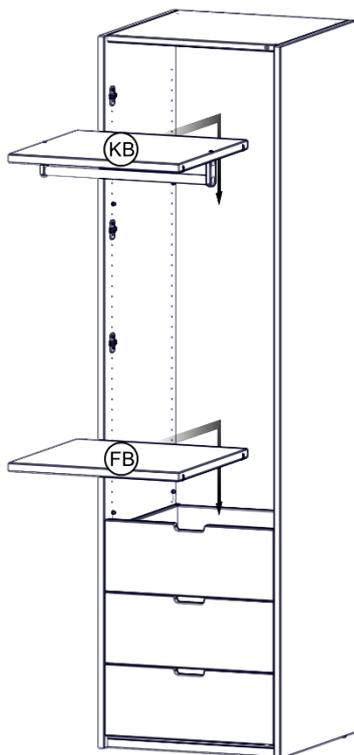

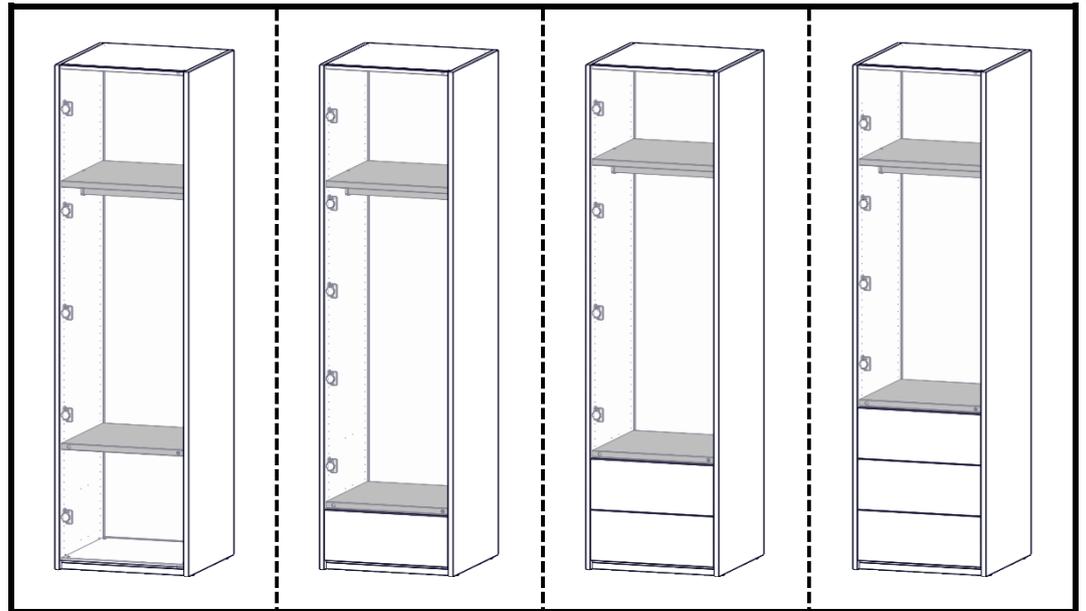

BBT-0001
x4




BBT-0008
x4



ZDIV-0654
x6



BAK-0025

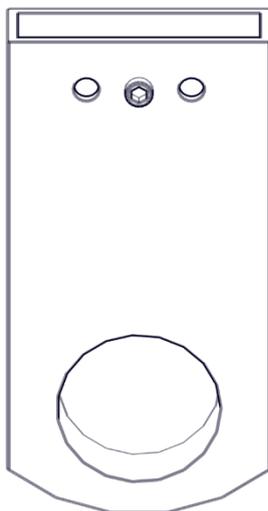

ZDIV-0647
x2



ZDIV-0646-0556




BSCH-0225
x4




ZDIV-0509



Modular Plus – Fachboden 600

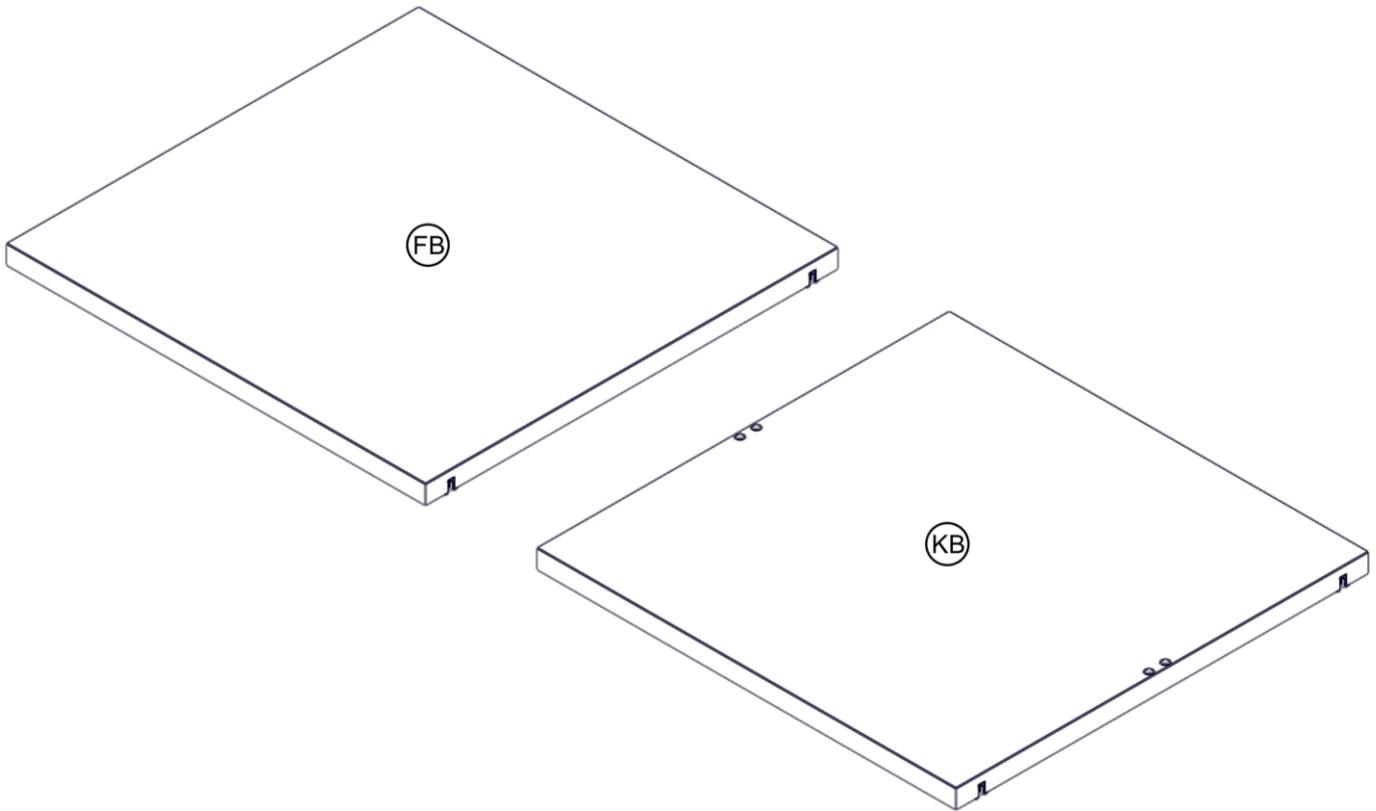


1

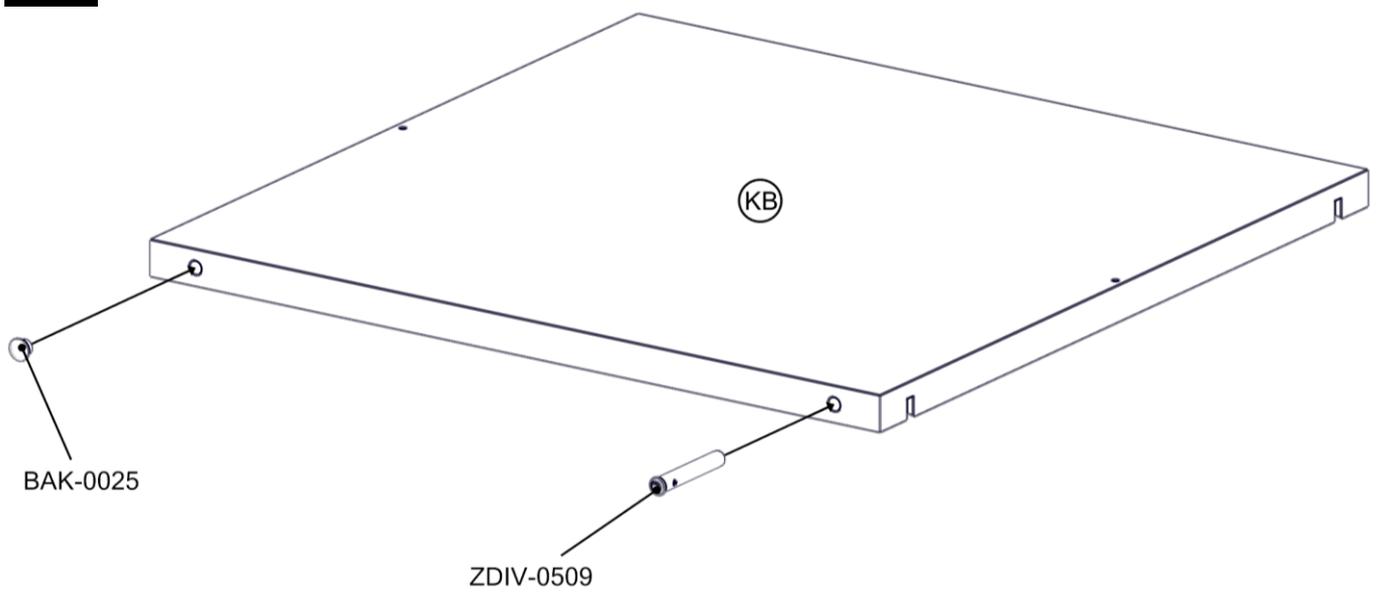





2

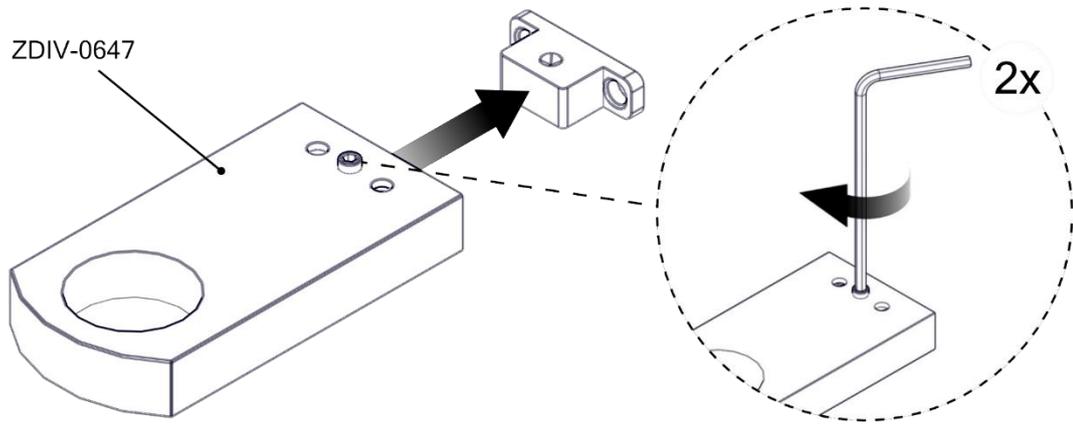

3

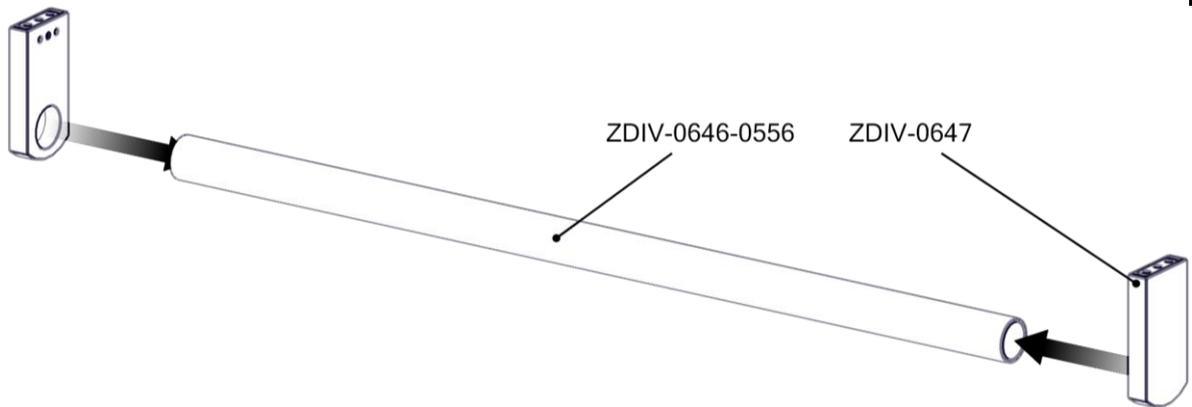


4

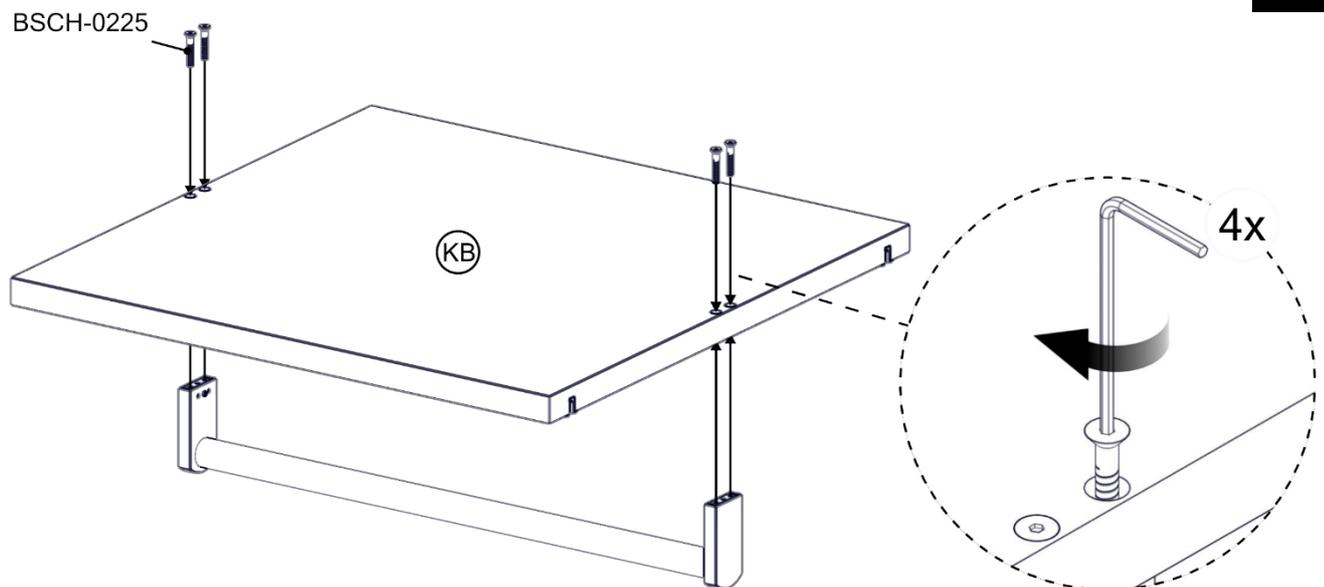




Modular Plus – Fachboden 600

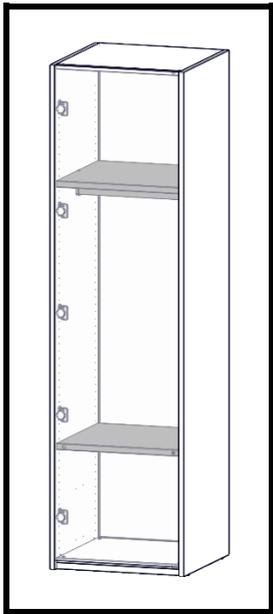


1

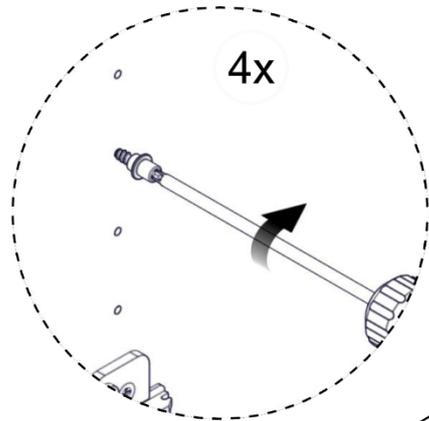




BBT-0008

BBT-0001

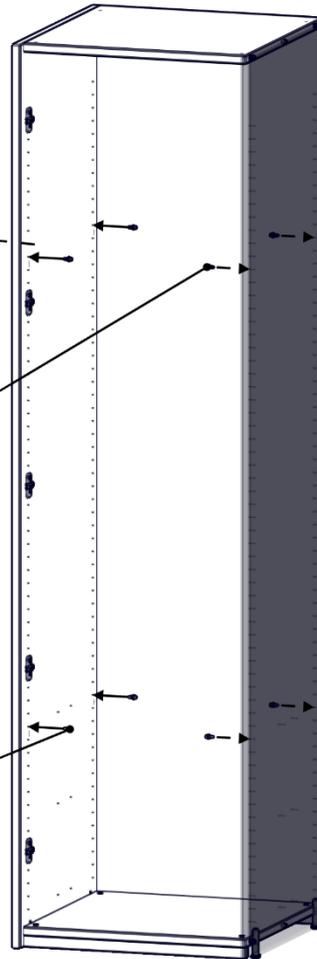


2

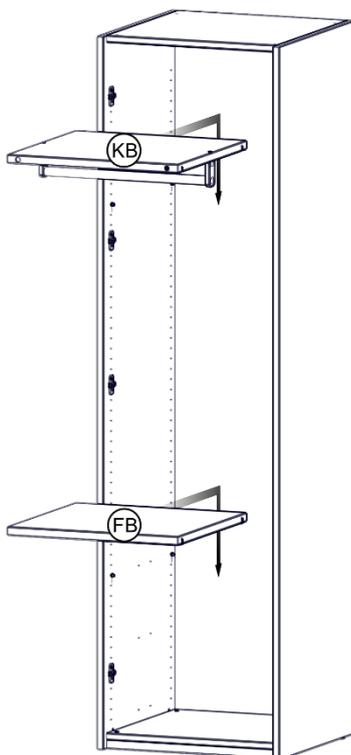

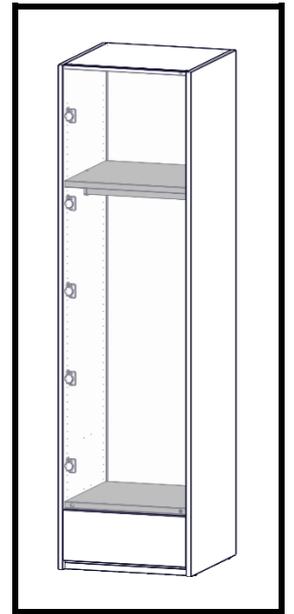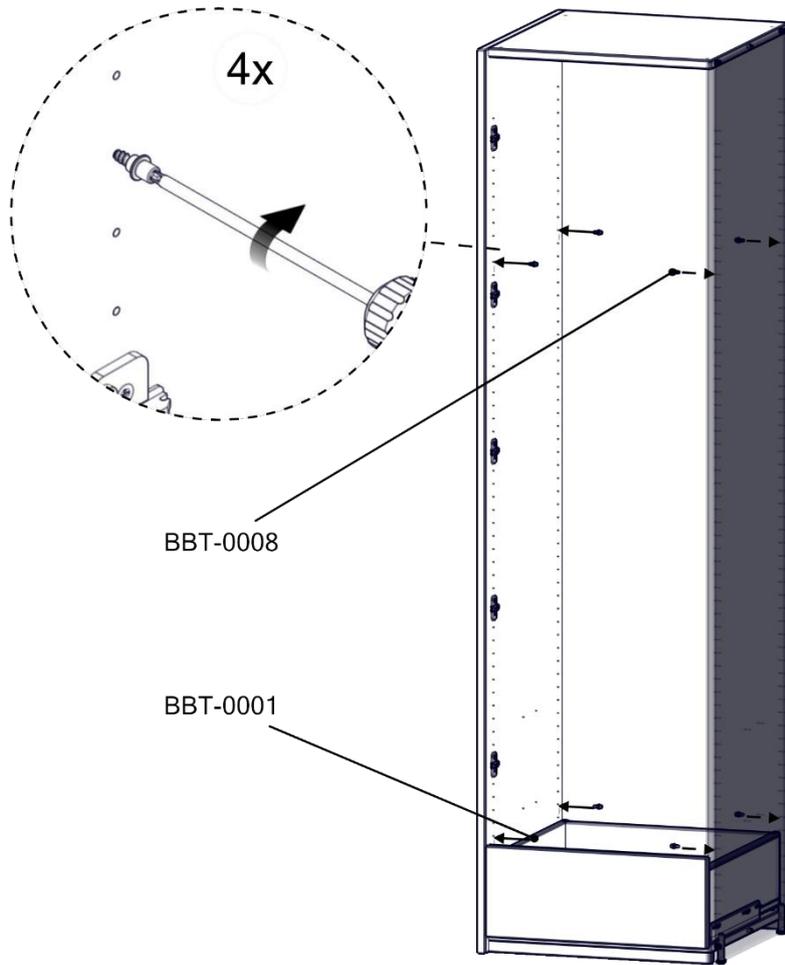



1

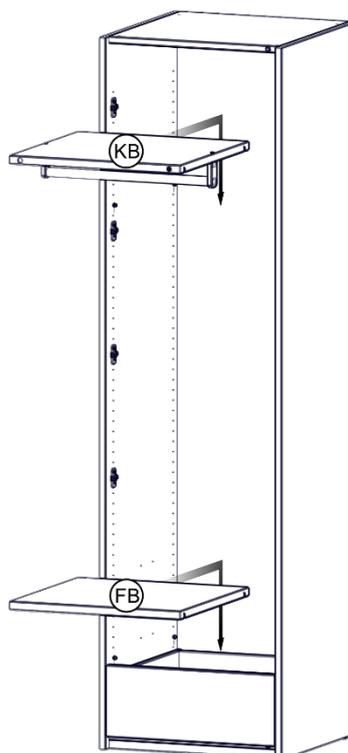


2



Modular Plus – Fachboden 600

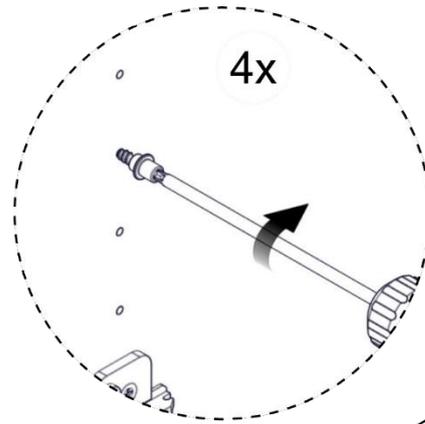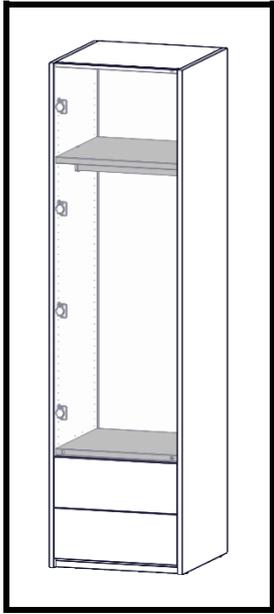


BBT-0008


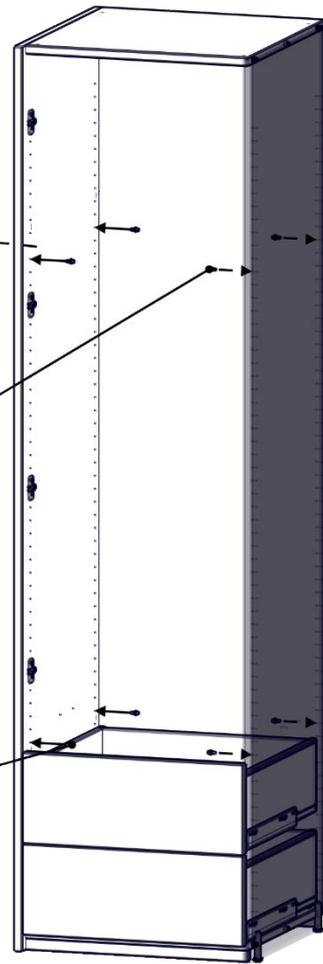


BBT-0001


1

2

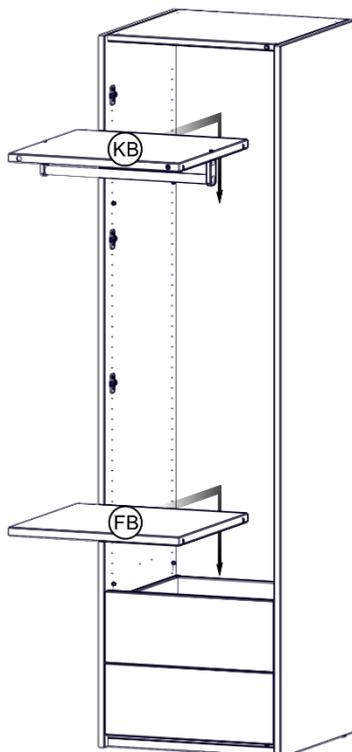

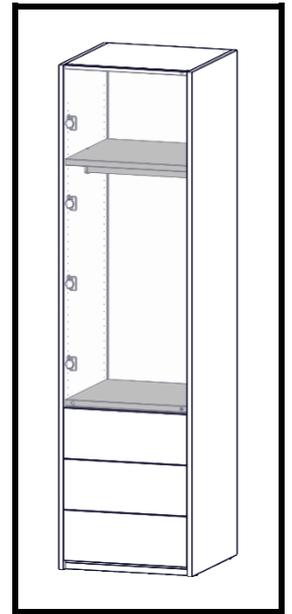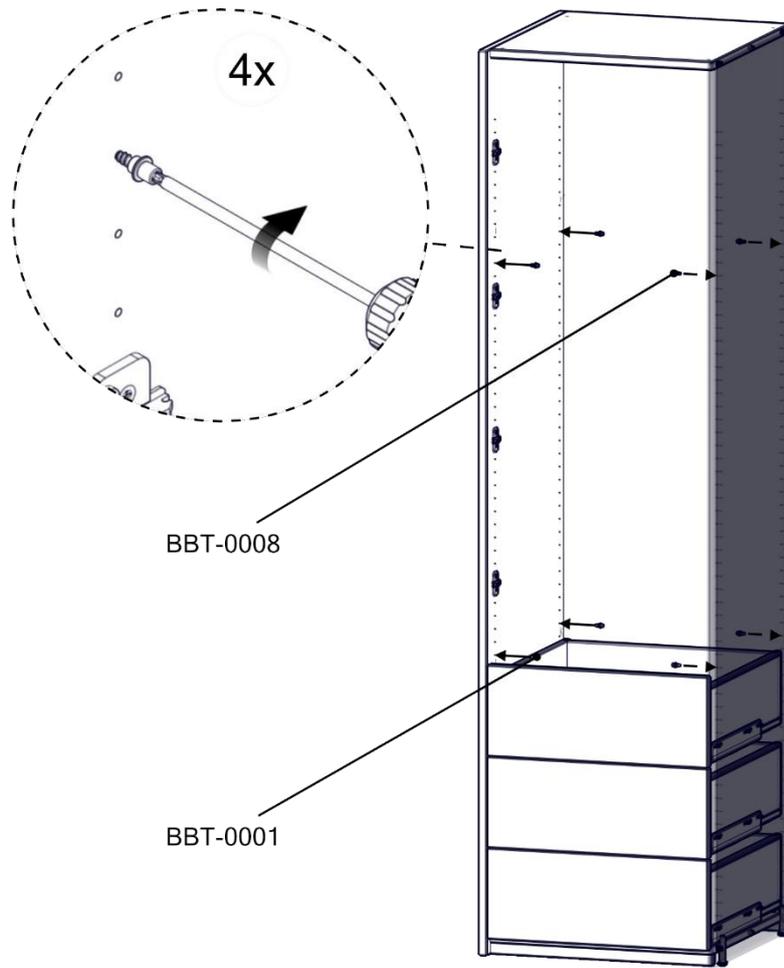

1

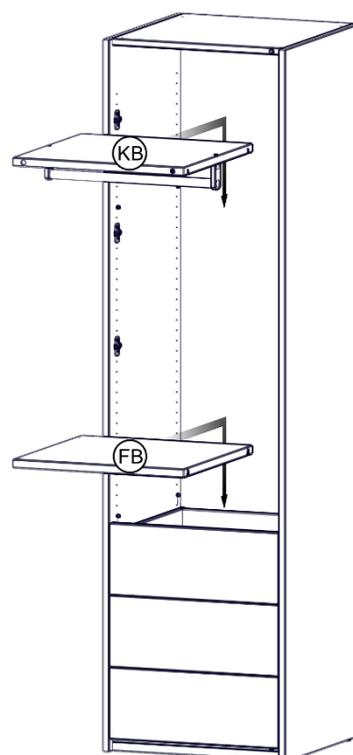


2






Modular Plus – Fachboden 600

1

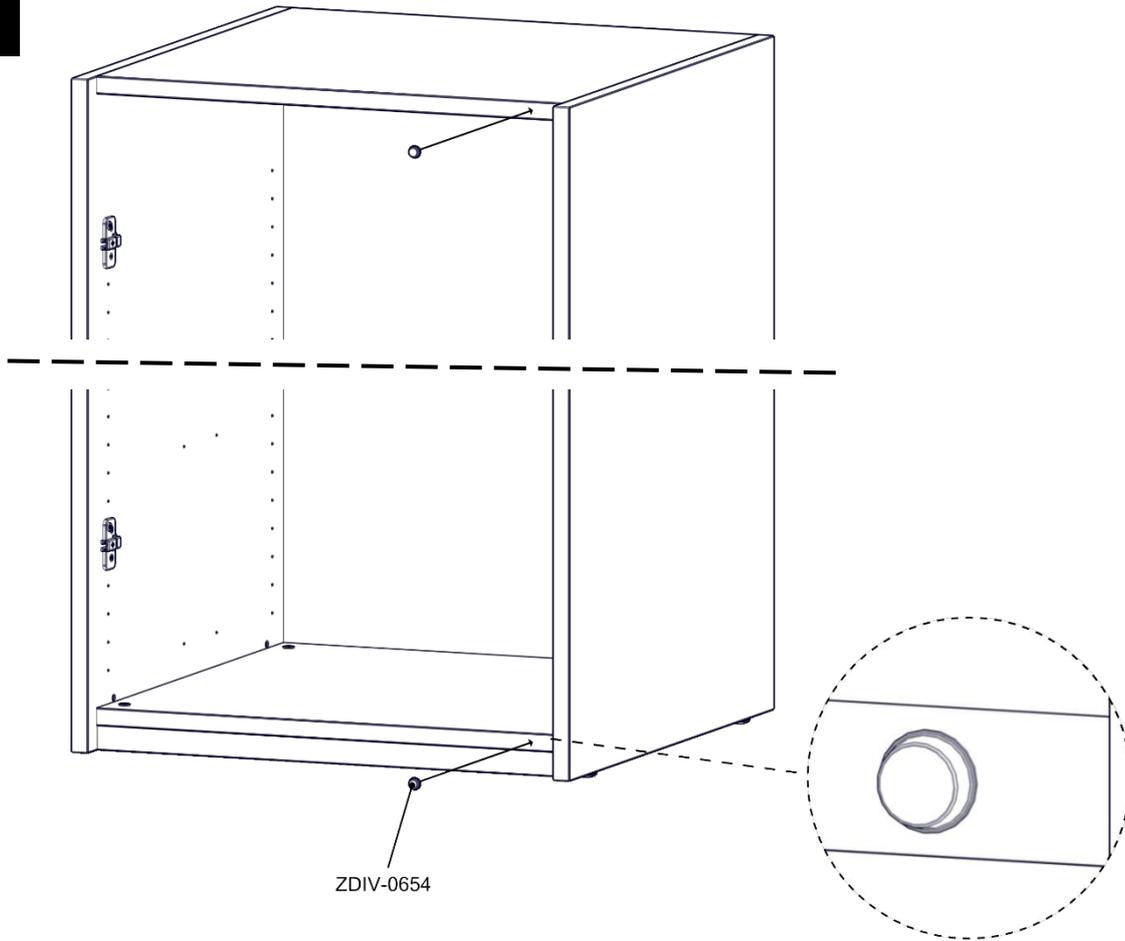

2

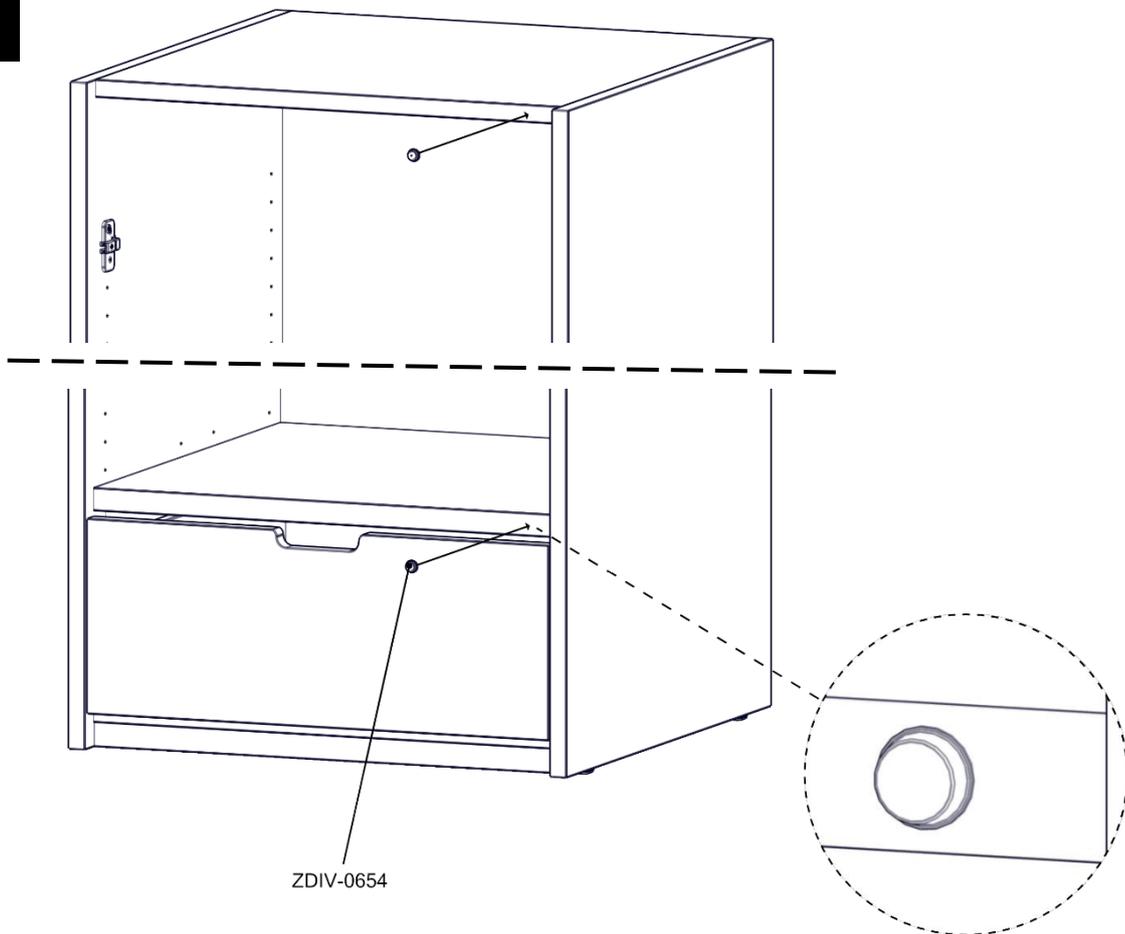


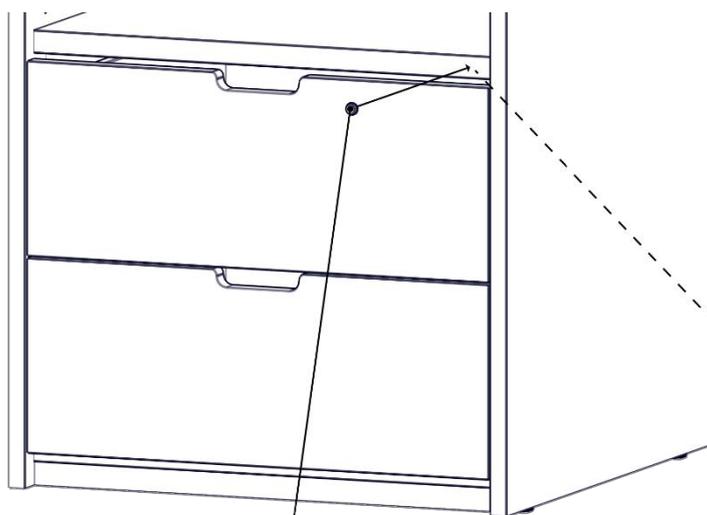
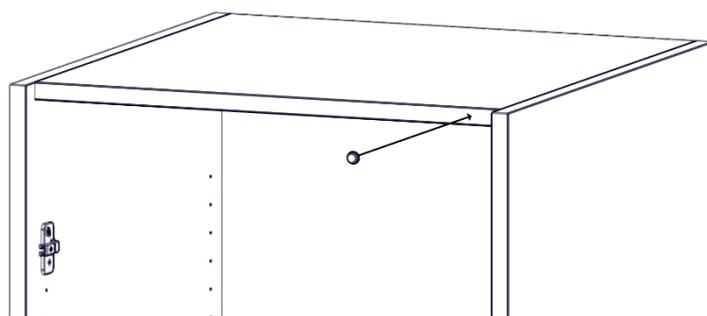


ZDIV-0654



Modular Plus – Fachboden 600

4

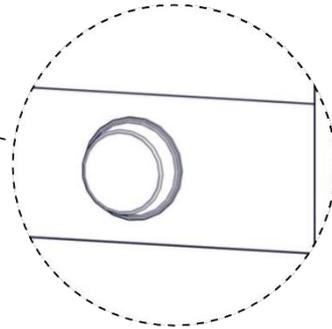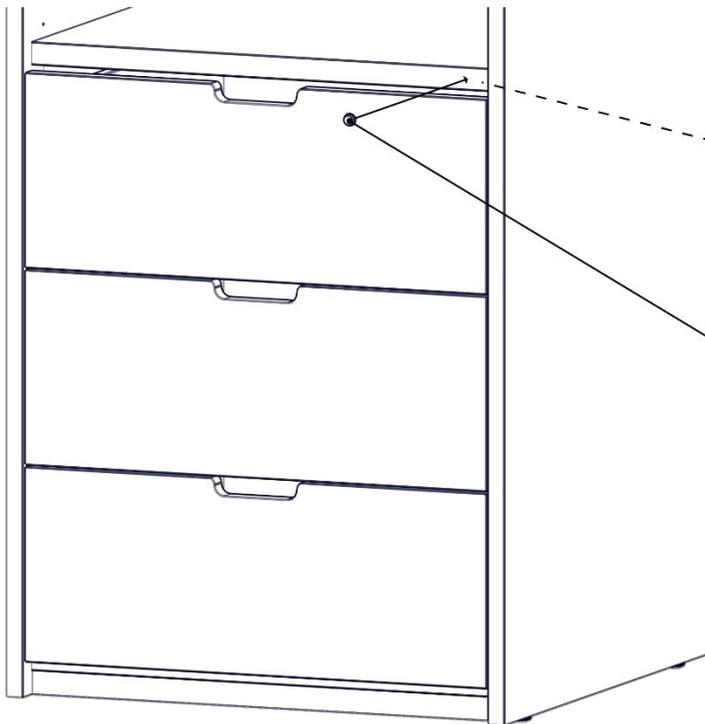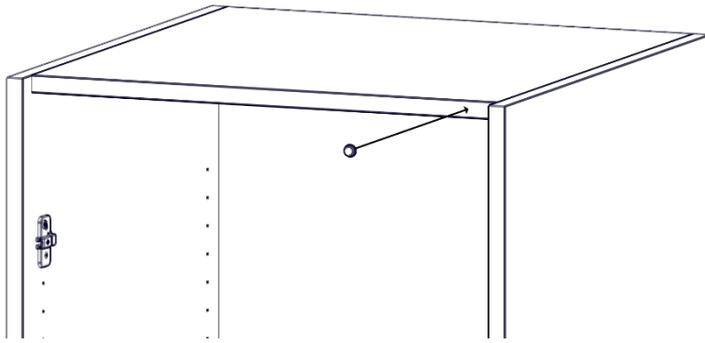

ZDIV-0654

