
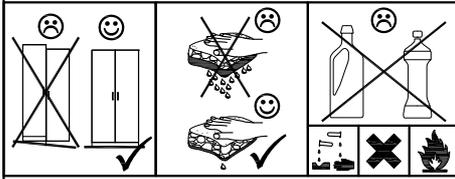


# Montageanleitung Bad Betty Hochschrank

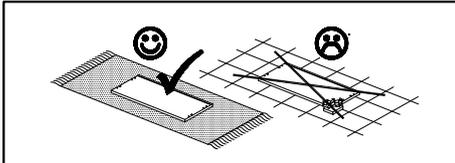

## DE - Sicherheitsvorschriften

Beachten Sie bitte unbedingt die angegebenen Aufbauvorschriften.

## EN - Caution




Follow carefully the assembling Instructions described in the directions.

## FR - Sécurité


Respecter les Instructions de montage décrites dans la notice.



## NL - Veiligheid



De In de Gebruiksaanwijzing beschreven Instructies respecteren.

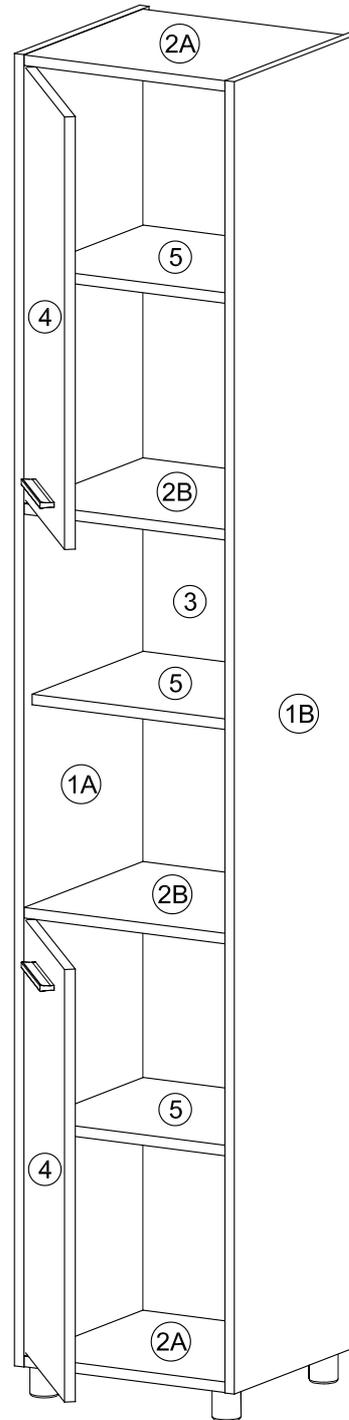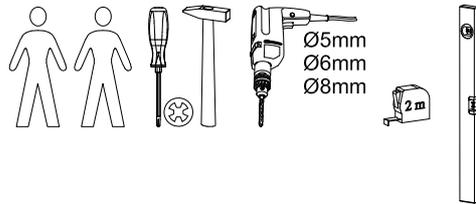


16x EX	16x VB
12x ADK-EX	8x RD8x40
2x TS	12x BT
3,5x13	4x KP0-26
4x TB26-16	4x SB
2x GLD-128	4x RWS27
1x WBF	20x NA
4x KG9	4x55
	4x SP19

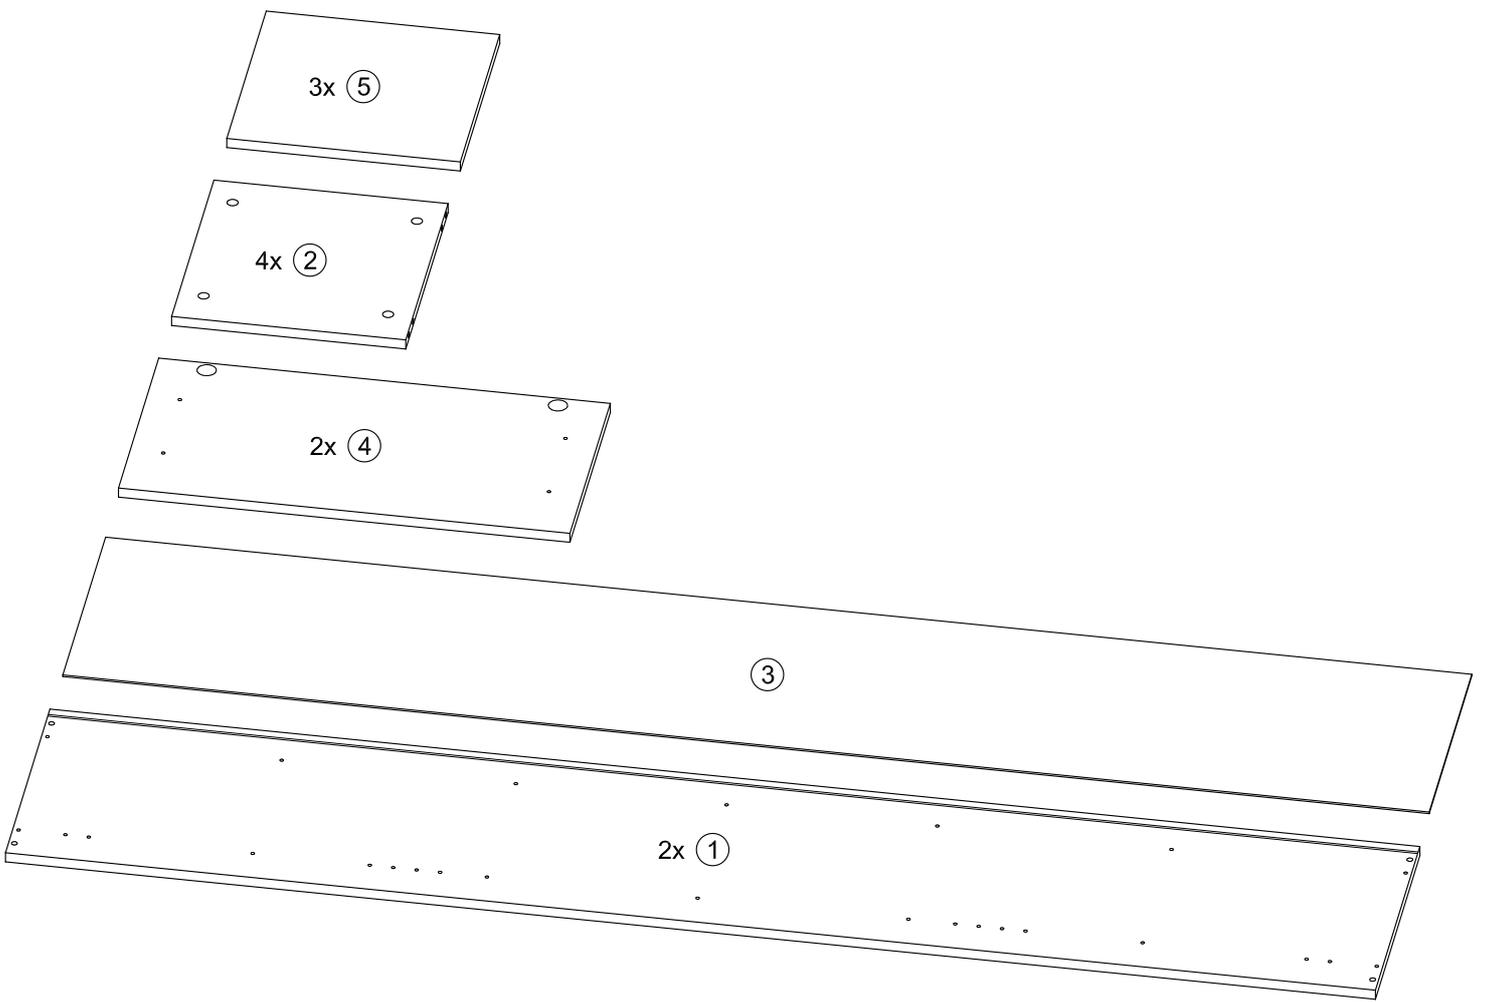

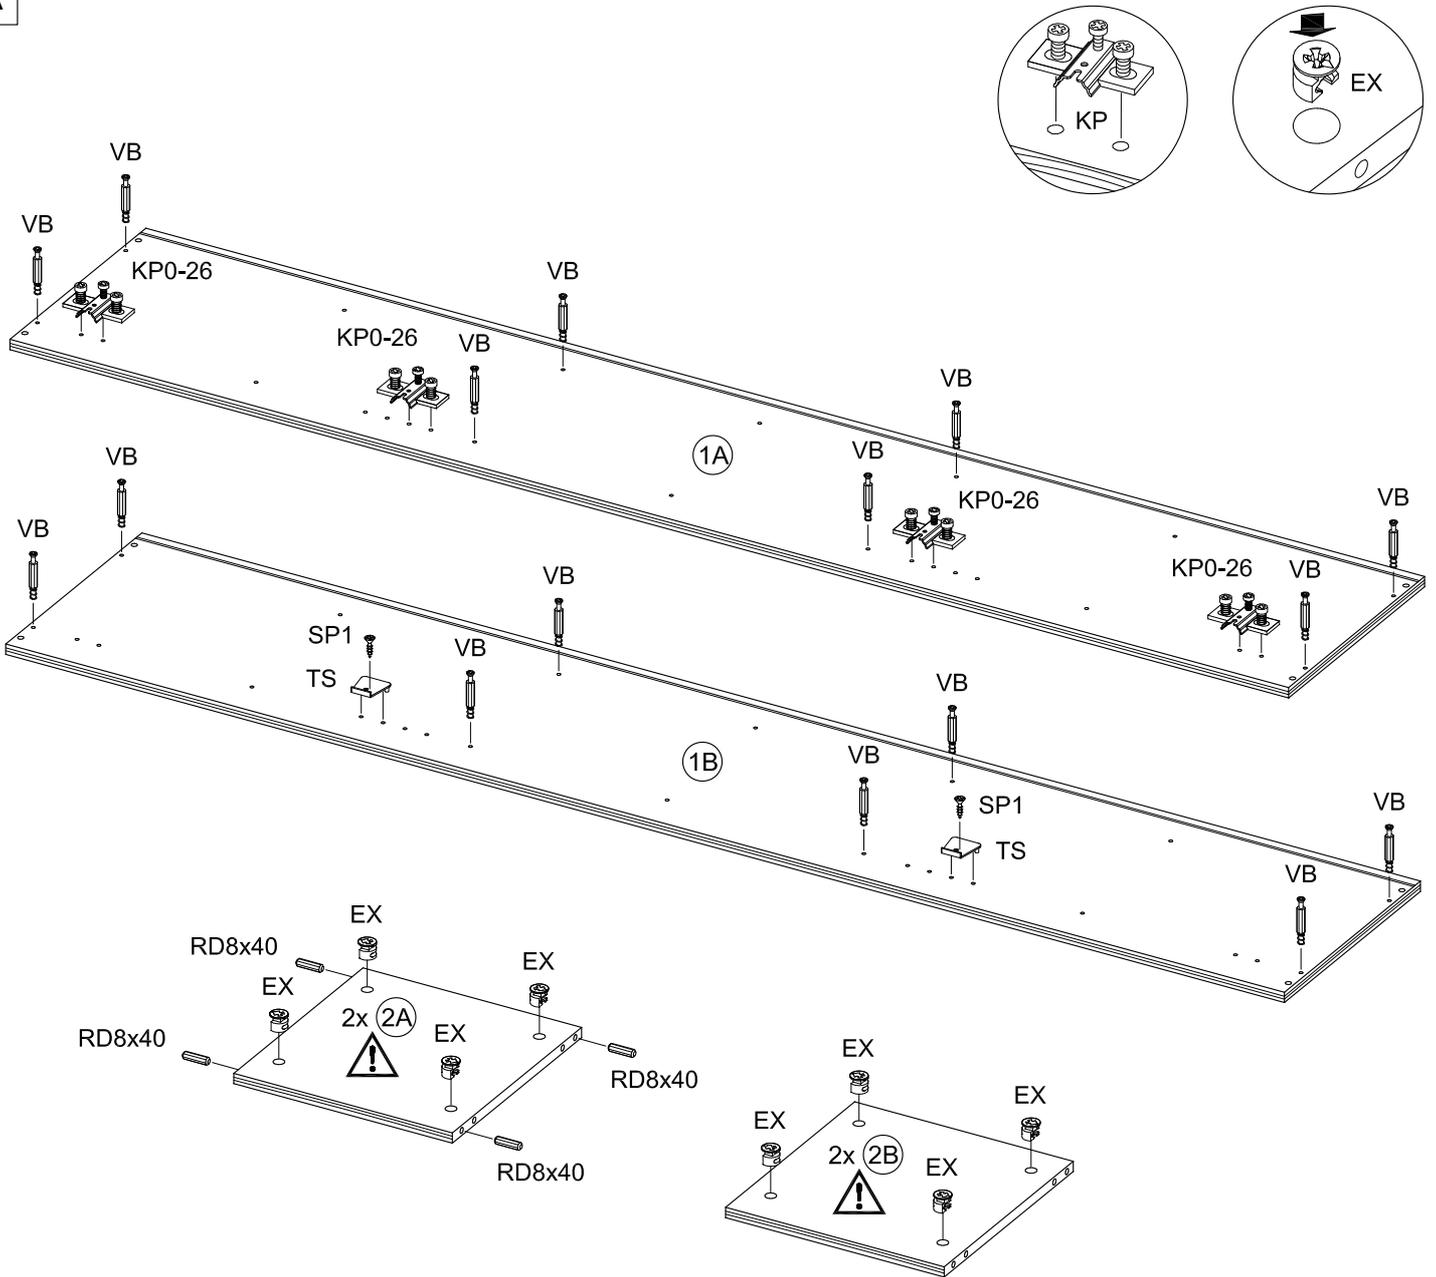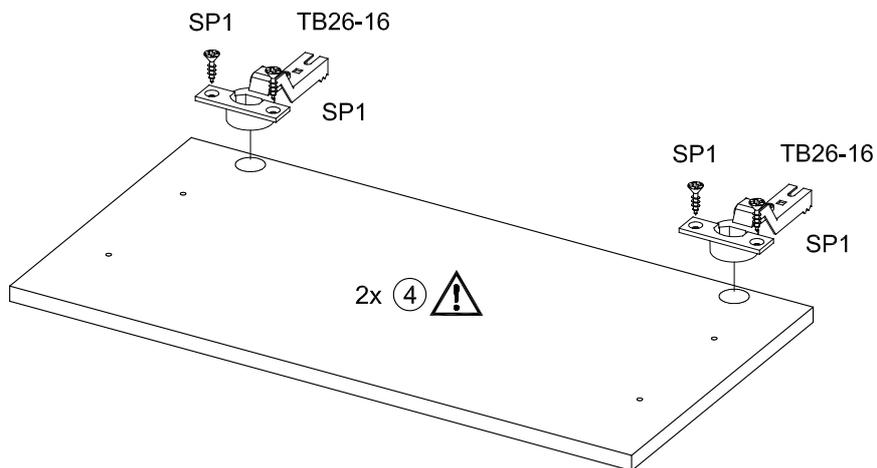
**A****B**

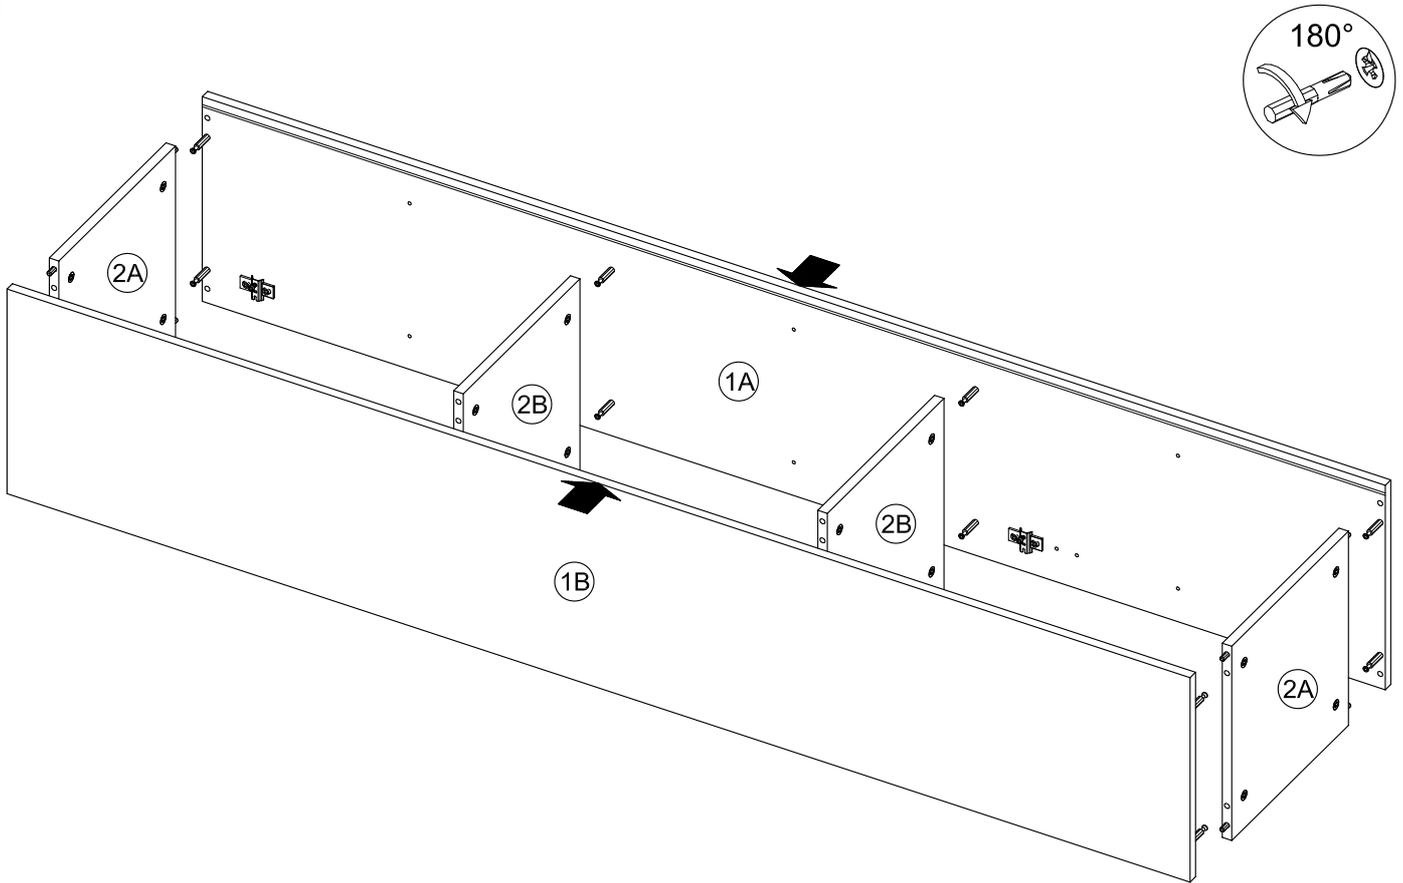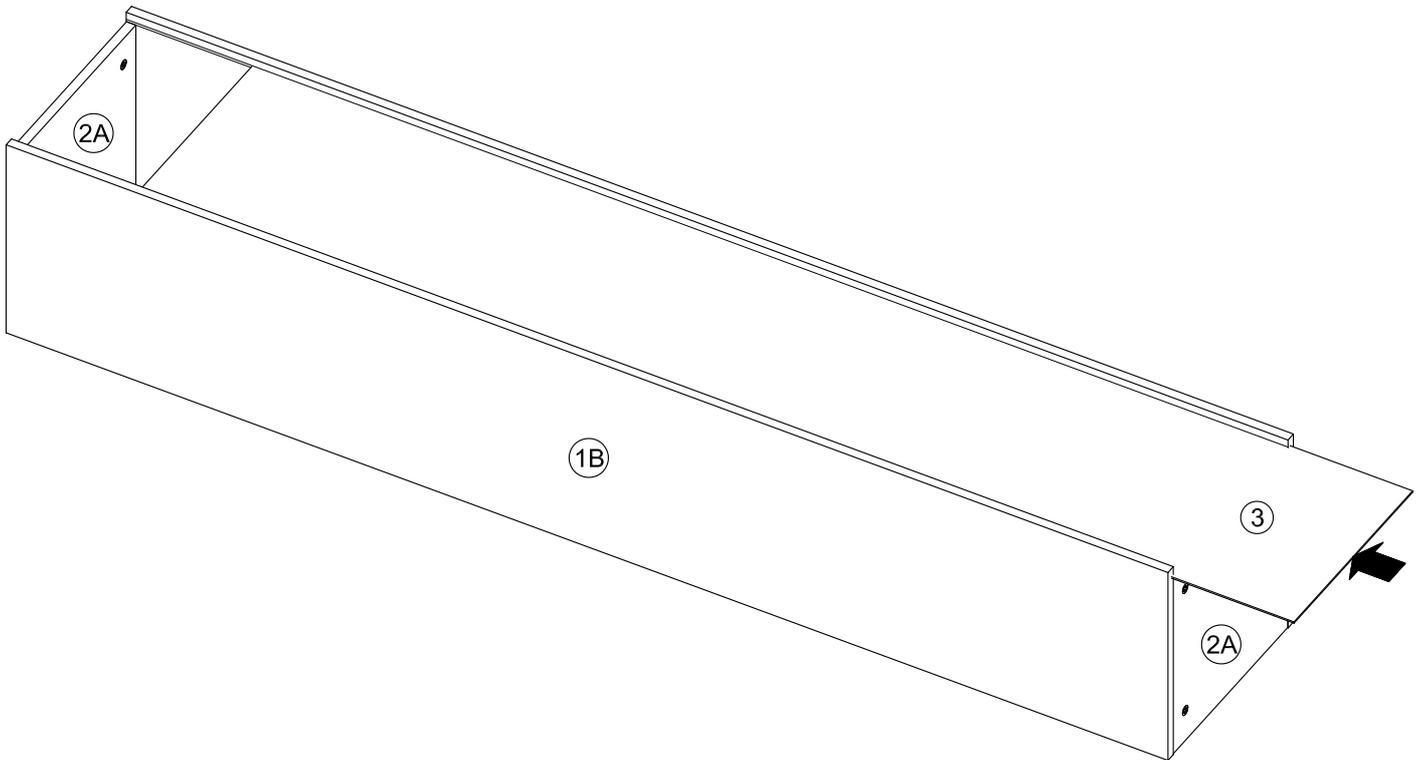**C****D**


E

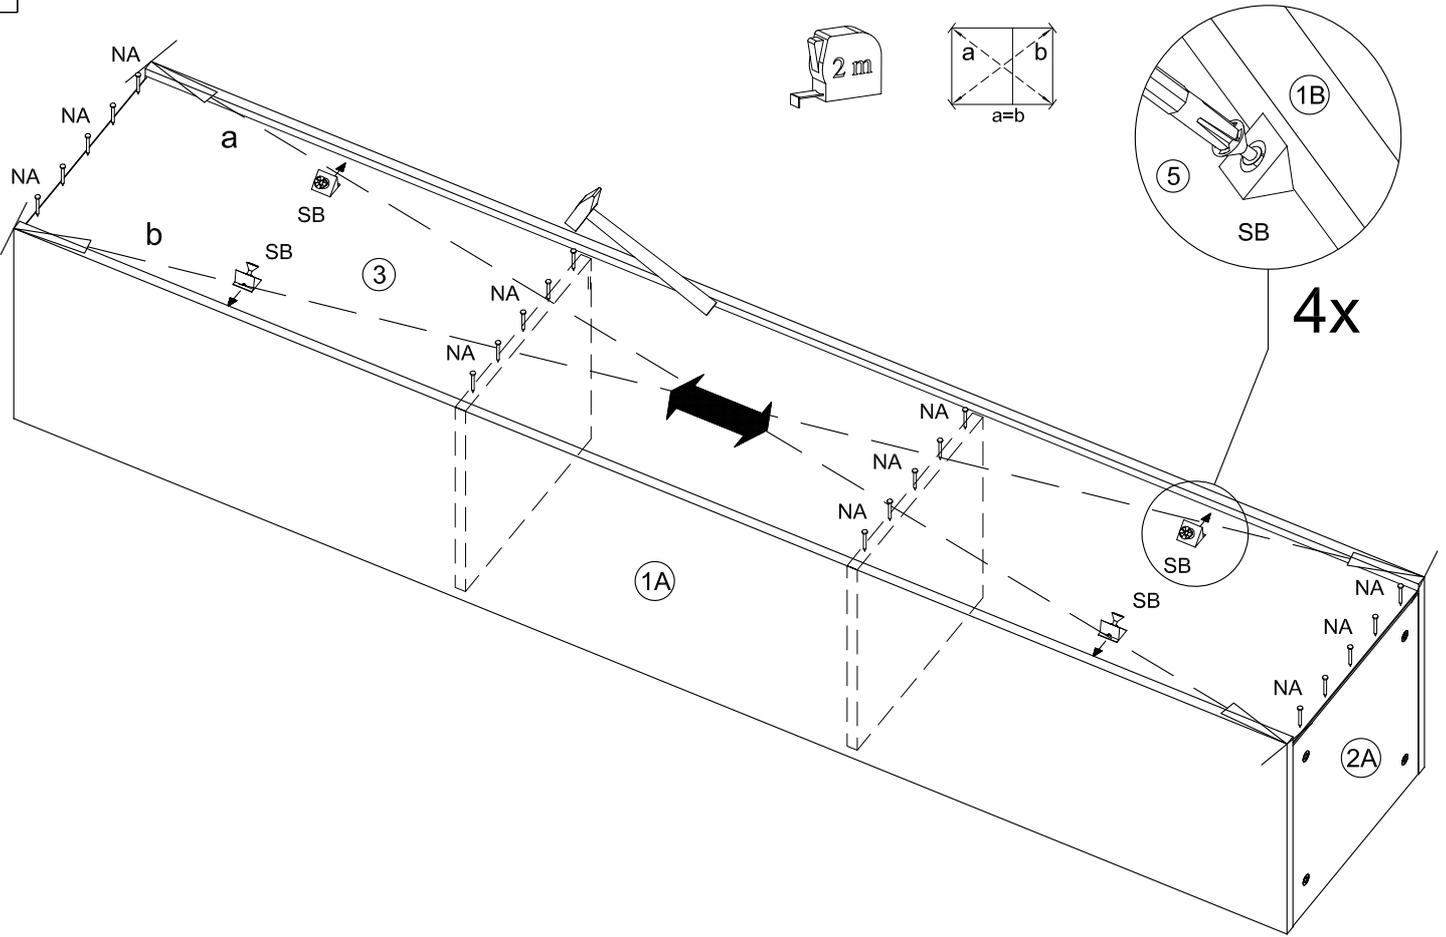



F

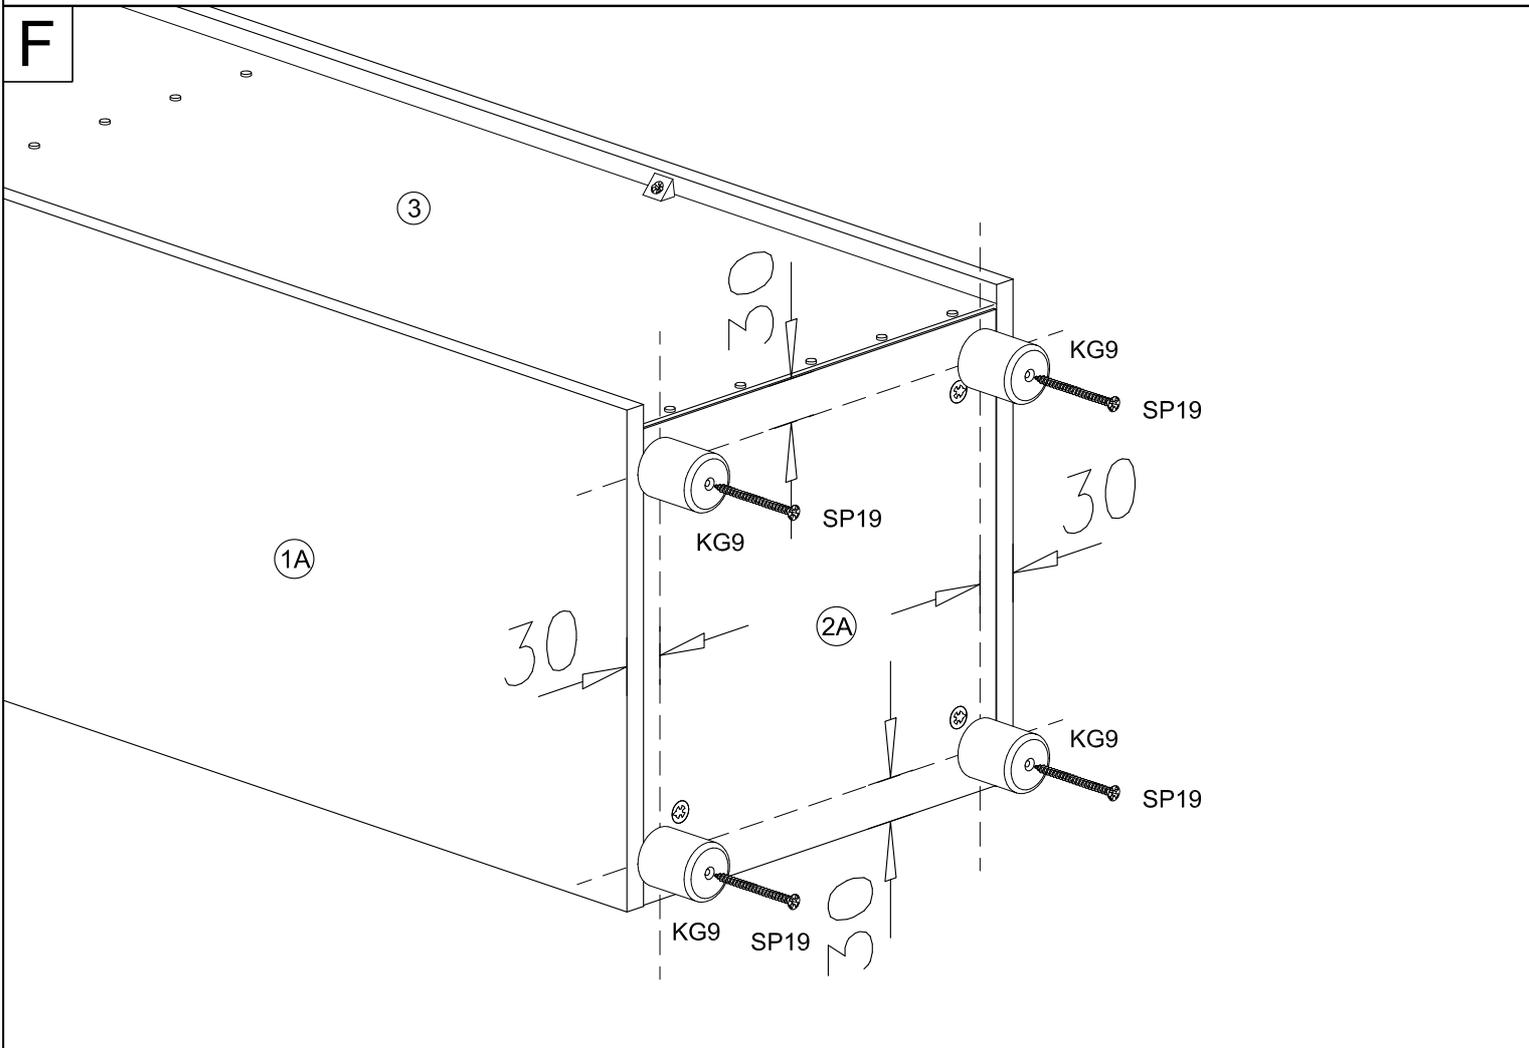


G

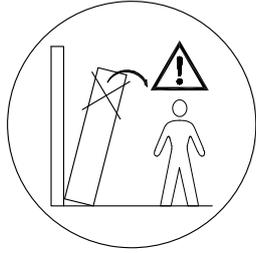


Befestigungsmaterial für die Kippsicherung ist der Wandeigenschaft anzupassen!

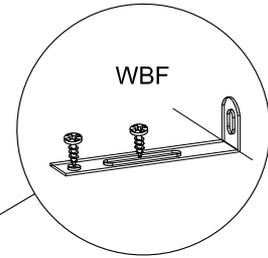


12x BT

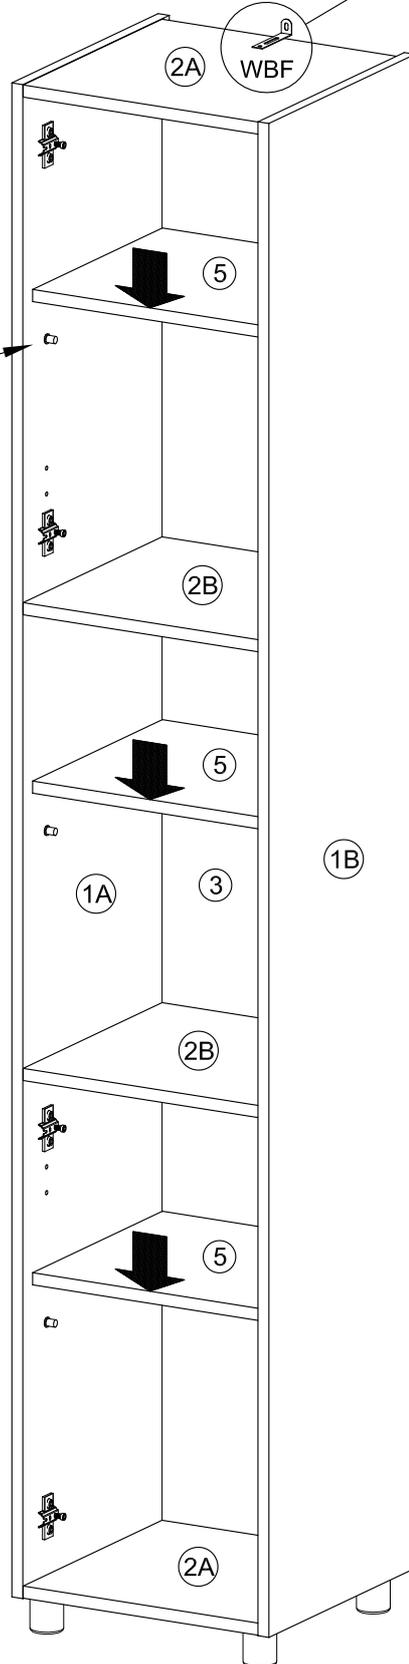


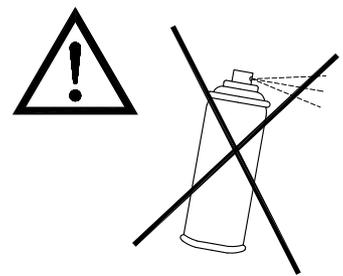


Bitte vermeiden Sie alkoholhaltige Substanzen wie Parfums und Deodorants, sowie scharfe Reiniger direkt auf Glanz-Oberflächen. Nasse Flächen schnellstmöglich trockenwischen, damit die Feuchtigkeit nicht in die Oberfläche eindringt.


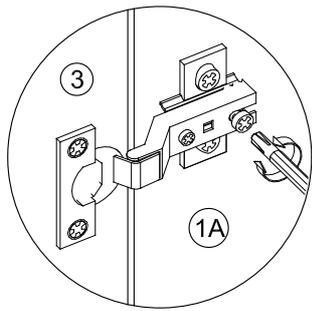


4x

1

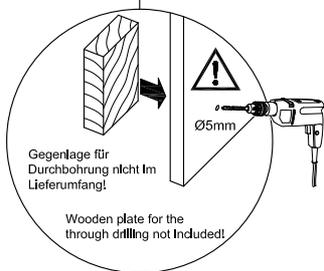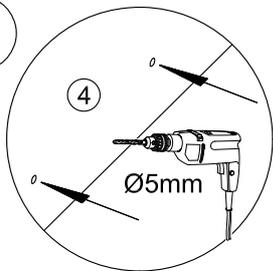

2

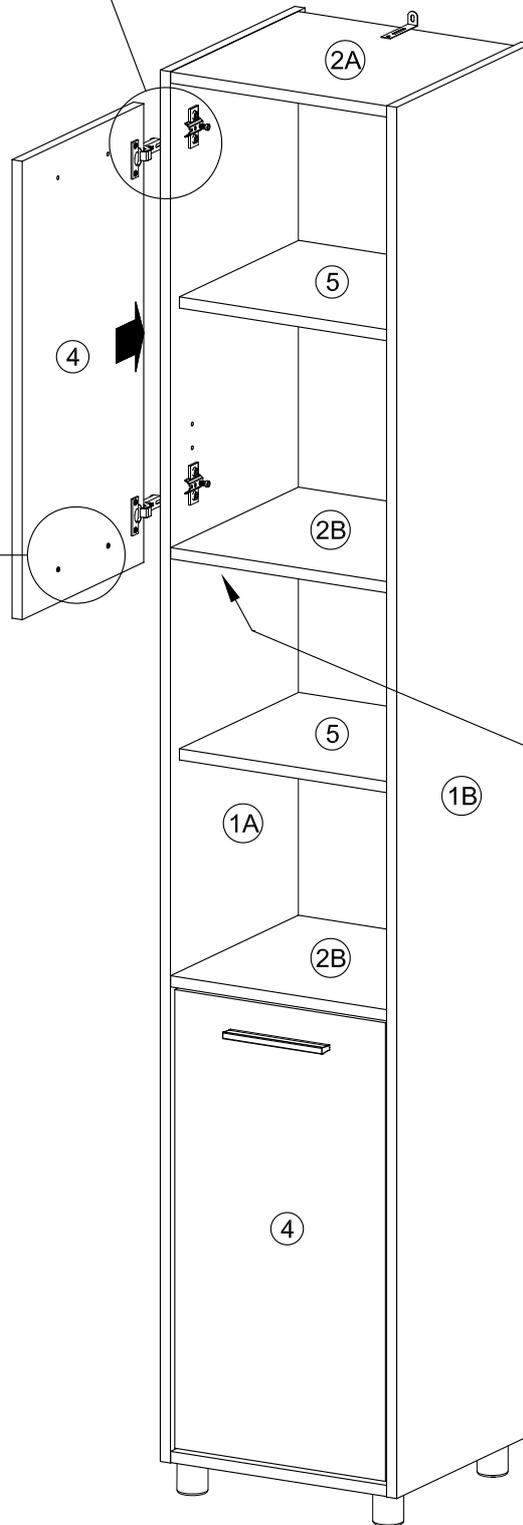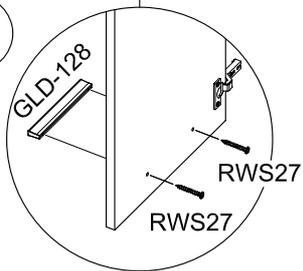

12x ADK-EX

