



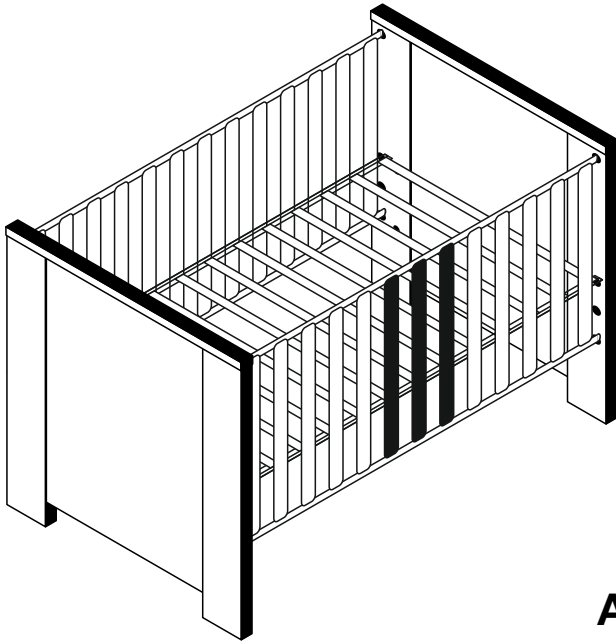







- |   |  |  |
|---|--|--|
| (D) Videounterstützte Montageanleitung            | (GB) Video-assisted assembly instructions            | (FR) Instructions de montage assistées par vidéo |
| (TR) Video destekli kurulum talimatları           | (IT) Istruzioni di montaggio video-assistite         | (NL) Video-ondersteunde montage-instructies      |
| (RU) инструкция по монтажу с помощью видеосигнала | (CZ) Instalační pokyny podporované videem            | (HU) Video-támogatott telepítési utasítások      |
| (RO) Instrucțiuni de instalare acceptate video    | (PL) Instrukcje montażu wspomagane sygnałem wizyjnym | (SK) Inštaláčné pokyny podporované videom        |

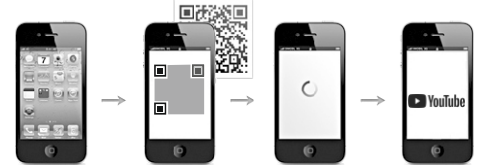

Art.-Nr.: **0444\_BH-P1**  
**Babybett**

REPC-Nr.:

**Service • Assistenza • Dienstverlening • Serwis  
Servis • Szerviz • Сервисная служба**

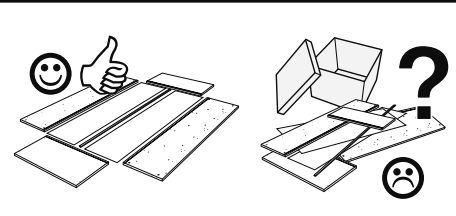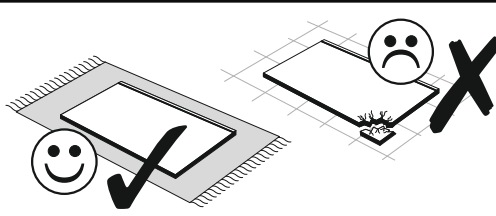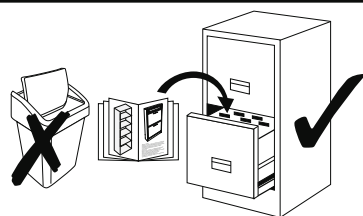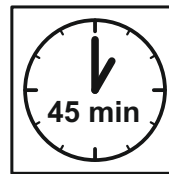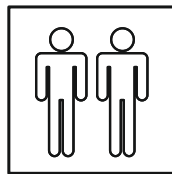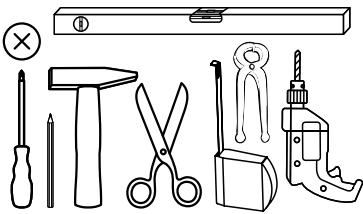

SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf  
The replacement parts requisition form you find on  
<https://www.maeusbacher.de/ersatzteile/>


# 0444-BH P1 0-11








▶ SCAN ME




B01-239 1x SW 3	B02-100 32x 6x55	B05-130 8x	LEIM	B10-80 2x
B10-95 4x	B10-100 8x M6x8	B10-105 8x M6x10	B10-110 8x	
B10-115 12x M 6	B10-85 2x	B10-90 12x	B05-273 1x	


## Colli 1/2

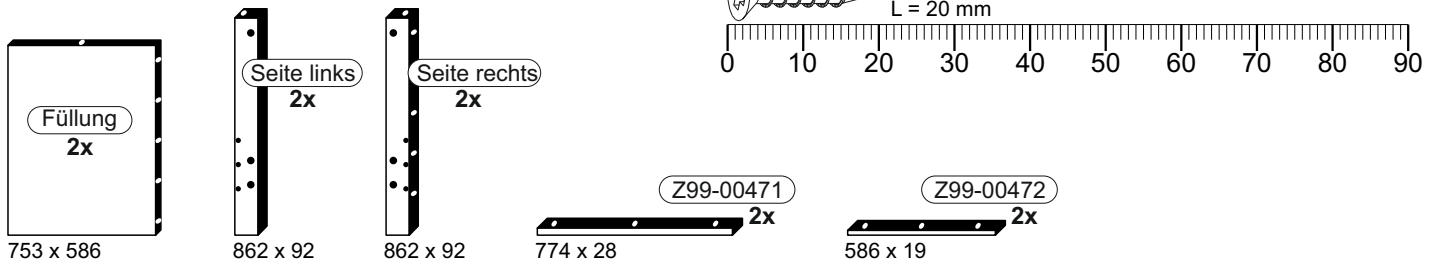



## Colli 2/2

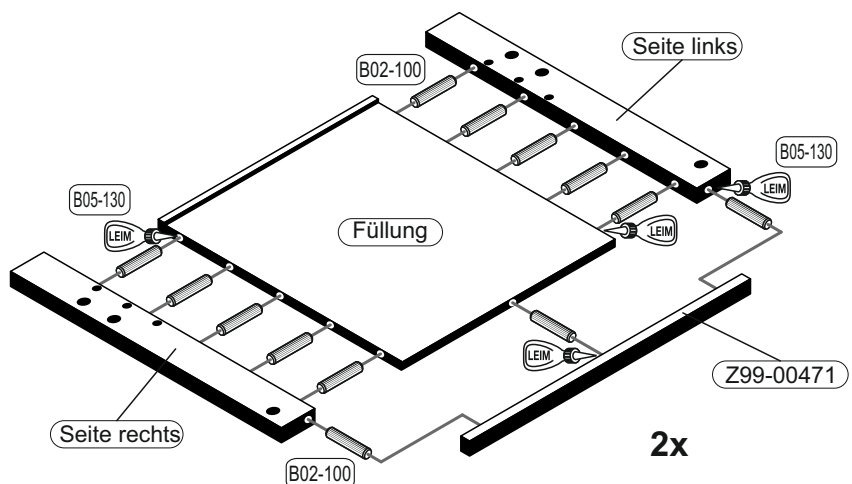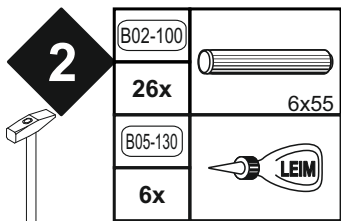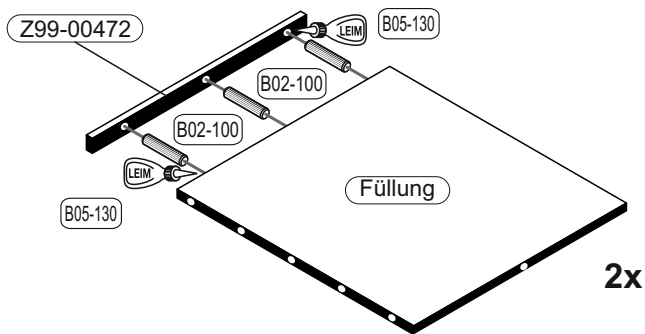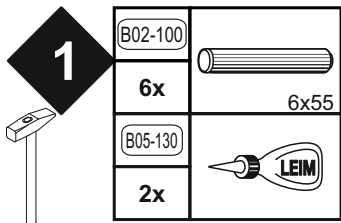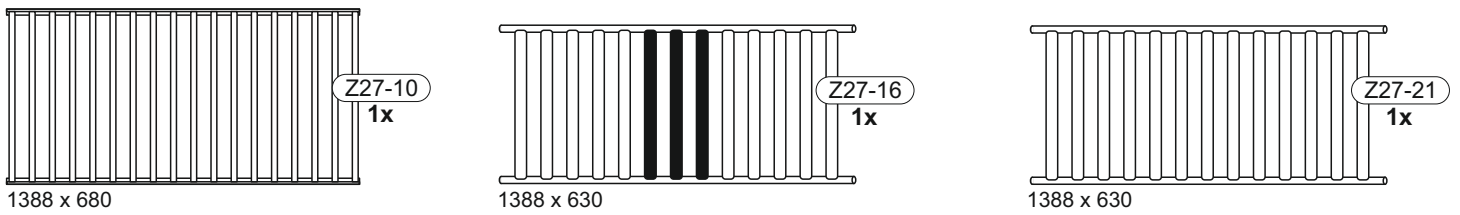

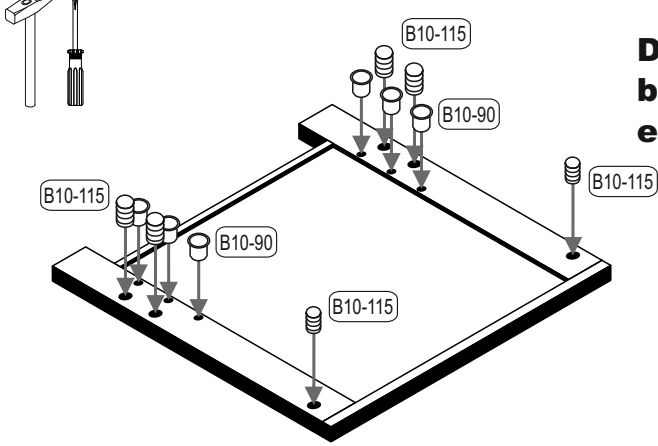


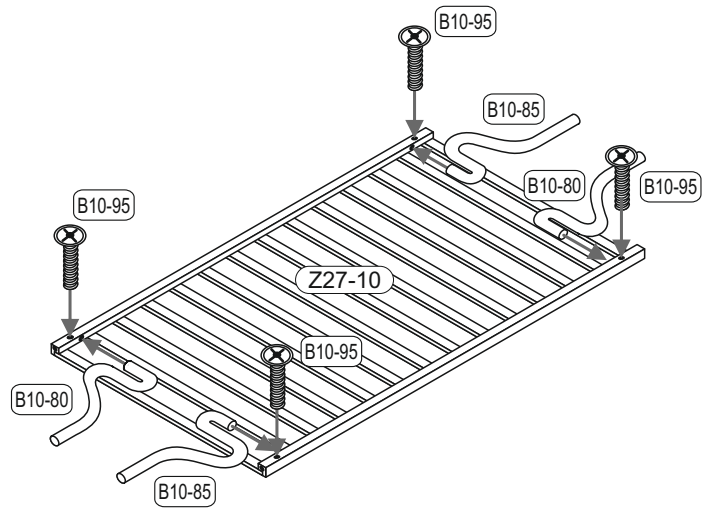
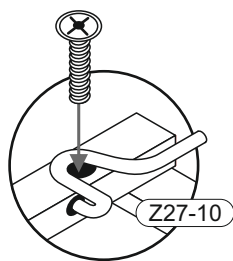
3	B10-90		B10-110		B10-115	
	12x		8x		12x	
					M 6	

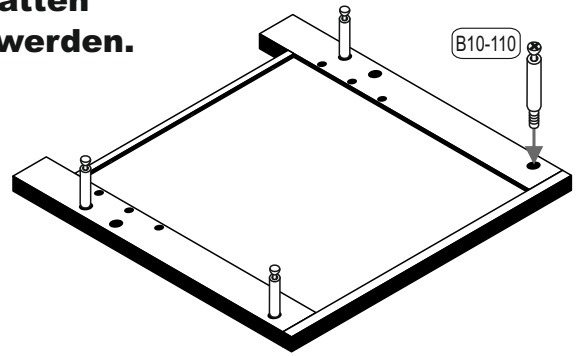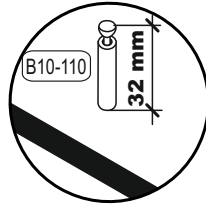


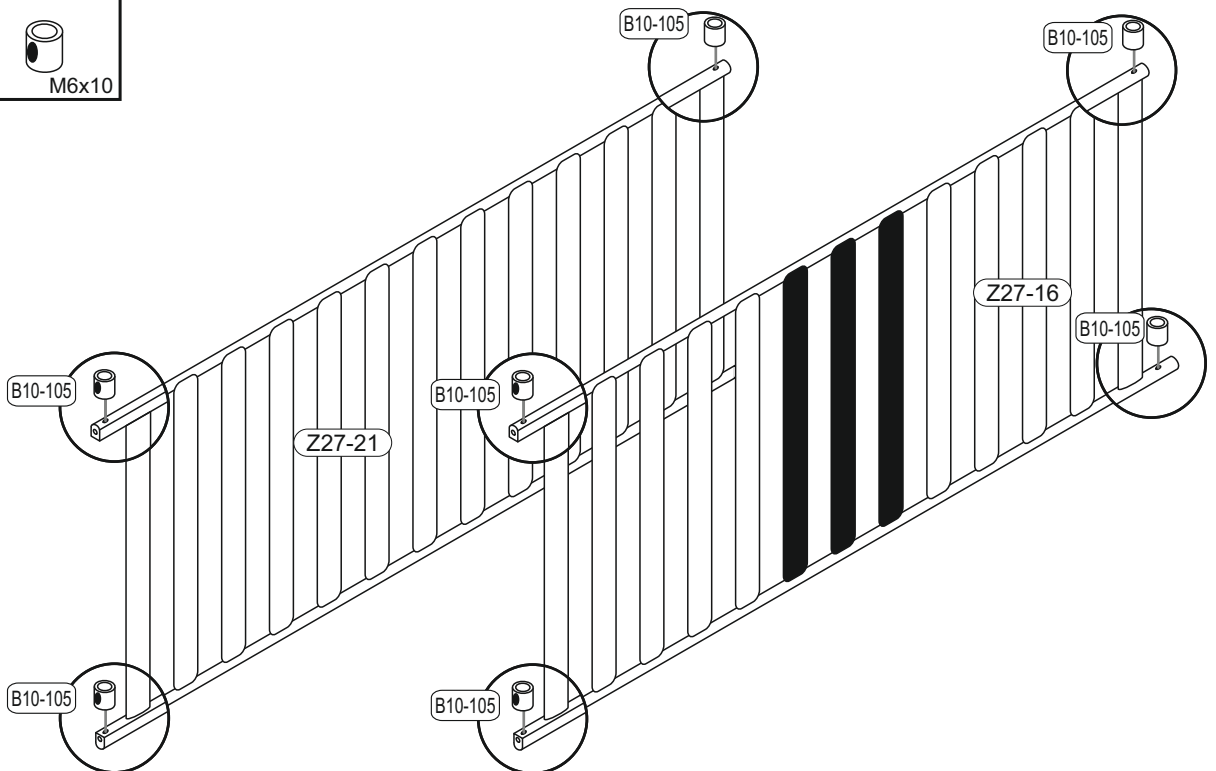
**Die Beschläge müssen bündig in die Platten eingeschlagen werden.**




4	B10-95	
	4x	
	B10-85	
	2x	
	B10-80	
	2x	



5	B10-105	
	8x	M6x10




6

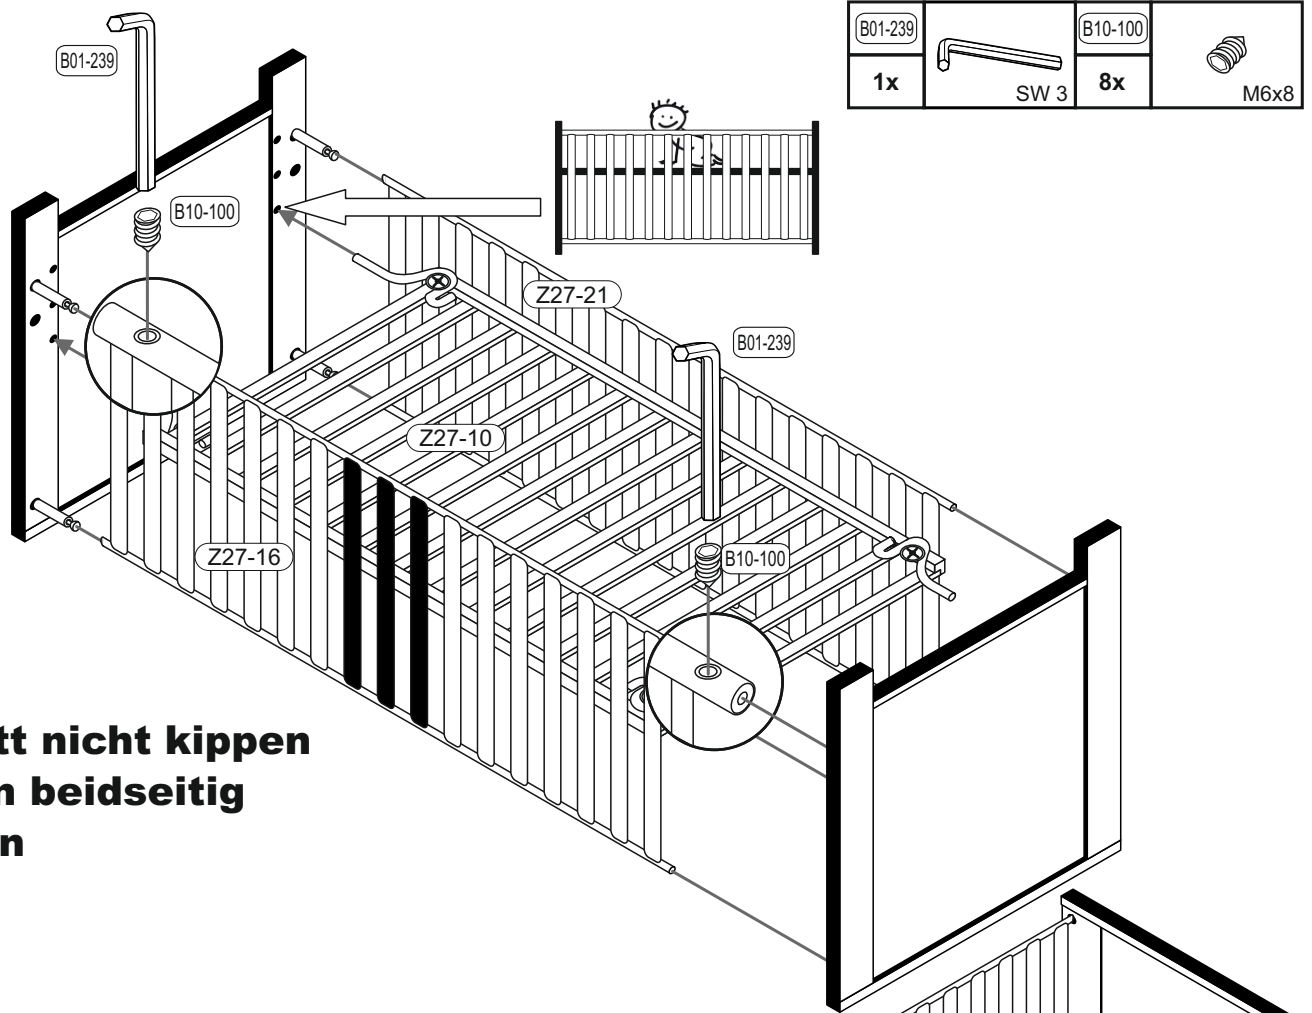

**Das Bett nicht kippen  
sondern beidseitig  
anheben**

7

B05-273	
1x	

