


D Montageanleitung	GB Assembly instructions	NL Handleiding voor de montage	PL Instrukcja montażu	HU Szerelési útmutató	RO Instrucțiuni de montaj
FR Notice de montage	IT Istruzioni di montaggio	CZ Montážní návod	SK Návod na montáž	TR Montaj talimatı	RU Инструкции по монтажу



Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба


Aosta

At. • Ho. • If. • Housy • Z. • Sz.
 Typ • Type • Ta • Types • Typ

7.7368

a18		4x
b7		4x
A6		2x
b3		2x
c		16x
e11		24x
f8		8x
r9		6x
s6		6x
t1		14x
v		3x



- ASL 833x330x15mm 1
- ASR 833x330x15mm 1
- BL 1901x350x15mm 1
- BD 1901x350x15mm 1
- BLE 772x61x15mm 2
- BLD 1900x61x15mm 1
- TR 425x766x15mm 2
- 7a. TRM 425x766x15mm 1
- MSL 833x315x15mm 1
91. MSM 833x315x15mm 1
101. MSR 833x315x15mm 1
- ZB 467x313x15mm 2
- EB 413x313x15mm 1
- SKV 489x189x15mm 4
- SKB 454x278x3mm 4
- SZL 282x97x12mm 4
- SZH 443x97x12mm 4
- SZR 282x97x12mm 4
- RW 1881x845x3mm 1







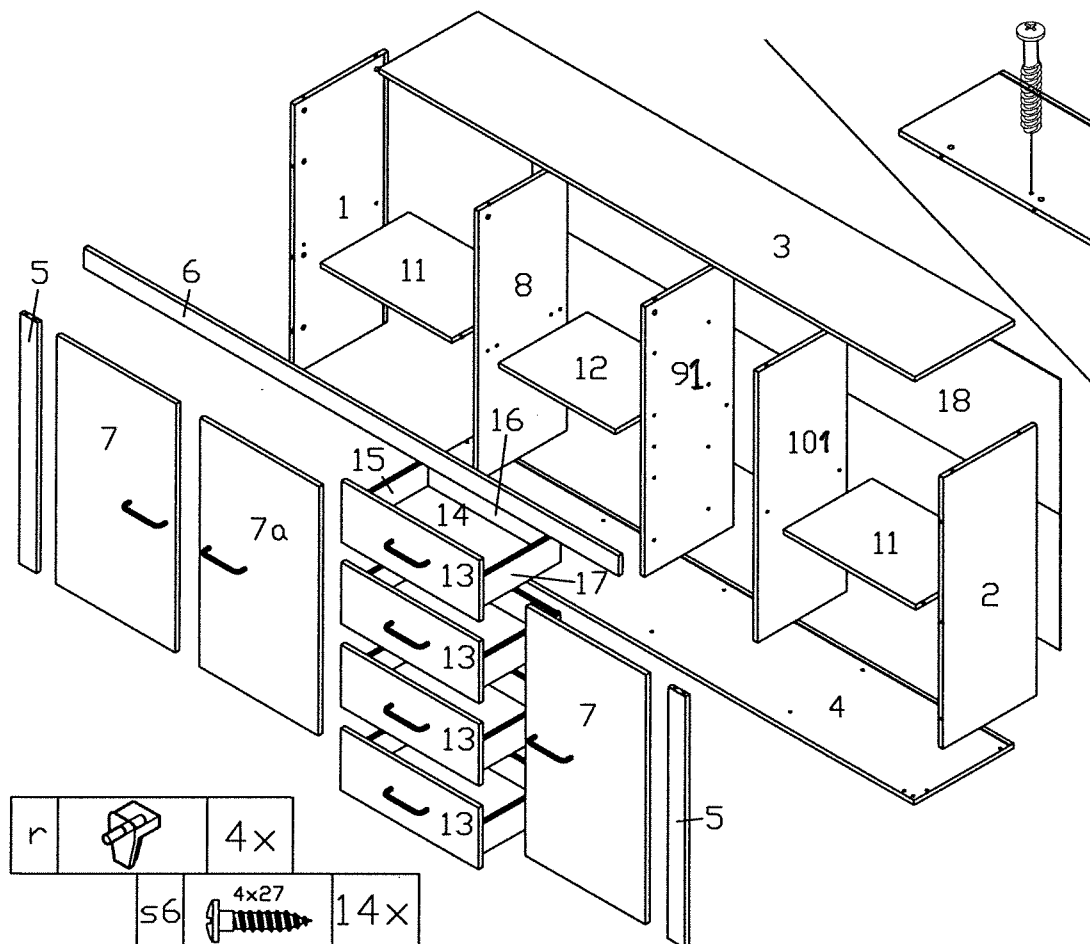


r		4x
---	--	----



s6		14x
t1		20x
t6		20x
v		7x
x8		10x
y4		2x
z		20x

a18		4x
b7		4x
A6		2x
b3		2x
c		16x
e11		24x
f1		24x
f8		8x
l		10x
q10		8x
n		40x
r9		6x
t1		20x
t6		20x
v		7x
x8		10x
y4		2x
z		20x

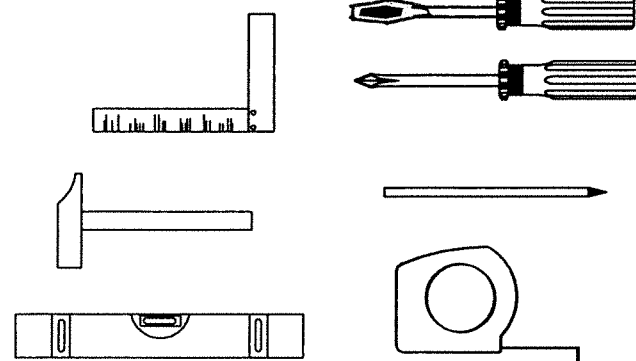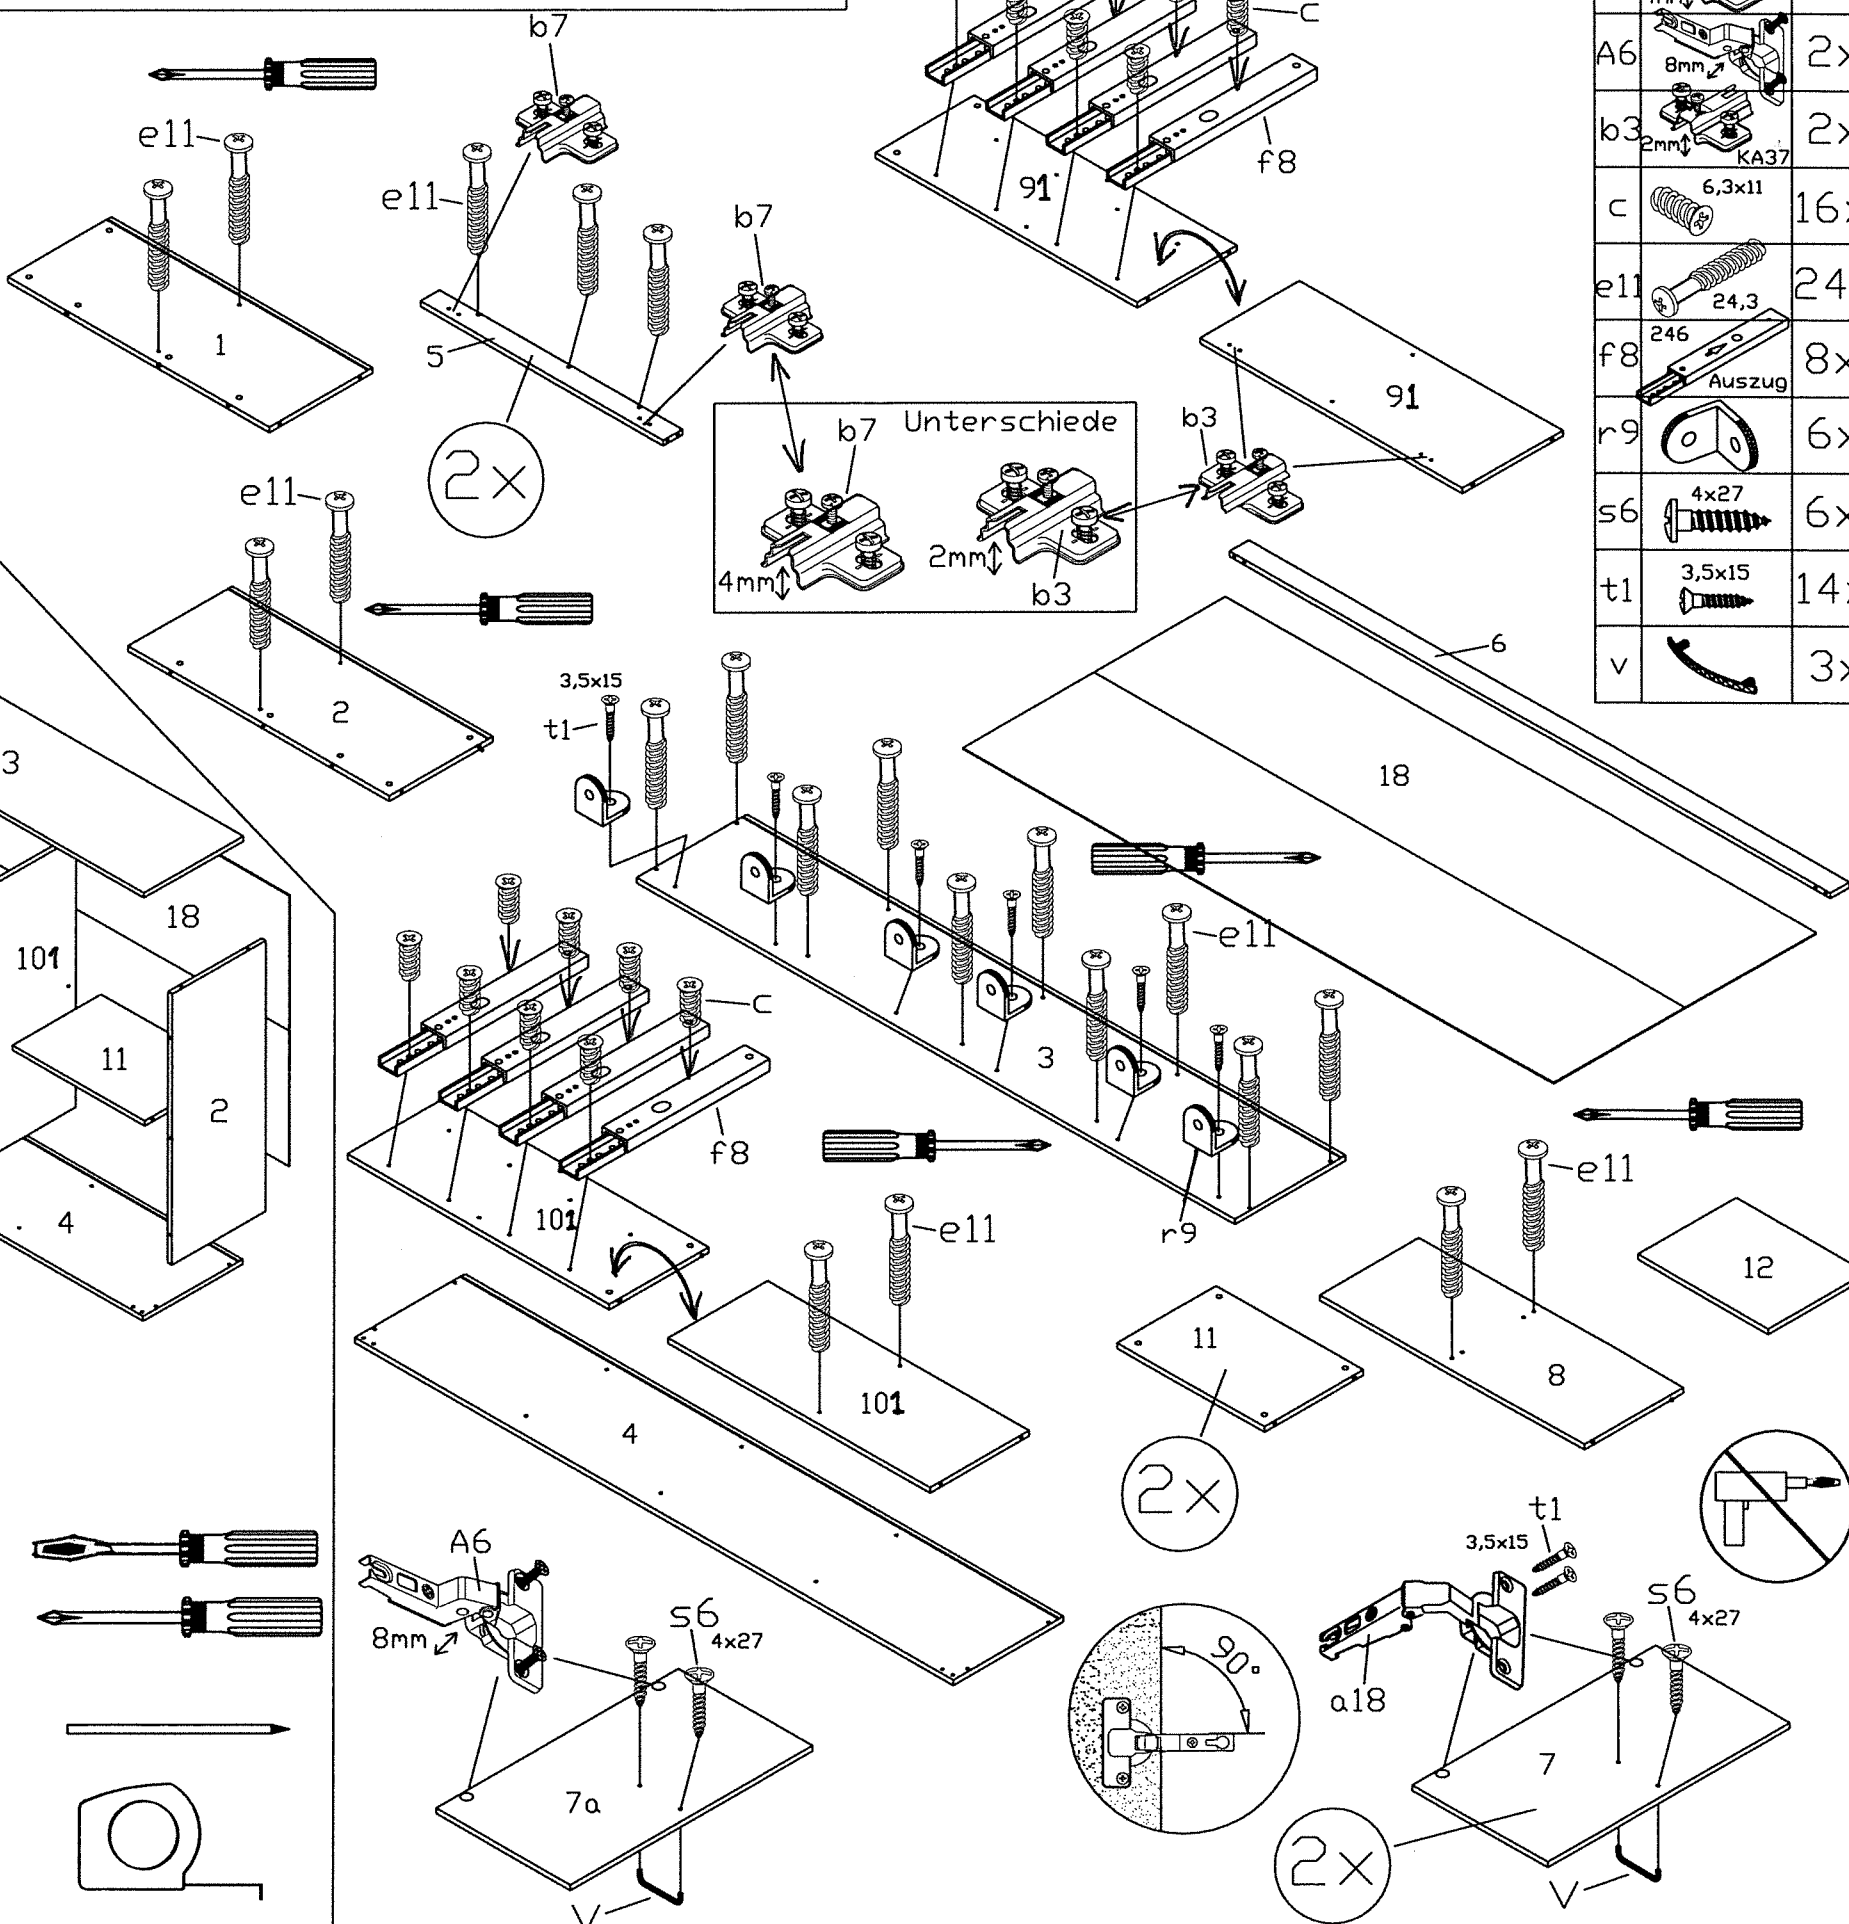

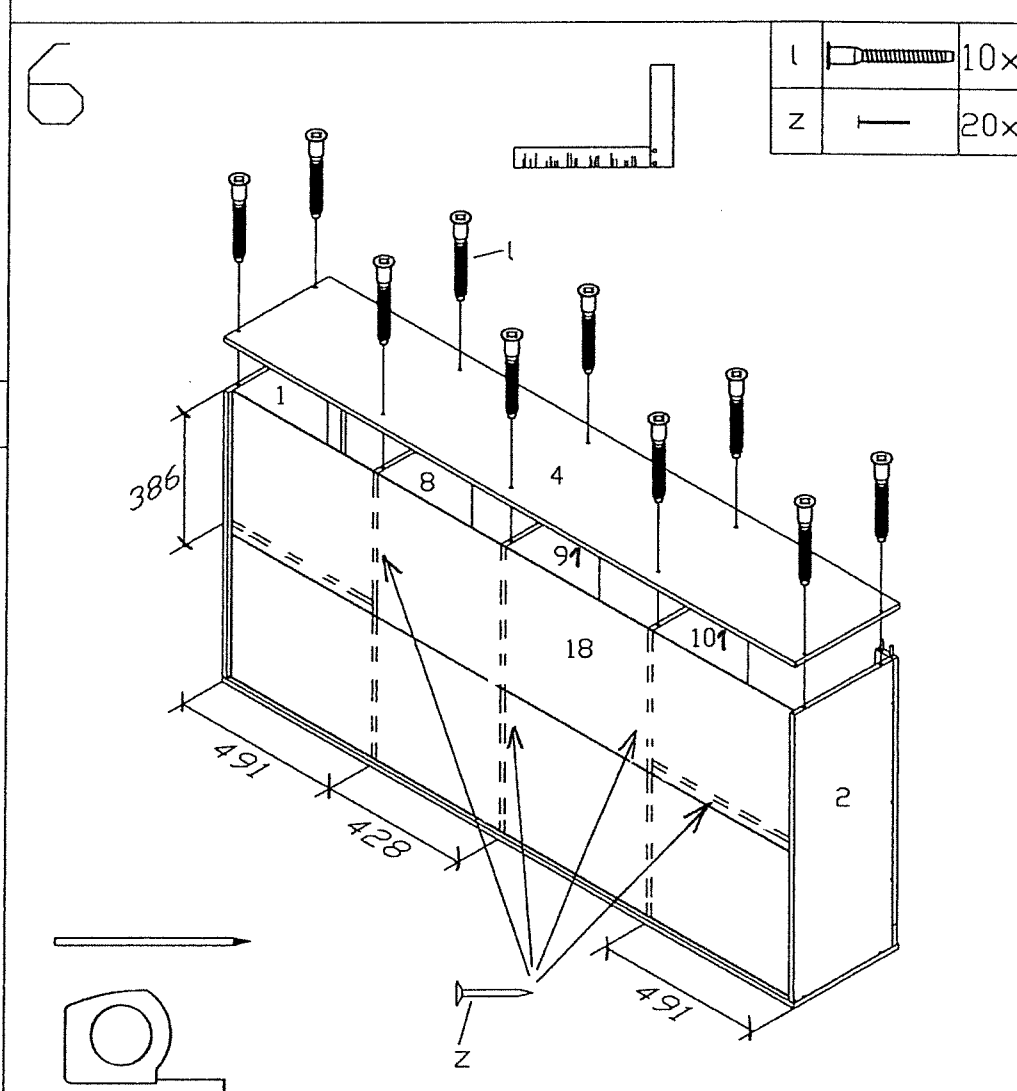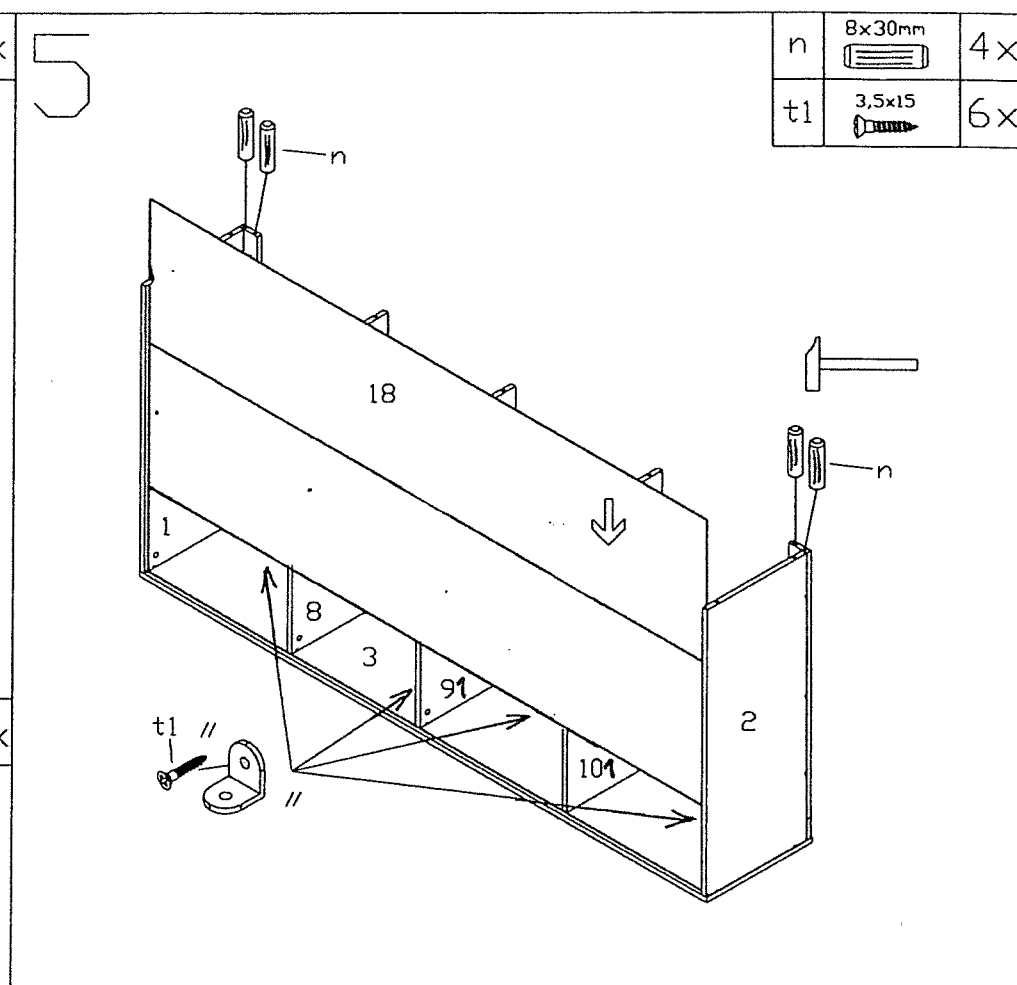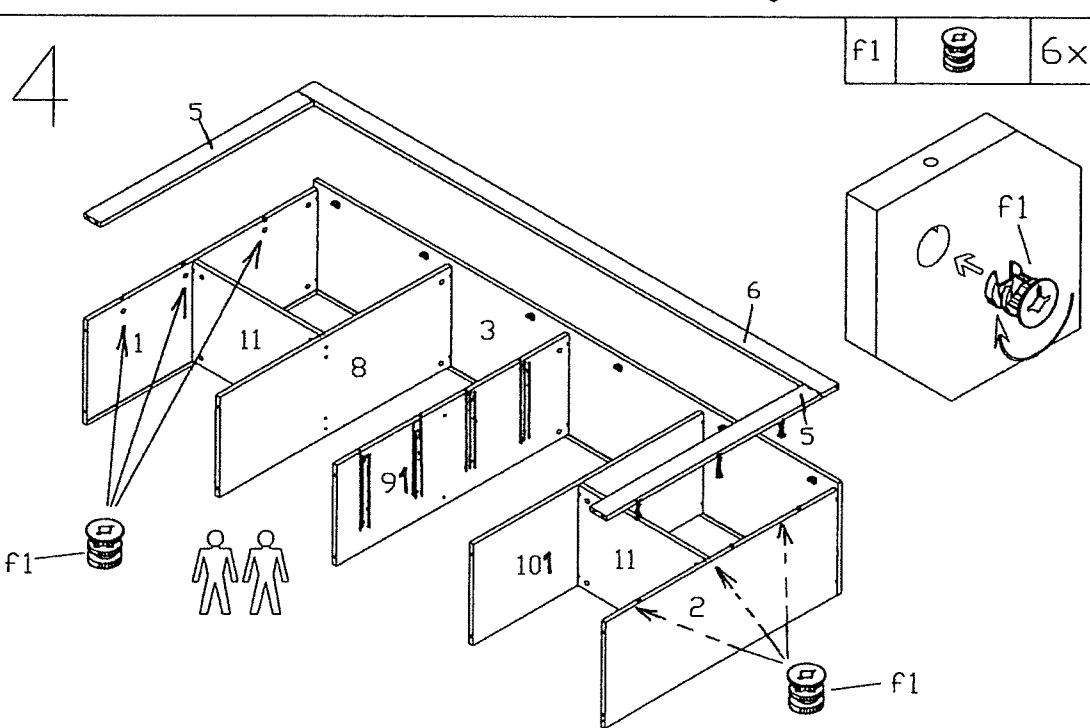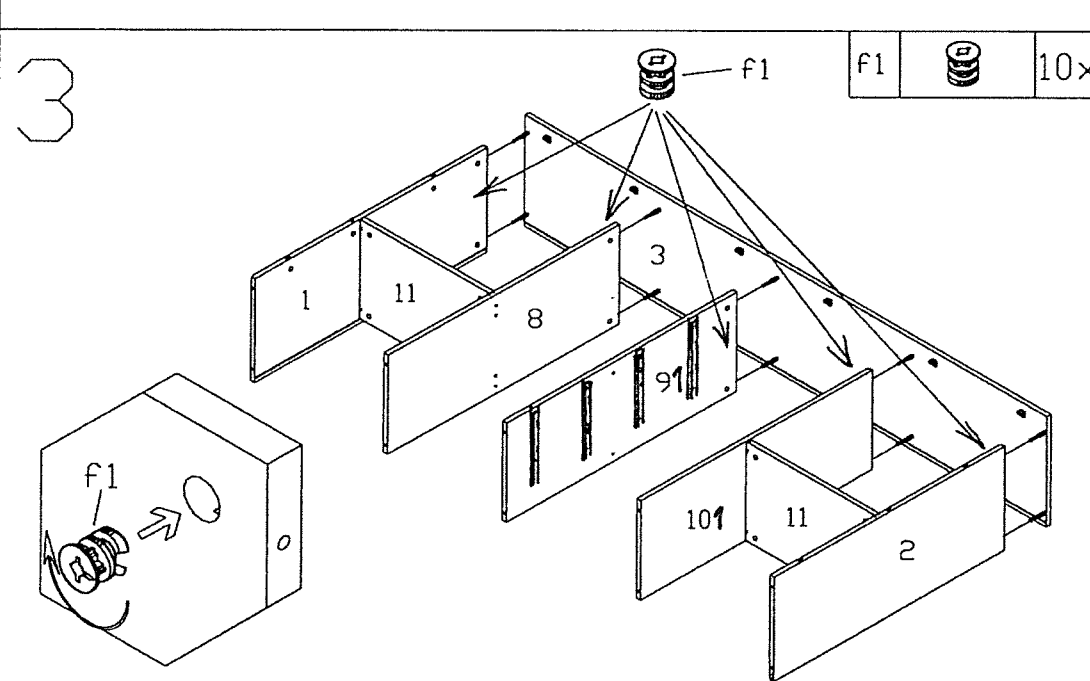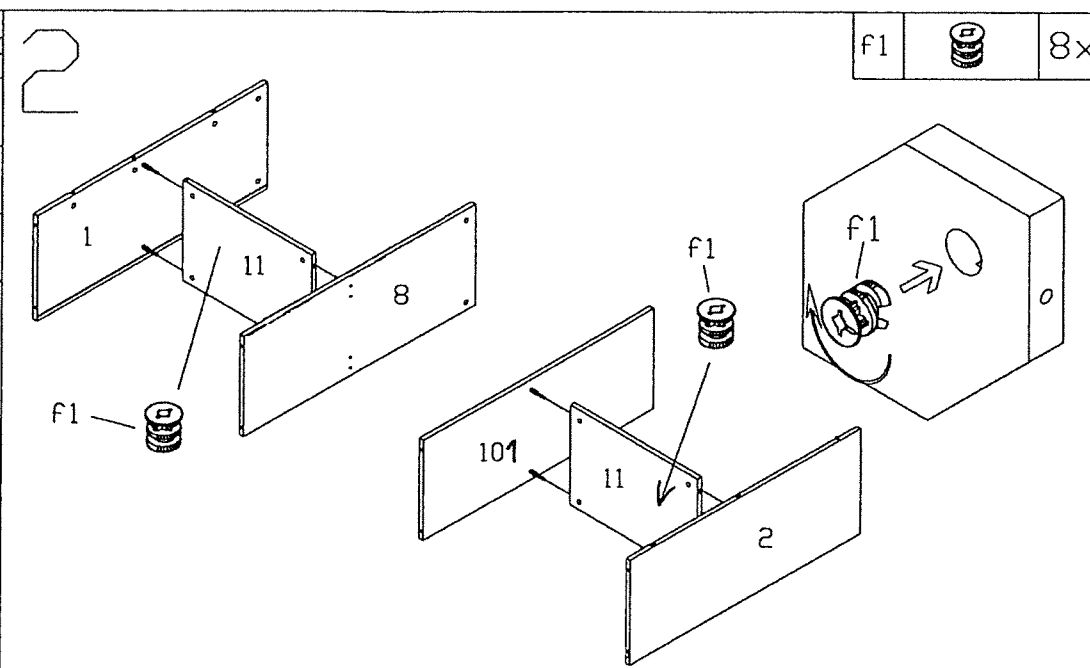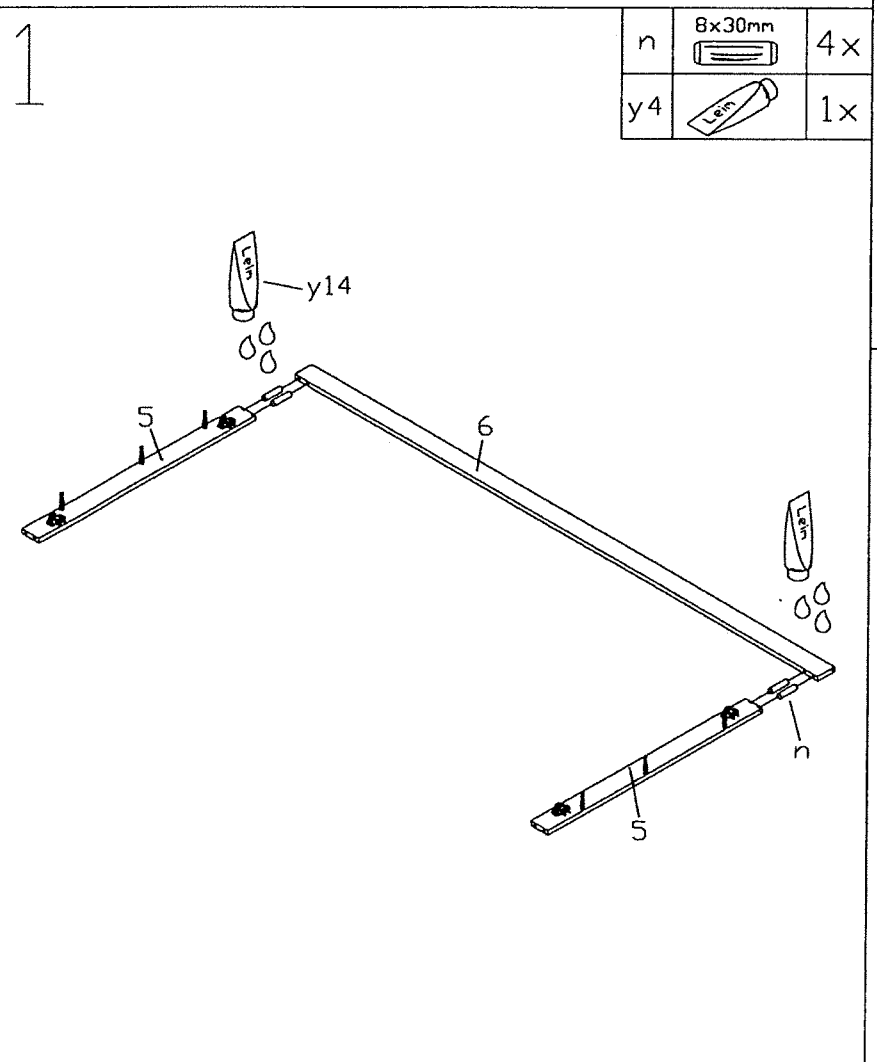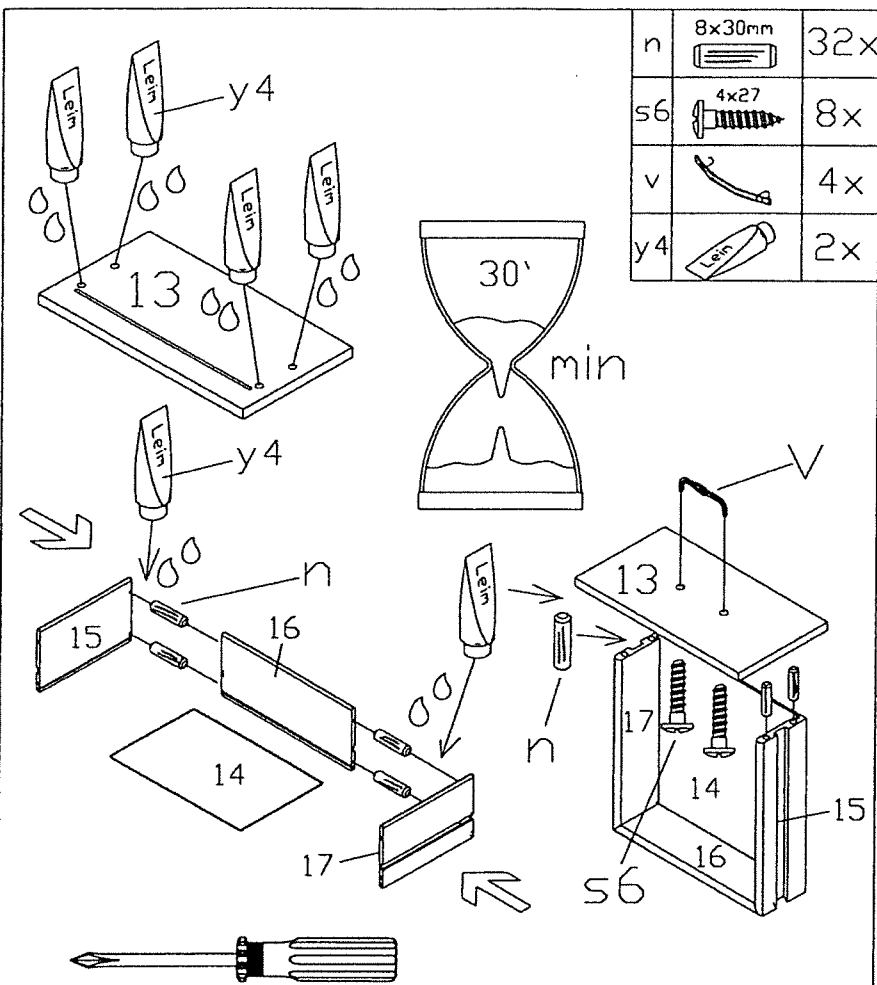


7

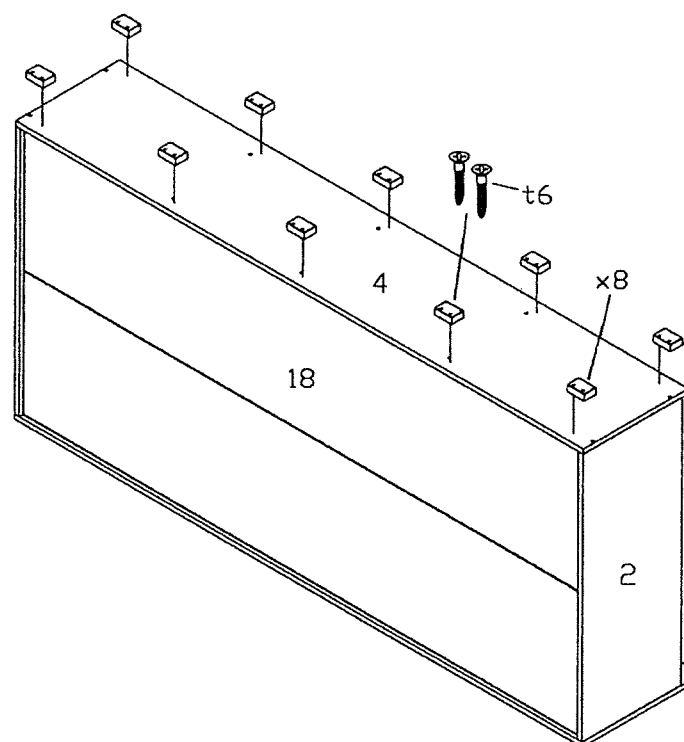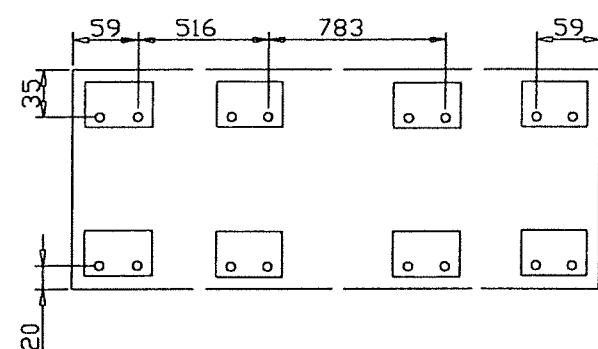


t6	3,5x30	20x
x8	Fuß 58x40	10x


9

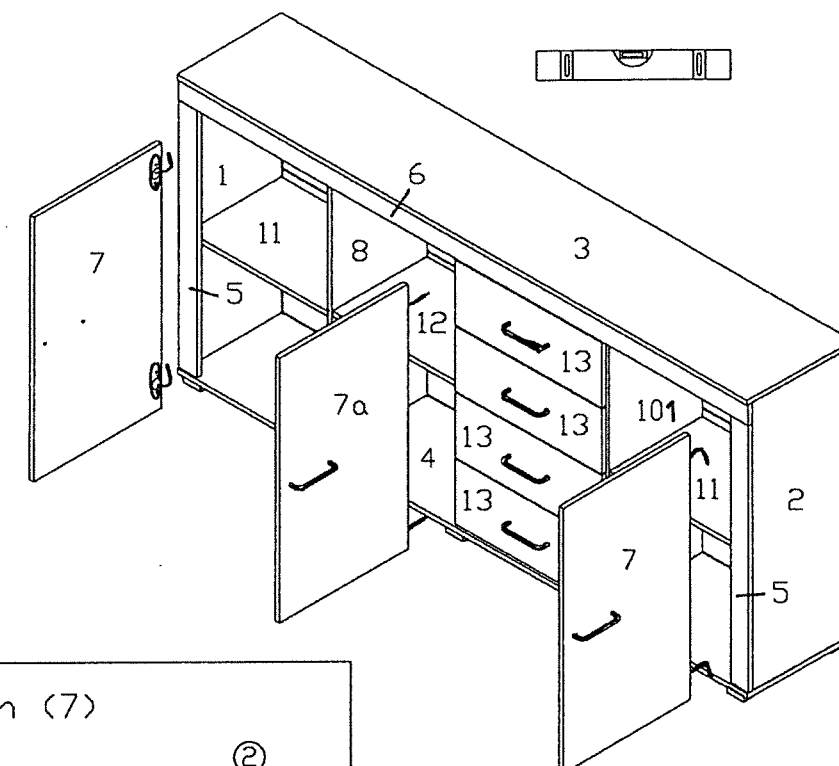


Rahmentüren (7)

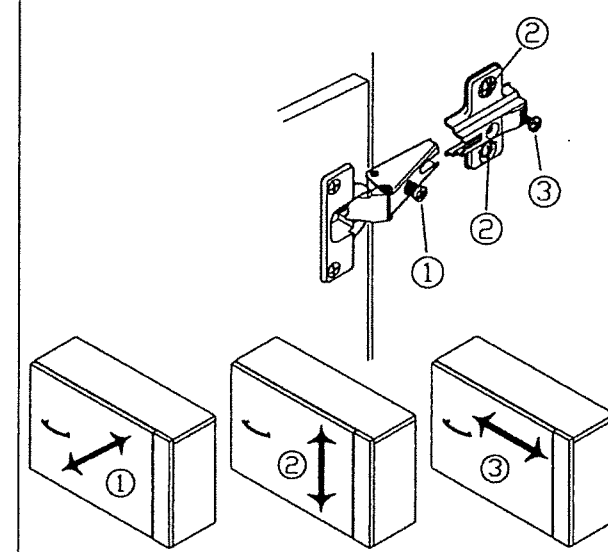

Holztüren (7a)

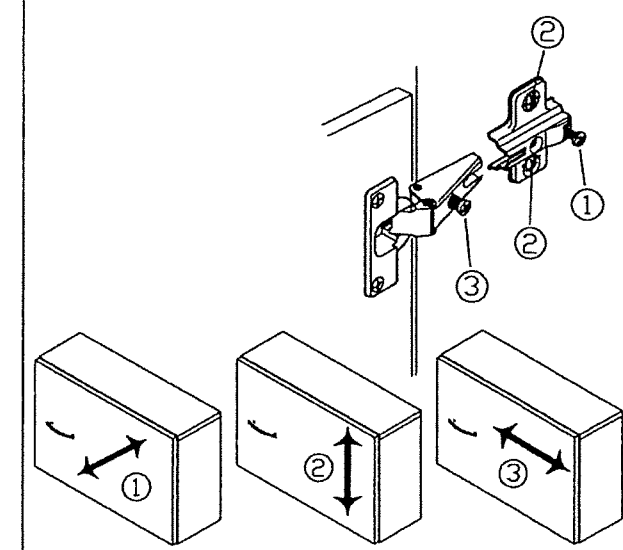

8

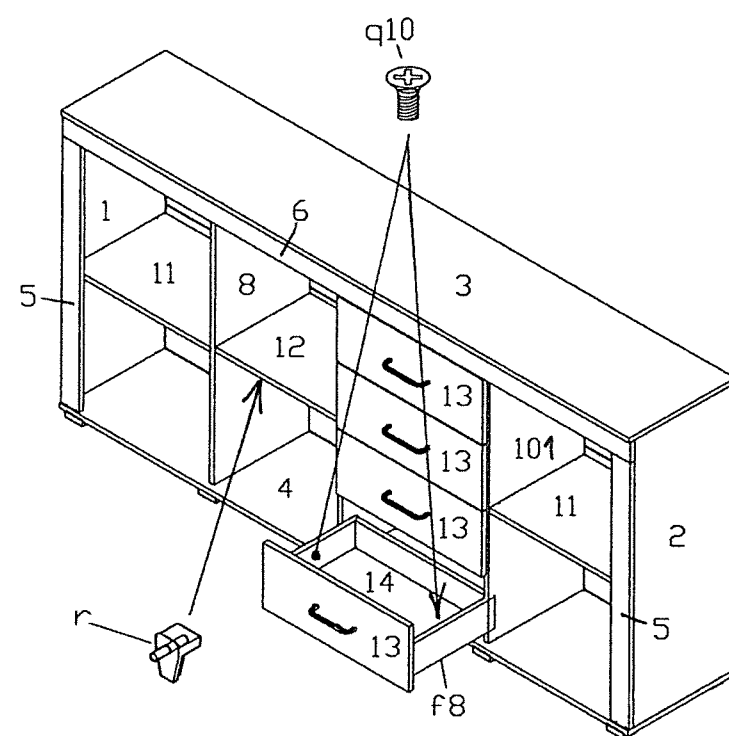

q10	M4x9	8x
r		4x