

NOVA LUCE


9088131

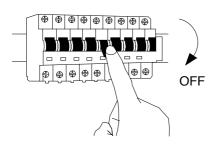


1. Turn off the general Switch

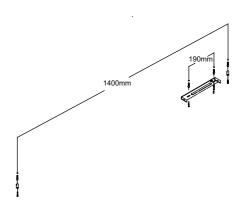


Align, mark and drill holes to apply the screws

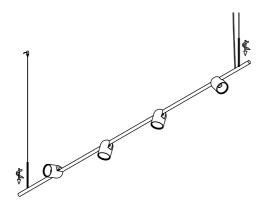

3. Insert the cords into the track by tidying them up

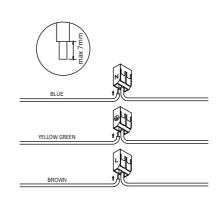


4. Connect the 3 wires

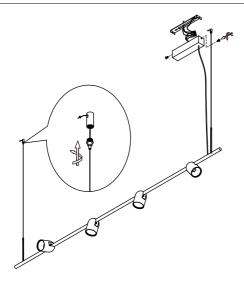

Apply the side screws

5. & connect the parts by tidying them together to make it stable

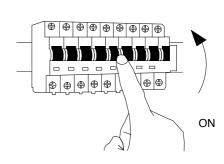

6. Turn on the general Switch