
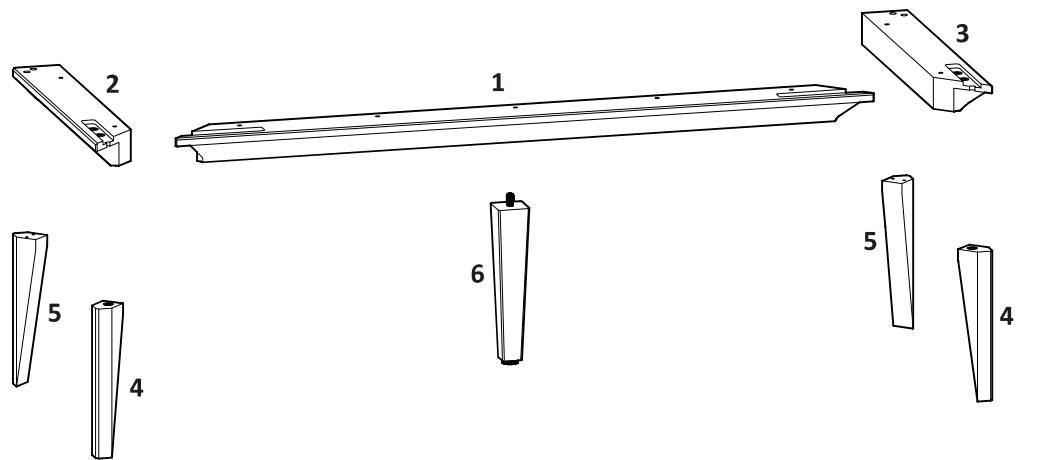


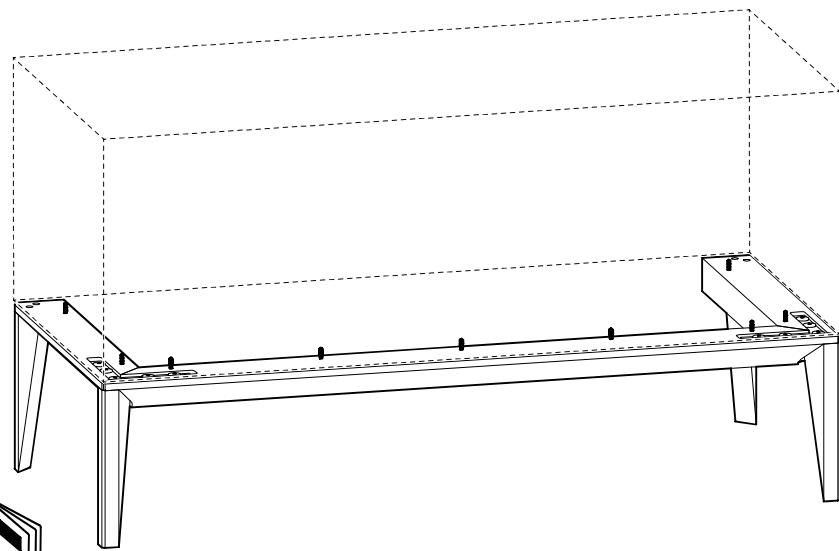


x13


	B.50
--	-------------

Ø4x40

M6x35



Ø4x40




x1

No4







x2

E.32

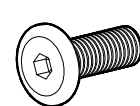


x8

M6x16

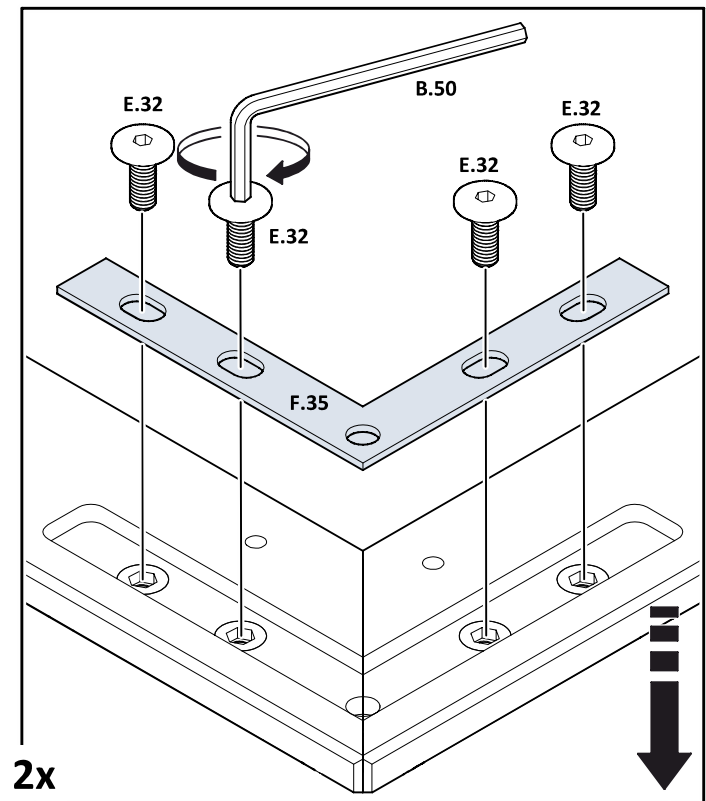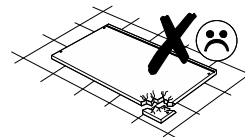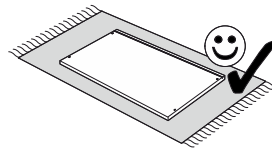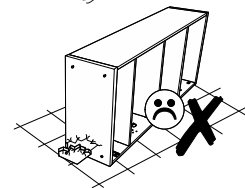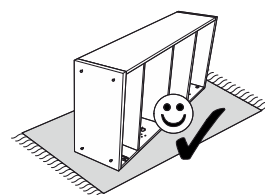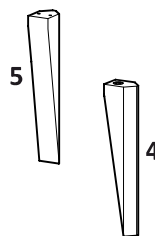

2x

1

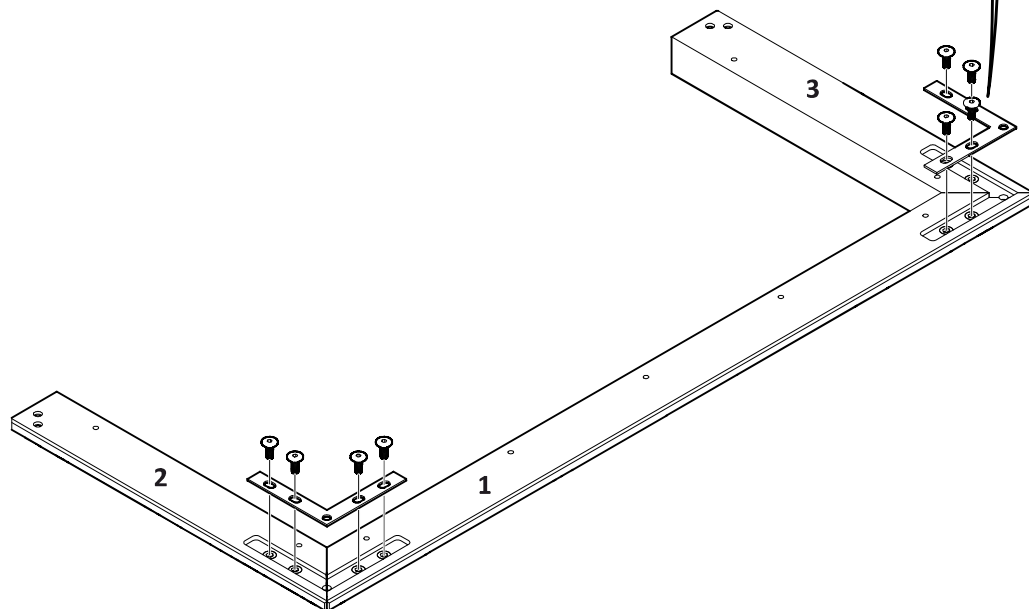

2

2

Diagram illustrating the assembly of the corner brackets and feet. The main assembly shows the corner brackets (4) being attached to the frame using screws (E.36). The feet (5) are then attached to the brackets using screws (A.13). The inset shows a close-up of the corner bracket (4) being secured with a screw (E.36) and the foot (5) being attached with a screw (A.13). The label "2x" indicates that two of these corner assemblies are required.

[illegible]