
STEP: 1

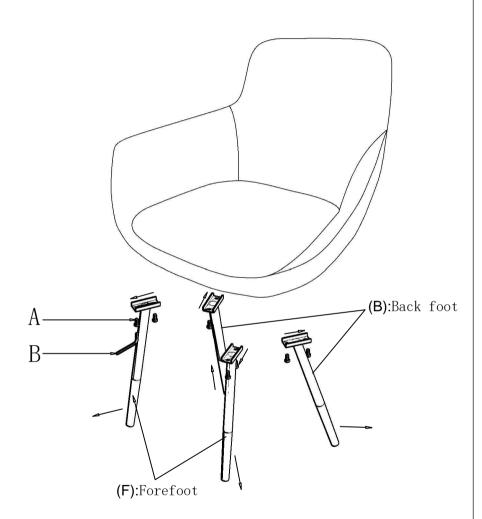


Please install the foot according to the arrow direction.

(F):Forefoot

(B):Back foot

FINISH

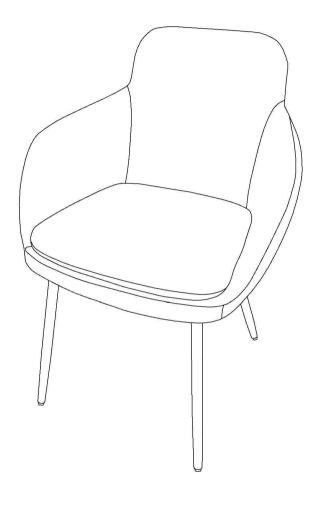

B2165B			
	DESCRIPTION	GAUGE	Q'TY
A	allen screw	M6*12	8
В	allen key	4mm	1