



**2 X** **20 MIN**

- (D) AUFBAUANLEITUNG
- (NL) HANDLEIDING VOOR DE MONTAGE
- (TR) MONTAJ TALIMATI
- (RO) INSTRUCTIUNI DE ASAMBLARE
- (F) INSTRUCTION D'ASSEMBLAGE
- (CZ) POKYNY K MONTÁŽI
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (HR) NAPUTCI ZA MONTAŽU
- (E) INSTRUCCIONES DE MONTAJE


- (GB) ASSEMBLY INSTRUCTIONS
- (PL) INSTRUKCJA MONTAŻU
- (RU) Инструкция по монтажу
- (I) PROCEDURA DI ASSEMBLAGGIO
- (SK) POKYNY K MONTÁŽI
- (HU) KÖZGYŰLÉS UTASÍTÁSOK
- (SL) ASSEMBLY INSTRUCTIONS
- (S) MONTERINGSANVISNING
- (LT) DIEGIMO INSTRUKCIJOS






„FABER”

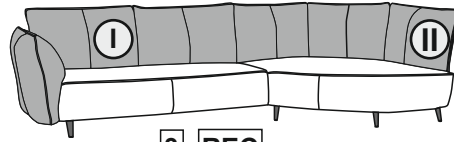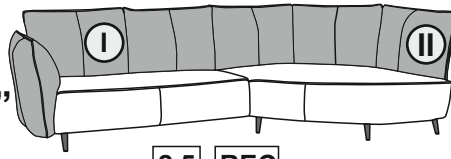











1/3

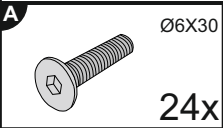

PRE-ASSEMBLED/ PRÉ ASSEMBLÉ/  
VORMONTIERT/  
PREMONTATO/ WSTĘPNIE ZAMONTOWANE

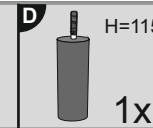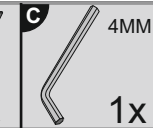

HARDWARE BAG / SACHET MATÉRIEL  
/ ZUBEHÖRBEUTEL / SACCHETTI MATERIALE  
/ BOLSA DE MATERIALES / WOREK MATERIALOWY

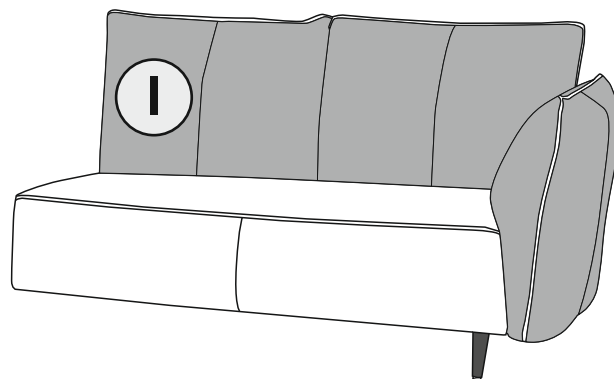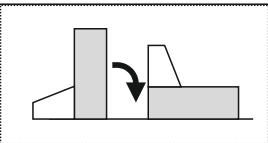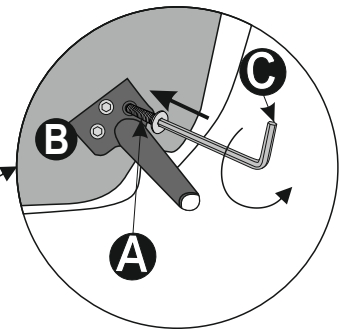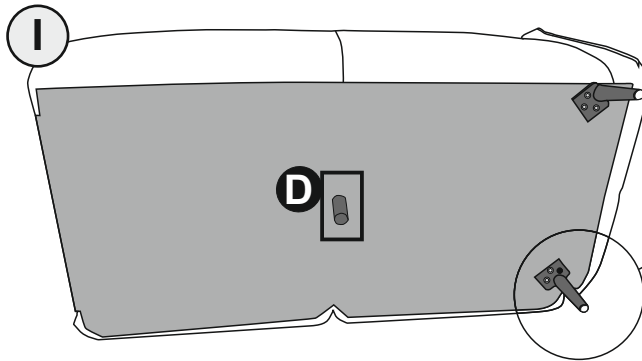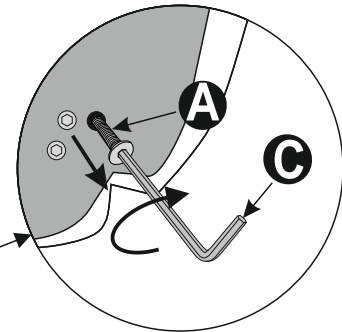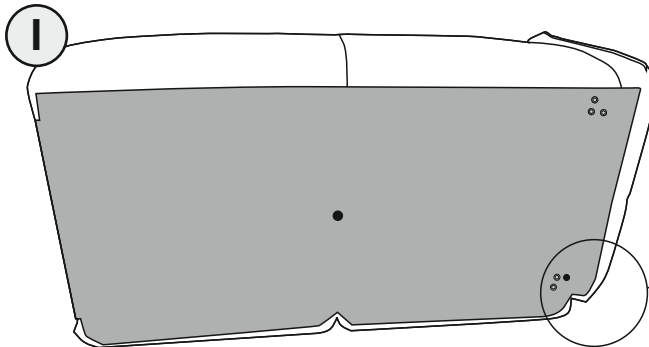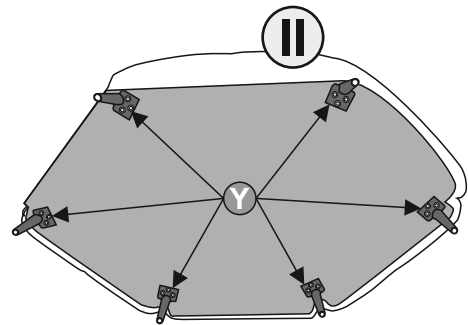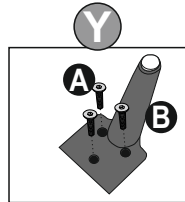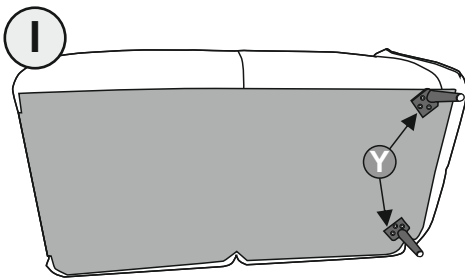


**2 X** **20 MIN**

- (D) AUFBAUANLEITUNG
- (NL) HANDLEIDING VOOR DE MONTAGE
- (TR) MONTAJ TALIMATI
- (RO) INSTRUCTIUNI DE ASAMBLARE
- (F) INSTRUCTION D'ASSEMBLAGE
- (CZ) POKYNY K MONTÁŽI
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (HR) NAPUTCI ZA MONTAŽU
- (E) INSTRUCCIONES DE MONTAJE


- (GB) ASSEMBLY INSTRUCTIONS
- (PL) INSTRUKCJA MONTAŻU
- (RU) Инструкция по монтажу
- (I) PROCEDURA DI ASSEMBLAGGIO
- (SK) POKYNY K MONTÁŽI
- (HU) KÖZGYŰLÉS UTASÍTÁSOK
- (SL) ASSEMBLY INSTRUCTIONS
- (S) MONTERINGSANVISNING
- (LT) DIEGIMO INSTRUKCIJOS



„FABER”

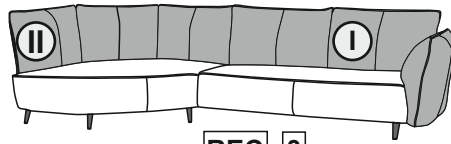


REC-3



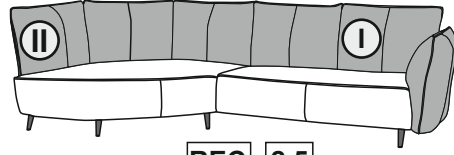


REC-2,5






2/3

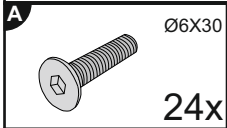

PRE-ASSEMBLED/ PRÉ ASSEMBLÉ/  
VORMONTIERT/  
PREMONTATO/ WSTĘPNIE ZAMONTOWANE

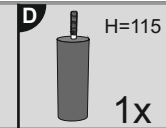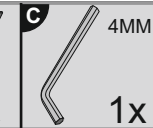

HARDWARE BAG / SACHET MATÉRIEL  
/ ZUBEHÖRBEUTEL / SACCHETTI MATERIALE  
/ BOLSA DE MATERIALES / WOREK MATERIALOWY

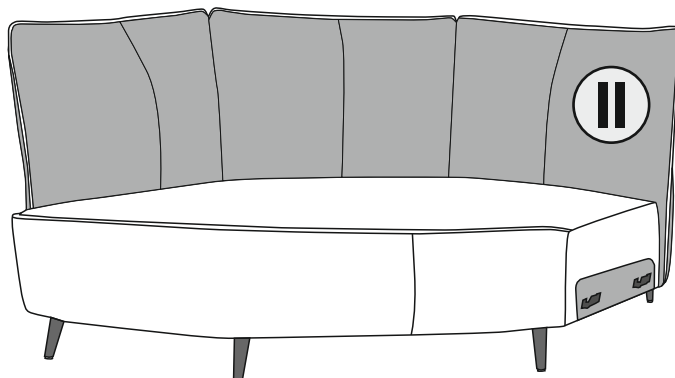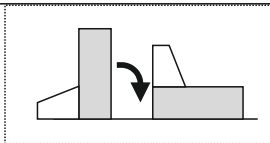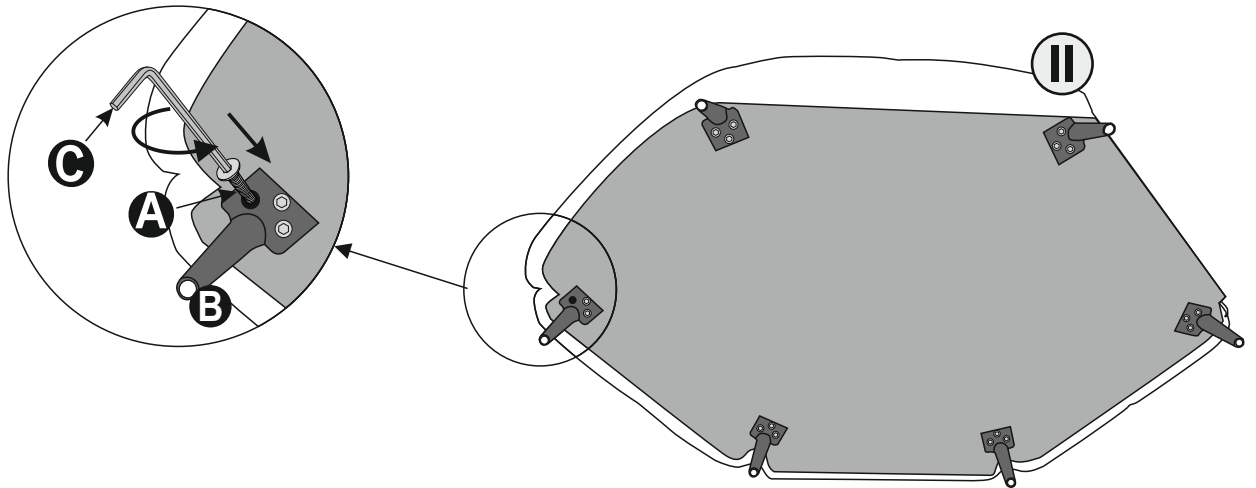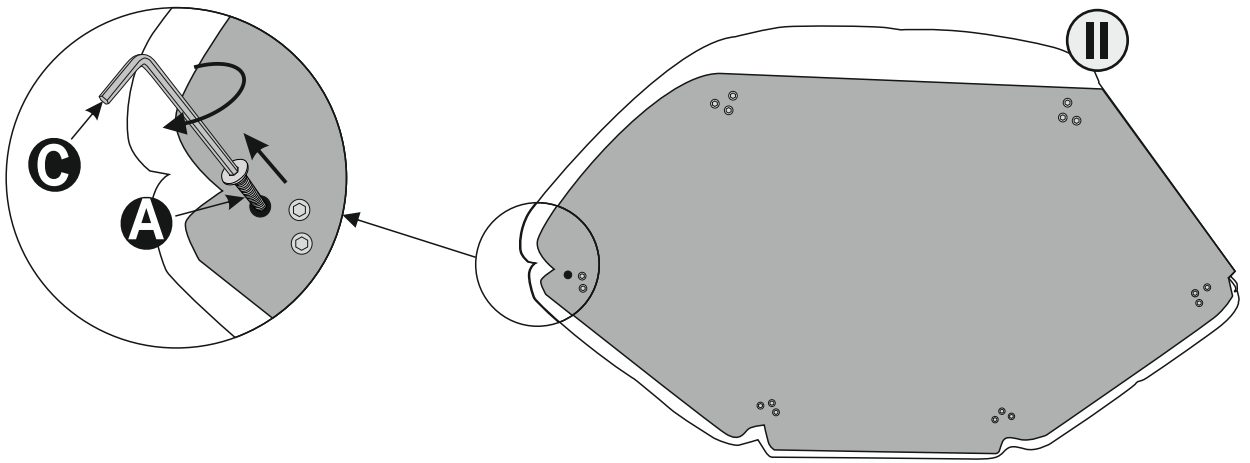


**2 X** **20 MIN**


- |                                  |                               |
|----------------------------------|-------------------------------|
| (D) AUFBAUANLEITUNG              | (GB) ASSEMBLY INSTRUCTIONS    |
| (NL) HANDLEIDING VOOR DE MONTAGE | (PL) INSTRUKCJA MONTAŻU       |
| (TR) MONTAJ TALIMATI             | (RU) Инструкция по монтажу    |
| (RO) INSTRUCTIUNI DE ASAMBLARE   | (I) PROCEDURA DI ASSEMBLAGGIO |
| (F) INSTRUCTION D'ASSEMBLAGE     | (SK) POKYNY K MONTÁŽI         |
| (CZ) POKYNY K MONTÁŽI            | (HU) KÖZGYŰLÉS UTASÍTÁSOK     |
| (BG) ИНСТРУКЦИИ ЗА МОНТАЖ        | (SL) ASSEMBLY INSTRUCTIONS    |
| (HR) NAPUTCI ZA MONTAŽU          | (S) MONTERINGSANVISNING       |
| (E) INSTRUCCIONES DE MONTAJE     | (LT) DIEGIMO INSTRUKCIJOS     |



„FABER”

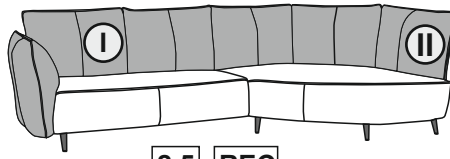

**2,5-REC**

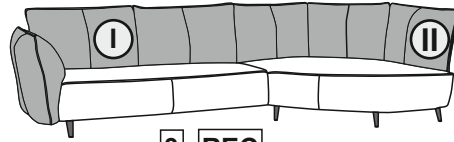

**3-REC**

**3/3**

**A** Ø6X30  
**24x**

PRE-ASSEMBLED/ PRÉ ASSEMBLÉ/  
VORMONTIERT/  
PREMONTATO/ WSTĘPNIE ZAMONTOWANE

**B** **8x**

**C** 4MM  
**1x**

**D** H=115  
**1x**

HARDWARE BAG / SACHET MATÉRIEL  
/ ZUBEHÖRBEUTEL / SACCHETTI MATERIALE  
/ BOLSA DE MATERIALES / WOREK MATERIALOWY

