
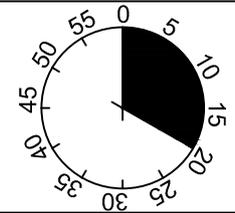
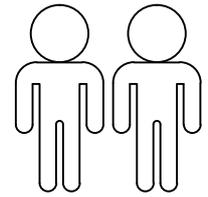





# Mara

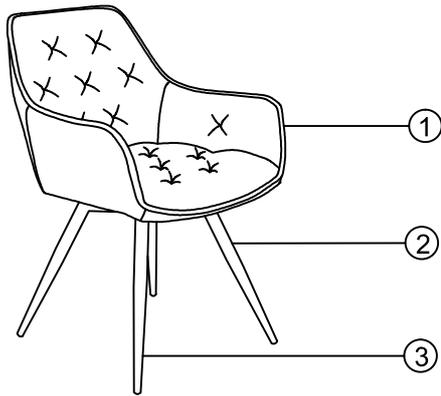


1

2

3

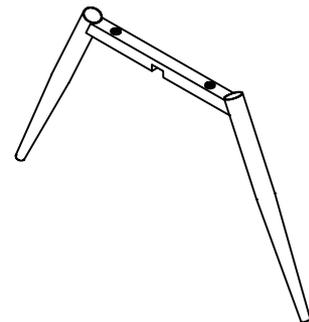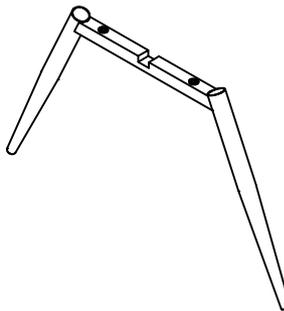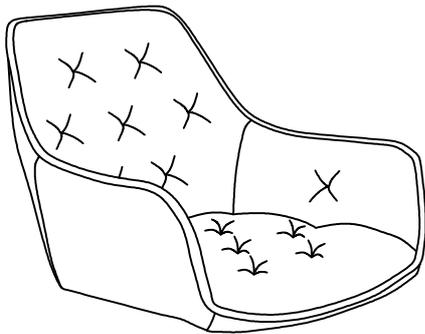


4

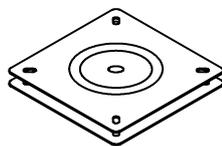

DT 408 N 200x200mm

1	1 x
2	1 x
3	1 x
4	1 x



1/1

A	M6x20
	
6x	


B	M6x13
	
4x	

C	M6x30
	
2x	

D	Ø18xØ6x1.5
	
8x	


E	Ø18xØ8x10
	
2x	




F	4MM
	
1x	

G	T2.0x90x90
	
1x	


**I.**



**1**

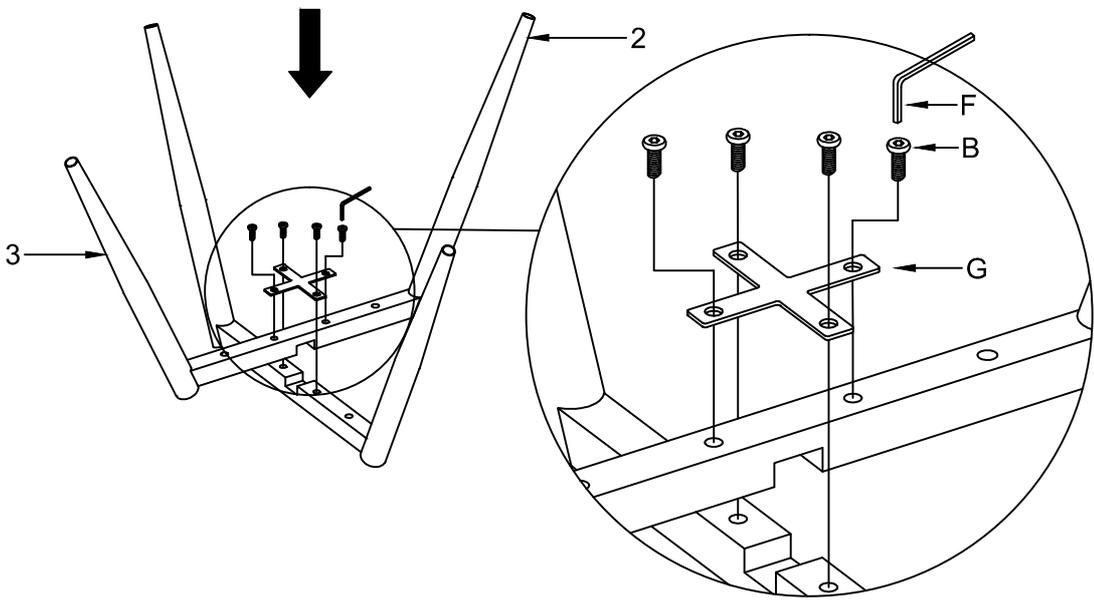

- B** M6x13  
  
4x
- F** 4MM  
  
1x
- G** T2.0x90x90  
  
1x
- 


**2**

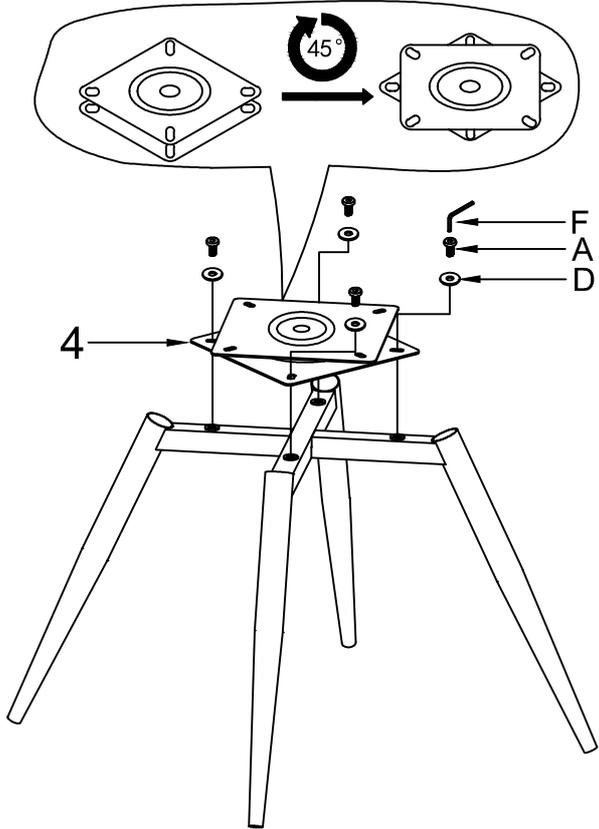


- A** M6X20  
  
4x
- D** Ø18xØ6x1.5  
  
4x
- F** 4MM  
  
1x
- 


II.

3

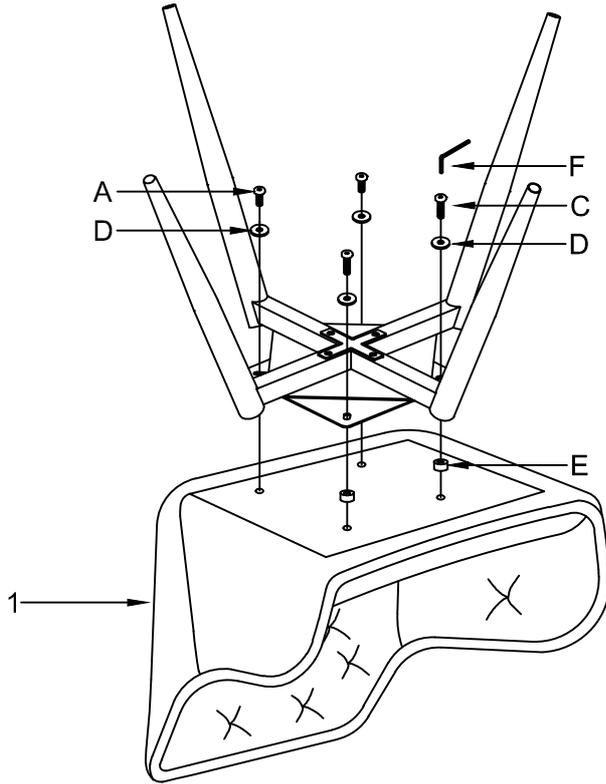

A	M6X20
	2x
C	M6X30
	2x
D	Ø18xØ6x1.5
	4x
E	Ø18xØ8x10
	2x
F	4MM
	1x
	

4

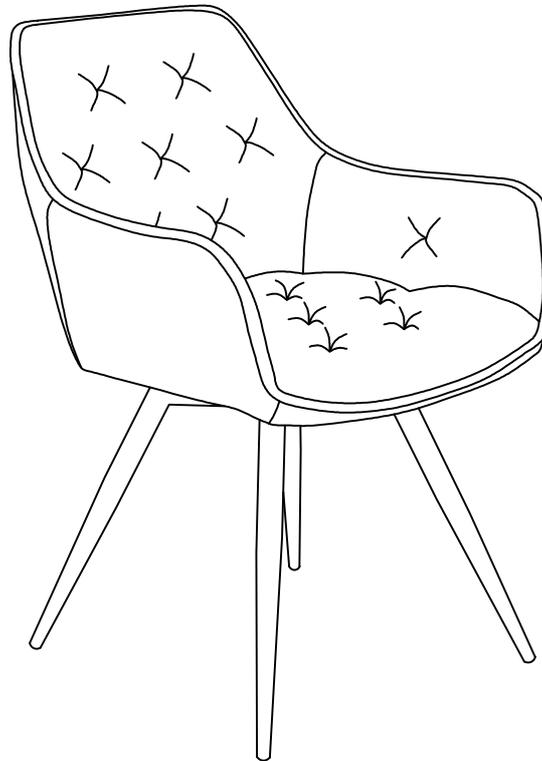

F	4MM
	1x
	



LE TRI  
+ FACILE



Séparez les éléments avant de trier