


(D) Aufbauanleitung
(NL) Handleiding voor de Montage
(PL) Instrukcja montażu
(SK) Montážny návod

(RO) Instrucțiuni de asamblare
(GB) Assembly Instruction
(TR) Montaj Talimatları
(CZ) Shromazďování instrukce


(I) Istruzioni per il montaggio
(F) Instructions de montage
(RU) Инструкция по монтажу
(H) Gennyeseđés utasítások

Boxspringbett Cora

Polsterbett-Gestoffteerde bed-Tapicerowane łósko-Tapítate pat-Upholstered bed-Мягкая кроватъ-yatak kapitone-Letto imbottito-Lit rembourré
 Čalouněné postele čalouněné postele kárpitovztt ágy

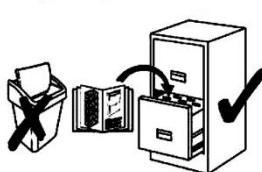


90cm,120cm




4 X


1x

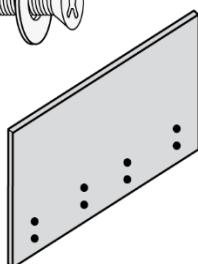


1 X

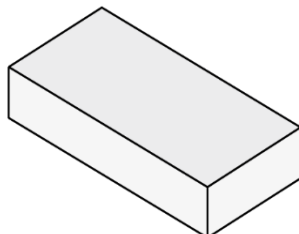

1x

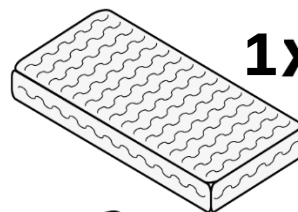

1x

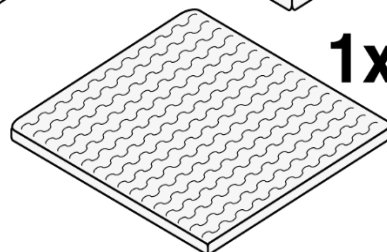


4 X




Schrauben in der Kopfteilverpackung enthalten

140 cm




8 X


1x

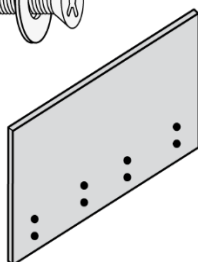


2X

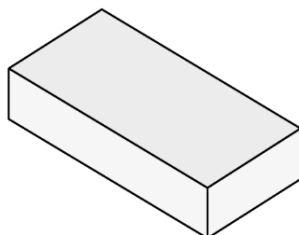

1x

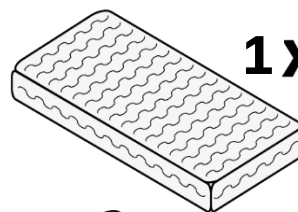

1x

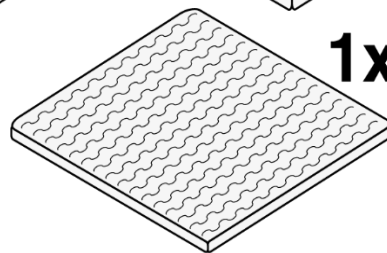


8 X




Schrauben in der Kopfteilverpackung enthalten

160cm,180cm




8 X


1x

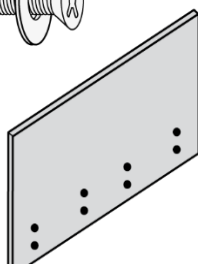


2X

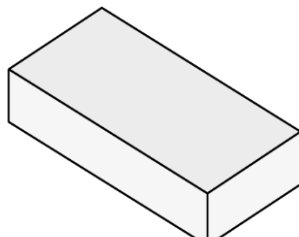

2x

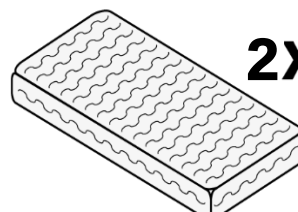

1x

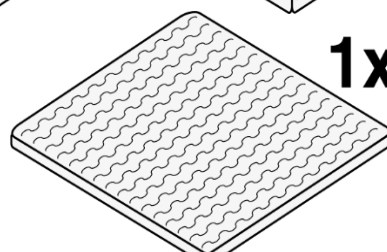


8 X






Schrauben in der Kopfteilverpackung enthalten

1 Box

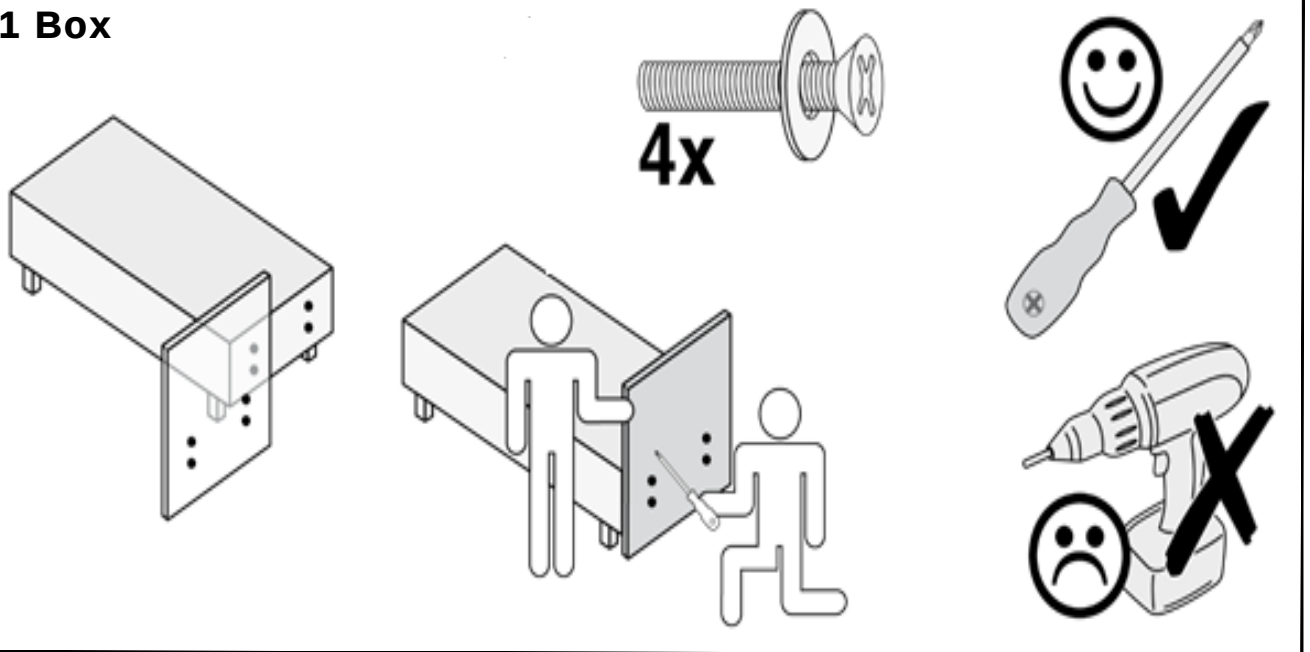

2 Boxen

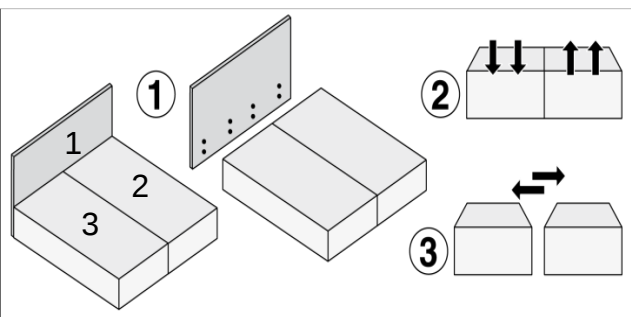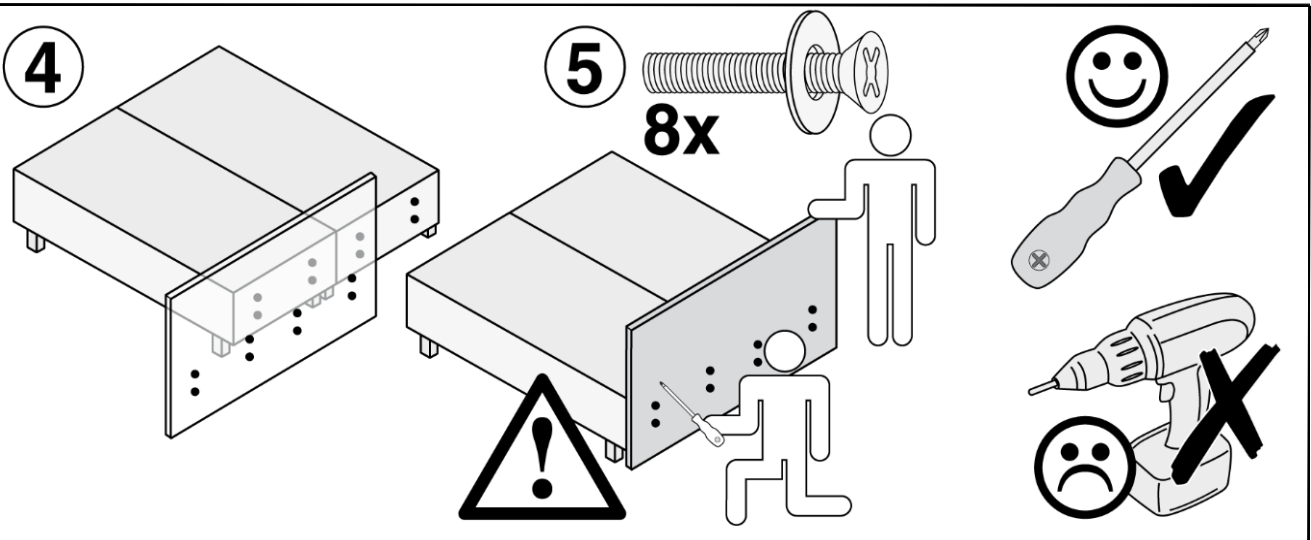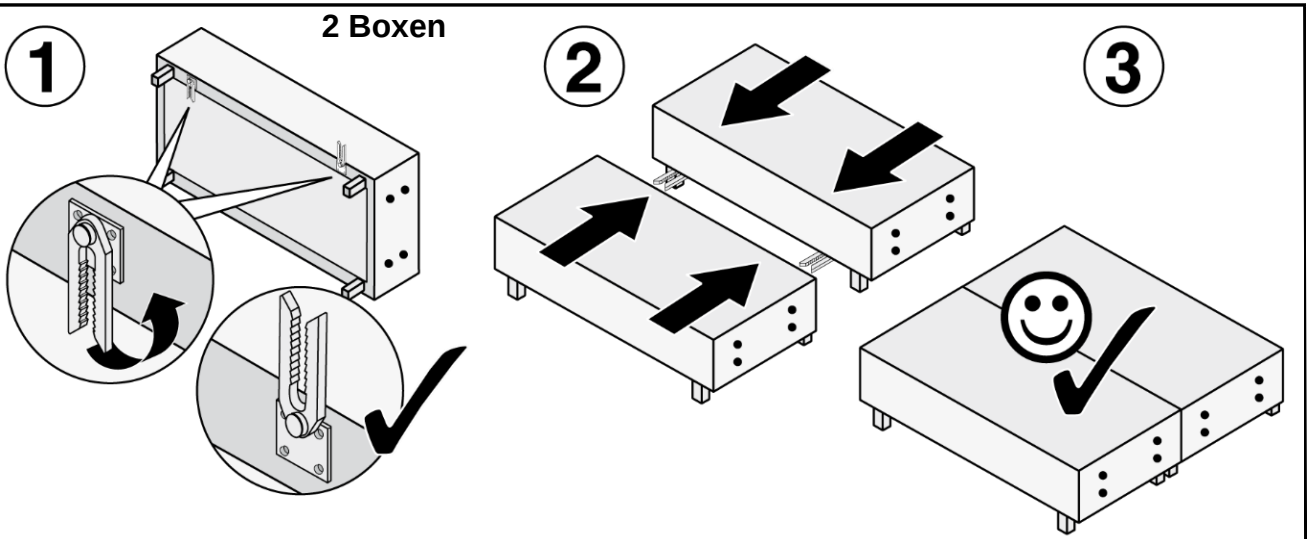

WESTFALIA
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Straße 123
32584 Löhne
info@elastoflex-betten.de