


TONI U-FORM NEW

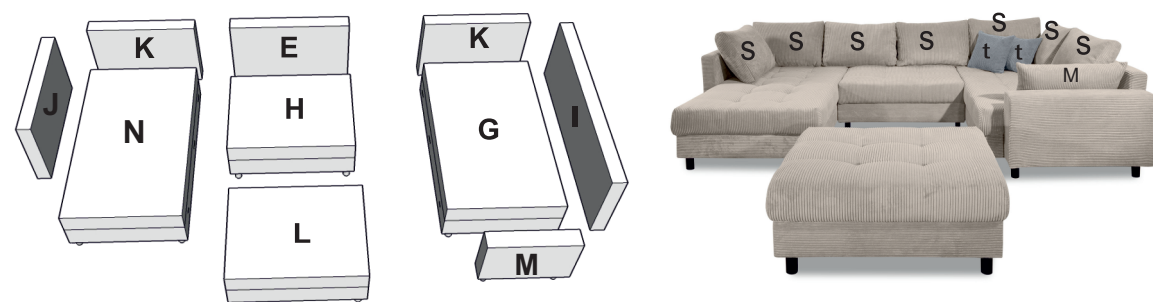


(DE) Montageanleitung
(PL) Instrukcja montażu
(NL) Handleiding voor de montage
(GB) Assembly instructions
(TR) Montaj talimatı
(RU) Инструкция по монтажу

(IT) Istruzioni di montaggio
(FR) Notice de montage
(RO) Instrucțiuni de asamblare
(SK) Montážny návod
(CZ) Montážní návod
(HU) Szerelési útmutató




3 x (8x90) a	7x (8x100) h	4 x (8x80) d	14 x M8 c	8 x (M6x35) e	8 x f	18 x y
18 x 100mm 50mm w	14 x z	14 x Ø8 b	8 x (M6x40) i	14 x g	4x v	
7x s	2x t	1x o				


COL. 1

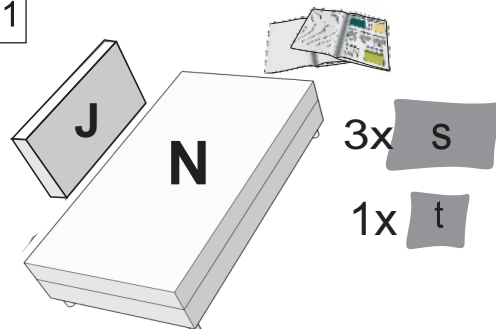


COL. 2

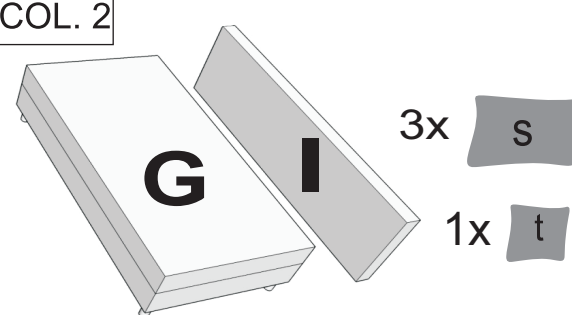


COL. 3

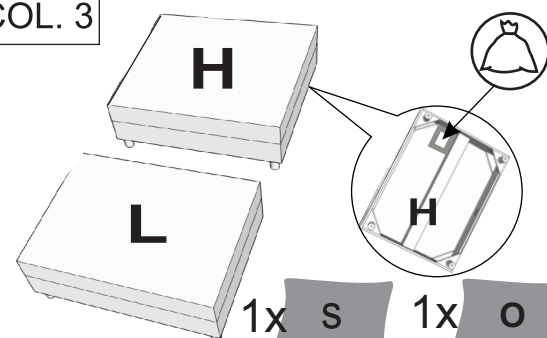


COL. 4

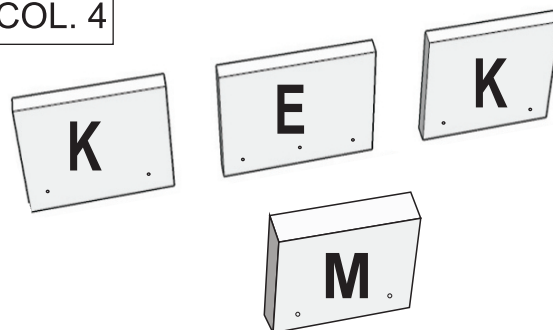


1

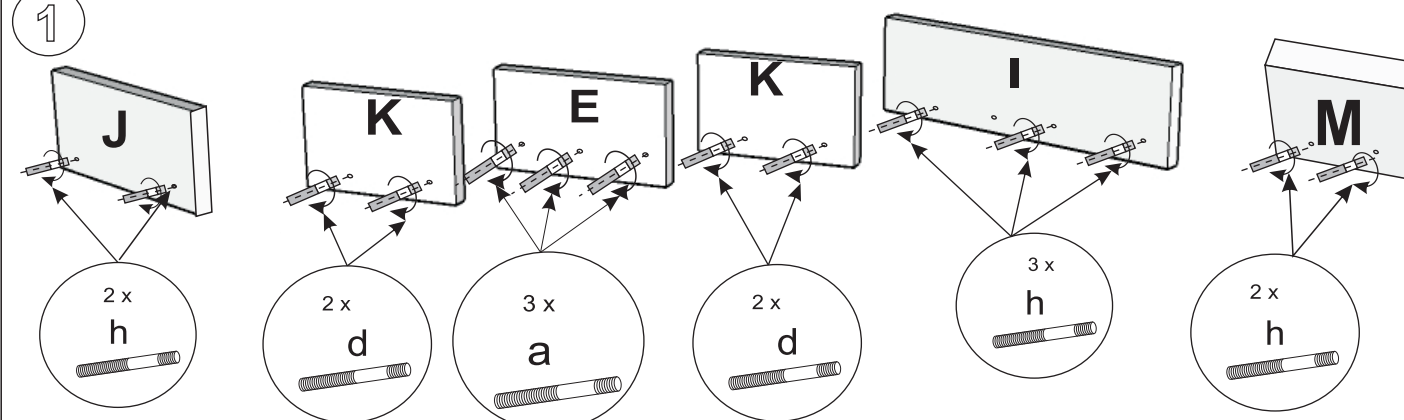


2

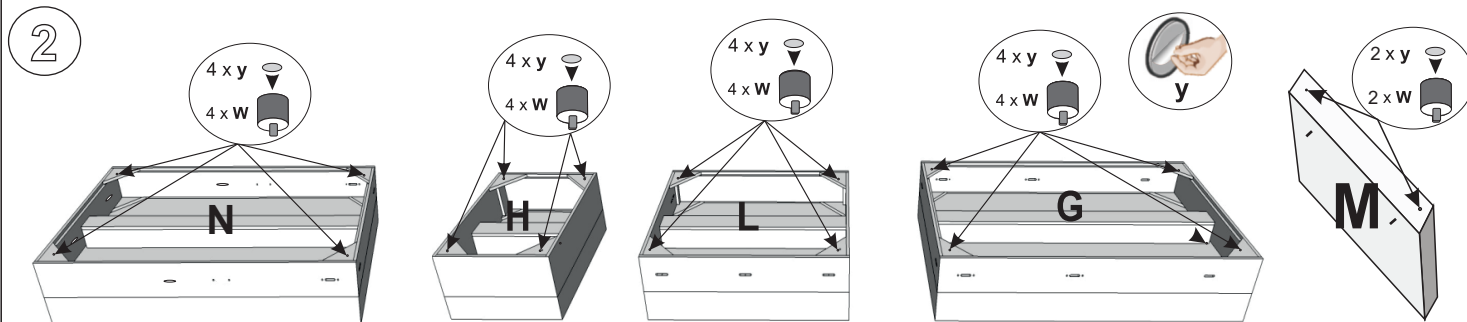

3

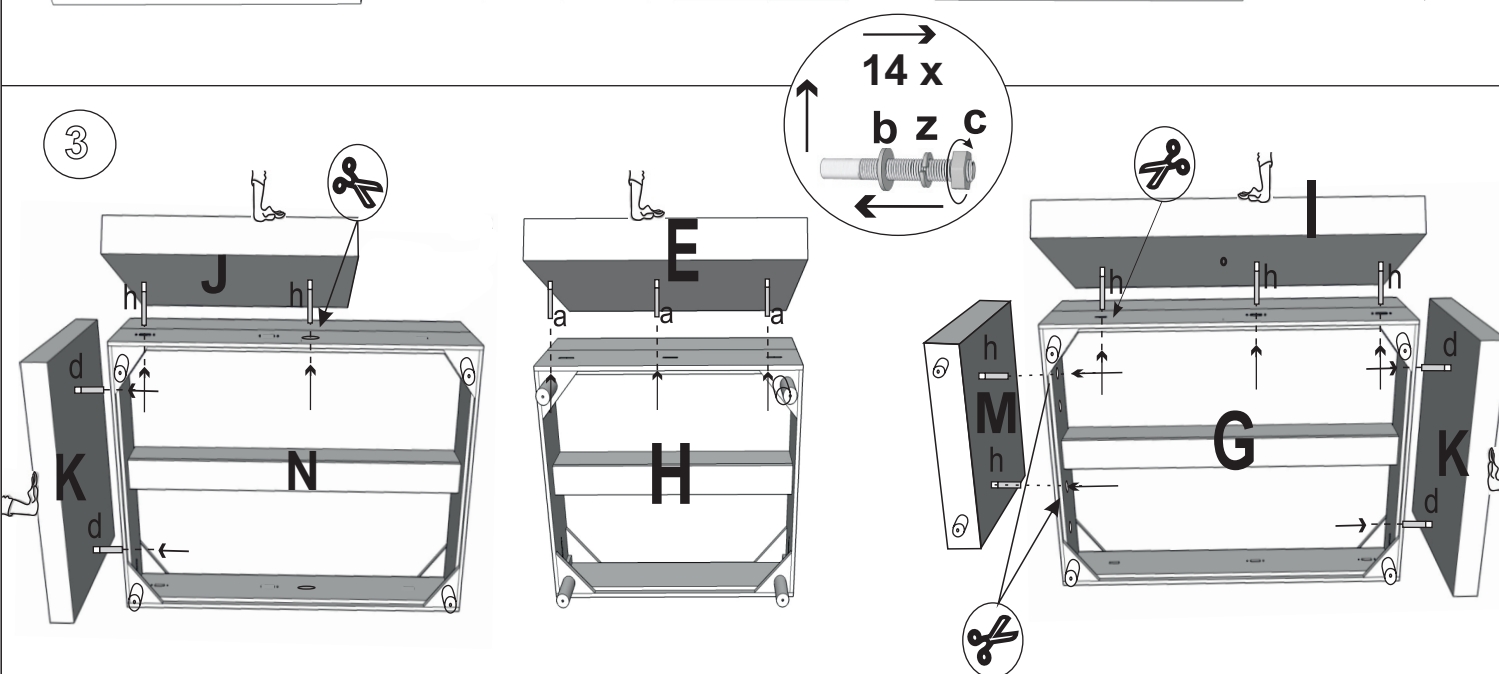

4

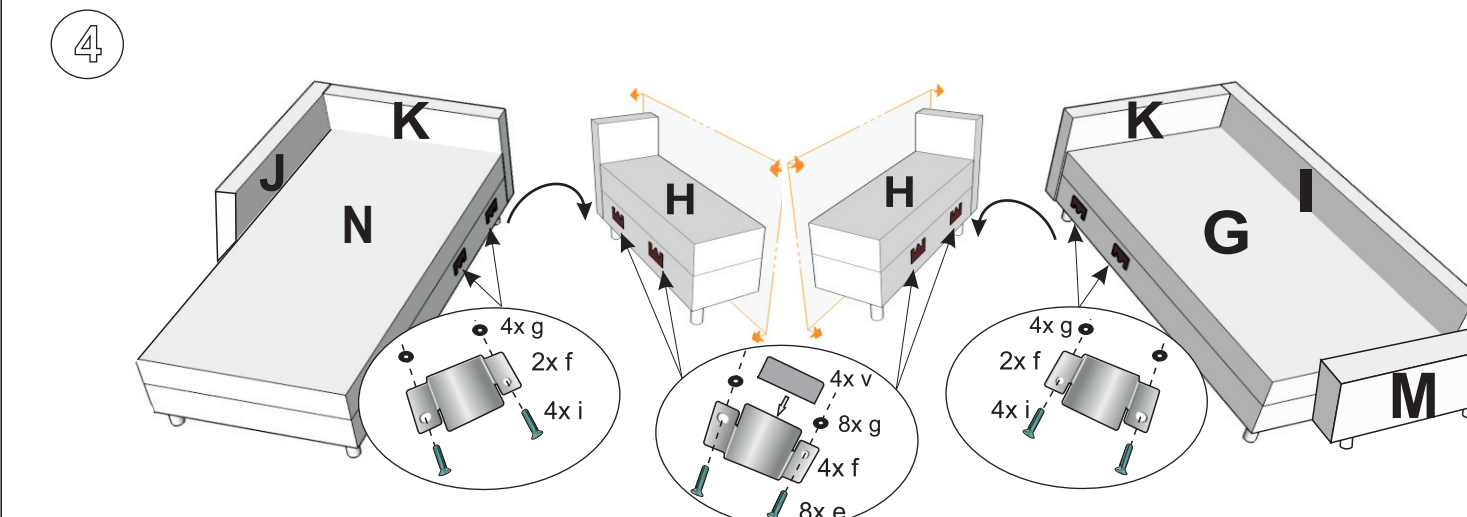


TONI U-FORM NEW




(DE) Montageanleitung
(PL) Instrukcja montażu
(NL) Handleiding voor de montage
(GB) Assembly instructions
(TR) Montaj talimatı
(RU) Инструкция по монтажу

(IT) Istruzioni di montaggio
(FR) Notice de montage
(RO) Instrucțiuni de asamblare
(SK) Montážny návod
(CZ) Montážní návod
(HU) Szerelési útmutató

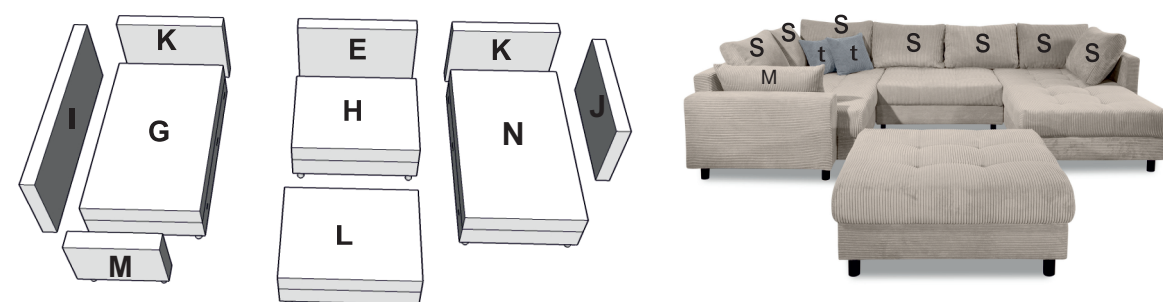


3 x (8x90) a	7x (8x100) h	4 x (8x80) d	14 x M8 c	8 x (M6x35) e	8 x f	18 x y
18 x 100mm 50mm w	14 x z	14 x Ø8 b	8 x (M6x40) i	14 x g	4x v	
7x s	2x t	1x o				


COL. 1

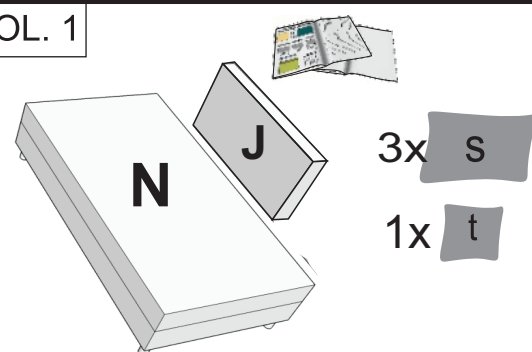


COL. 2

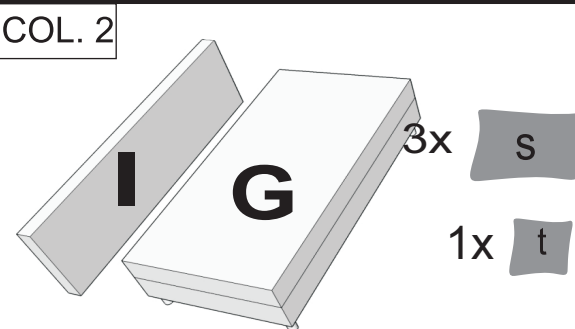


COL. 3

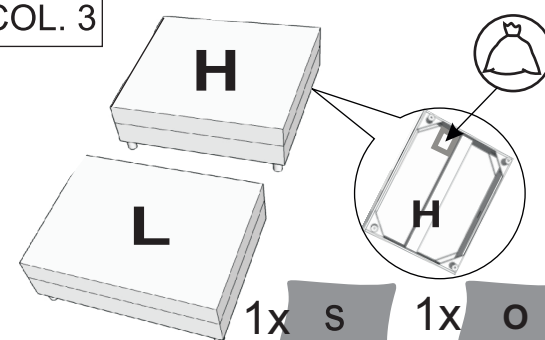


COL. 4

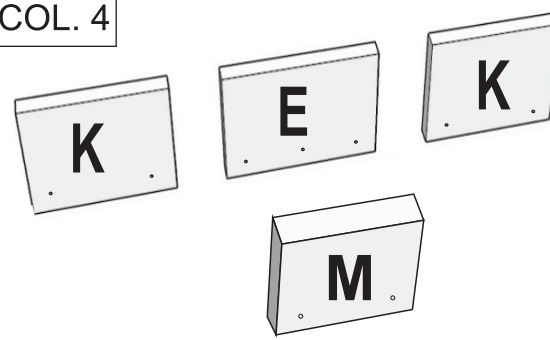


1

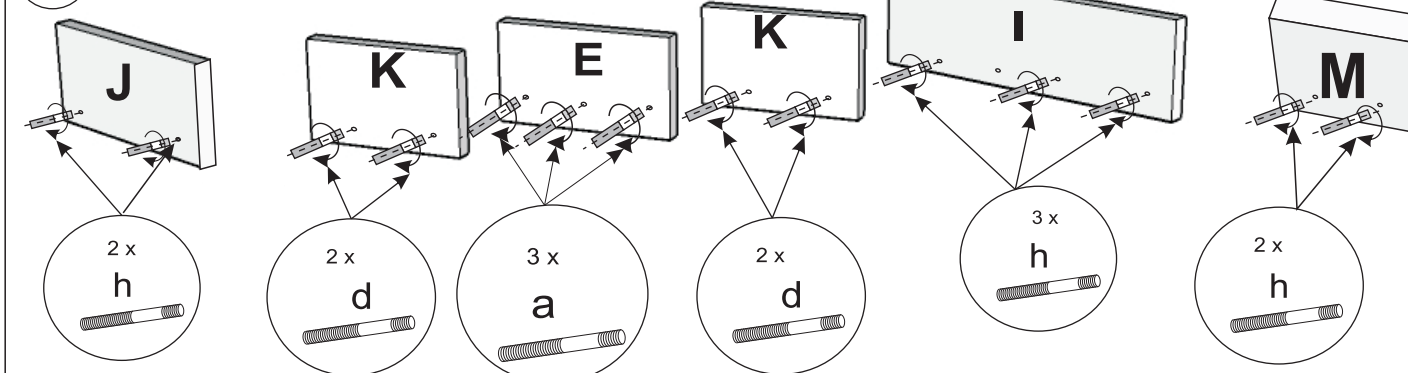

2

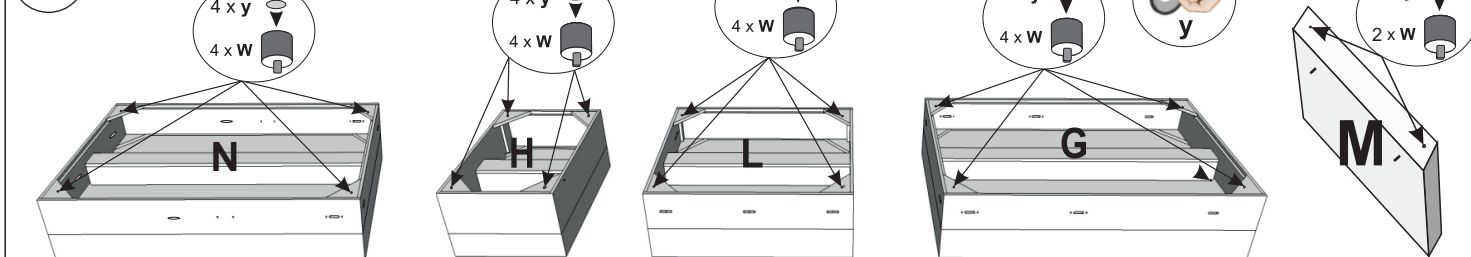

3

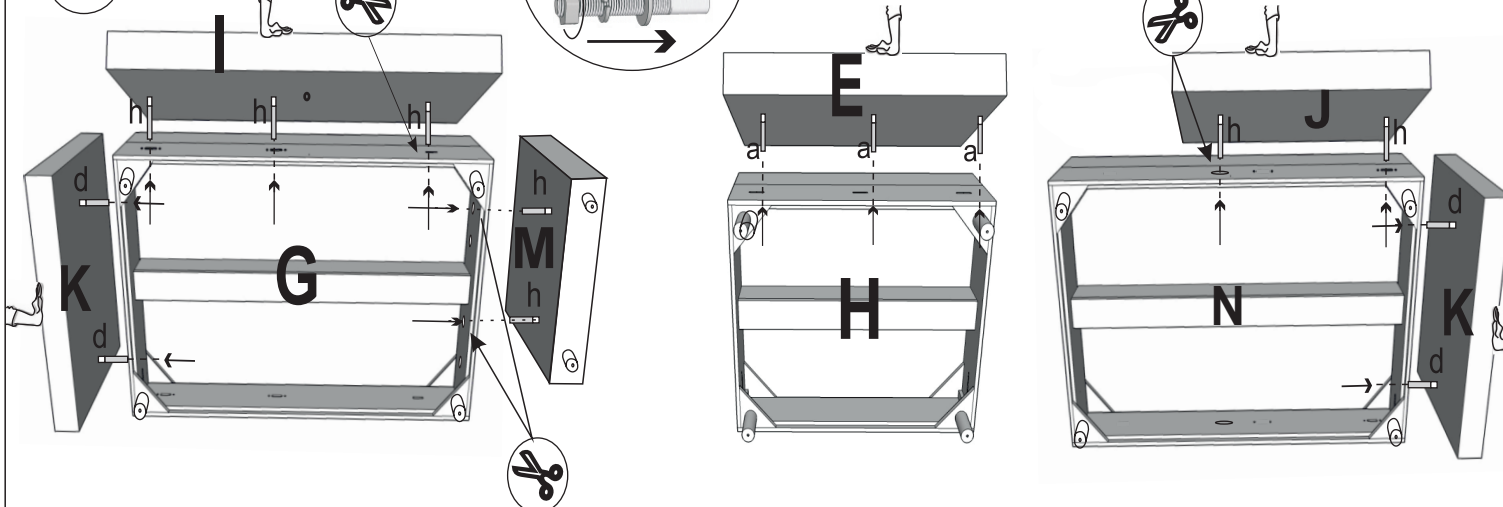

4

