


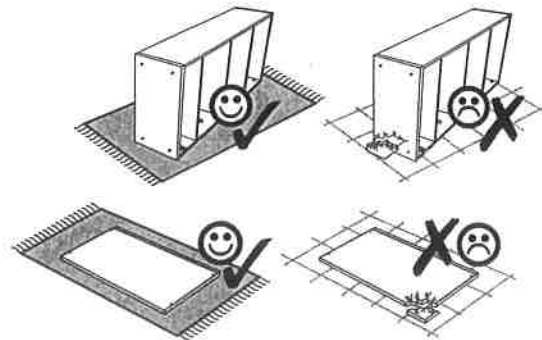
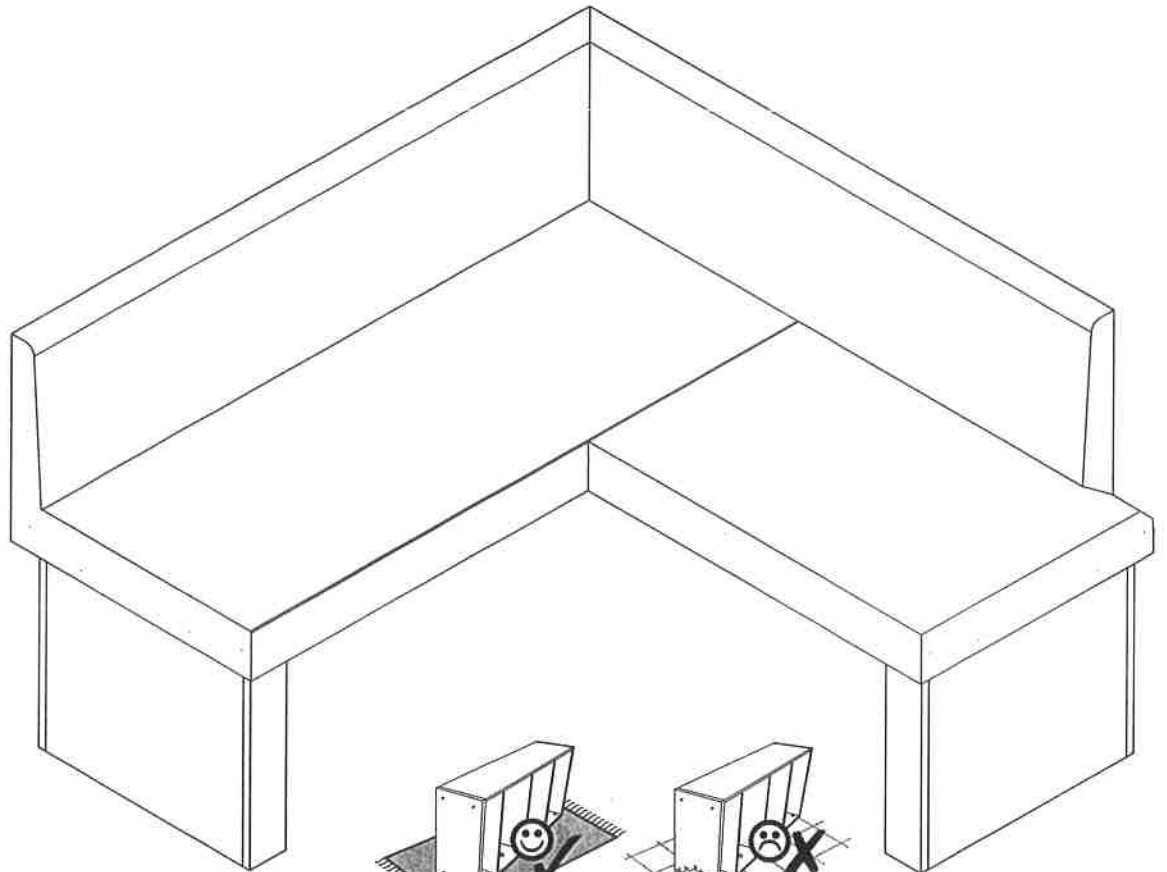
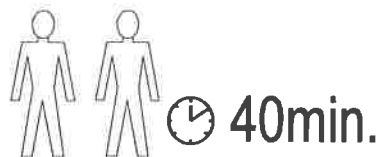


# ECKBANK ANNA 130x169


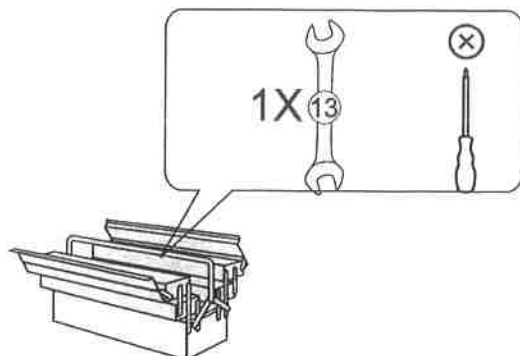




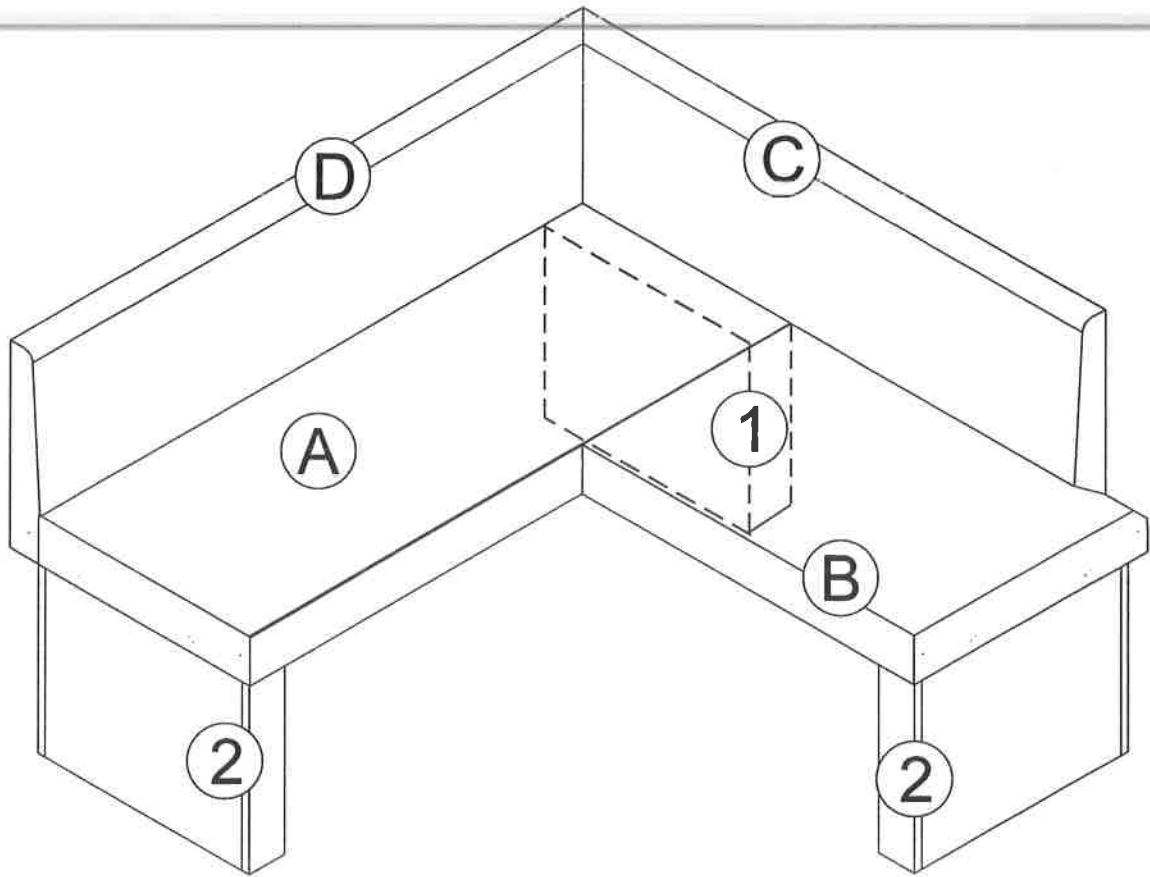





- |                                |                                     |
|--------------------------------|-------------------------------------|
| <b>(D)</b> Montageanleitung    | <b>(SK)</b> Montážny návod          |
| <b>(CZ)</b> Montážní návod     | <b>(SLO)</b> Navodila za namestitev |
| <b>(HU)</b> Szerelési útmutató | <b>(HR)</b> Uputstva za montažu     |

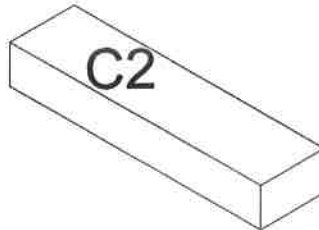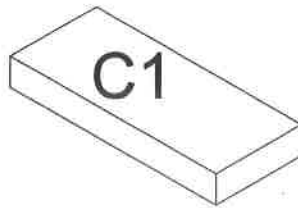




C1	A	1271	x	519
C1	B	1138	x	519
C1	1	470	x	440
C1	2	480	x	440
C2	C	1566	x	405
C2	D	1272	x	405



<b>T_18</b>  M8x45 6x	<b>T_19</b>  M8x35 12x	<b>M_14</b>  20x	<b>f7</b>  M8 2x	<b>N3</b>  M8x60 2x	<b>p9</b>  4x30 6x
<b>N1</b>  12x14 2x	<b>N3</b>  2x				




1

N3 M8x60 2x	M_14 2x
f1 M8 2x	

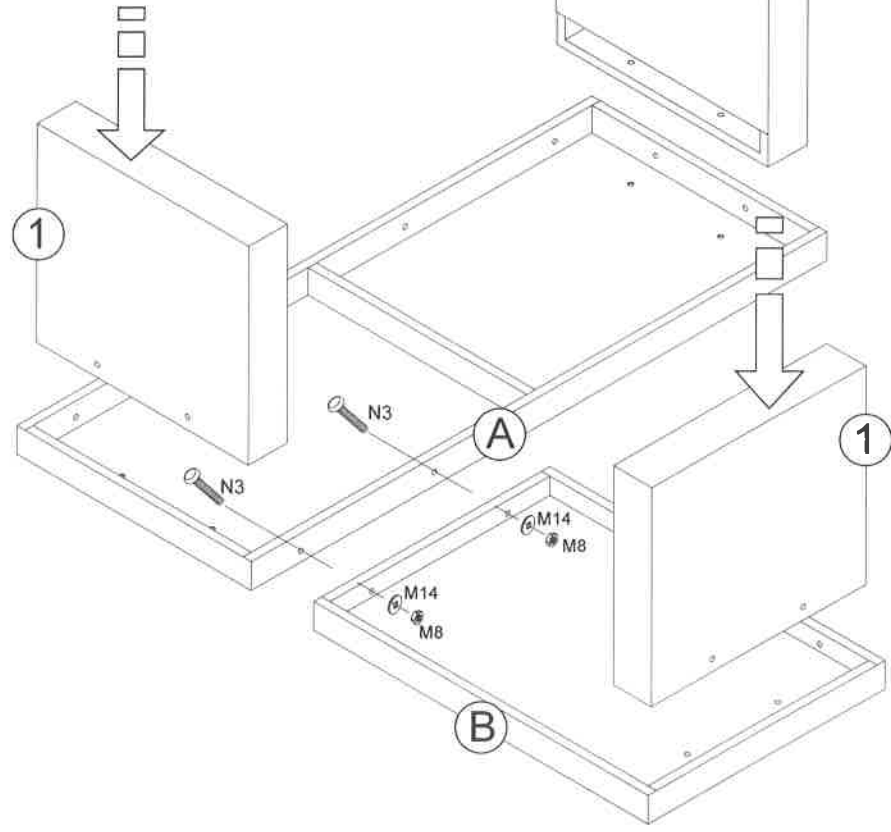




2

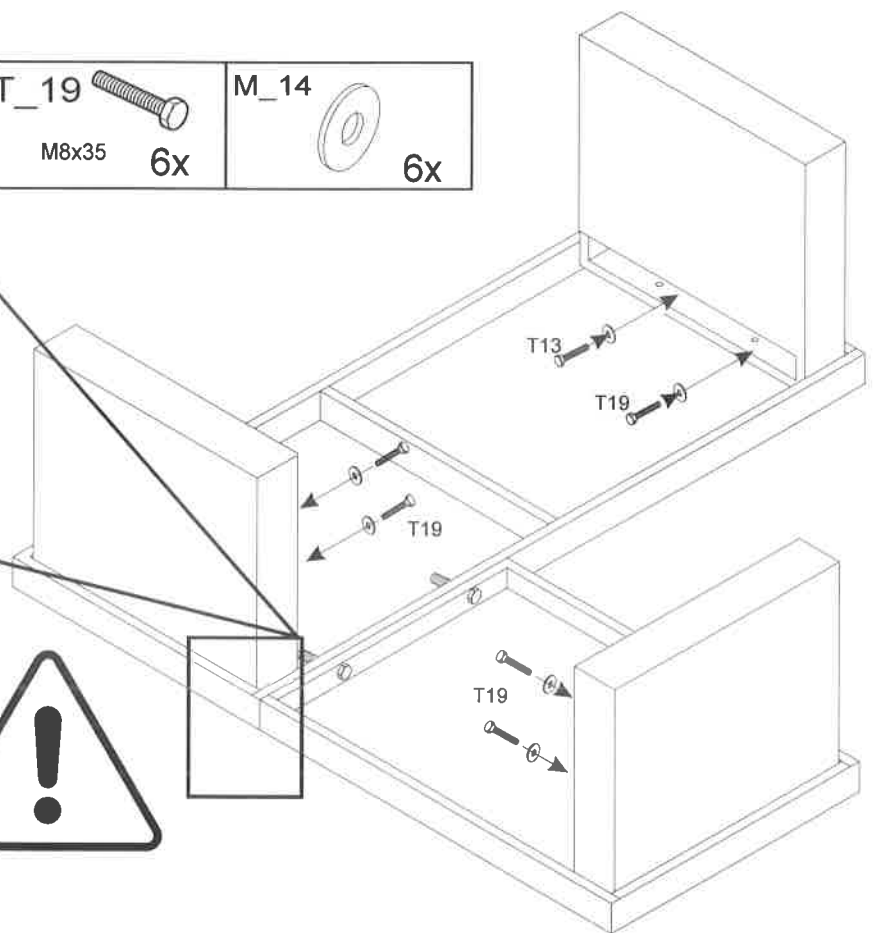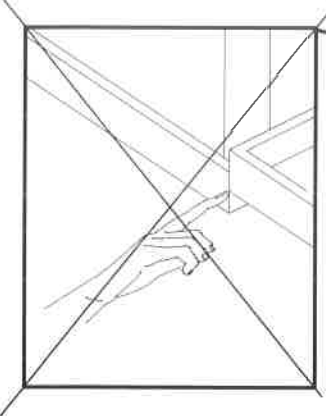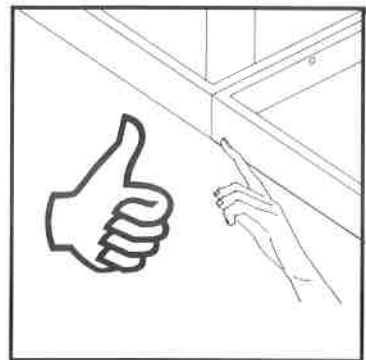T_19 M8x35 6x	M_14 6x
---------------------	------------

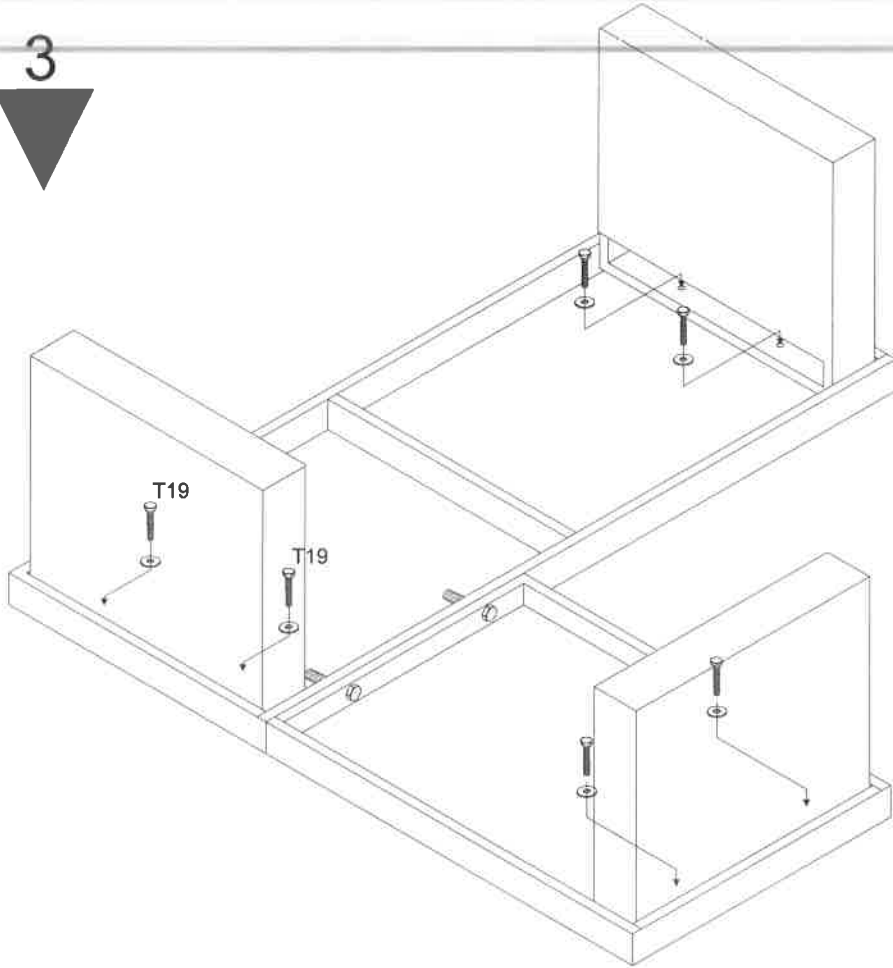



3




T_19		M_14	
M8x35	6x		6x


4

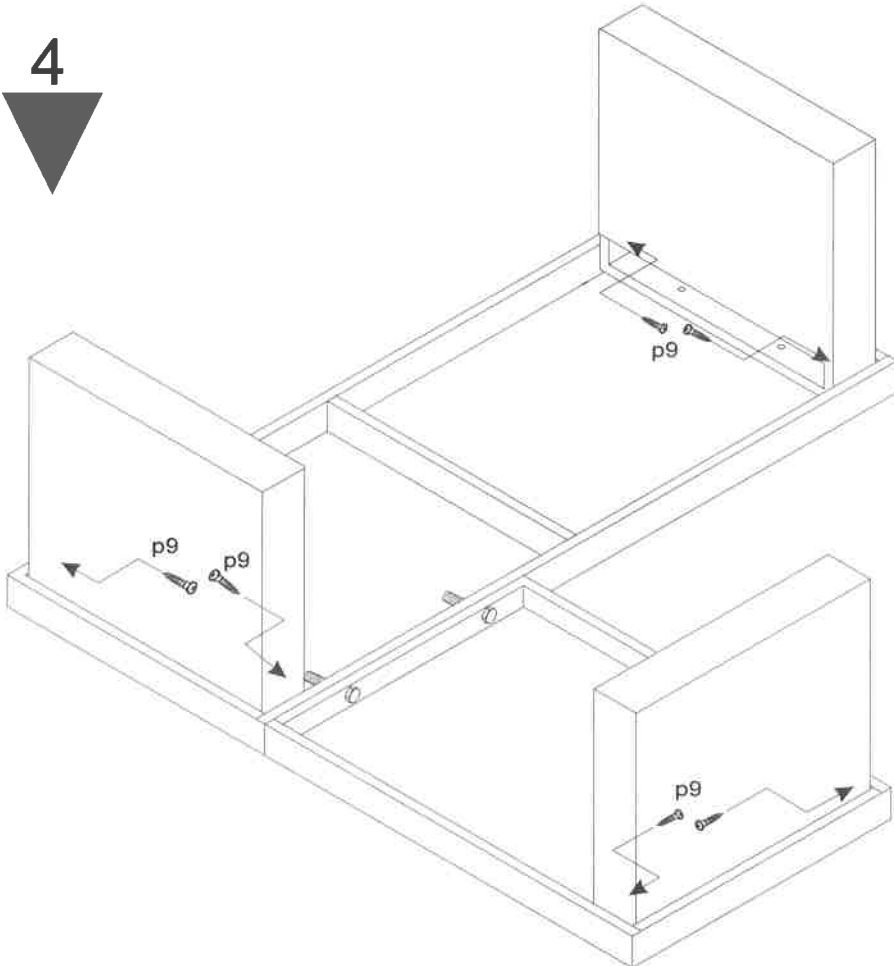



p9	
4x30	6x


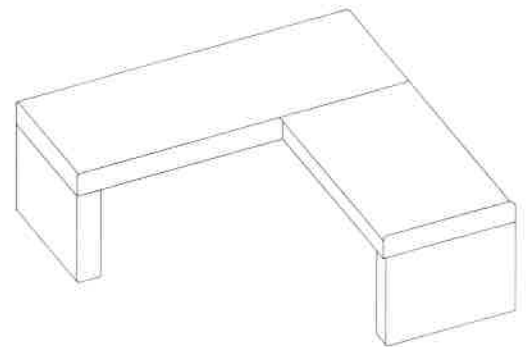


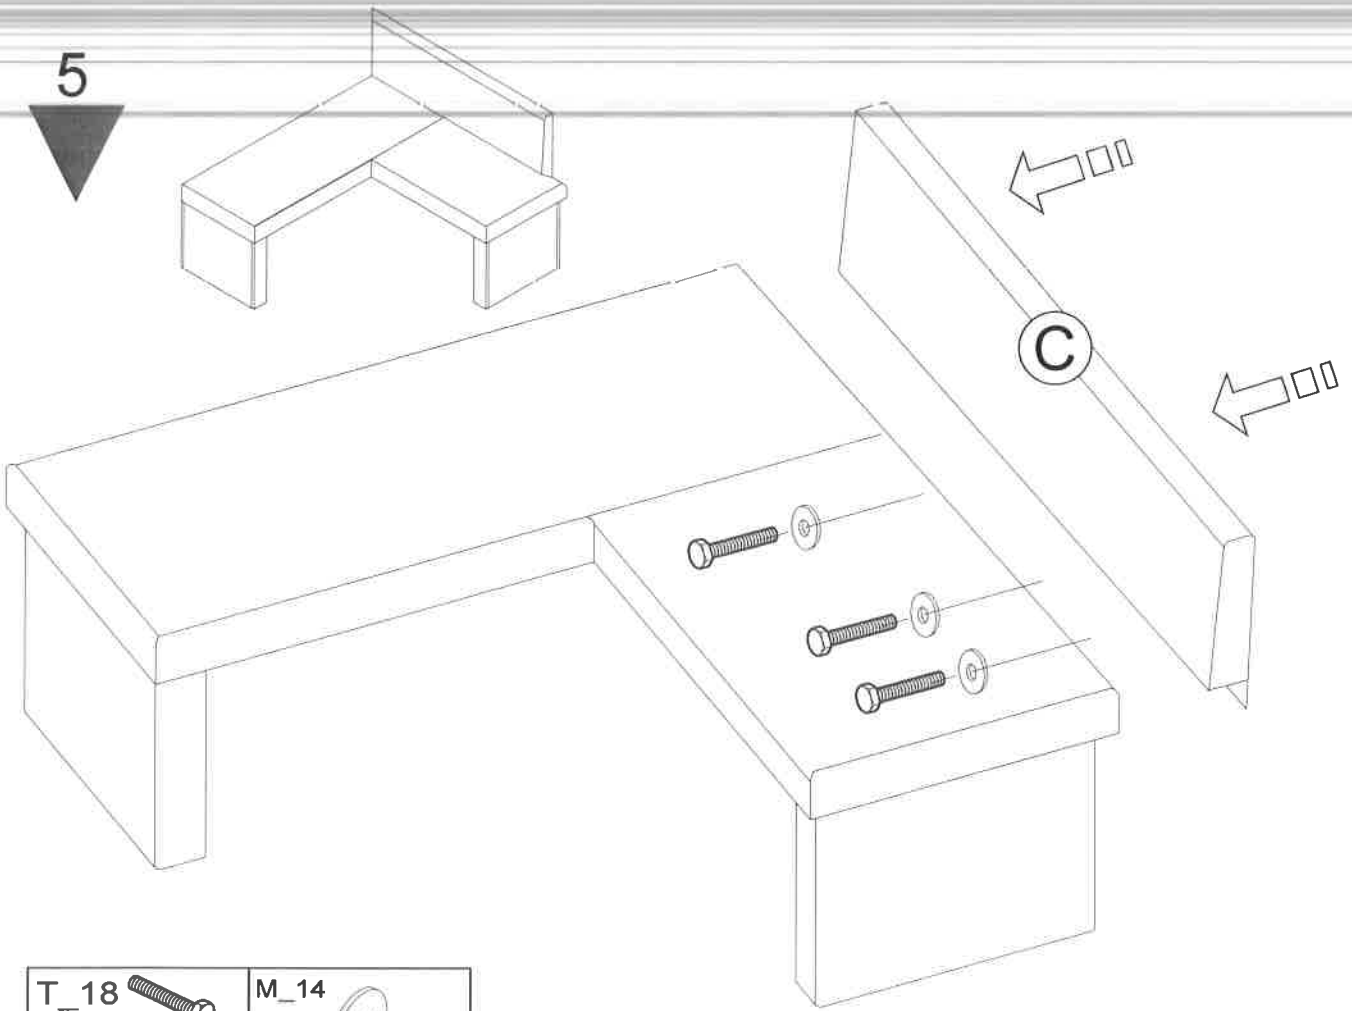

5

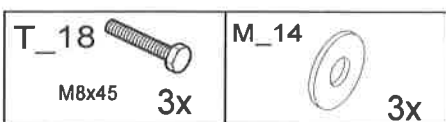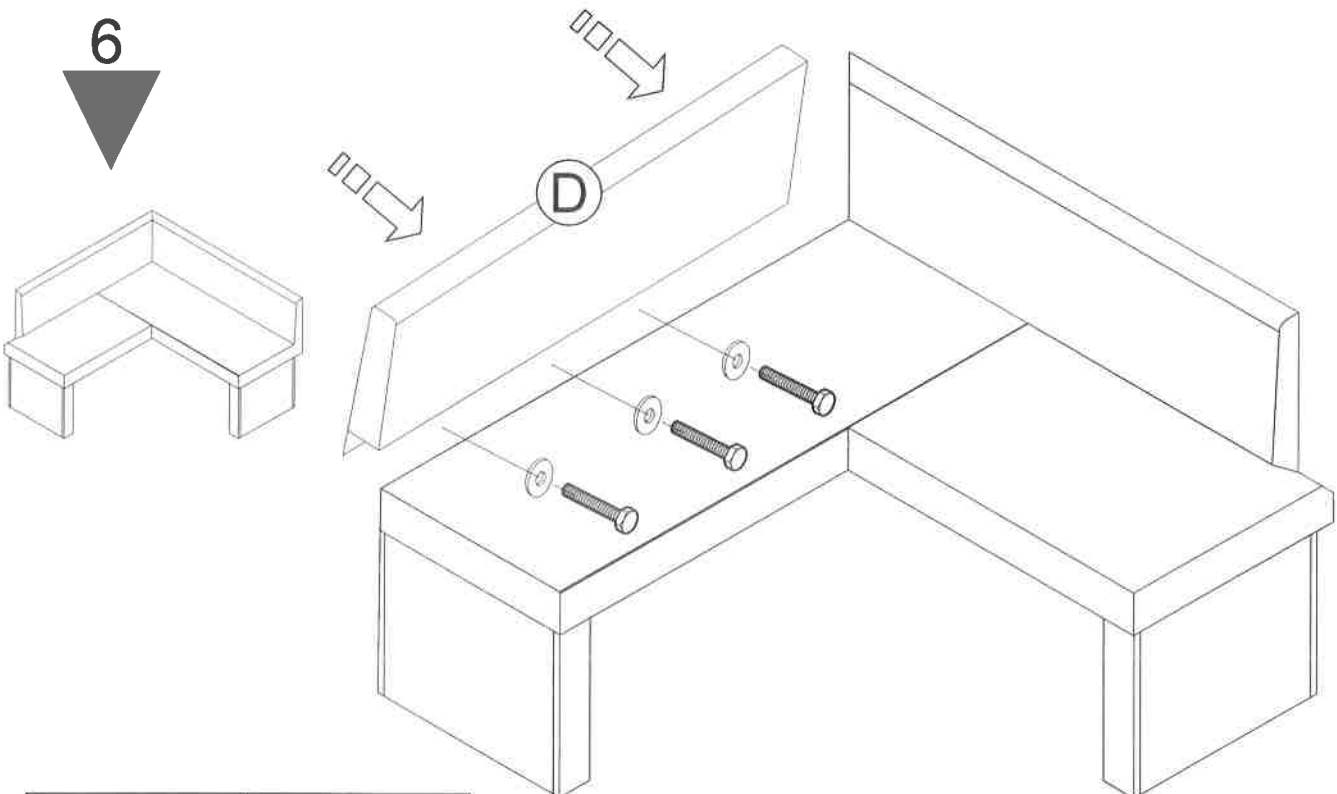

6

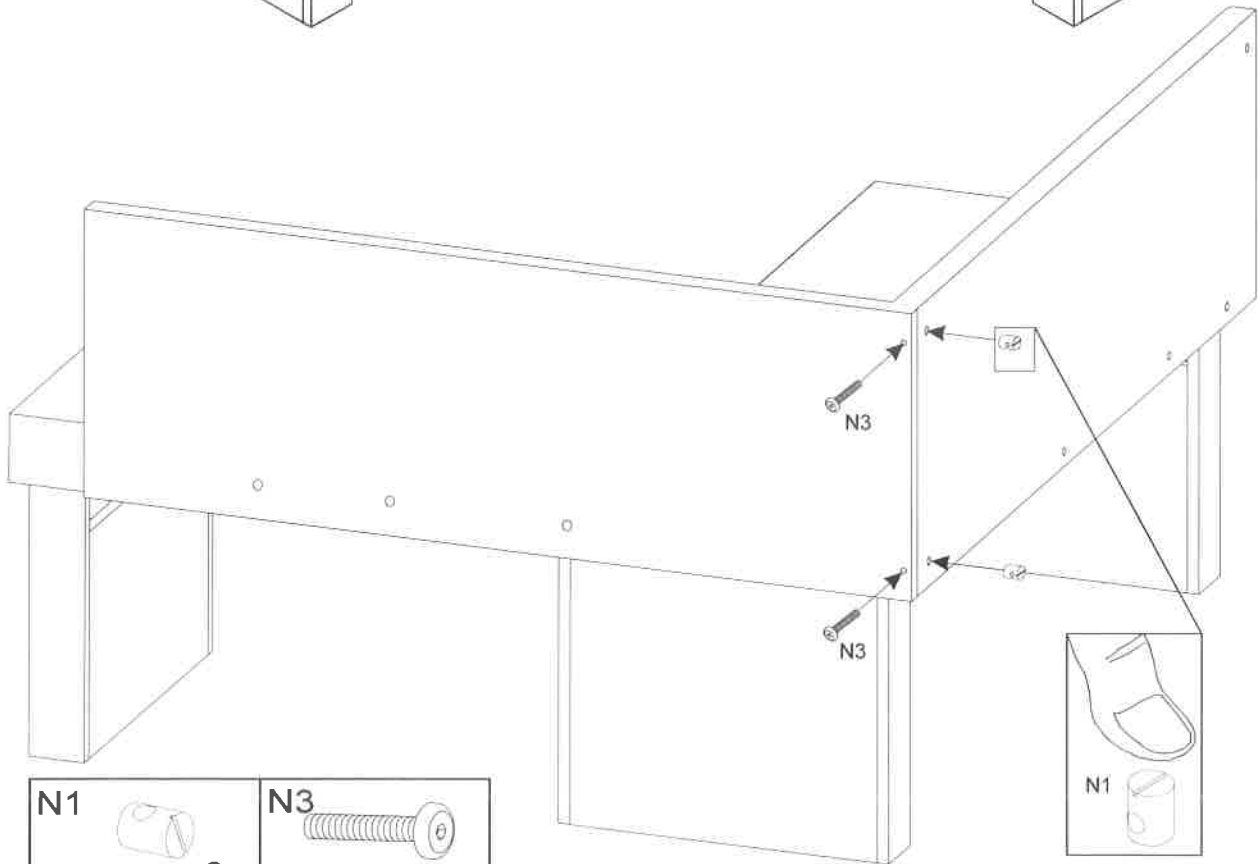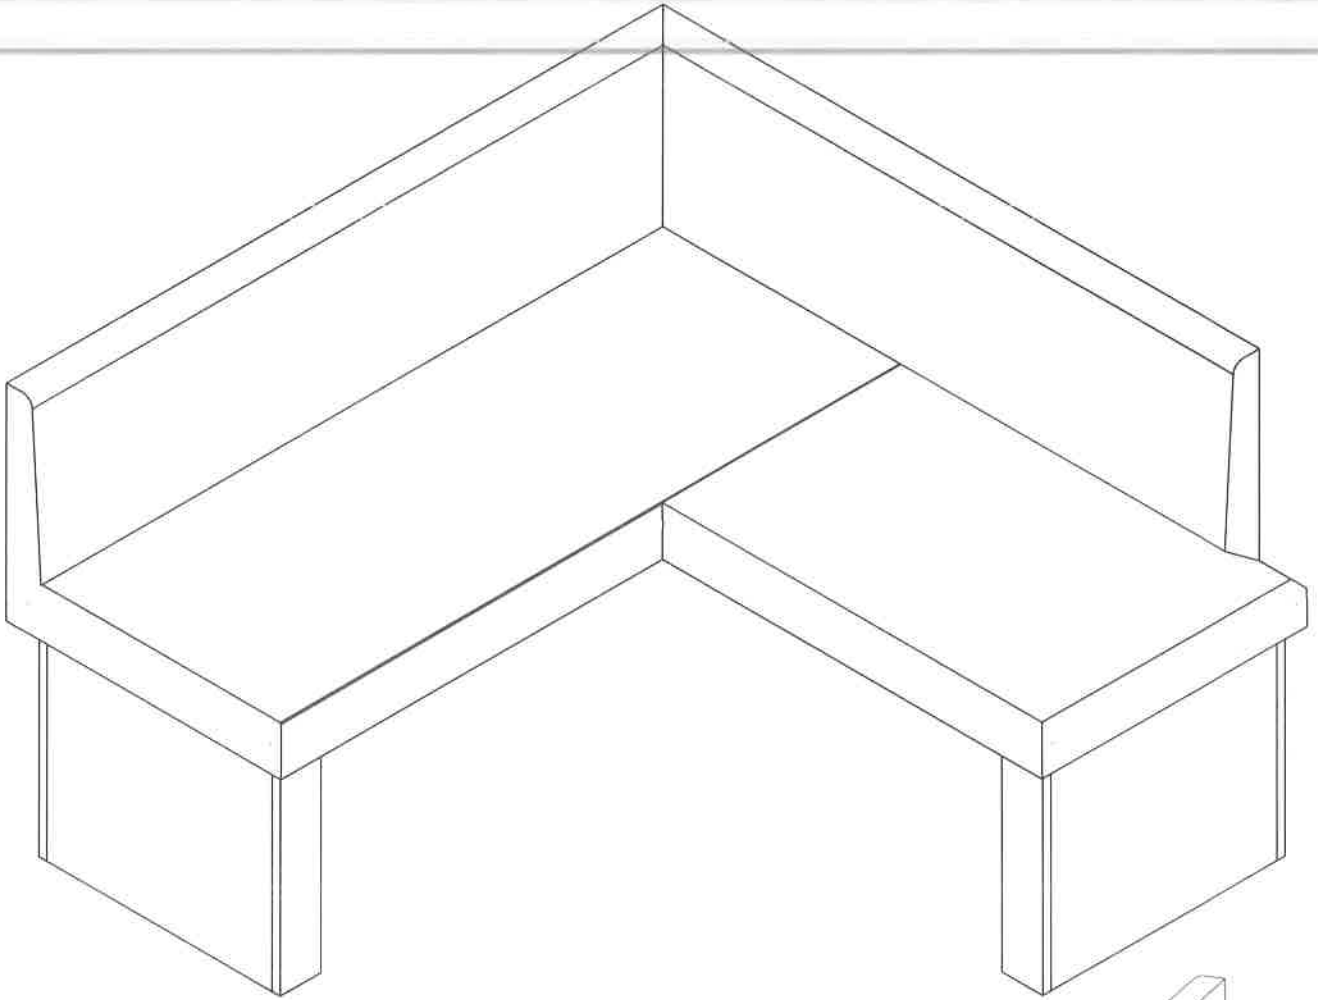



<b>N1</b> 12x14 2x		<b>N3</b> 2x	
--------------------------	---	-----------------	---

